

Fashion Bed Group


A Division of Leggett & Platt Incorporated
5950 West 51st Street - Chicago, IL 60638

Parts List For Fenton Twin Bed


BED CARTON

PART #321901 HARDWARE BAG FOR BED FRAME ATTACHMENT


- | | |
|---------------------------------------------|-----------------------|
| (1) 1/4-20 2 COUNTERSUNK ALLEN HEAD SCREW-4 | (8) HEADBOARD PANEL-1 |
| (2) 1/4-20 1 FLAT ALLEN HEAD SCREW-4 | (9) FOOTBOARD PANEL-1 |
| (3) 1/4 ID METAL WASHER-8 | |
| (4) 1/4-20 HEX NUTS-4 | |
| (5) ALLEN WRENCH | |
| (6) PLASTIC GLIDE-4 (#150940000) | |
| (7) LEG EXTENSION-2 #324103158 BUTTER PECAN | |
| OR #324103161 BLACK WALNUT | |
| OR #324104 GOLDEN FROST | |
| OR #324105 TURNISH COPPER | |
| OR #324106 PUMICE / GOLD B. | |

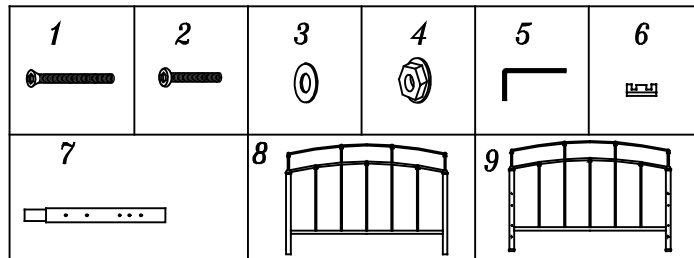

PRODUCT FULLY ASSEMBLED

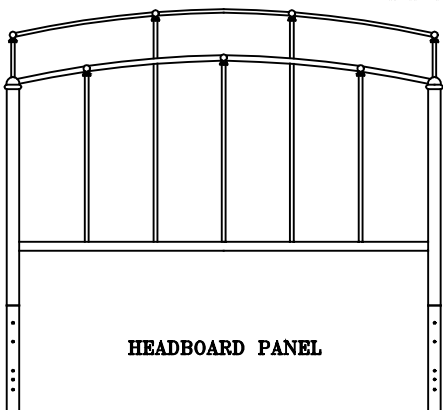


HEADBOARD PANEL

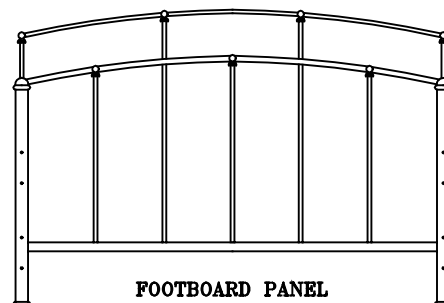

FOOTBOARD PANEL


Twin Size Options

- 1st. USE LINK SPRING (UPPER CONNECTION) FOR TRUNDLE APPLICATION (ONLY A MATTRESS).
- 2nd. USE FRAME (LOWER CONNECTION) W/BOX SPRING AND MATTRESS.

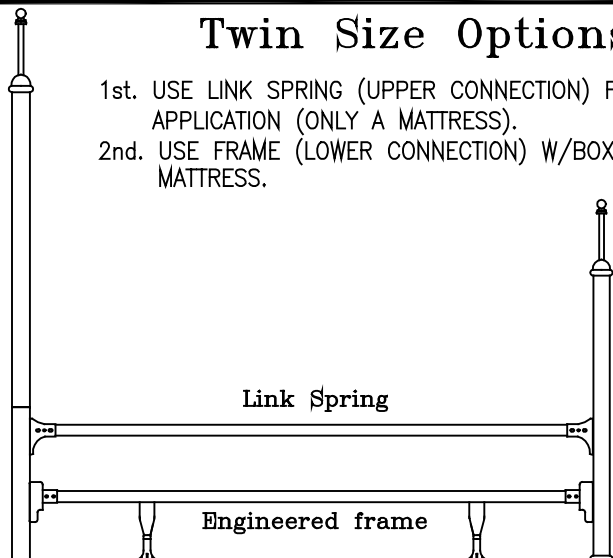

Link Spring

Engineered frame

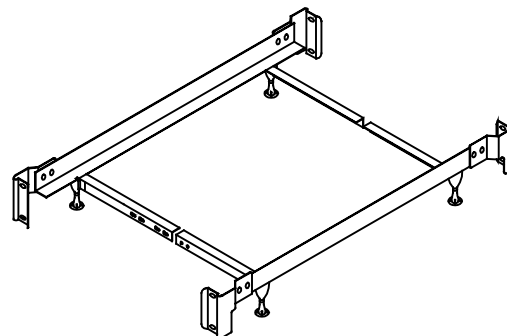

TWIN - FULL FRAME FULLY ASSEMBLED


NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

OPTIONAL



MATTRESS LINK SPRING FULLY ASSEMBLED

OPTIONAL

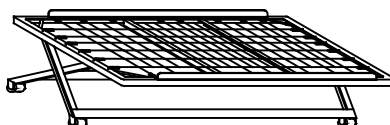

POP-UP TRUNDLE

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK AT 1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM CENTRAL TIME MONDAY THRU FRIDAY. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1


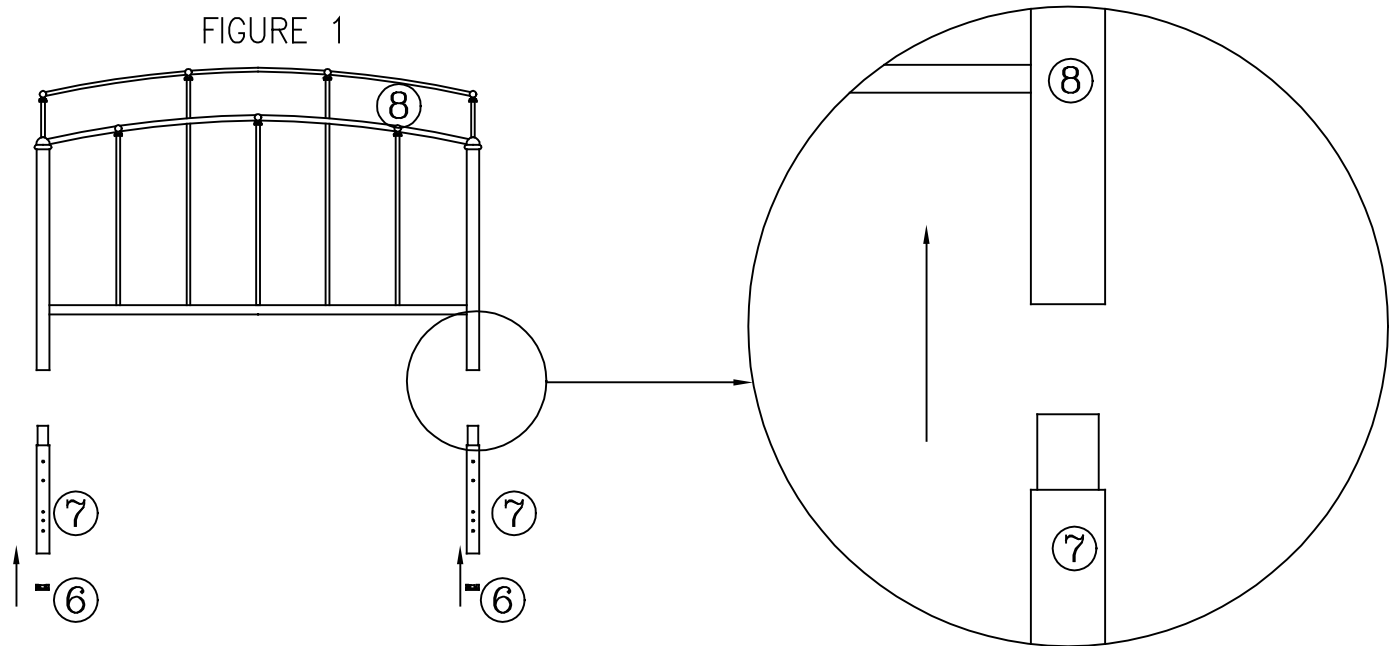


FIGURE 2

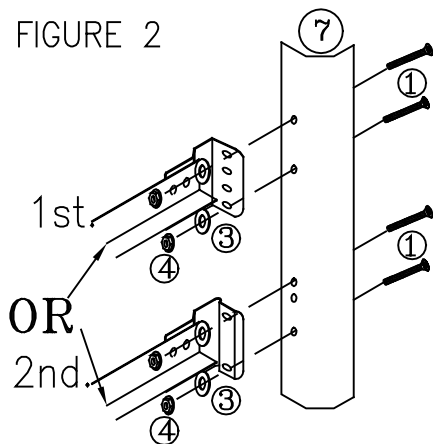

Step 1


- Insert plastic glide (6) into bottom of leg extensions (7) and footboard (9) posts. (See Figure 1)
- Align top reduction of extension legs (7) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (7) into bottom of headboard (8) posts.

Step 2

- Note: YOU HAVE TWO ASSEMBLY OPTIONS WITH A TWIN SIZE:
1st. USE UPPER ASSEMBLY IF USING AS A TRUNDLE UNIT WITH MATTRESS ONLY.
2nd. USE LOWER FRAME ASSEMBLY IF USING BOX SPRING & MATTRESS.

- Place headboard and frame in desire location in room.
- Place 2 screws (1) through holes located in extension leg (7). (See Figure 2)
- Align bed frame bracket over screws.
- Place a washer (3) first and then a nut (4) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench.

FIGURE 3

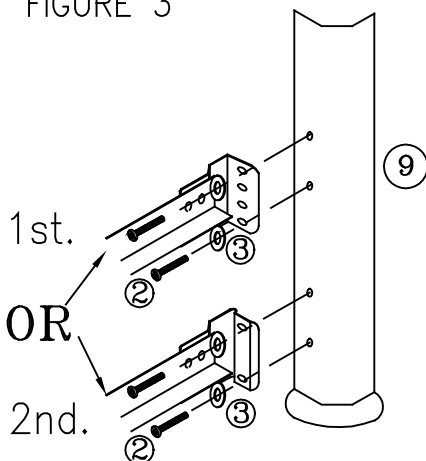

Step 3

- Position footboard panel (9) and align holes in the post with holes in the frame bracket. See figure 3
Note: Use the same hole position that you used for the headboard attachment of to the frame or link spring.
- Place washer (3) on each screw (2). Insert through bracket into post. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard panel.
- Tighten all screws securely using the Allen wrench.