homestyles°

20 05504 0181


Pedestal Desk


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

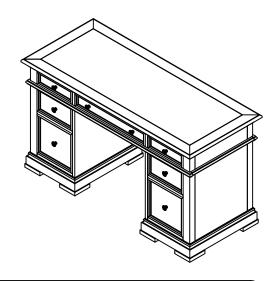

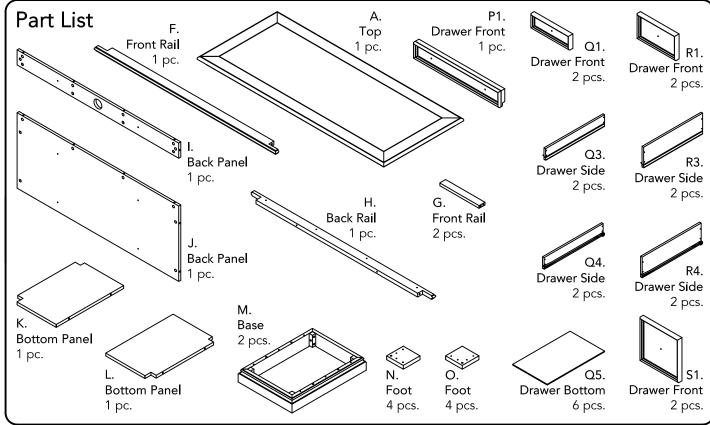

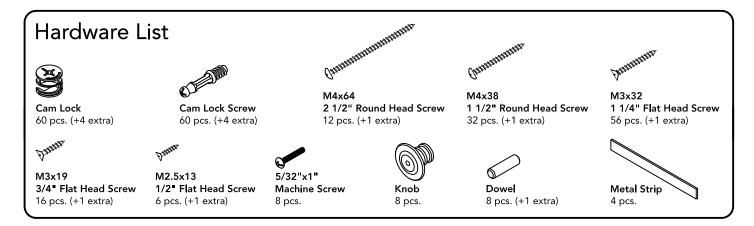

Carton 20 05504 0182 is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/13


IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

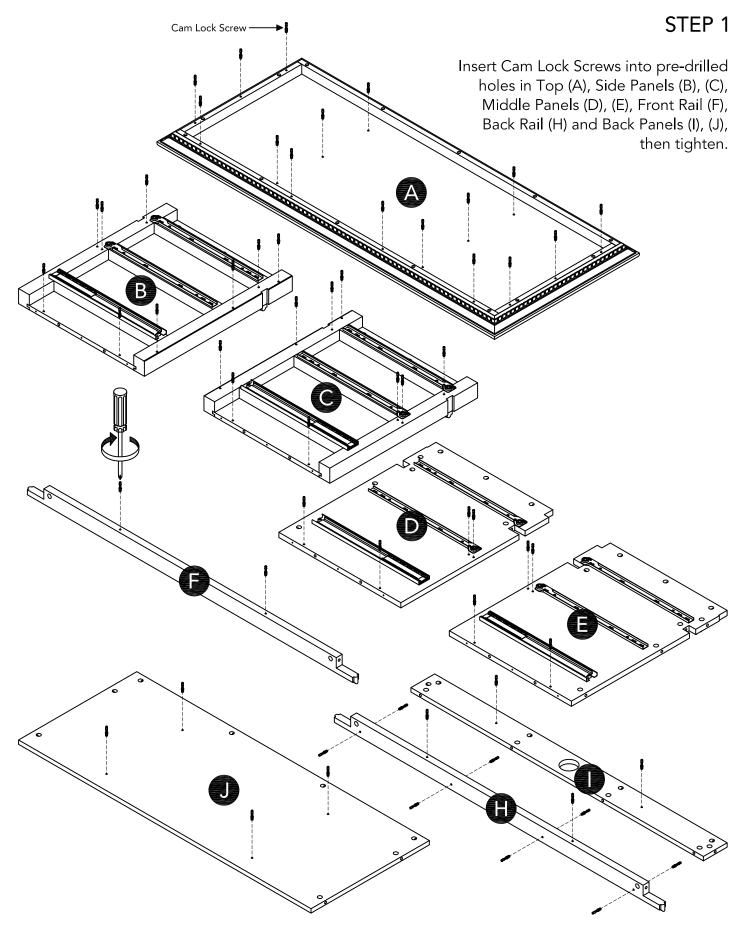


Assembly Instructions 3/13

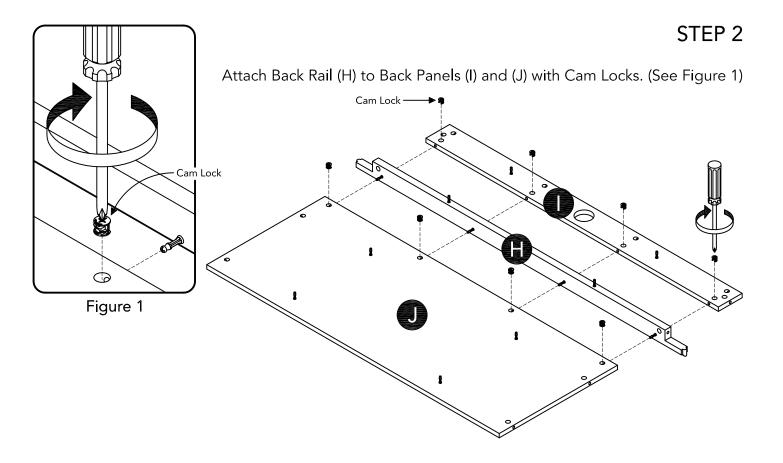


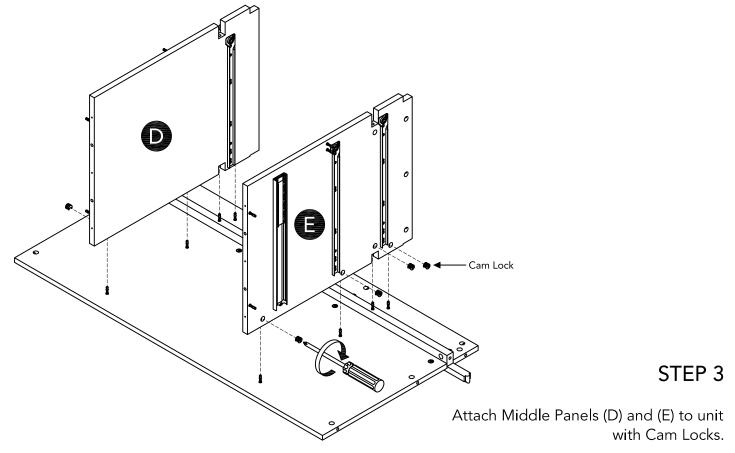


Assembly Instructions 4/13

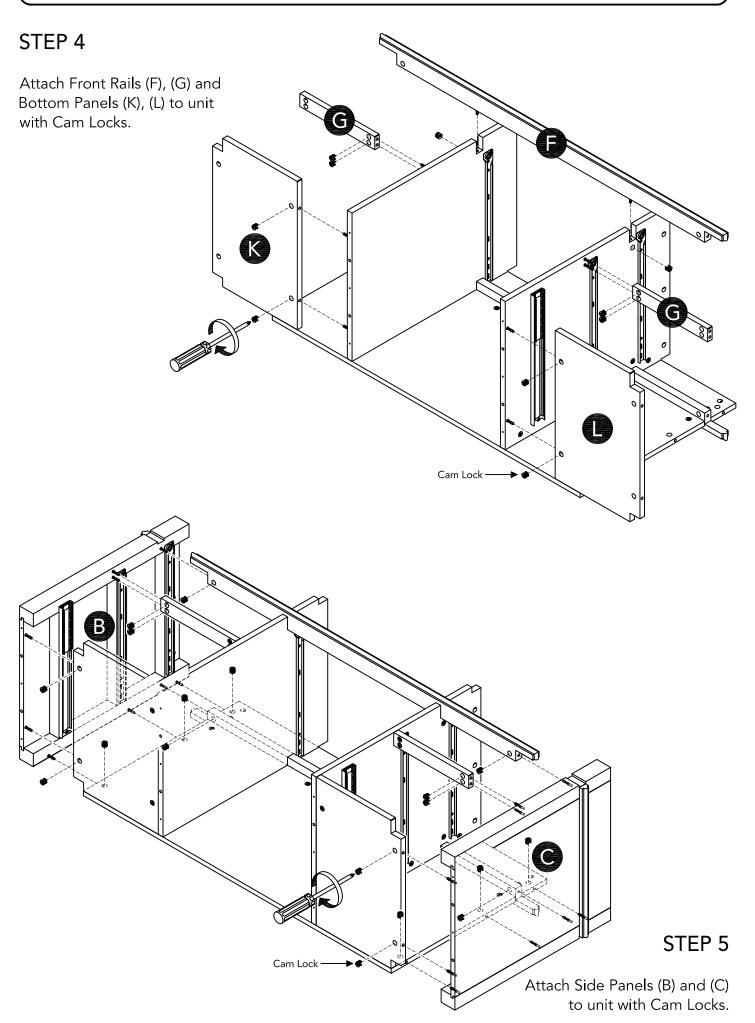

Assembly Instructions 5/13

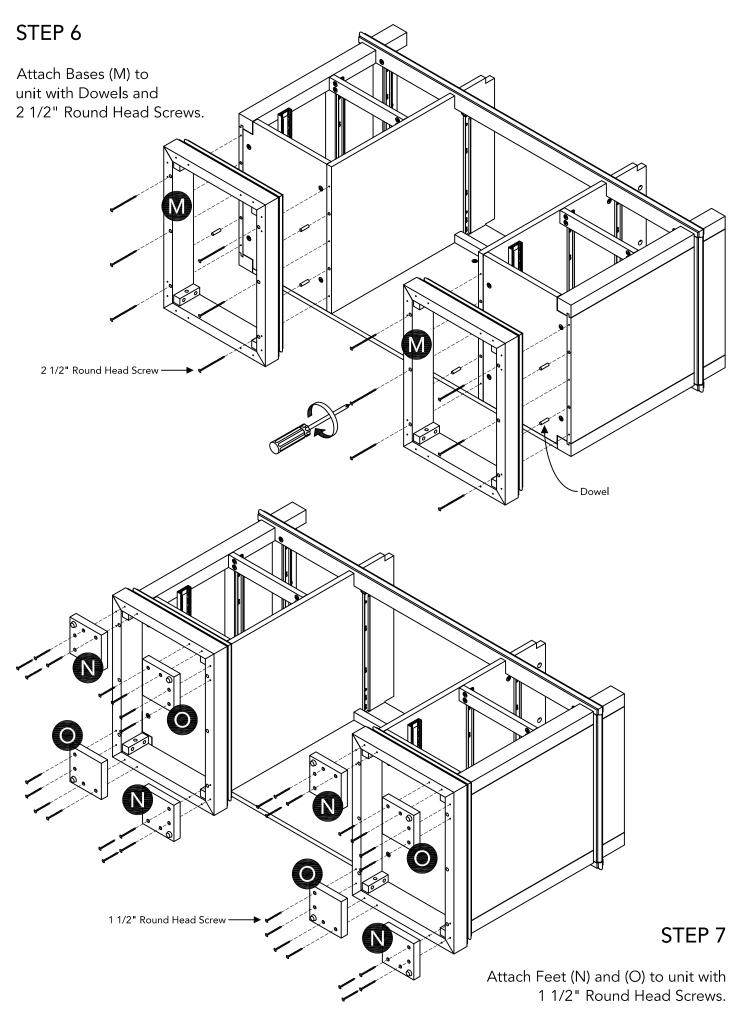

Assembly Instructions 6/13

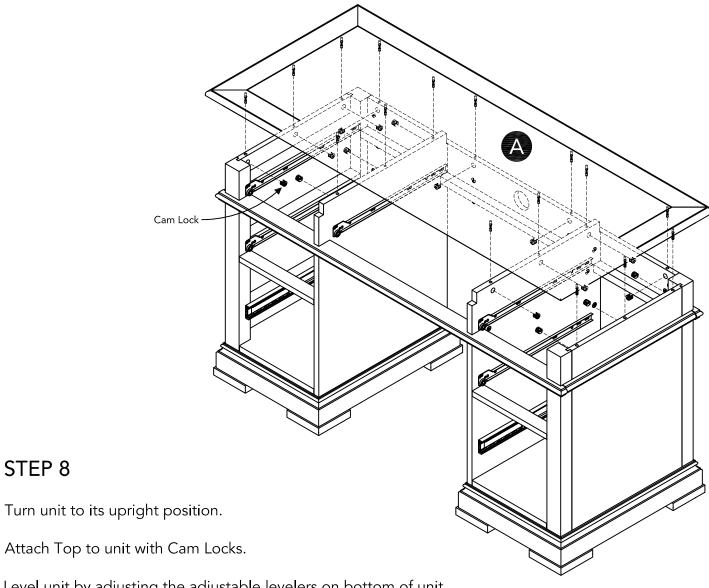

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 2)

Note: Unit must be level to work properly.



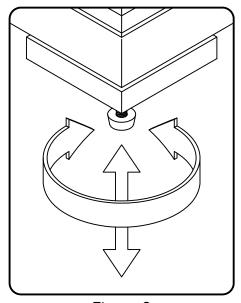


Figure 2

Assembly Instructions 7/13

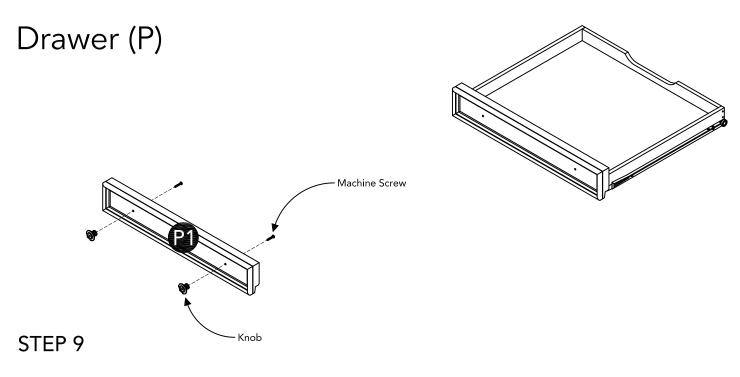


Attach Knobs to Drawer Front (P1) with Machine Screws.

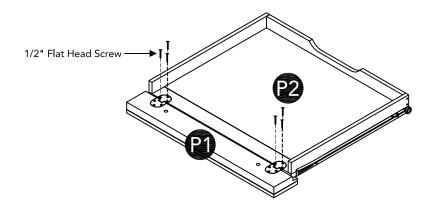


STEP 10


Attach Drawer Front (P1) to Drawer (P2) with 1/2" Flat Head Screws.

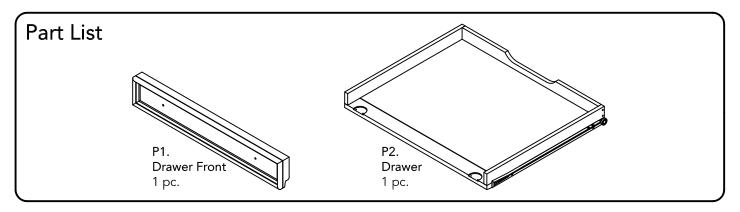

Assembly Instructions 8/13

Drawer (Q)

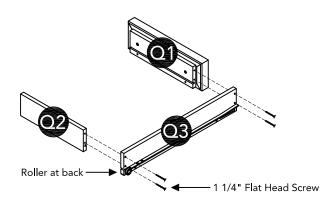

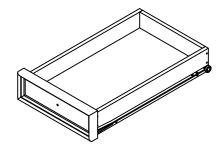


STEP 11


Attach Drawer Side (Q3) to Drawer Front (Q1) and Drawer Back (Q2) with 1 1/4" Flat Head Screws.

STEP 12

Insert Drawer Bottom (Q5) into groove.

Attach Drawer Side (Q4) to unit with 1 1/4" Flat Head Screws.

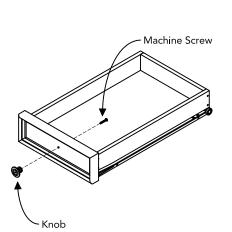


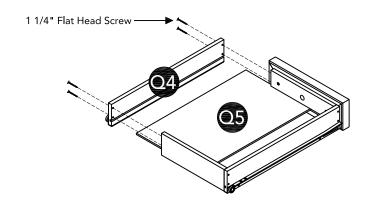

STEP 13


Attach Knob with Machine Screw.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

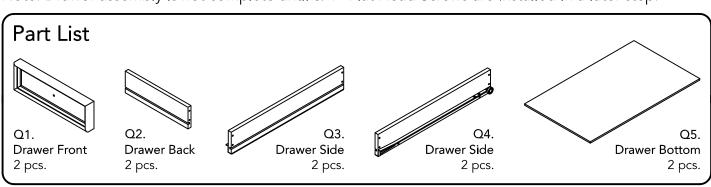

Assembly Instructions 9/13

Drawer (R)

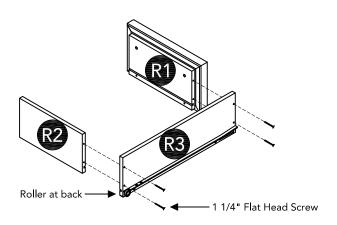

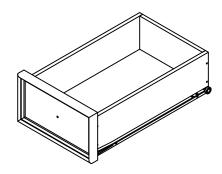


STEP 14


Attach Drawer Side (R3) to Drawer Front (R1) and Drawer Back (R2) with 1 1/4" Flat Head Screws.

STEP 15

Insert Drawer Bottom (Q5) into groove.

Attach Drawer Side (R4) to unit with 1 1/4" Flat Head Screws.

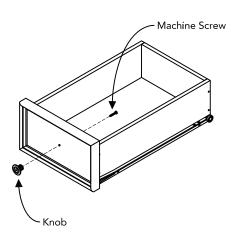


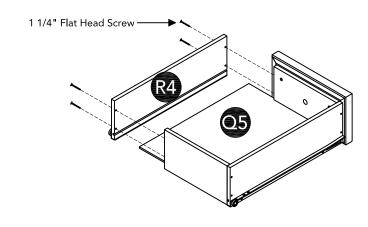

STEP 16


Attach Knob with Machine Screw.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

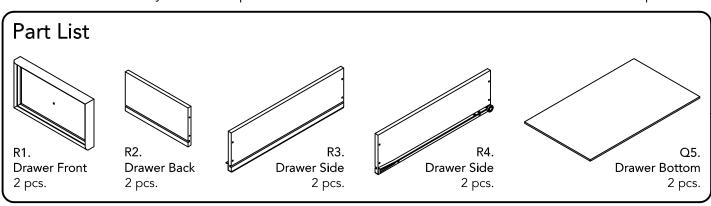

Assembly Instructions 10/13


Drawer (S)

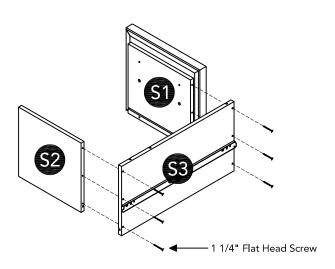


STEP 18

Insert Drawer Bottom (Q5) into groove.


Attach Drawer Side (S4) to unit with 1 1/4" Flat Head Screws.

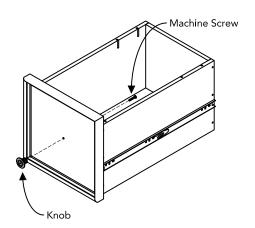

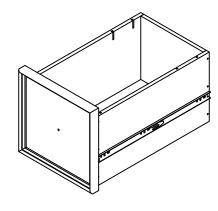

STEP 17


Attach Drawer Side (S3) to Drawer Front (S1) and Drawer Back (S2) with 1 1/4" Flat Head Screws.

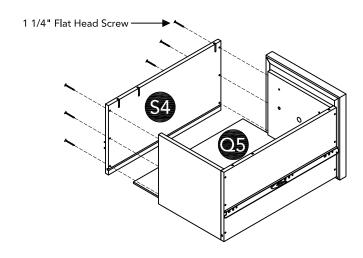

STEP 19

Attach Knob with Machine Screw.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are installed in a later step.

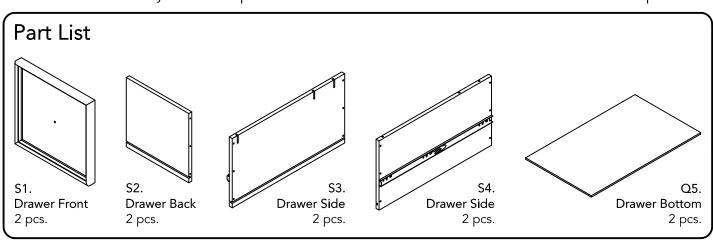

Assembly Instructions 11/13

STEP 20

Loosen slightly screws pre-installed on back of drawer fronts of Drawers (Q), (R) and (S).

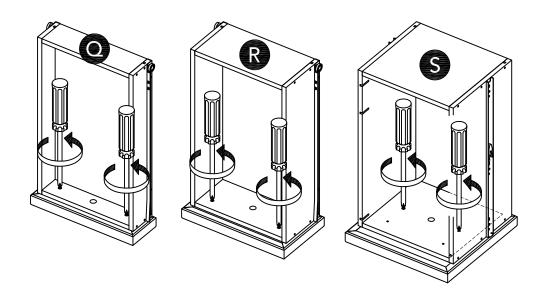


STEP 21

Slide Drawers (Q) and (R) into unit.

Align metal runners on sides of Drawers (S) into metal guides on unit and slide Drawers (S) into unit.

Adjust drawer front panels left or right and up or down until gaps look proportional.

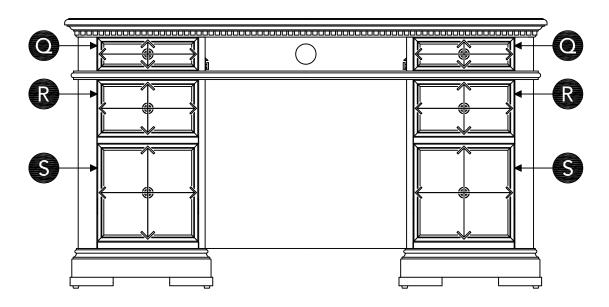

Assembly Instructions 12/13

STEP 22

Pull Drawers (Q) and (R) open slowly.

Remove Drawers (S) by pushing plastic lever on left side up, pushing plastic lever on right side down and pull open. (See Figures 3 and 4)

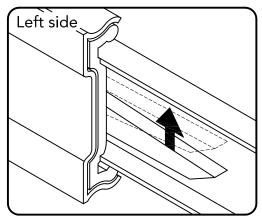


Figure 3


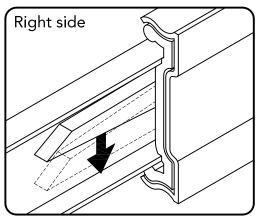


Figure 4

Re-tighten screws from Step 20.

Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

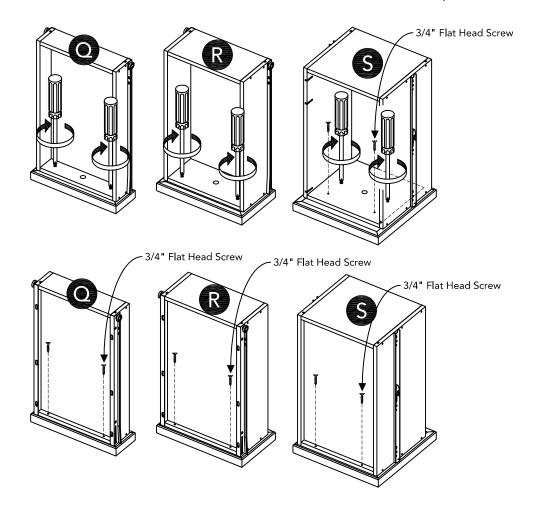


Assembly Instructions 13/13

STEP 23

Place Metal Strips into position in Drawers (S).

Metal Strips can be adjusted for letter or legal files. (See Figure 5)

Slide Drawers (P), (Q), (R) and (S) into position.

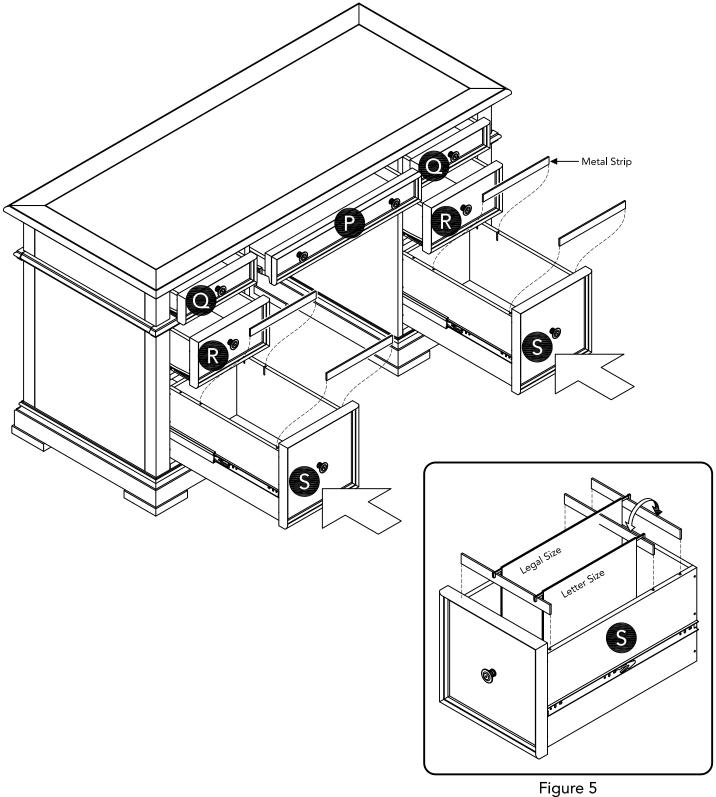

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight. PREVENT FADING



Do not write directly on surface. PREVENT MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319