

Model #348-260 - Full Size Canopy & Legs (Sold With 348-460)
Model #348-200 - Queen Size Canopy & Legs (Sold With 348-500)
Model #348-220 - King Size Canopy & Legs (Sold With 348-660)

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (12) Long Allen Bolts
- B (4) Short Allen Bolts
- C (8) Metal Washers
- D (8) Spring Washers
- E (4) Hex Nuts
- F (8) Check Rings
- G (1) Allen Wrench

PARTS LIST

- H (2) Bed Grills
- J (2) Short Bed Posts
- K (2) Long Bed Posts
- L (2) Short Canopy Posts
- M (2) Long Canopy Posts
- N (4) Top Finials
- P (2) Long Canopy Poles
- R (2) Short Canopy Poles


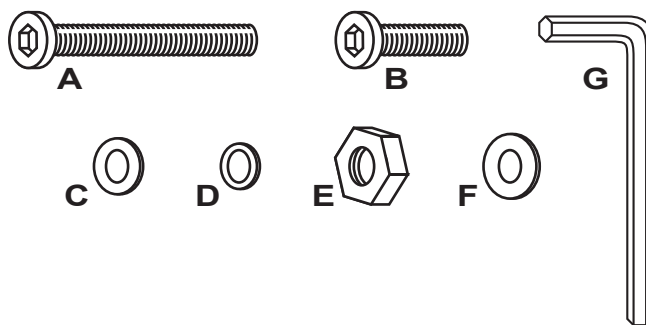


FIGURE 1

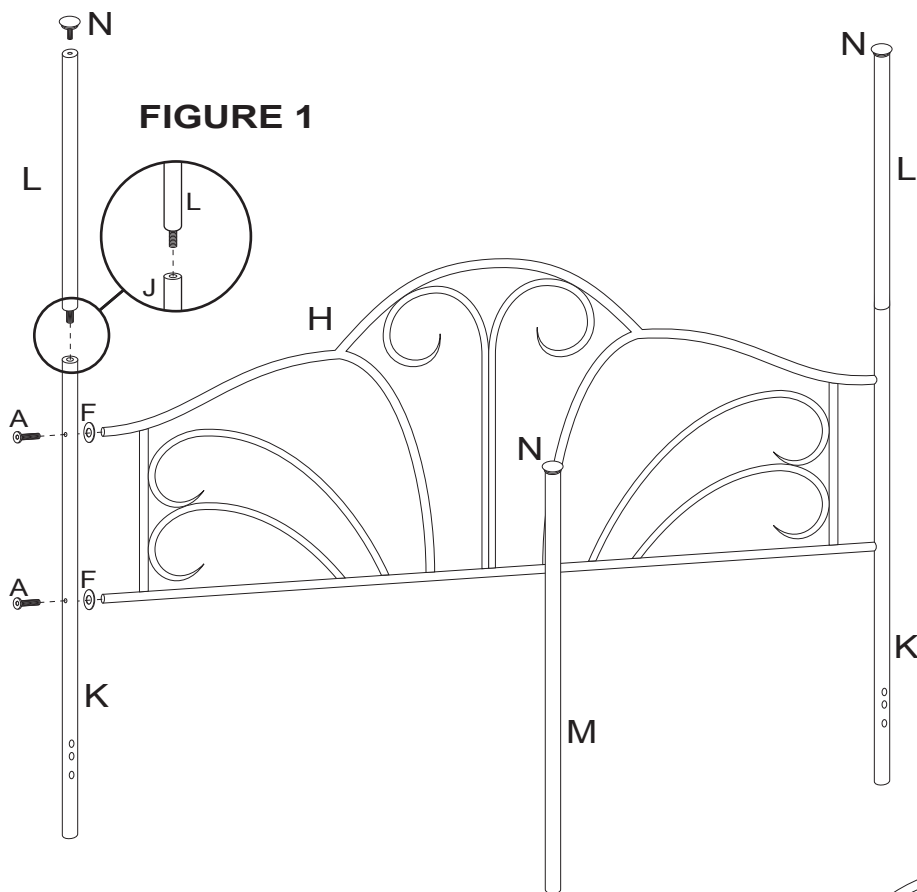

STEP 1

Attach both Bed Grills (H) to both Short and Long Bed Post (J & K) 2 per each grill, using 2 Long Allen Bolts (A), and 2 Check Rings (F) per each post. Tighten All Bolts. See both figures 1 & 2.


STEP 2

Attach Short Canopy Posts (L) to Long Bed Posts (K) by screwing into place. Press in firmly and make sure poles remain tight. See Figure 1.

STEP 3

Attach Long Canopy Posts (M) to Short Bed Posts (J) by pressing in firmly and screwing into place making sure poles remain tight. See Figure 2. Canopy Poles (P & R) are ready for assembly.

FIGURE 2

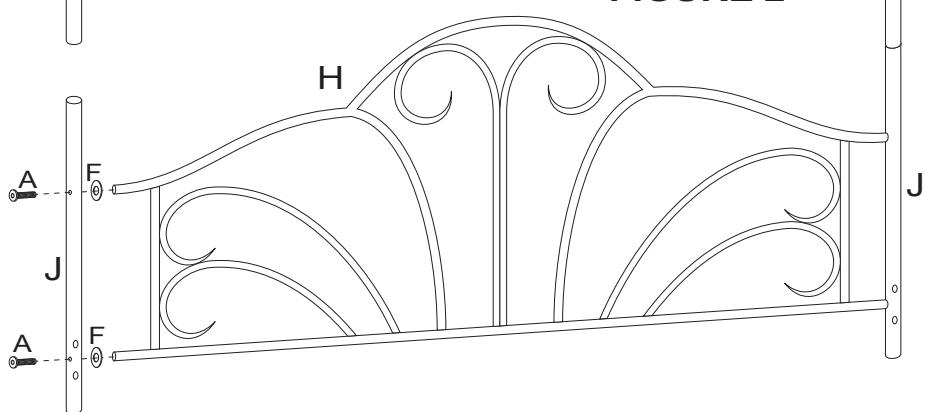

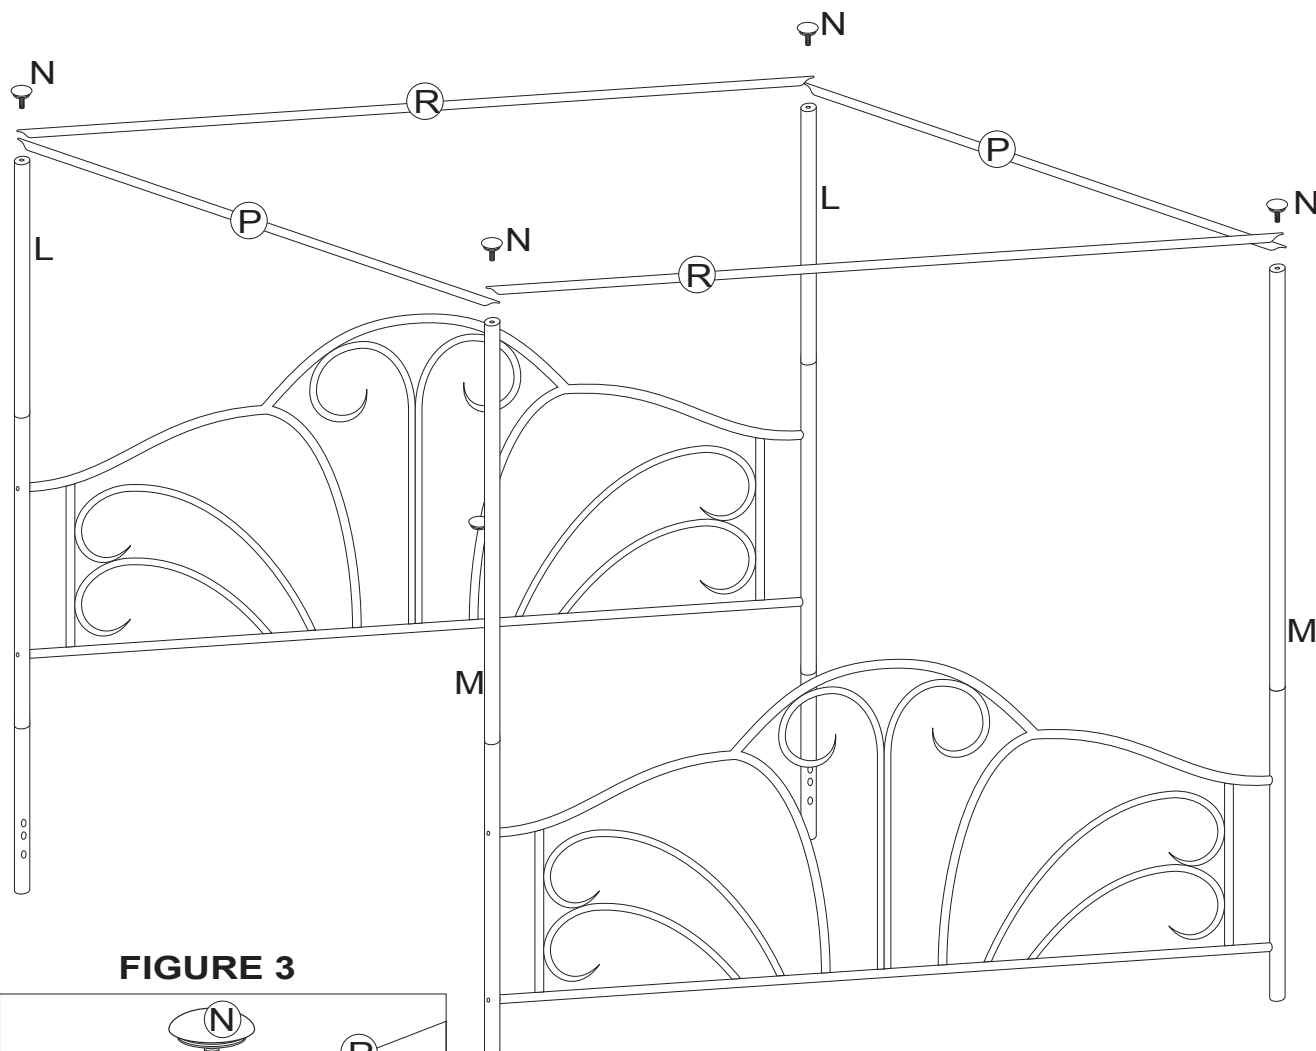


FIGURE 3

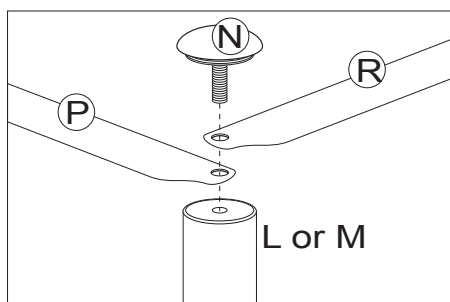


FIGURE 4


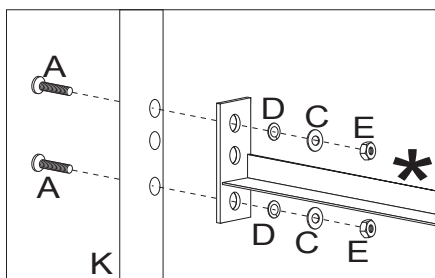


FIGURE 5

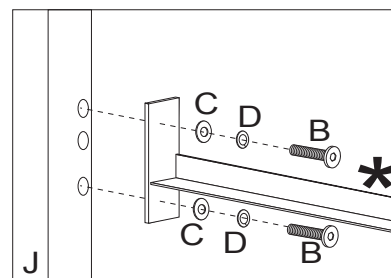

STEP 4

Attach Canopy Poles (P & R) to either Canopy Post (L & M) by connecting then holding in place using 1 Top Finial (N) per each post. Tighten Finials down to hold poles in place. See Figure 3.

STEP 5

Attach Bed Frame (*Not Included) to Long Bed Posts (K) using 2 Long Allen Bolts (A), 2 Spring Washers (D), 2 Metal Washers (C) and 2 Hex Nuts (E) per each post. Tighten All Bolts. See Figure

STEP 6

Attach Bed Frame (*Not Included) to Short Bed Posts (J) using 2 Short Allen Bolts (B), 2 Spring Washers (D) & 2 Metal Washers (C) per each post. Tighten All Bolts. See Figure 5. Assembly is now complete.