



Storage Pantry CF3136

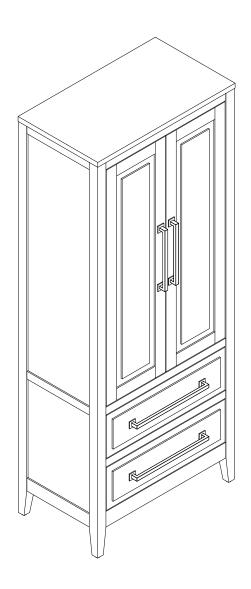

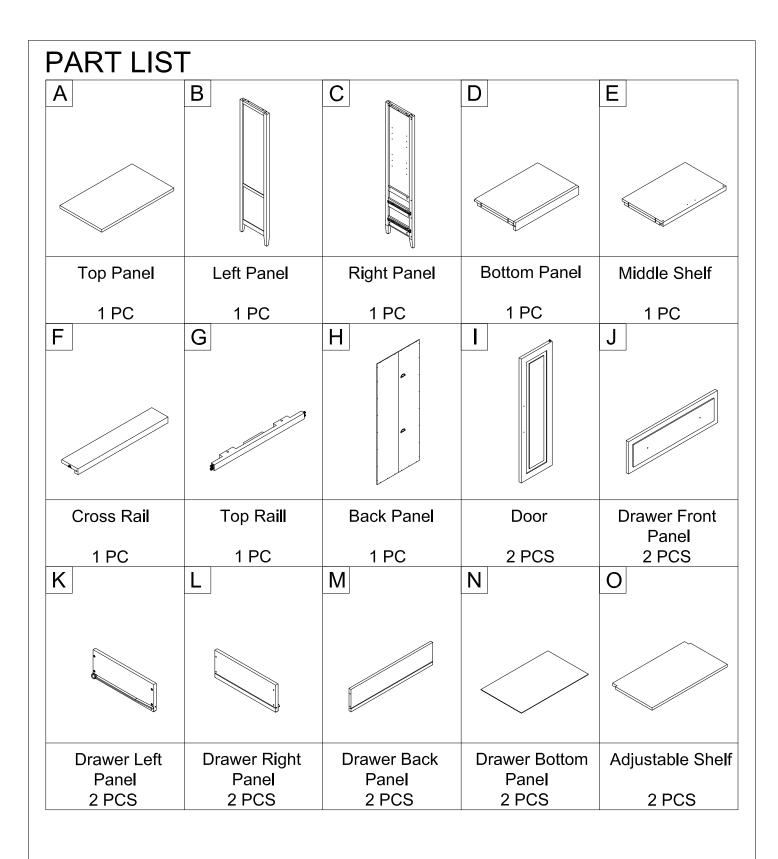

HARDWARE LIST

#1	#2	#3	#4	#5				
Ø1/4"*25mm	Ø1/4"*11mm	Ø1/4"*13mm	4mm*90	Ø8*30mm				
Bolt	Spring Washer	Flat Washer	Allen Wrench	Wood Dowel				
14 PCS (Extra 1)	14 PCS (Extra 1)	14 PCS (Extra 1)	1 PC	18 PCS (Extra 1)				
#6	#7	#8	#9	#10				
				Edizione				
**	6*3*15mm			5/32"*22mm				
Magnet	Round Head Screw	Door Handle	Drawer Handle	Round Head Bolt				
2 PCS	4 PCS (Extra 1)	2 PCS	2 PCS	8 PCS (Extra 1)				
#11	#12	#13	#14					
astretic (a)								
8*4*25	8*3*12mm							
Long Screw	Short Screw	Shelf Holder	Safety Strap Kit					
16 PCS (Extra 1)	30 PCS (Extra 1)	8 PCS (Extra 1)	1 SET					


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.



Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Please do not use tools to assemble this unit unless specifically indicated.

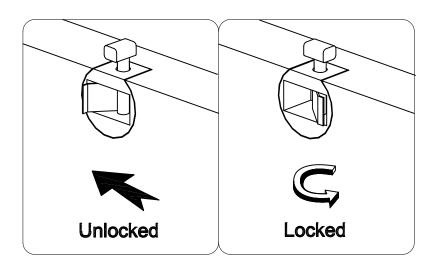


Reference the images above any time the instructions state "lock the hardware"

Note: Be sure to check all hardware is locked when completed.


Step 1. Attach magnets (part #6) to middle shelf (part E) and top rail (part G) using round head screws (part #7) and phillips head screwdriver.

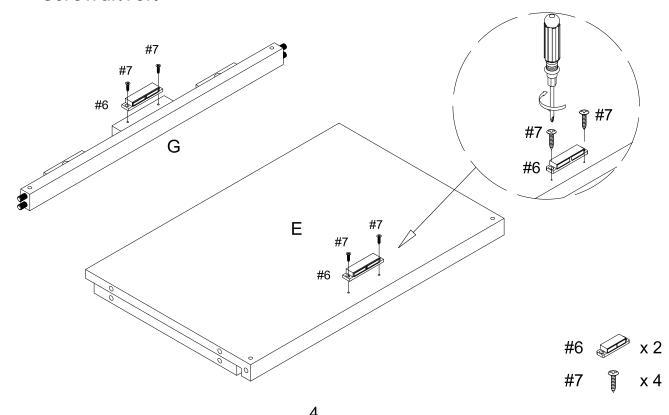


Step 2. Attach handles (parts #8 & #9) to doors (part I) and drawer front panels (part J) using round head bolts (part #10) and phillips head screwdriver.

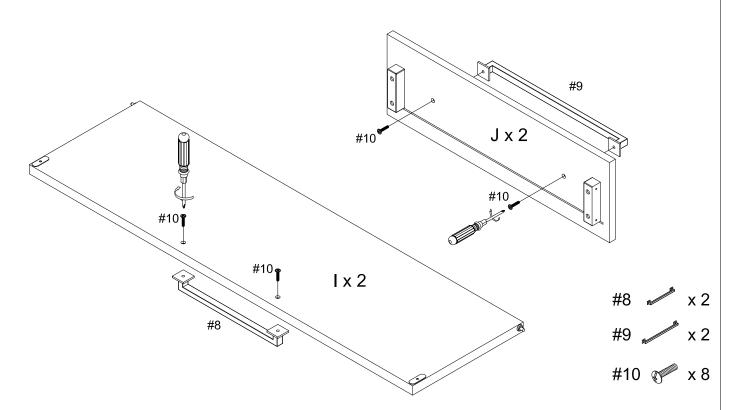


Step 3. Attach drawer panels (parts K & L) to drawer front panel (part J) using long screws (part #11) and phillips head screwdriver. Slide drawer bottom panel (part N) into grooves of assembled unit (parts J, K & L). Attach drawer back panel (part M) to assembled unit (parts K, L & N) using long screws (part #11) and phillips head screwdriver. Repeat for remaining drawer.

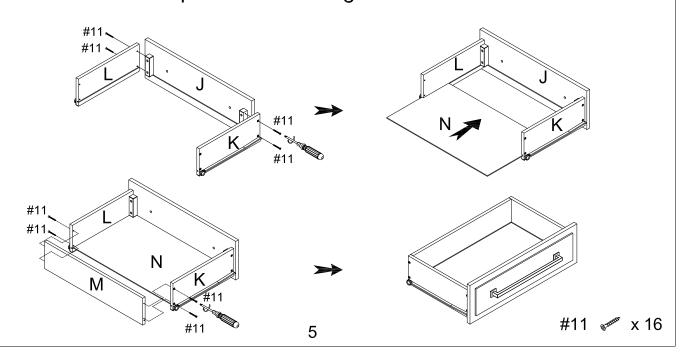


Step 4. Attach bottom panel (part D) and middle shelf (part E) to right panel (part C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

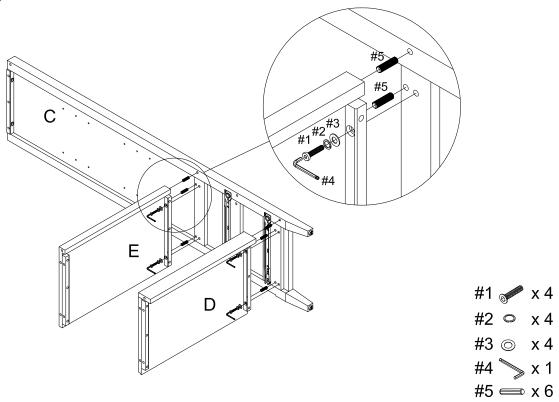


Step 5. Attach left panel (part B), top rail (part G) and cross rail (part F) to assembled unit (parts C, D & E) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3), allen wrench (part #4) and lock the hardware.

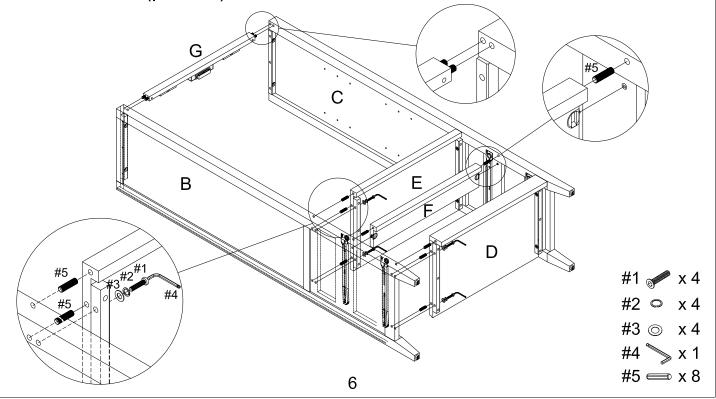

Step 6. Attach top panel (part A) to assembled unit (parts B, C & G) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

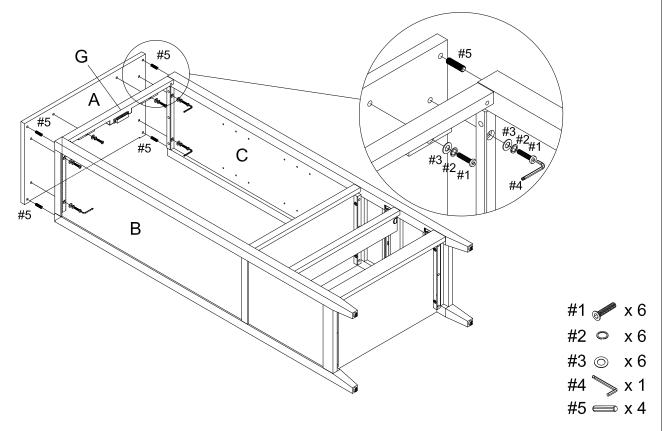

Step 7. Carefully turn unit upright. Attach back panel (part H) to assembled unit (parts A, B, C, D & E) using short screws (part #12) and phillips head screwdriver.

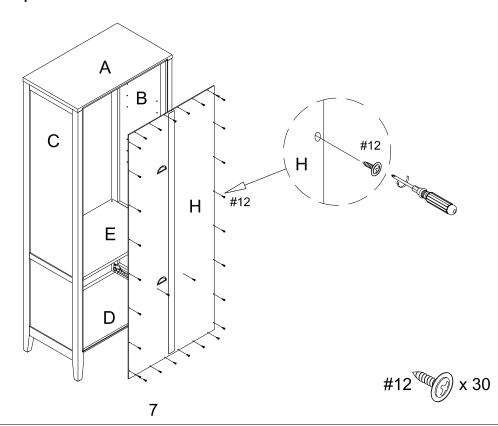


Step 8. Slide assembled drawers into place. 8

Step 9. Attach doors (part I) by placing pin hinge (pre-installed in door) in the pre-drilled hole of middle shelf (part E). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top rail (part G).


NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. if relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

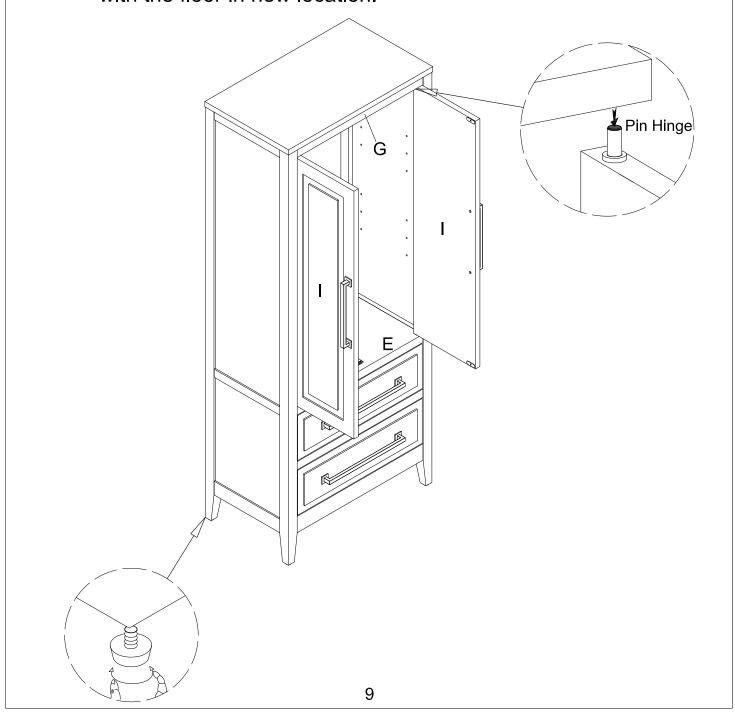

Step 10. Place shelf holders (part #13) into desired position and slide adjustable shelves (part O) into place.

Important: Safety strap kit (part #14) must be installed to prevent tipping, damage and/or injury.

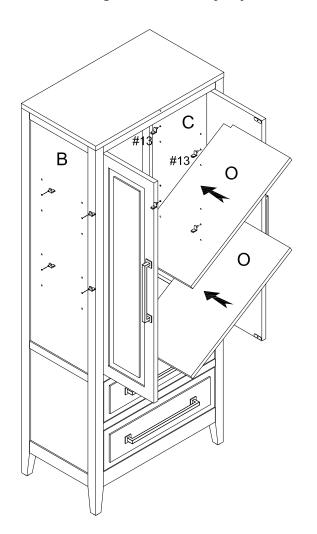

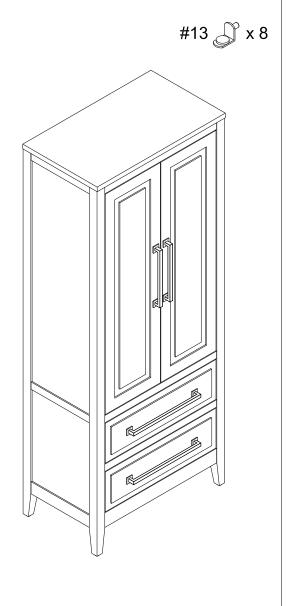

#14	Α	В	С	D	E
		0		William Co.	
			8*3*15mm	8*4*35mm	
Safety Strap Kit	Wall Anchor	Bracket	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

- 1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
- 2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
- 3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

