Riverside FURNITURE

email: info@riverside-furniture.com

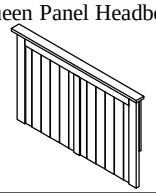
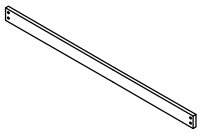
BENNETT
Bedroom
Assembly Instructions

Made in Viet Nam





Queen Panel Bed

Warning :
- Be sure to check all packing material carefully for small parts,which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.






Hardware and Parts packed with the Headboard

79270 Queen Panel Headboard  (H-A) 1 pc.	Headboard Post (Left)  (H-B) 1 pc.	Headboard Post (Right)  (H-C) 1 pc.	Headboard Stretcher  (H-D) 1 pc.
Allen Head Bolt ϕ5/16"-18 x 1-3/4"  (H-E) 10 pcs.	Spring Washer ϕ5/16"  (H-F) 10 pcs.	Flat Washer ϕ5/16" x 19*2mm  (H-G) 10 pcs.	Allen Key 5mm  (H-H) 1 pc.

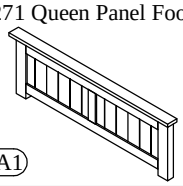
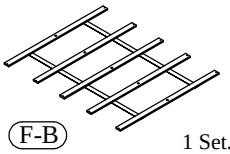


Hardware and Parts packed with the Footboard

79271 Queen Panel Footboard  (F-A1) 1 pc.	Wood Slat 61" long  (F-B) 1 Set.	Slat Support Leg 6-3/4" x 1-1/4" x 1-1/4"  (F-C) 5 pcs.	Wood Screw #8 x 1"  (F-D) 10 pcs.	Screw Driver not included 

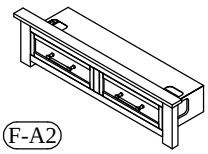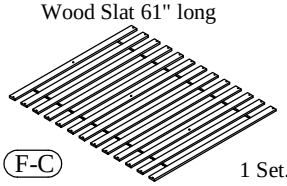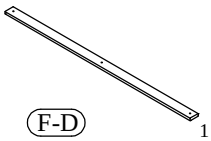Hardware and Parts packed with the Storage Footboard

79273 Queen Storage Footboard  (F-A2) 1 pc.	Footboard Support Leg 7-1/4"x 1-1/4" x 1-1/4"  (F-B) 2 pcs.	Wood Slat 61" long  (F-C) 1 Set.	Center Support Rail 61"x 2-3/4" x 3/4"  (F-D) 1 pc.	Slat Support Leg 12" x 1-1/4" x 1-1/4"  (F-E) 3 pcs.	
Allen Head Bolt ϕ5/16"-18 x 1-1/2"  (F-F) 4 pcs.	Spring Washer ϕ5/16"  (F-G) 4 pcs.	Flat Washer ϕ5/16" x 19*2mm  (F-H) 4 pcs.	Allen Key 5mm  (F-I) 1 pc.	Wood Screw #8 x 1"  (F-J) 26 pcs.	Screw Driver not included 

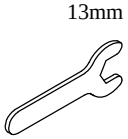Hardware and Parts packed with the Bed Rail

79272 Panel Side Rails  (R-A1) 2 pcs.	All-Thread Bolt ϕ5/16"-18 x 3-1/2"  (R-B) 8 pcs.	Curved Washer ϕ5/16"  (R-C) 8 pcs.	Flat Washer ϕ5/16" x 16*2mm  (R-D) 8 pcs.	Spring Washer ϕ5/16"  (R-E) 8 pcs.	Hex Nut ϕ5/16"x L17  (R-F) 8 pcs.	Open Wrench 13mm  (R-G) 1 pc.
79274 Storage Bed Rails  (R-A2) 2 pcs.	All-Thread Bolt ϕ5/16"-18 x 3-1/2"  (R-B) 8 pcs.	Curved Washer ϕ5/16"  (R-C) 8 pcs.	Flat Washer ϕ5/16" x 16*2mm  (R-D) 8 pcs.	Spring Washer ϕ5/16"  (R-E) 8 pcs.	Hex Nut ϕ5/16"x L17  (R-F) 8 pcs.	Open Wrench 13mm  (R-G) 1 pc.

5/0 Queen Bed

79270 --5/0 Panel Headboard
79271 -- 5/0 Panel Footboard
79272 -- 5/0-6/6 Panel Side Rails

5/0 Queen Storage Bed

79270 -- 5/0 Panel Headboard
79273 -- 5/0 Storage Footboard
79274 -- 5/0-6/6 Storage Bed Rails

Riverside FURNITURE

email: info@riverside-furniture.com

BENNETT
Bedroom
Assembly Instructions

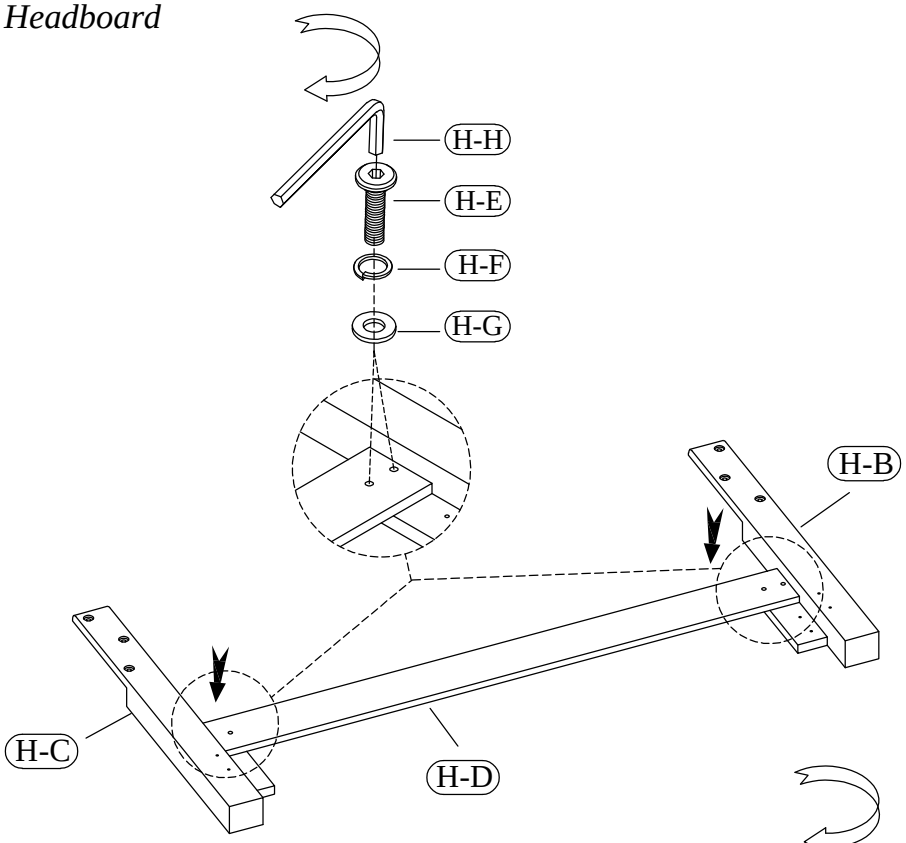
Made in Viet Nam

Queen Panel Bed


5/0 Queen Bed

79270 --5/0 Panel Headboard

STEP 1



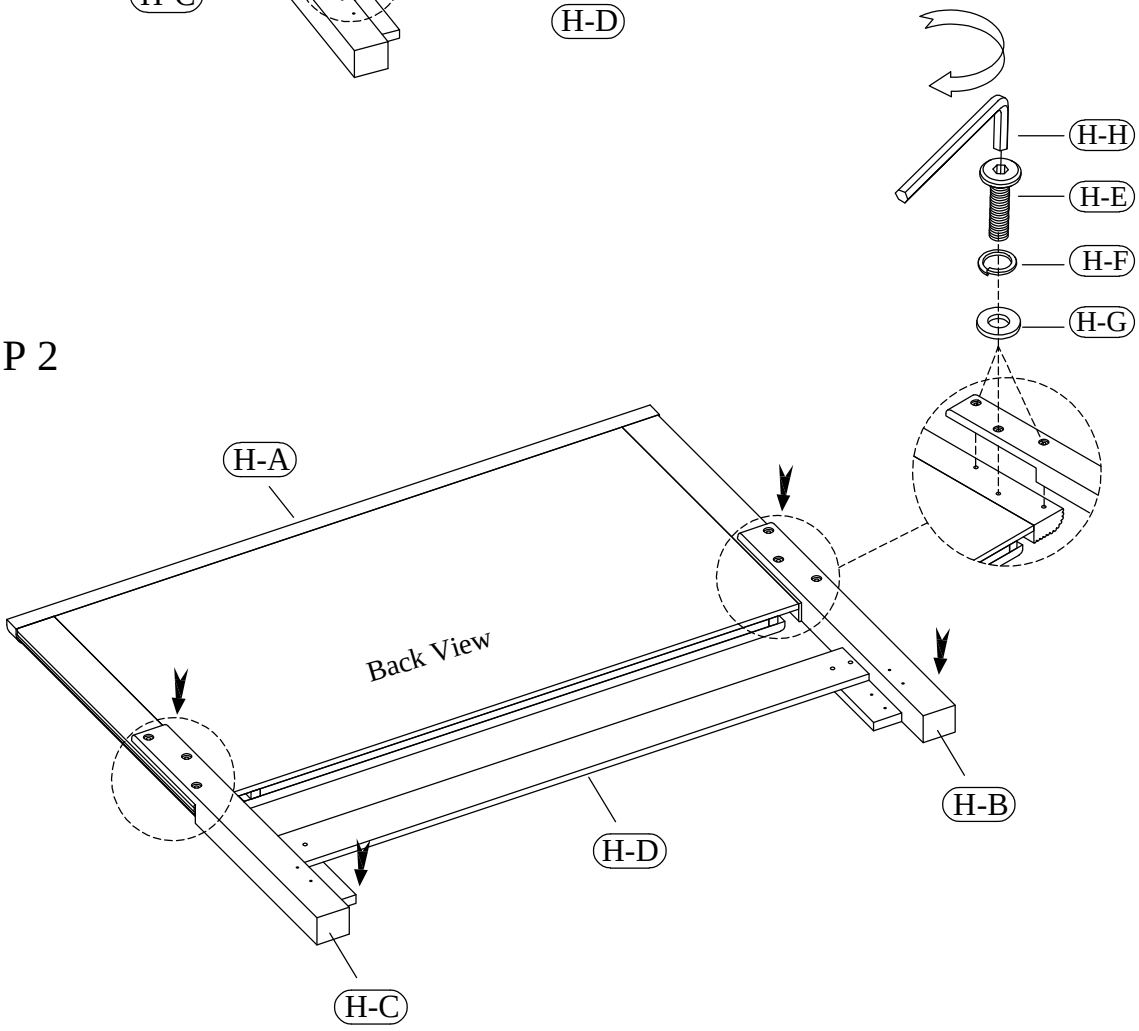STEP 2




5/0 Queen Bed


79270 --5/0 Panel Headboard

79271 -- 5/0 Panel Footboard

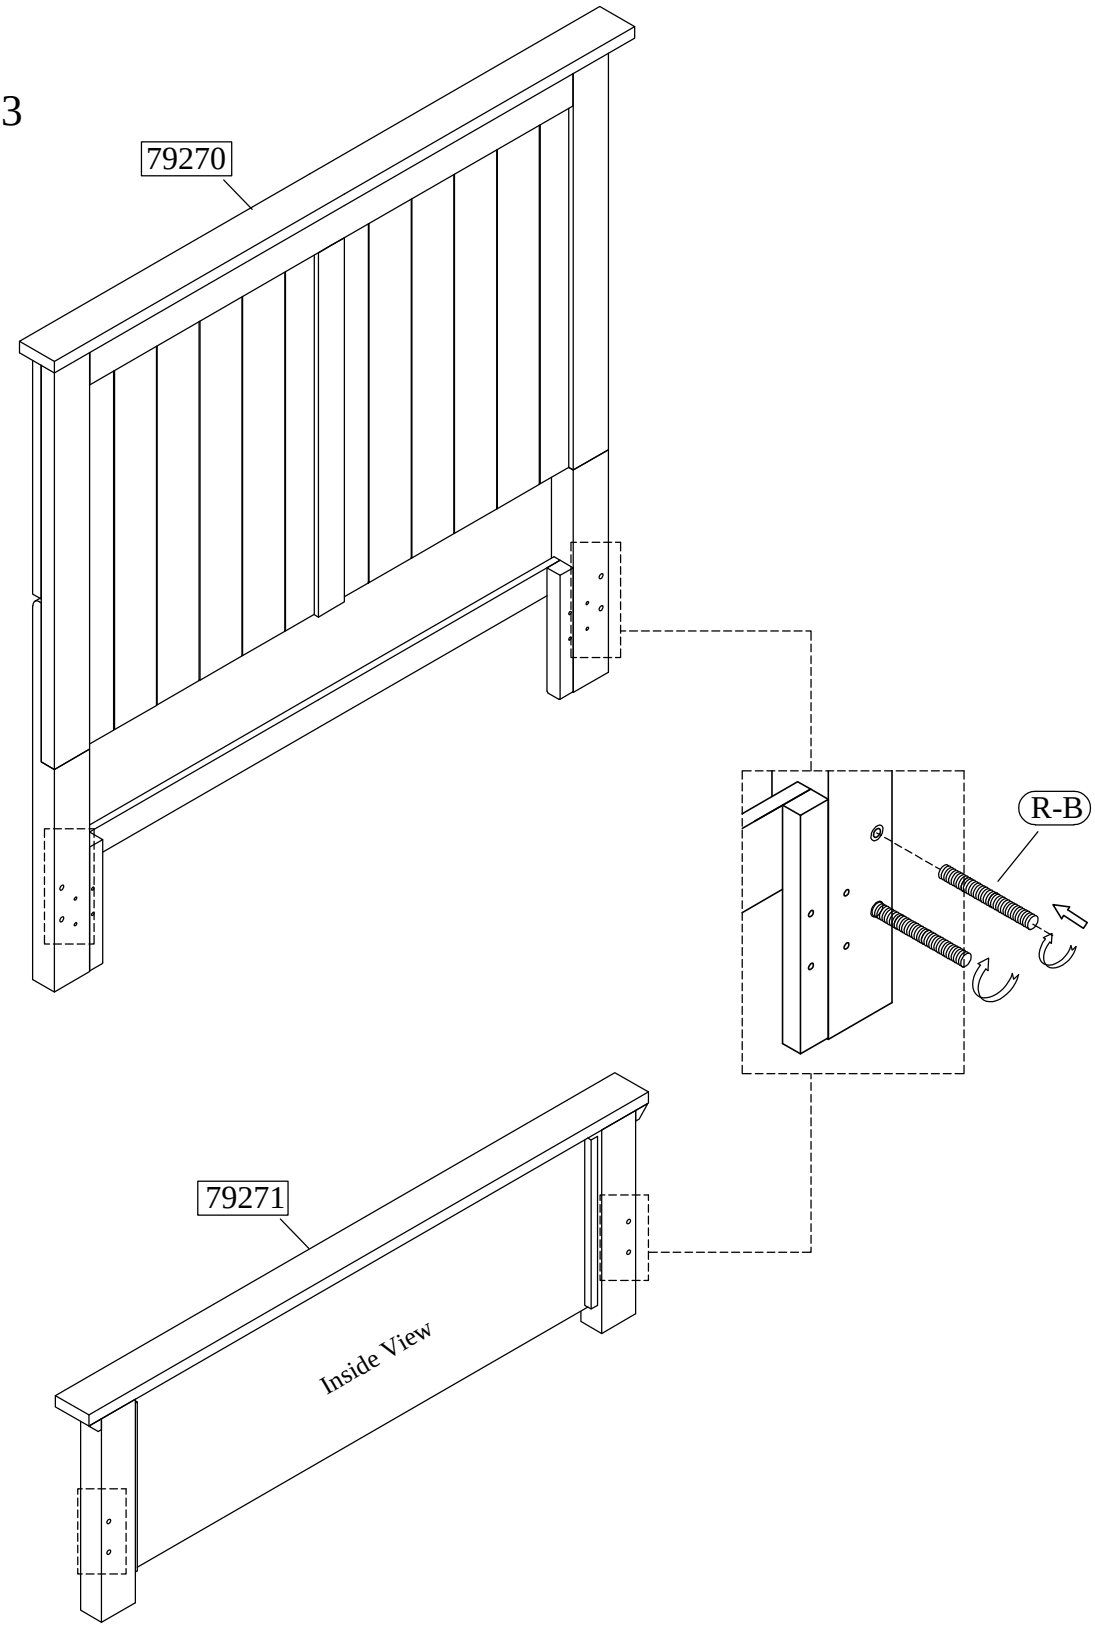
STEP 3



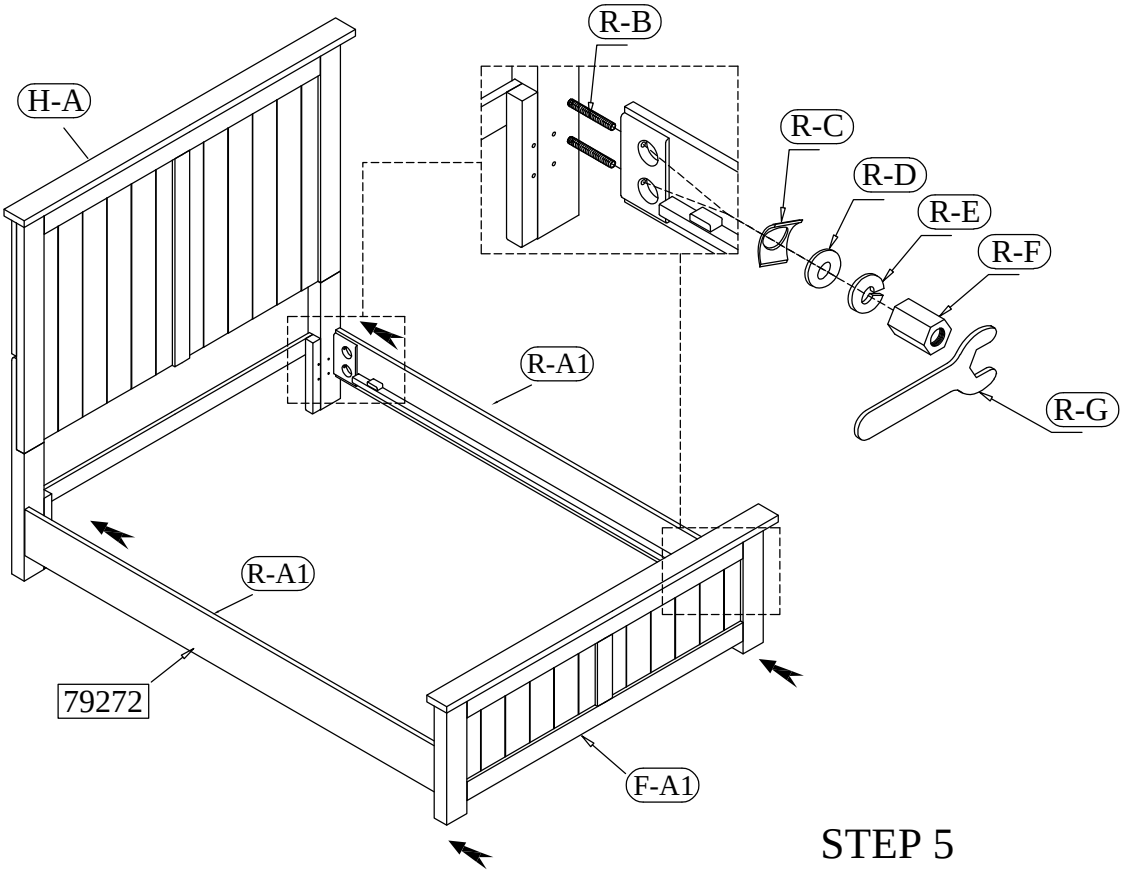STEP 4



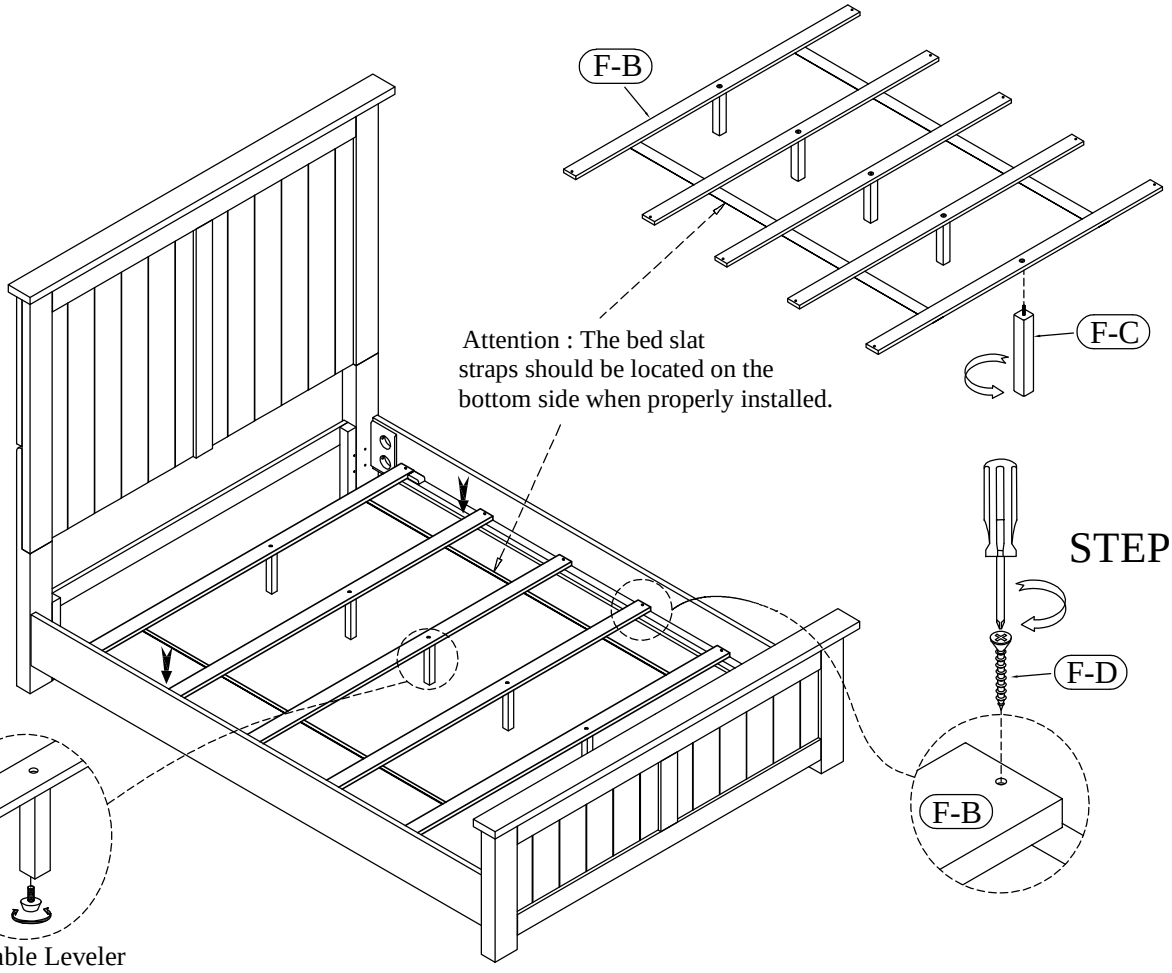
STEP 5



STEP 6

5/0 Queen Storage Bed
79270 -- 5/0 Panel Headboard
79273 -- 5/0 Storage Footboard

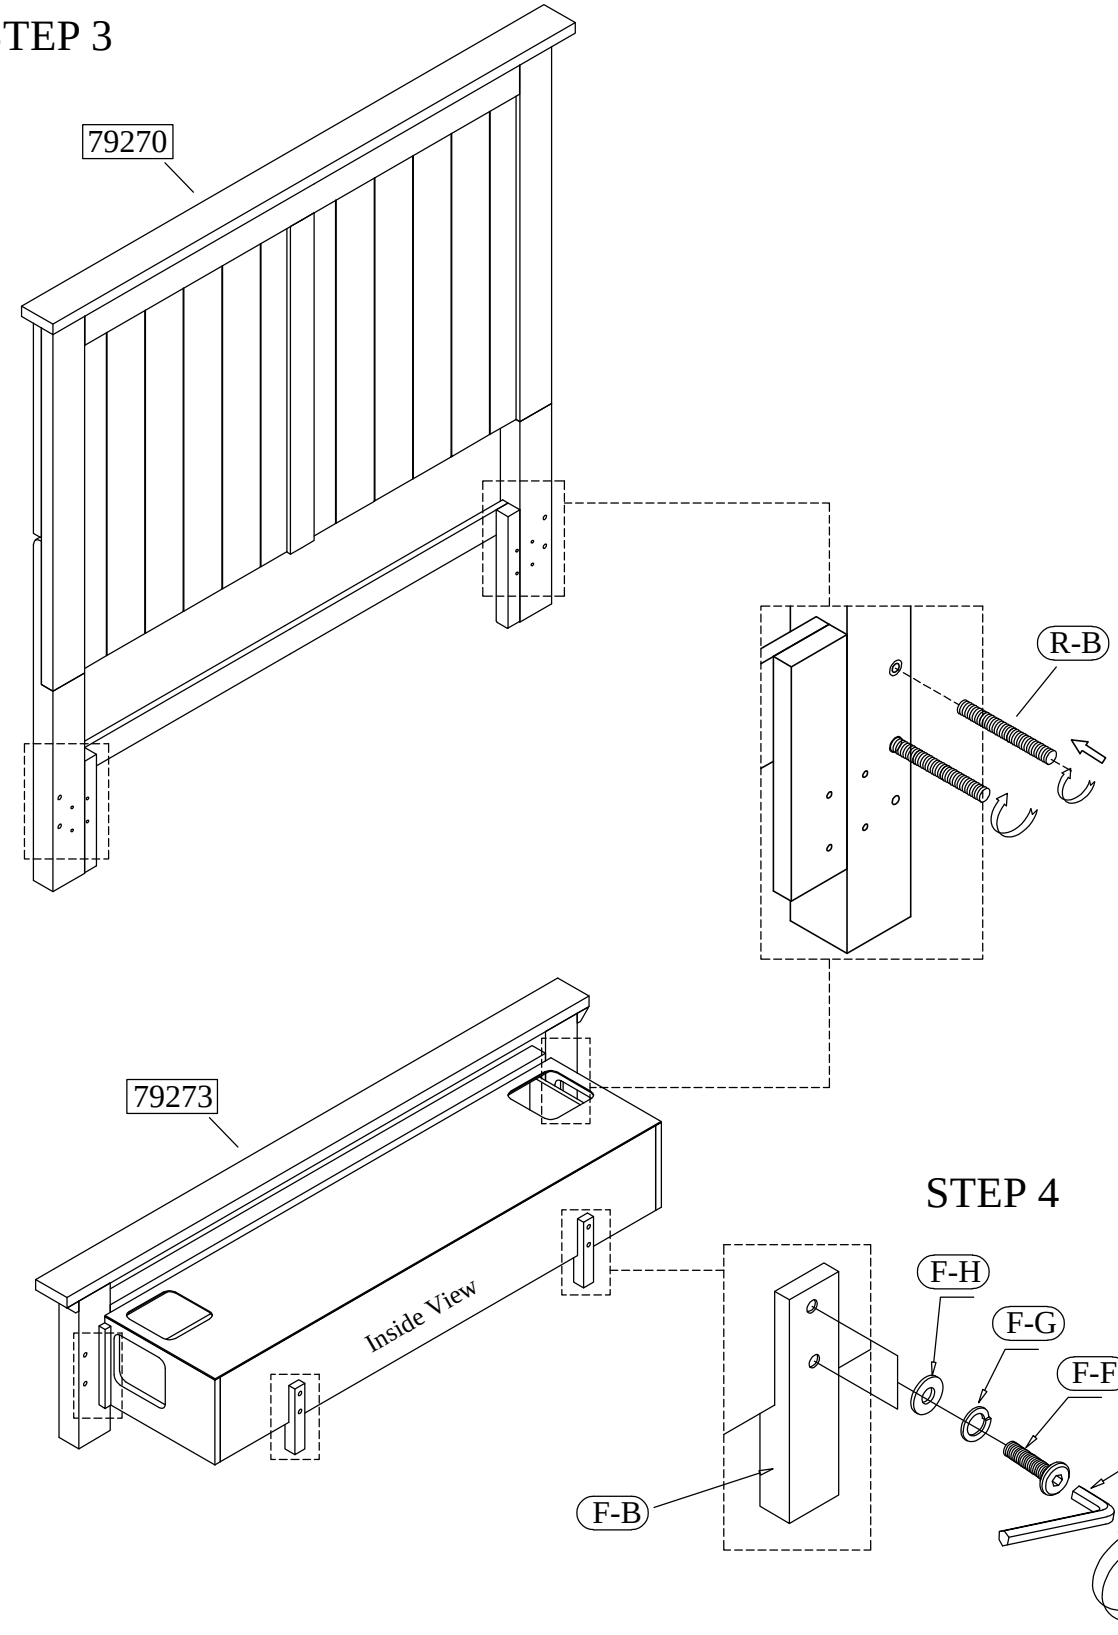STEP 3




STEP 4


5/0 Queen Storage Bed

79270 -- 5/0 Panel Headboard
79273 -- 5/0 Storage Footboard
79274 -- 5/0-6/6 Storage Bed Rails

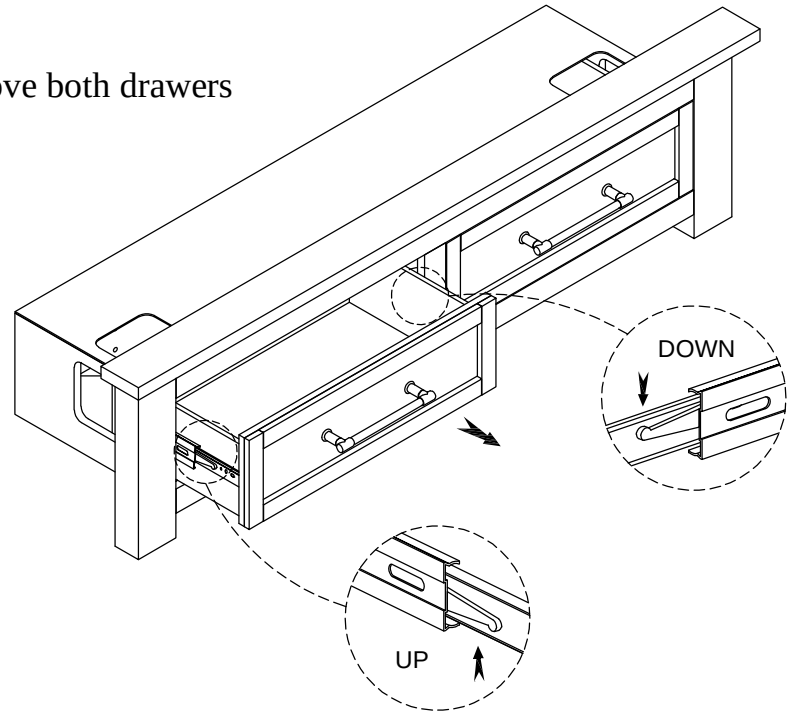
STEP 5: Remove both drawers




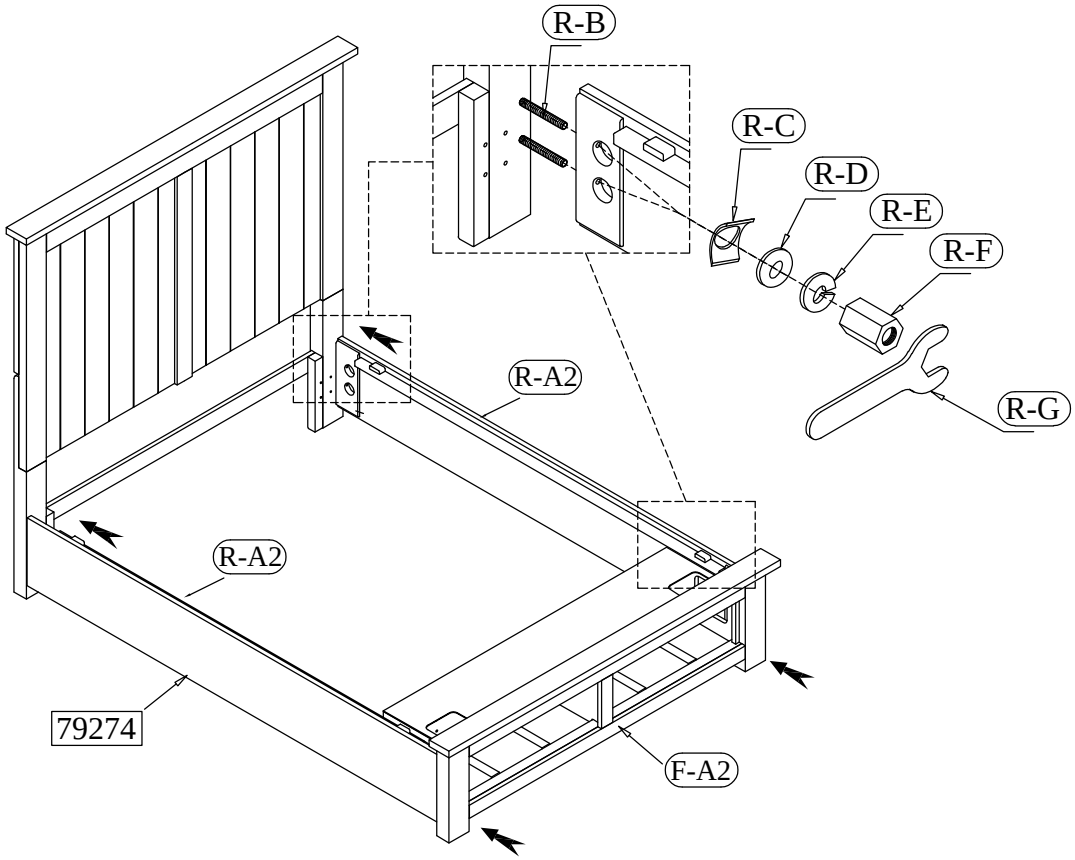STEP 6



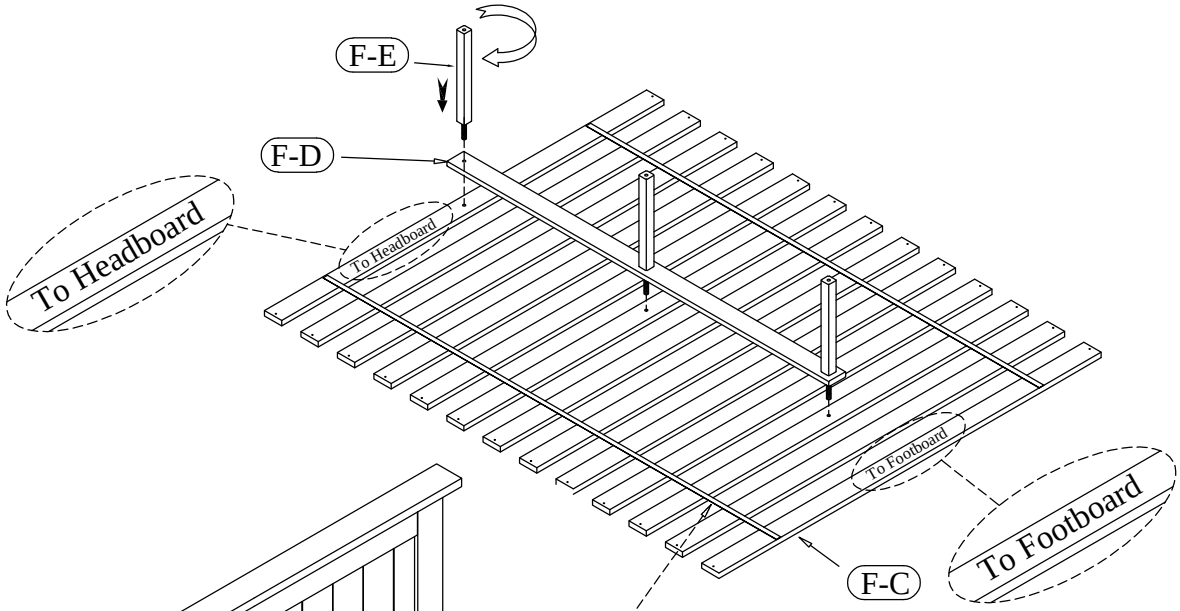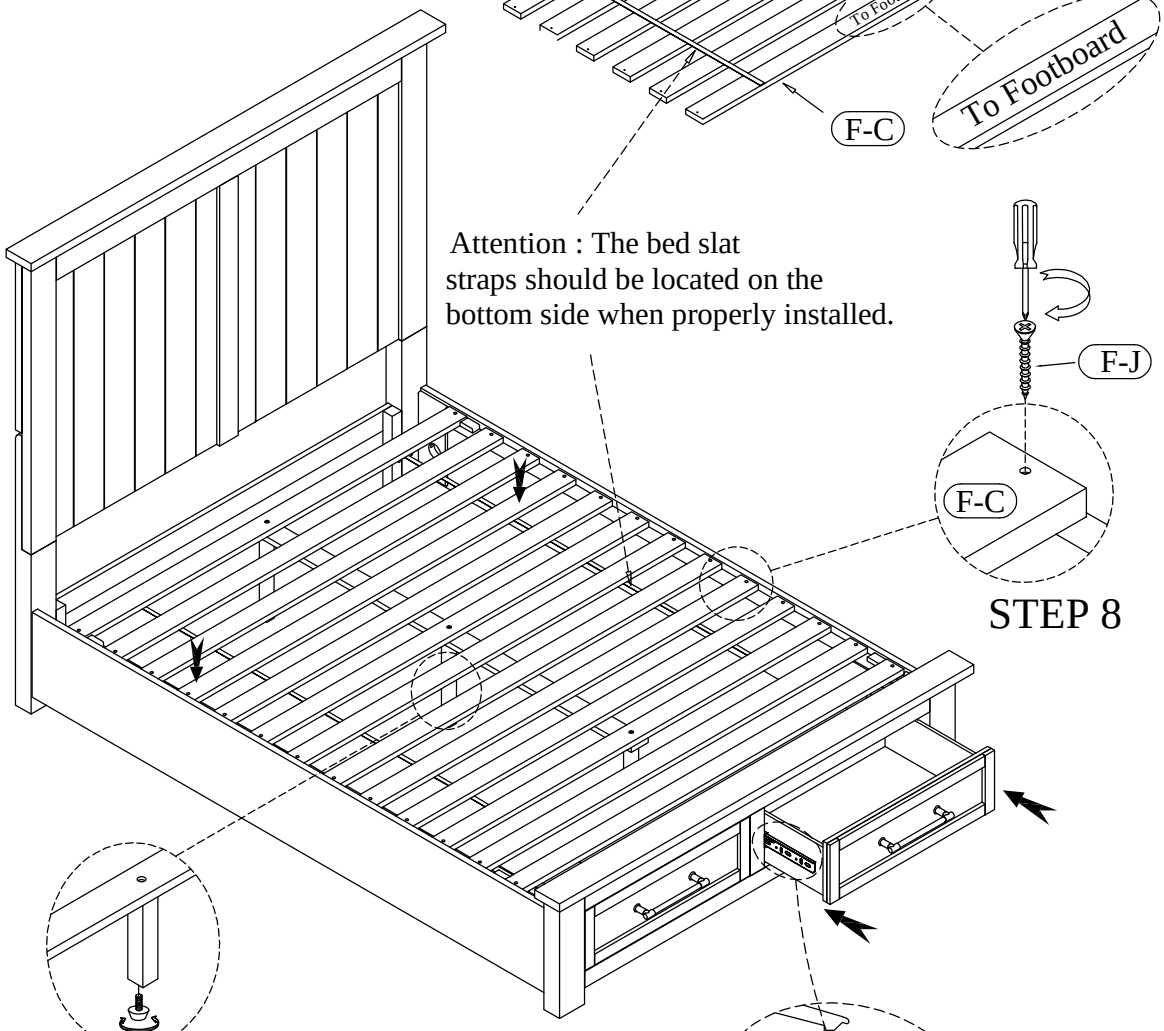
STEP 7





STEP 8

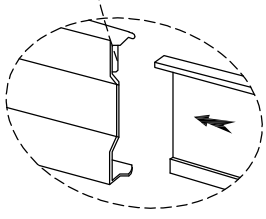Adjustable Leveler




STEP 9

Attach both drawers

5/0 Queen Bed

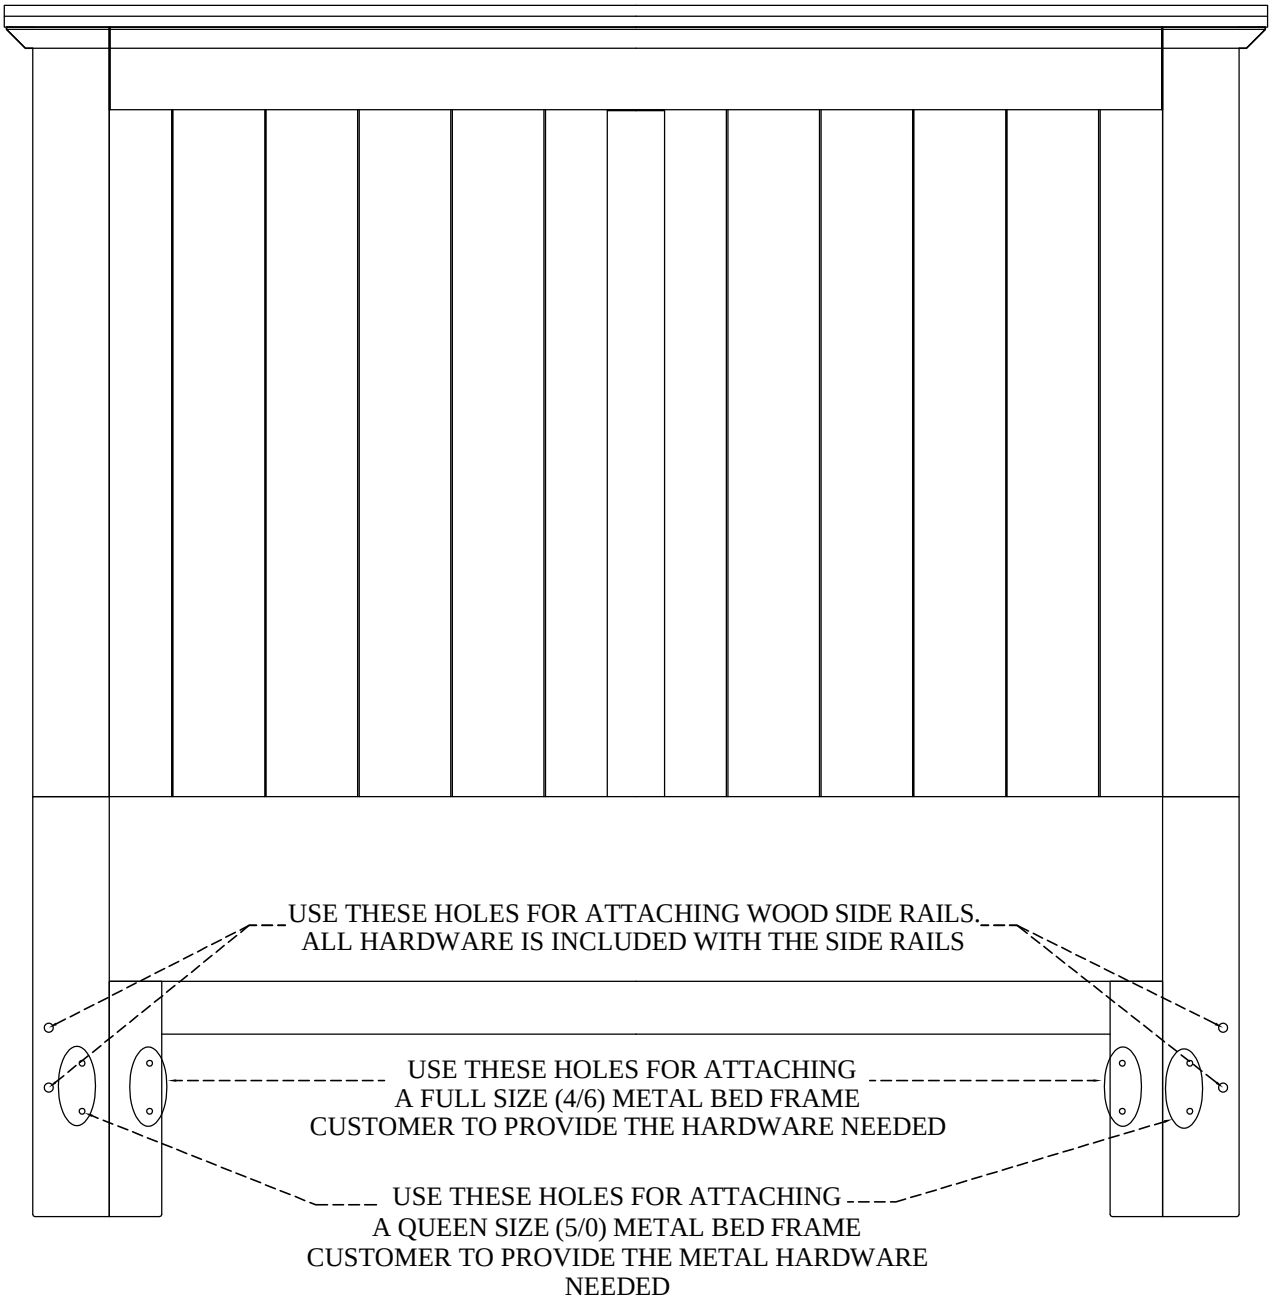79270 --5/0 Panel Headboard



4/6 & 5/0 Bed

THE HEADBOARD MAY BE USED ALONE WITH
A QUEEN OR FULL SIZE METAL BED FRAME.