



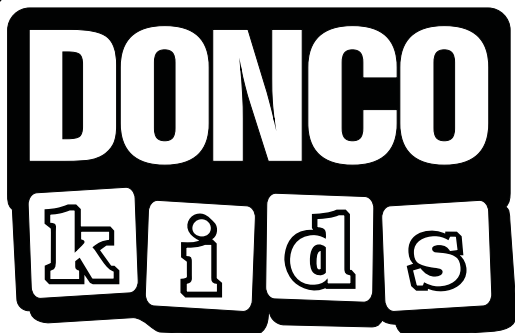

Fort Worth, Texas 76140

ASSEMBLY INSTRUCTIONS


2103 - TWIN LOG CABIN BED

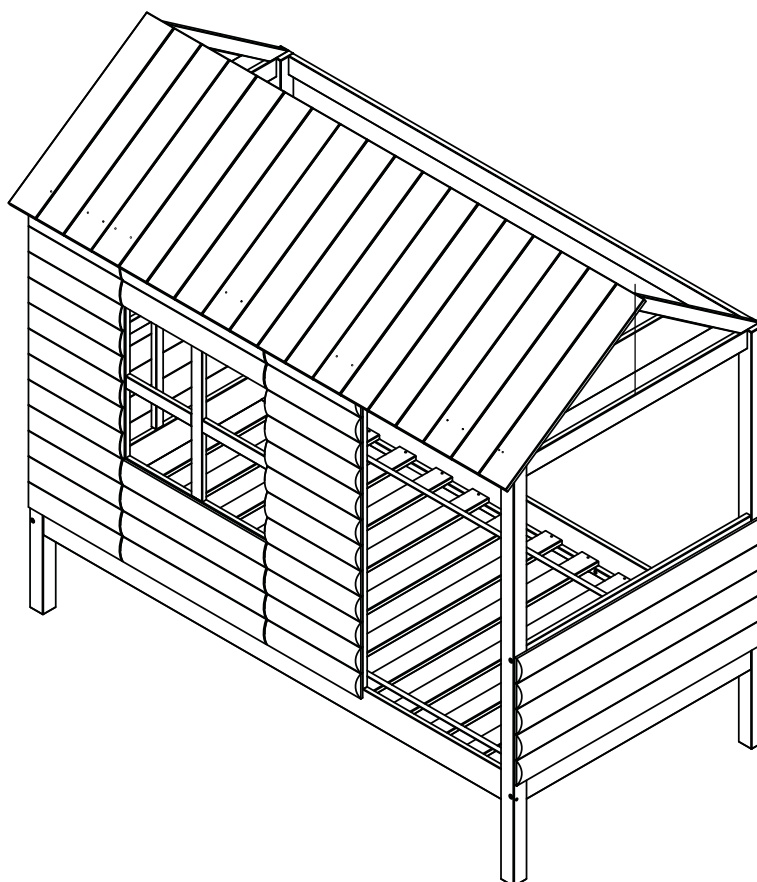



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

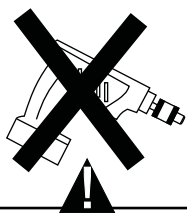


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

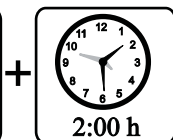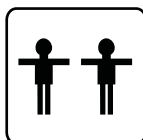

Tools Required



(Not included)




(Not included)





IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Part List- 2103 - TWIN LOG CABIN BED

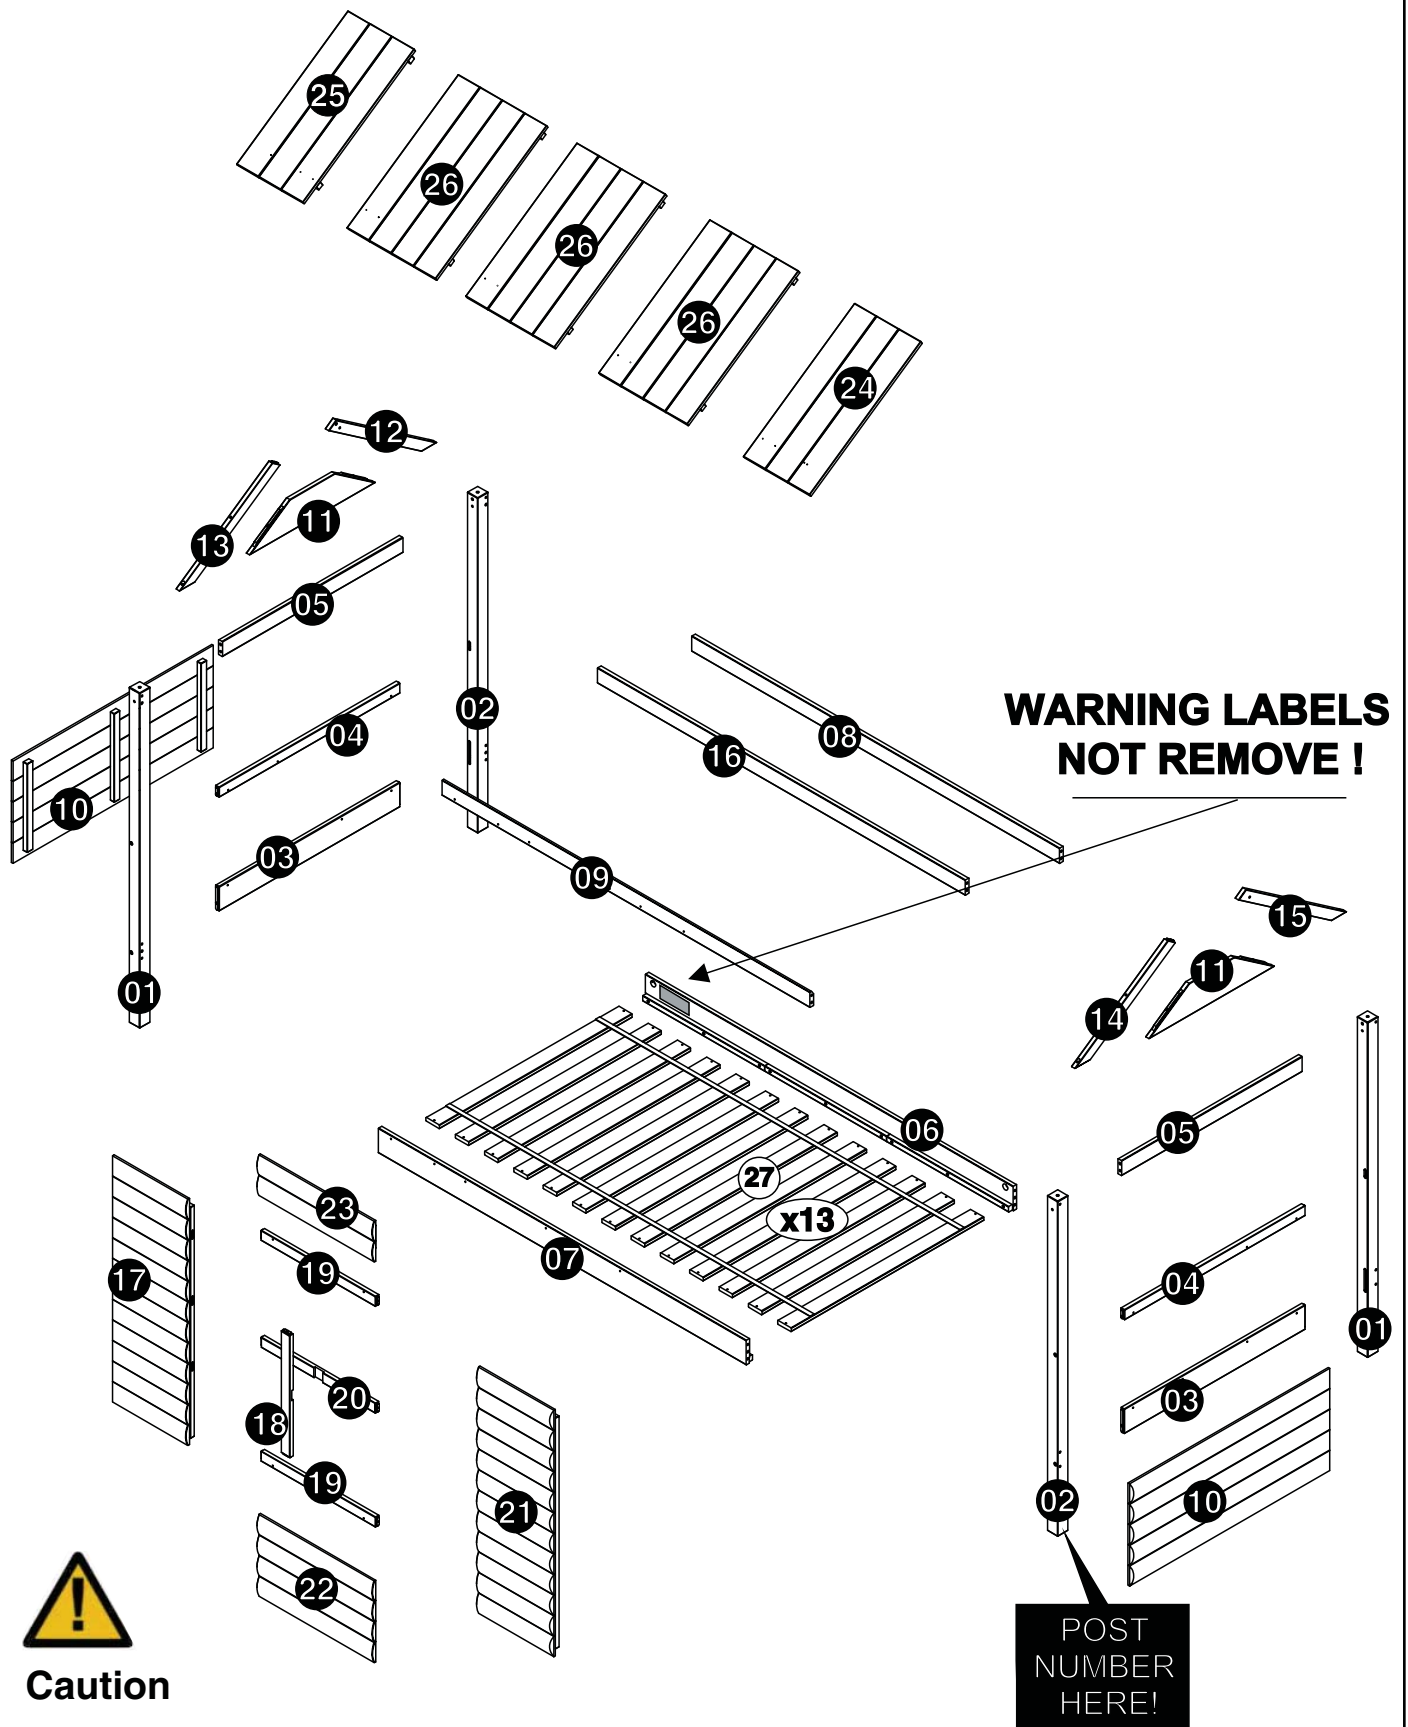



Identifying the Hardware-Identify the hardware using the illustrations below.

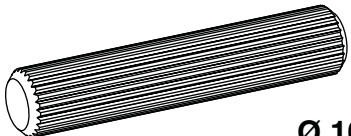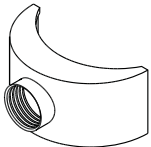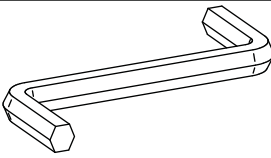A	 Ø 10x40	14
B	 Ø 1/4X90 Cab 17	04
C		04
D	 Ø 7X90 Cab 17	28
E	 Ø 3,5X30	84
F	 Ø 7X50 Cab 13	06
H		02


01

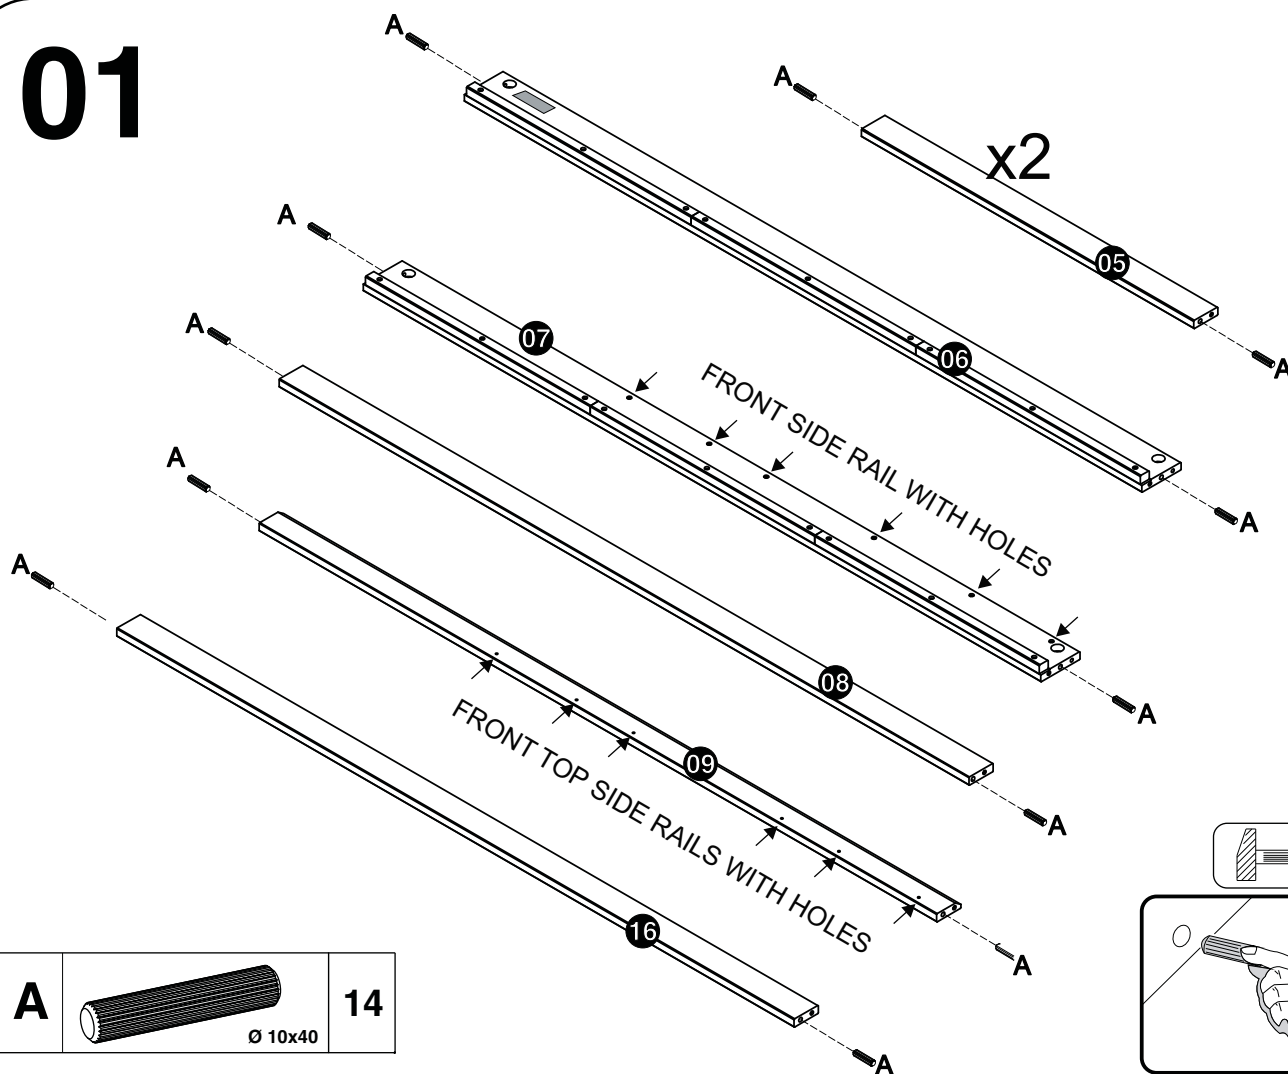

A		14
Ø 10x40		

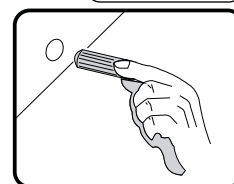


02

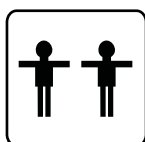

HEADBOARDS




PLEASE ASSEMBLY THE HEADBOARDS ON THE FLOOR

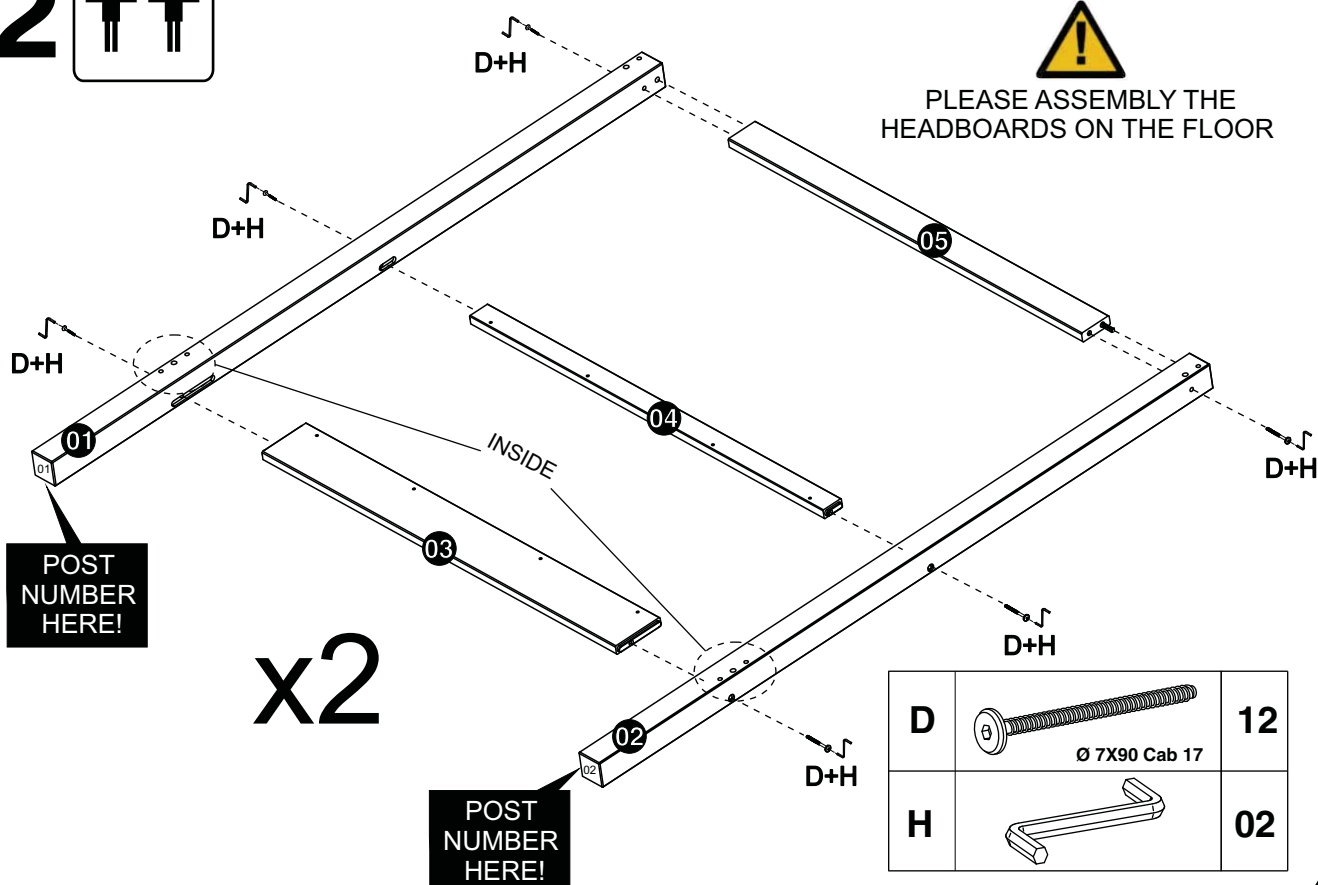



D		12
Ø 7X90 Cab 17		
H		02

03


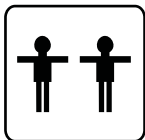


Caution

Please be careful when assembling this product due the parts are extremely heavy. Also, please do not allow kids around when assembling this bed to avoid injuries.

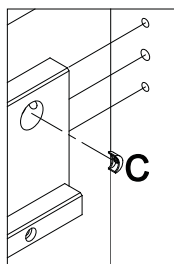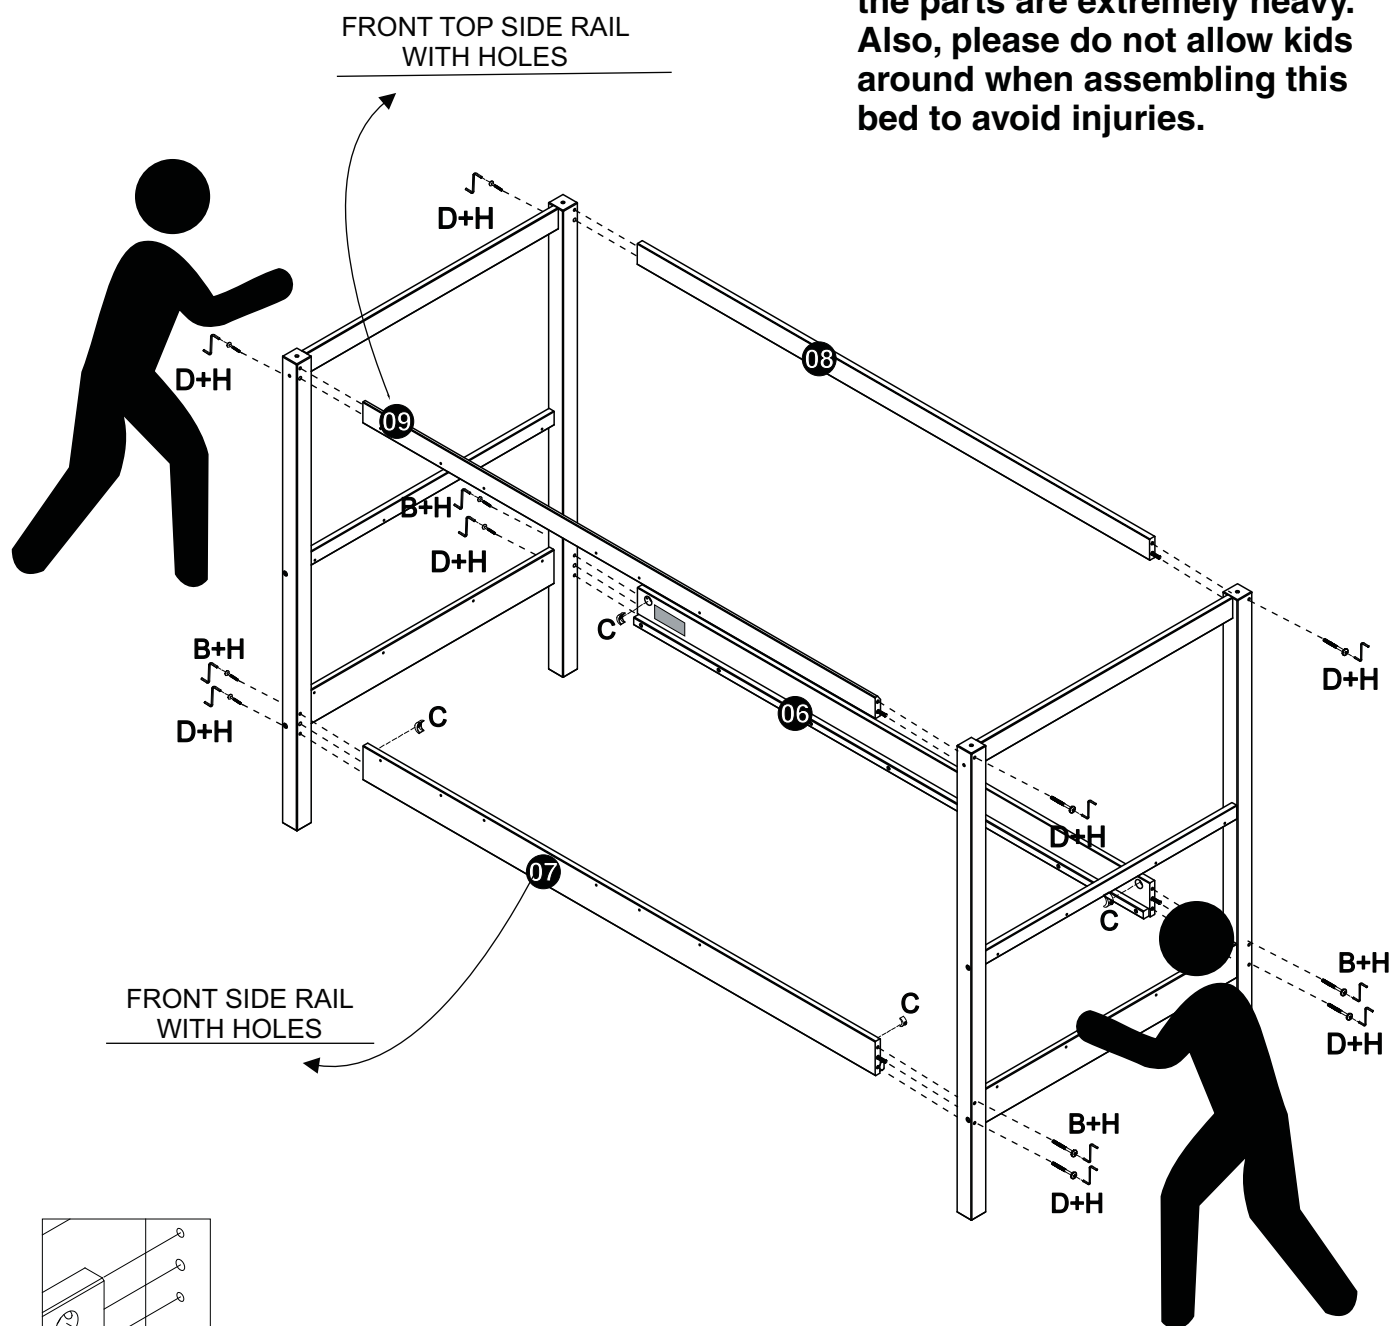



B		04	D		08
C		04	H		02




Ø 1/4X90 Cab 17



Ø 7X90 Cab 17

04

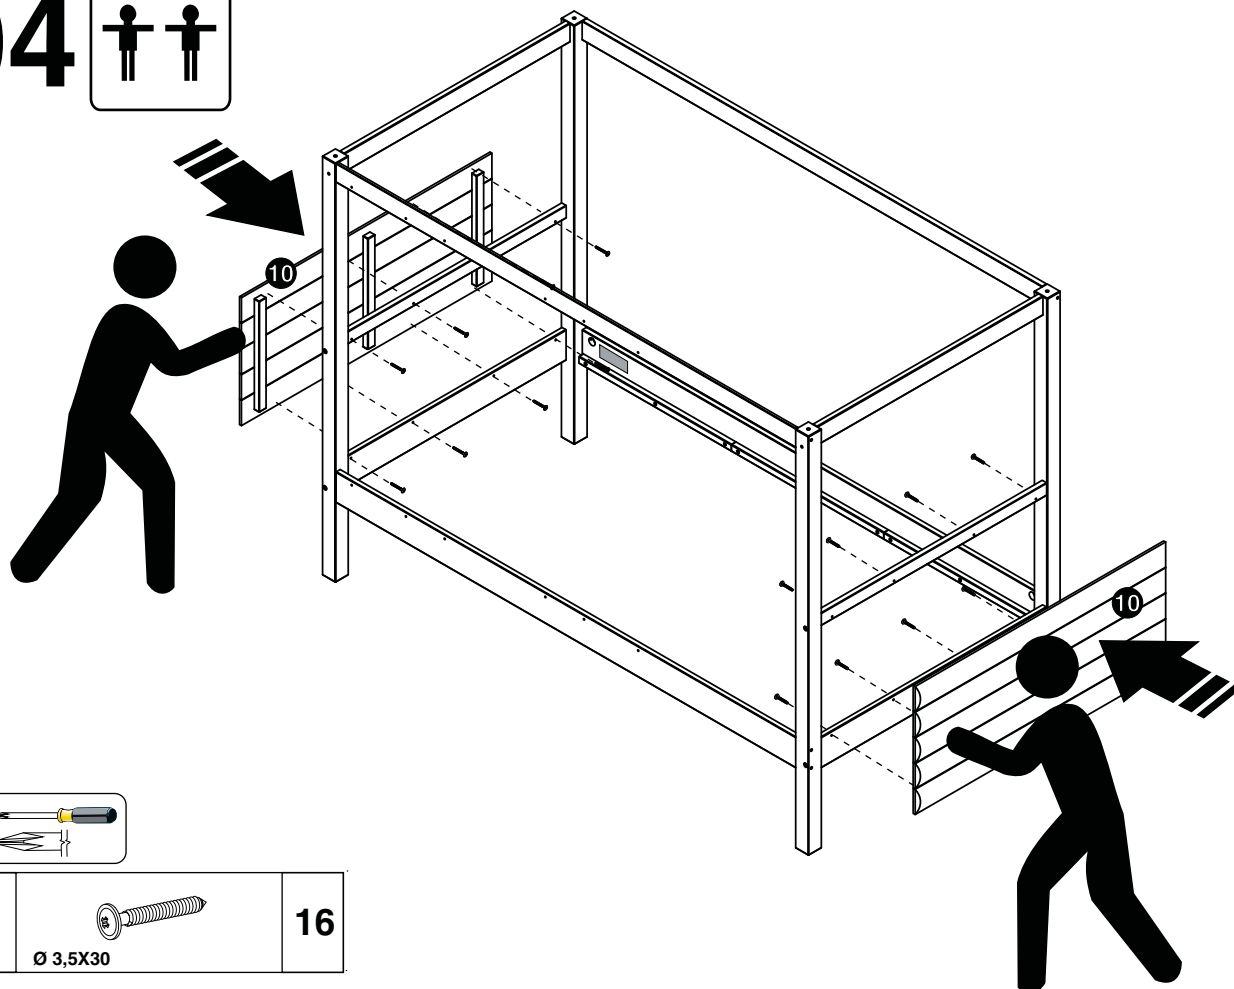



E		16
Ø 3,5X30		

05

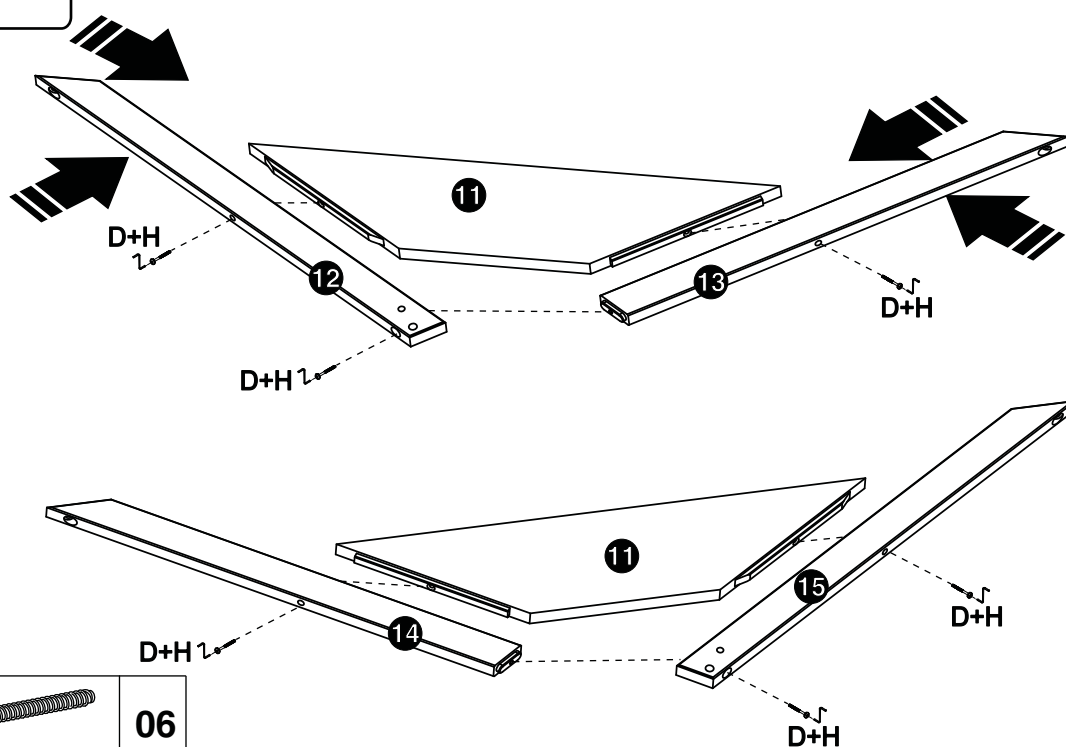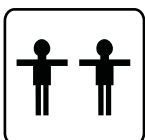


D		06
Ø 7X90 Cab 17		
H		01

06

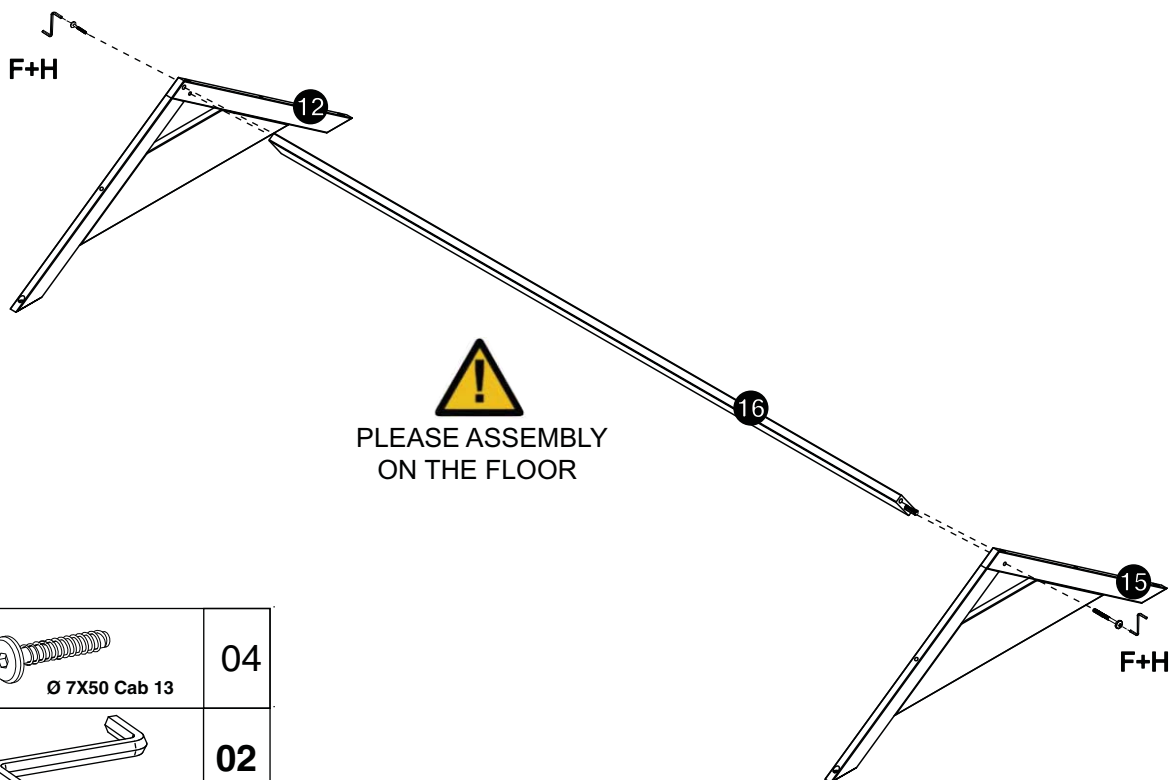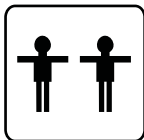

F	 Ø 7X50 Cab 13	04
H		02


07

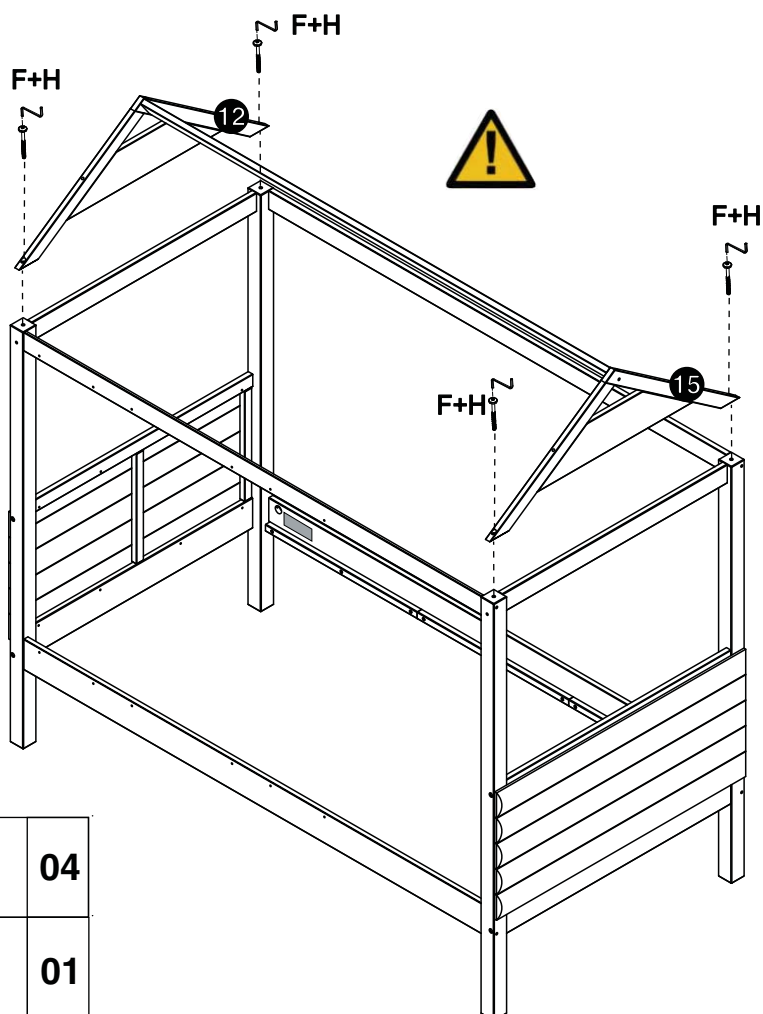




F	 Ø 7X50 Cab 13	04
H		01



08

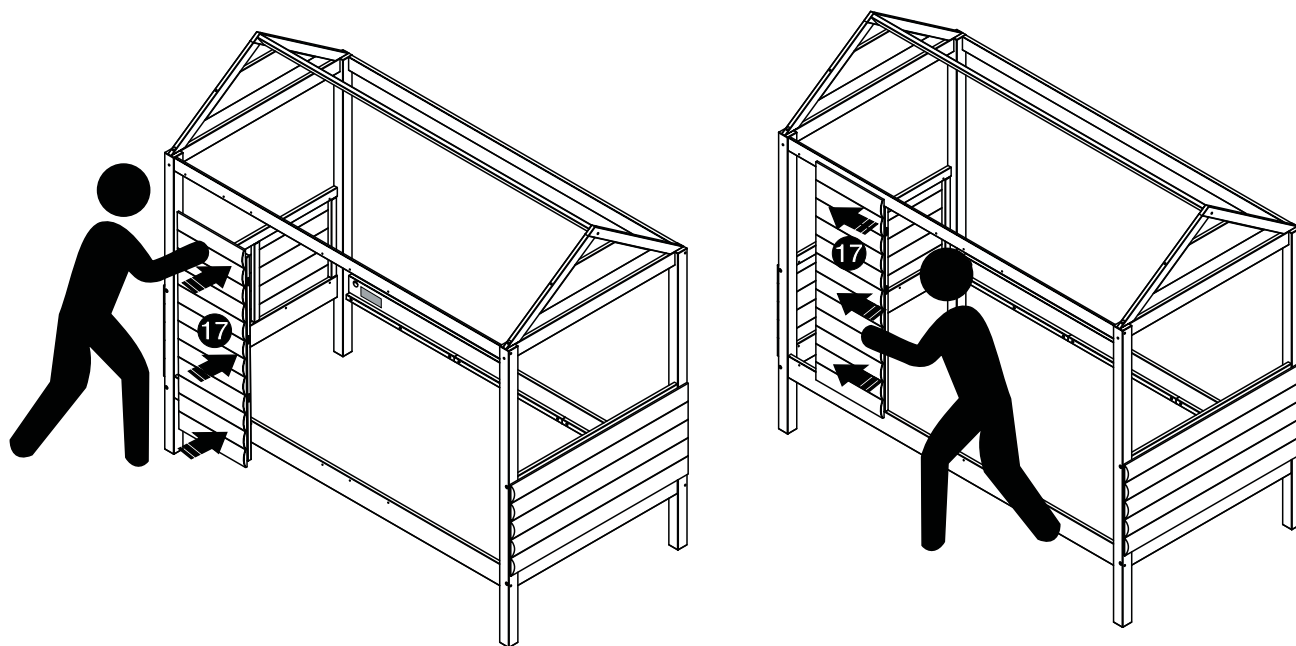

09

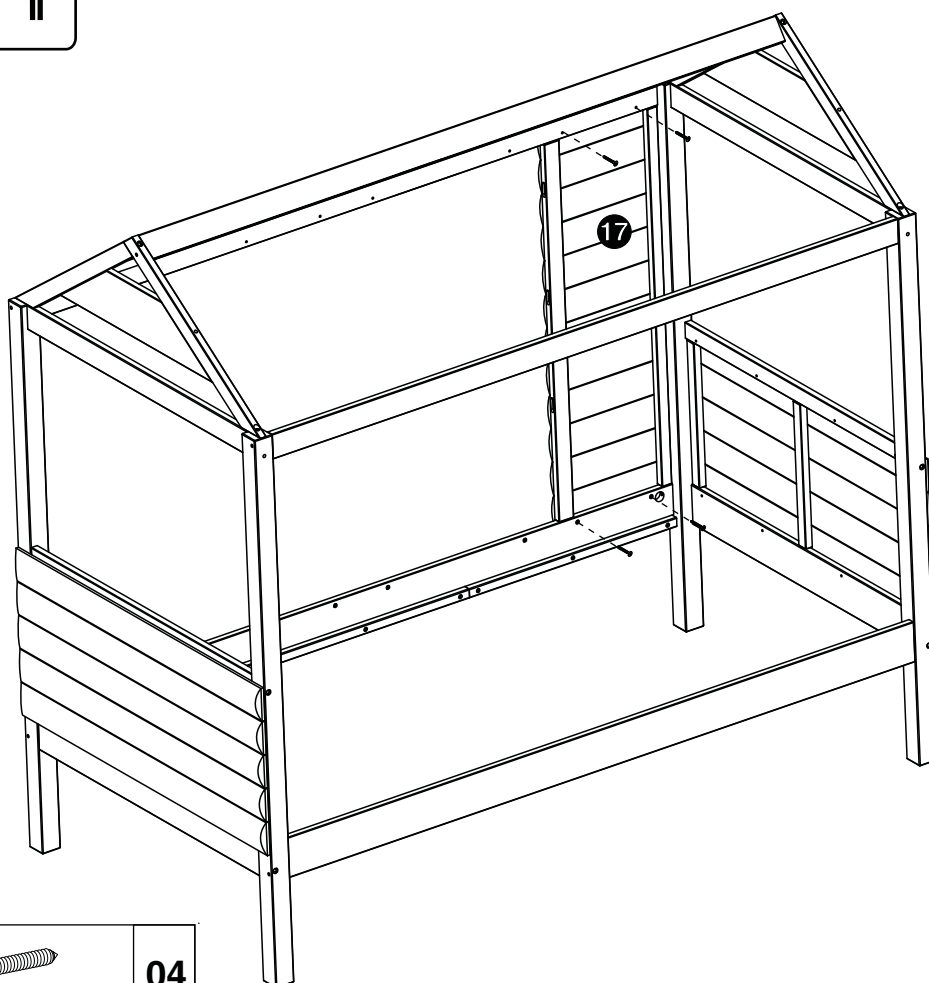
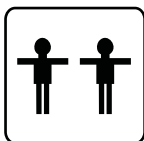



E






04

10

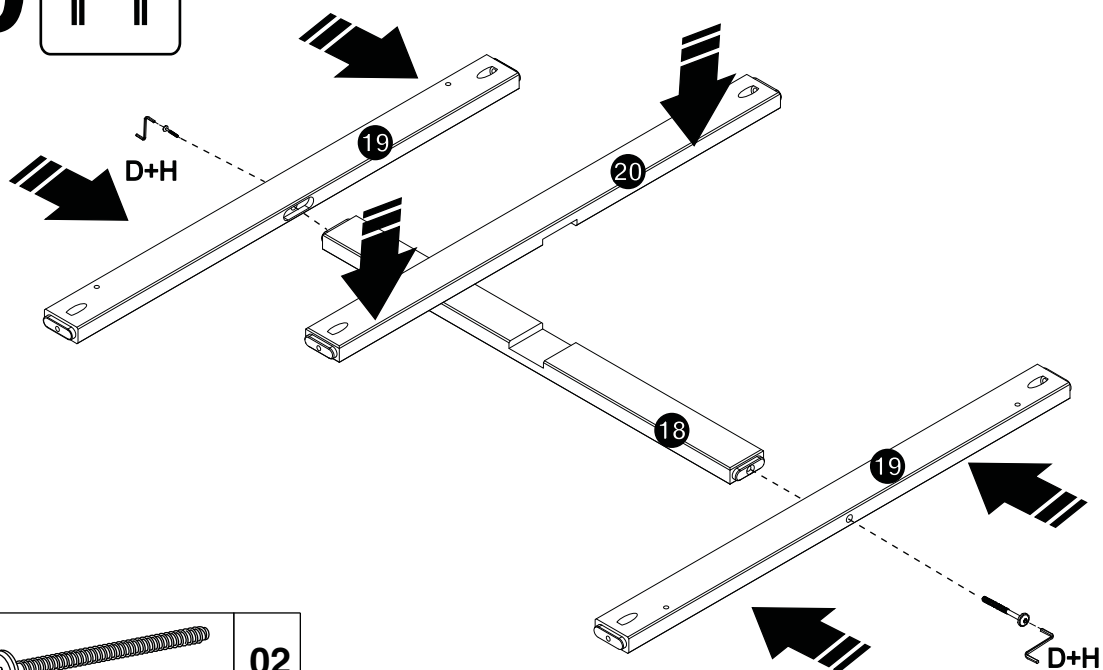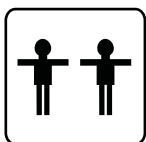



D	 Ø 7X90 Cab 17	02
H		01

11

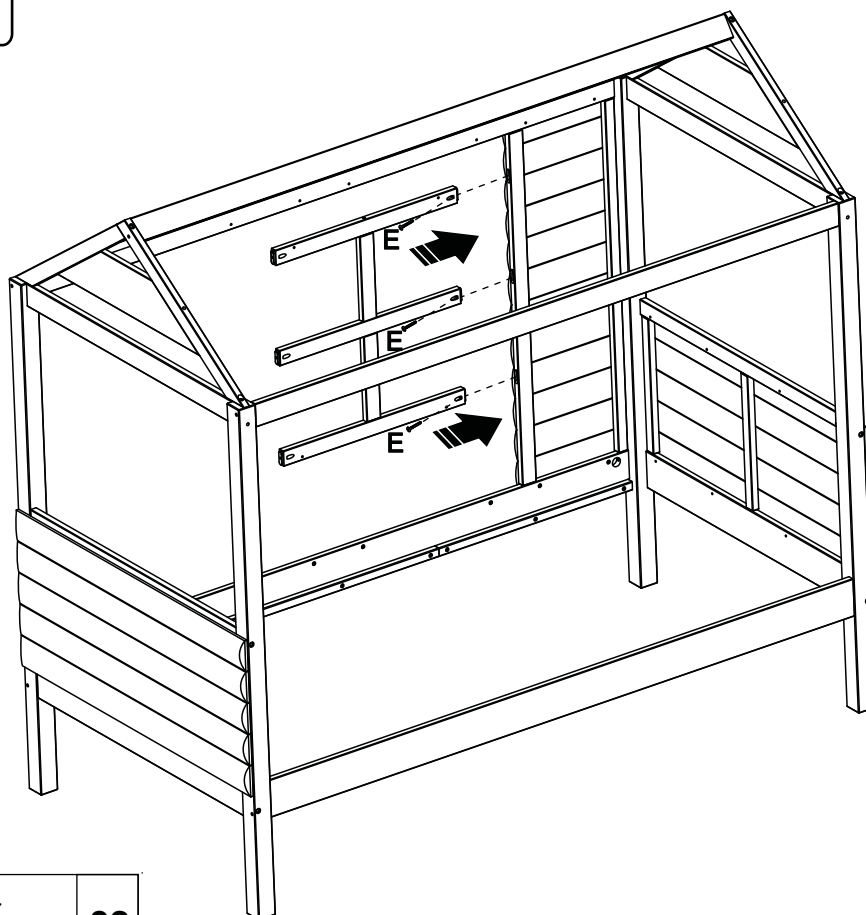
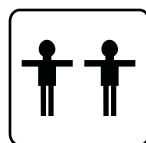


E	 Ø 3,5X30	03
---	---	----





12

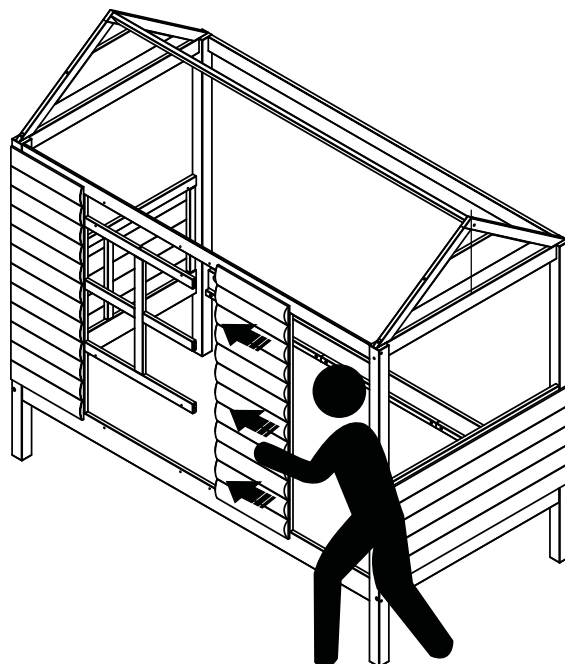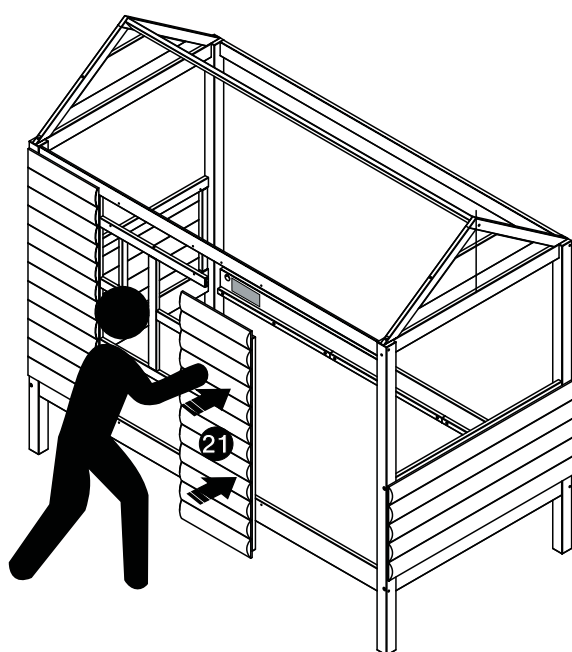


13





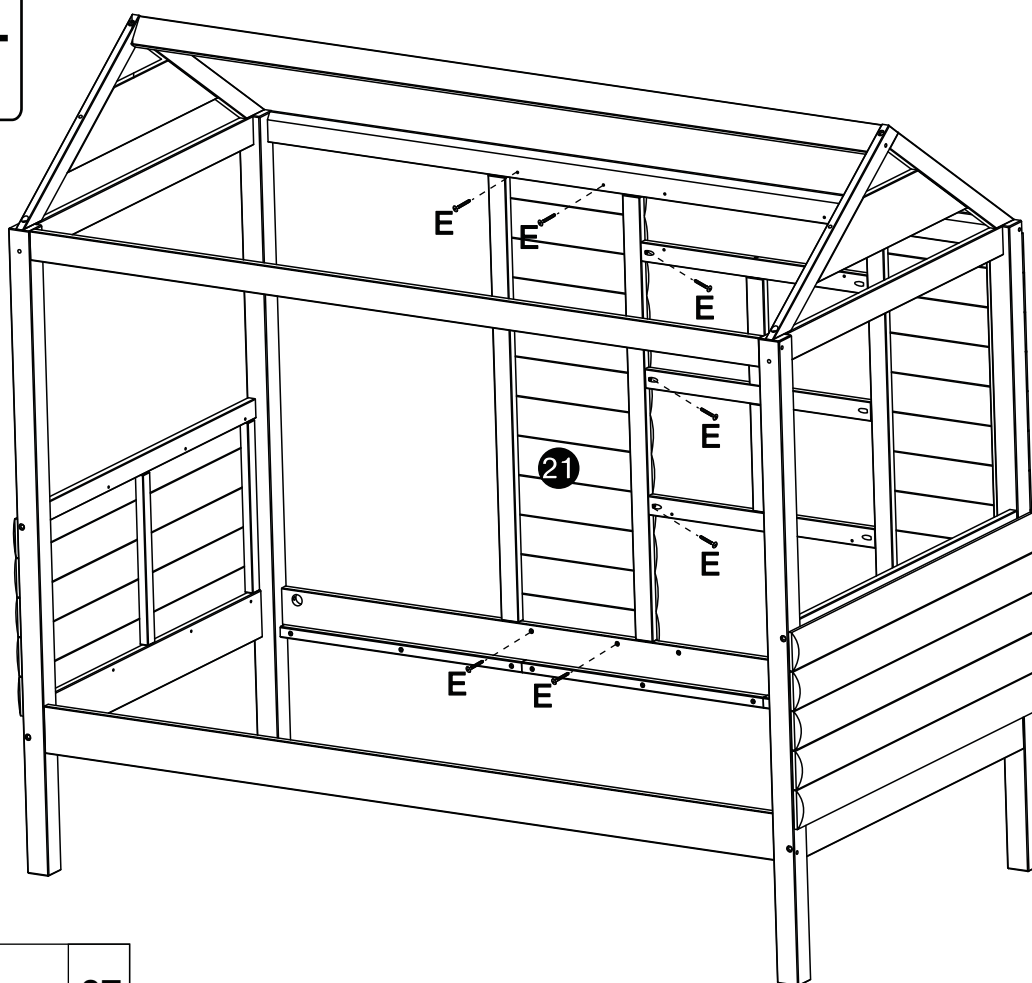


E	 Ø 3,5X30	07
----------	---	-----------

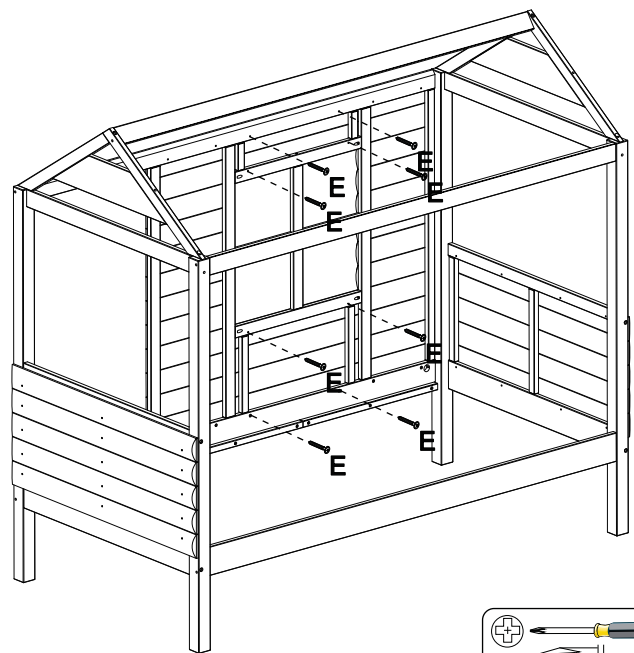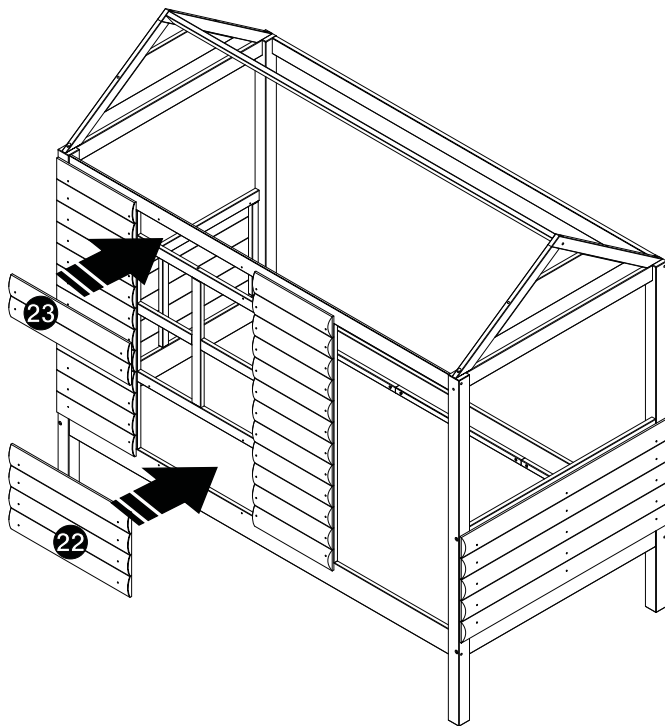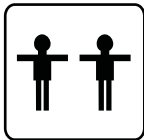



E	 Ø 3,5X30	08
----------	---	-----------

15

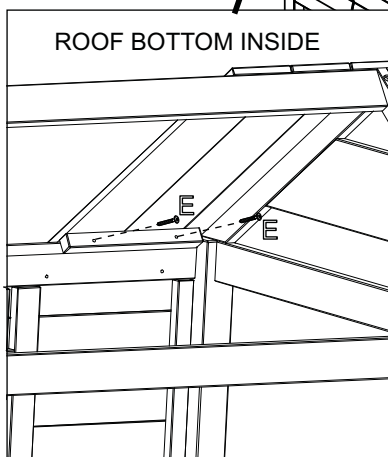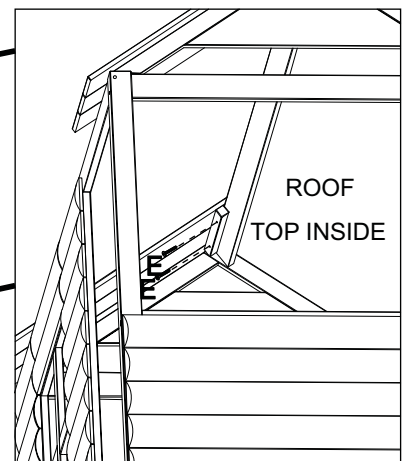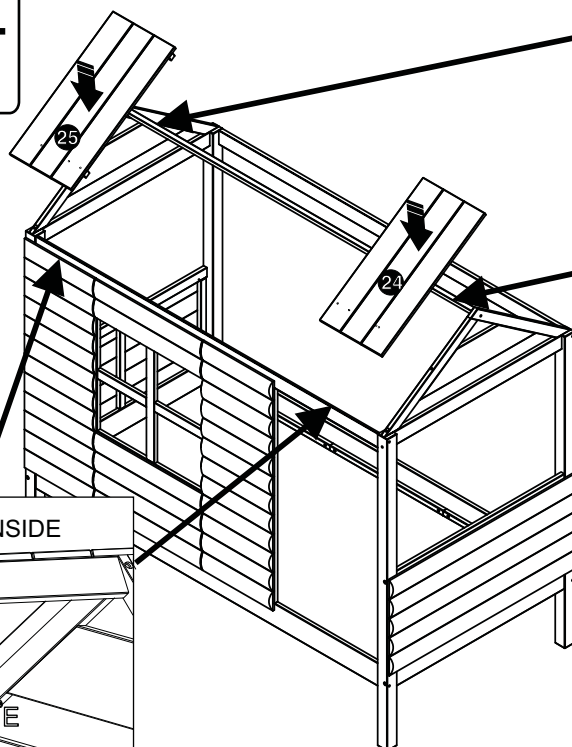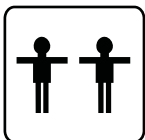

E	 Ø 3,5X30	08
----------	---	-----------

16

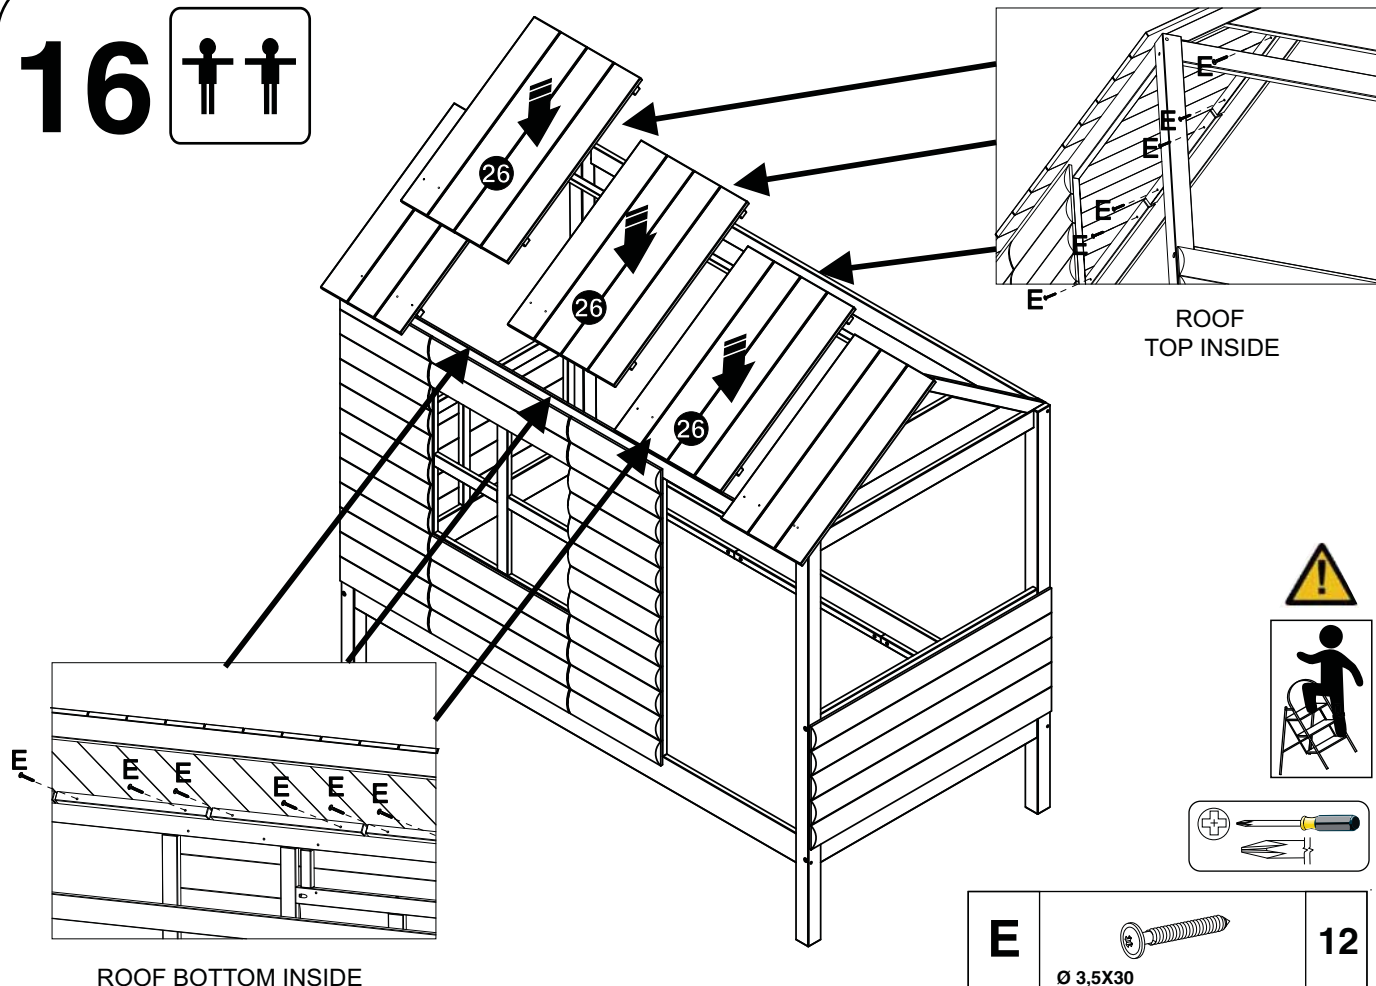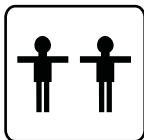

17

