Assembly Instructions COUNTER SIDE CHAIR DAH350CSC & DAH550CSC & DAH750CSC


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST FOR SIDE CHAIR					
No.	PART DESC	CODE.	Q'TY		
Α	Counter Side Chair - Upholstered Back Frame	PDAH350CSCBFR PDAH550CSCBFR PDAH750CSCBFR	1		
В	Counter Side Chair - Cushion w/ Seat Frame	PDAH350CSCBCS PDAH550CSCBCS PDAH750CSCBCS	1		
С	Counter Side Chair - Front L/R Legs	PDAH350CSCLEG PDAH550CSCLEG PDAH750CSCLEG	2		
D	Counter Side Chair - L/R Side Stretcher	PDAH350CSCSTR1 PDAH550CSCSTR1 PDAH750CSCSTR1	2		
Е	Counter Side Chair - Front Stretcher	PDAH350CSCSTR2 PDAH550CSCSTR2 PDAH750CSCSTR2	1		

HARDWARE LIST PACKED INSIDE BOX						
No.		HARDWARE DESC	CODE.	Q'TY		
1	(Managara)	ALLEN BOLT (Ø1/4"*1-5/8")	PDAH350CSCHW PDAH550CSCHW PDAH750CSCHW	2		
2	(Management)	ALLEN BOLT (Ø1/4"*2-3/8")		4		
3	0	ALLEN BOLT (Ø1/4"*3")		4		
4	0	SPRING WASHER (Ø1/4")		10		
5	0	FLAT WASHER (Ø1/4")		10		
6	(B)	SCREWS/ VIS (#4*1-1/2")		6		
7		ALLEN KEY (Ø1/8")		1		

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

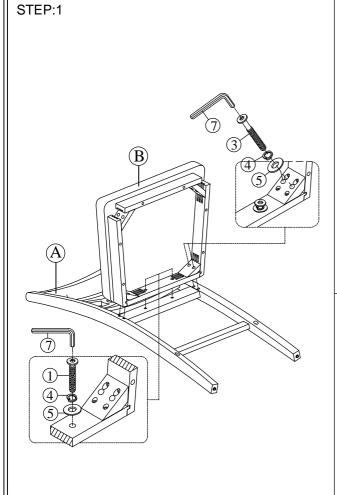

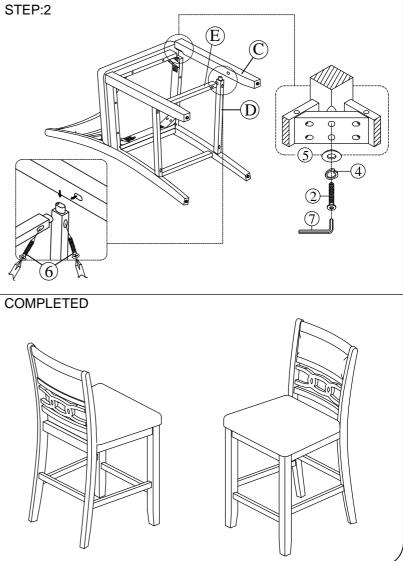

MADE IN VIETNAM

PAGE 1 OF 1