


ASSEMBLY INSTRUCTIONS

MODEL : 0138B/0162B
FULL BED

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

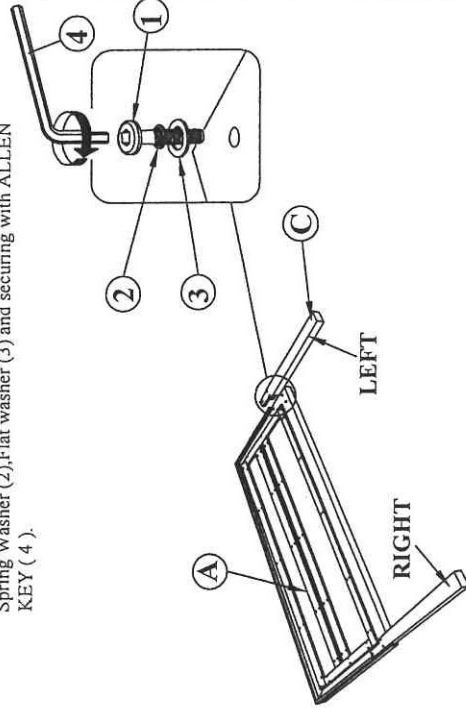


(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs
D	Bed Slats	4 pcs
E	Bed Slats Support 30x30x225mm	4 pcs


(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
F	Side Rail	2 pcs


STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD.

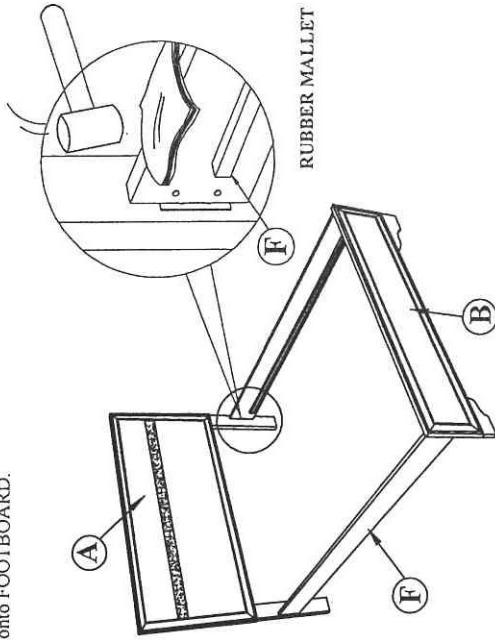


STEP 2 : Fix the Bed Slat Support Leg (E), to Bed Slat (D) as shown. Install the bed - slat (D) to side rail (F) and tighten with Csk Screw (5) as per diagram shown. (NOTE: THE SETUP MUST BE DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

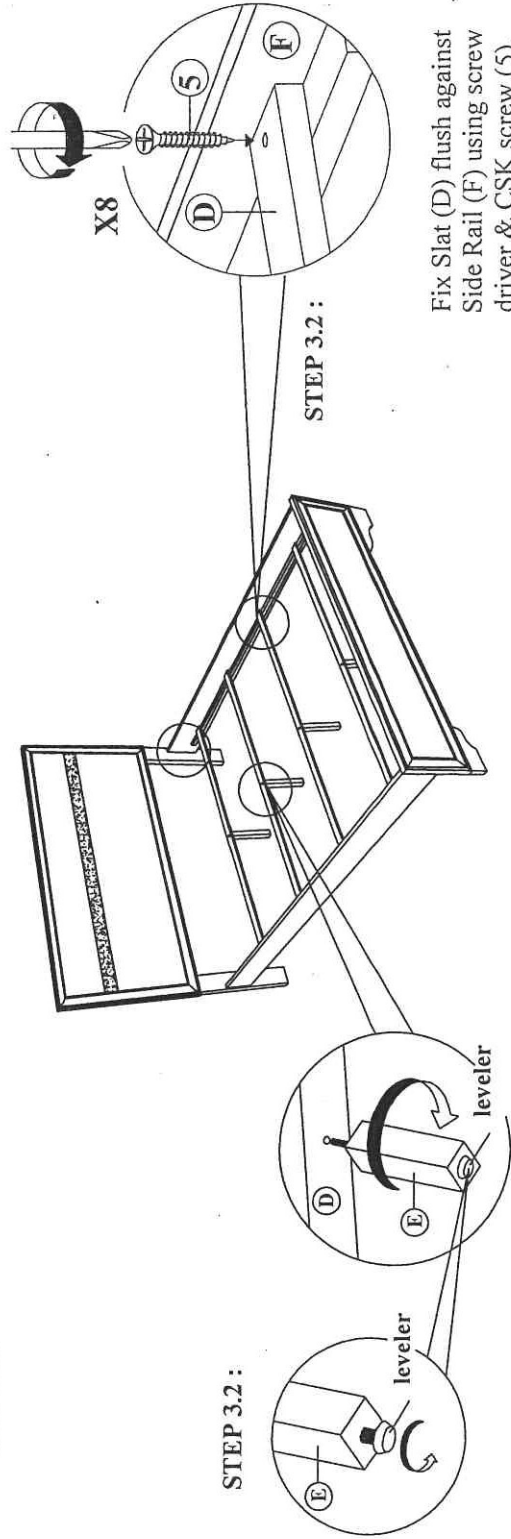

STEP 3.1 :

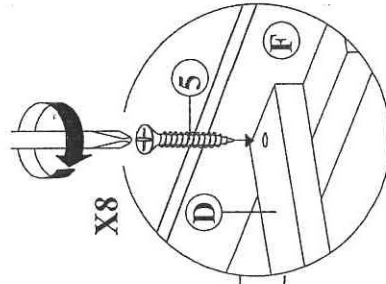

STEP 3.2 :

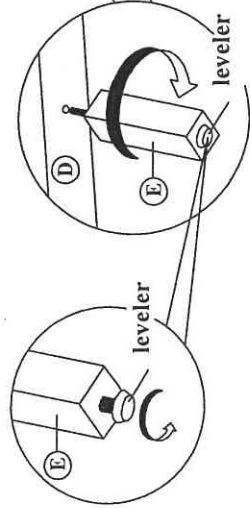

Fix Slat (D) flush against Side Rail (F) using screw driver & CSK screw (5).

(Box 1)
HARDWARE LIST (HEADBOARD)

No	ITEM	Qty
1	JCBC M6 x 30mm	6 pcs
2	SPRING WASHER 1/4" Rbw	6 pcs
3	Flat Washer 1/4"TD x 13mmOD Blk	6 pcs
4	ALLEN KEY m4x65mm Blk	1 pc
5	CSK M4 x 12mm	8 pcs

NOTE : MUST TIGHTEN SCREWS PERIODICALLY. SCREW NATURALLY LOOSEN WITH USE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.