

ASSEMBLY INSTRUCTIONS

MODEL : KATE
KING BED (4 + 8)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs
D	Bed Slat	4 pcs
E	Bed Slat Support	8 pcs


(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
F	Side Rail	2 pcs


(Box 1)
HARDWARE LIST

No	ITEM	Qty
1	Csk M4 x 32mm	8 pcs
2	JCBC M6 x 30mm	6 pcs
3	SPRING WASHER 1/4" Rbw	6 pcs
4	Flat Washer 1/4"ID x 13mmOD Blk	6 pcs
5	ALLEN KEY m4x65mm Blk	1 pc


STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT(2)with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (5).

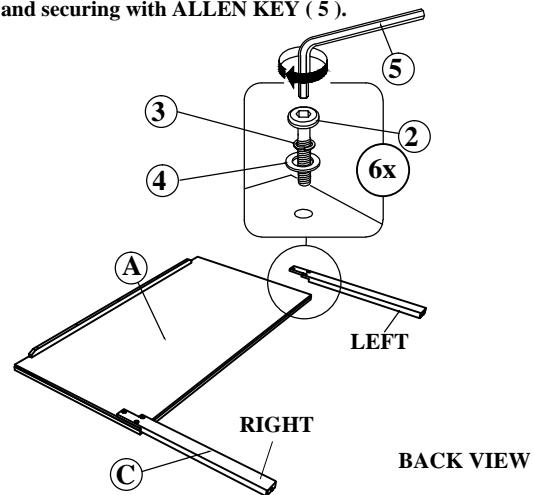

STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

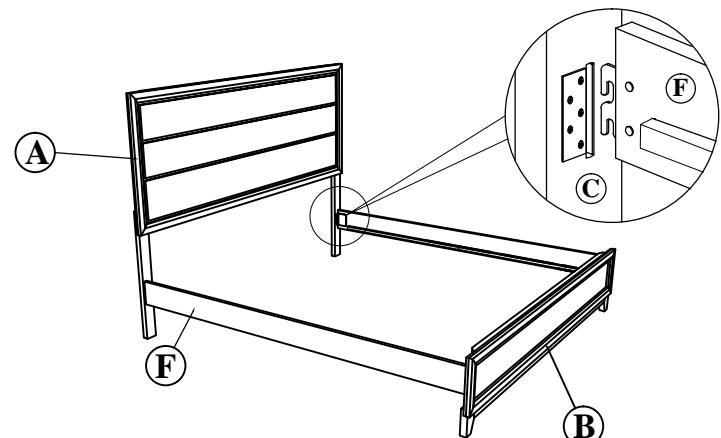

STEP 3 : Fix the Bed Slat Support (E) to Bed Slat (D) as Shown and fix the Bed Slat to Side Rail (F) by using CSK Screw (1). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

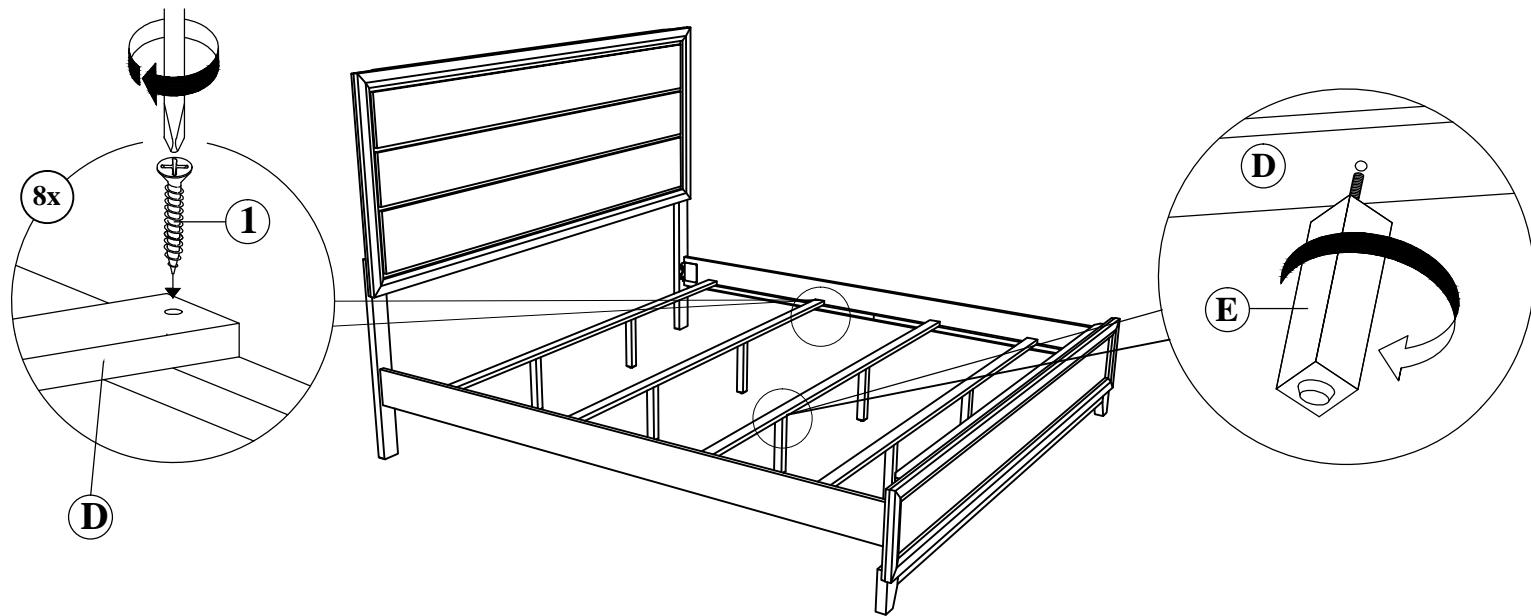

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

MODEL : KATE QUEEN & FULL BED (4 + 4)		
(Box 1) BOX OF HEADBOARD & FOOTBOARD		
No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L/R)	2 pcs
D	Bed Slat	4 pcs
E	Bed Slat Support	4 pcs
(Box 2) BOX OF SIDE RAIL		
No	ITEM	Qty
F	Side Rail	2 pcs
(Box 1) HARDWARE LIST		
No	ITEM	Qty
1	Csk M4 x 32mm	8 pcs
2	JCBC M6 x 30mm	6 pcs
3	SPRING WASHER 1/4" Rbw	6 pcs
4	Flat Washer 1/4"ID x 13mmOD Blk	6 pcs
5	ALLEN KEY m4x65mm Blk	1 pc

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT(2)with Spring Washer (3), Flat washer (4) and securing with ALLEN KEY (5).

STEP 2 : Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

STEP 3 : Fix the Bed Slat Support (E) to Bed Slat (D) as Shown and fix the Bed Slat to Side Rail (F) by using CSK Screw (1). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS




**MODEL : KATE
NIGHT STAND**

STEP 1 : Pull the top drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Night Stand (A) used JCBC (1)with Spring Washer (2) Flat Washer (3) and Tighten with Allen Wrench (4).

(Box 1)

BOX OF NIGHT STAND

No	ITEM	Qty
A	NIGHT STAND	1 pc
B	BUN FOOT	4 pcs

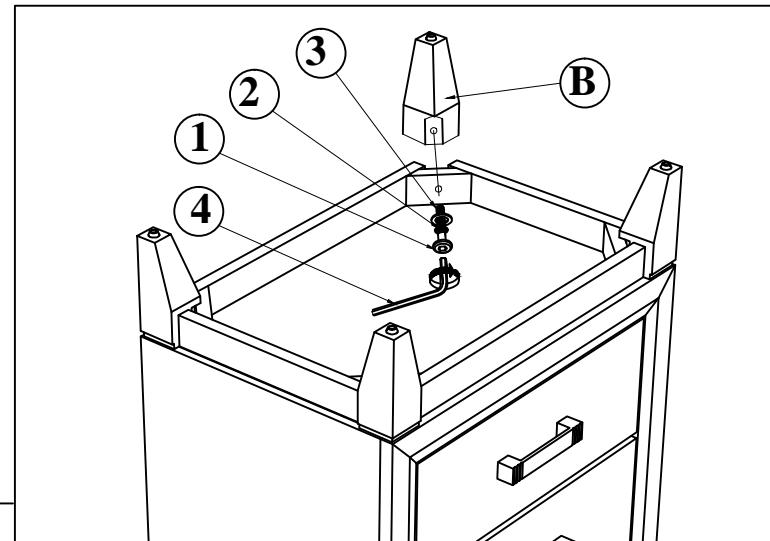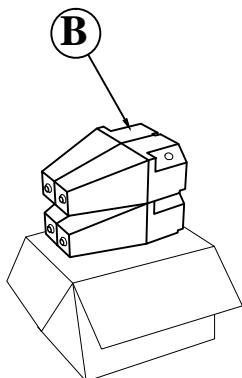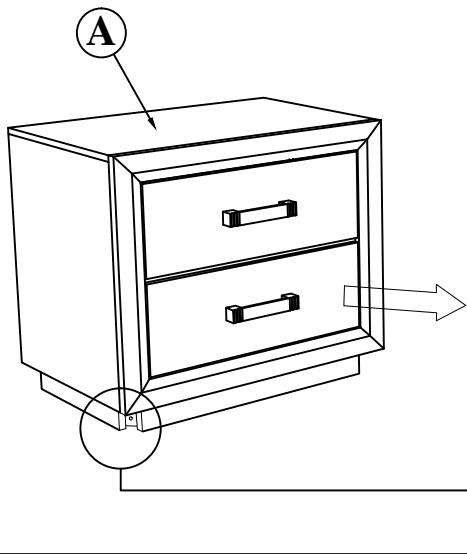

(Box 1)

HARDWARE LIST

No	ITEM	Qty
1	JCBC M8 x 50mm	4 pcs
2	SPRING WASHER 5/16" Rbw	4 pcs
3	Flat Washer 5/16"ID x 22mmOD Blk	4 pcs
4	ALLEN KEY m5x65mm Blk	1 pc



COMPLETED ASSEMBLY

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS


**MODEL :KATE
DRESSER**

STEP 1 : Pull the top drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Dresser (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and Tighten with Allen Wrench (4).

(Box 1)

BOX OF CHEST


No	ITEM	Qty
A	DRESSER	1 pc
B	BUN FOOT	4 pcs

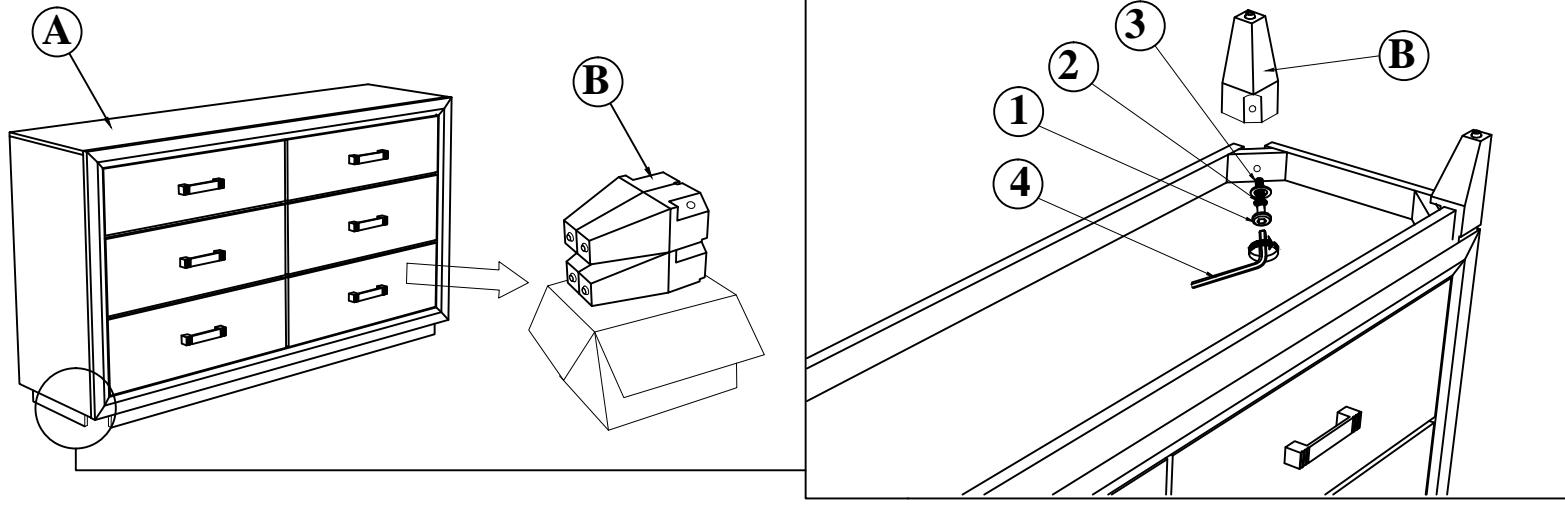

(Box 1)

HARDWARE LIST

No	ITEM	Qty
1	JCBC M8 x 50mm	4 pcs
2	SPRING WASHER 5/16" Rbw	4 pcs
3	Flat Washer 5/16"ID x 22mmOD Blk	4 pcs
4	ALLEN KEY m5x65mm Blk	1 pc

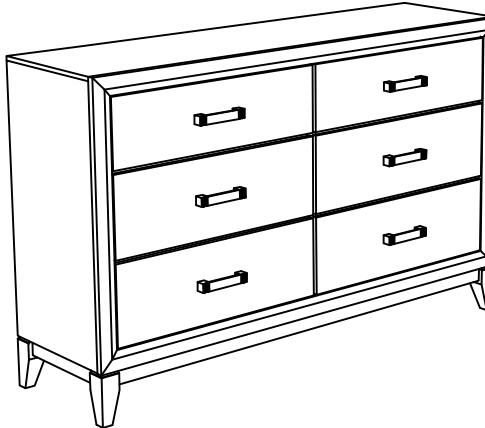

COMPLETED ASSEMBLY


NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

MODEL: KATE DRESSER & MIRROR		
(Box 1) BOX OF MIRROR		
NO	ITEM	QTY
A	MIRROR	1 PC
(Box 2) BOX OF DRESSER		
NO	ITEM	QTY
B	DRESSER	1 PC
C	MIRROR SUPPORT RAIL	2 PCS
(Box 1) BOX OF MIRROR		
NO	ITEM	QTY
1	CSK SCREW M4 X 32MM	10 PCS


STEP 1 / ETAPE 1 :

Cut off the Raffia String from the back of DRESSER (B).

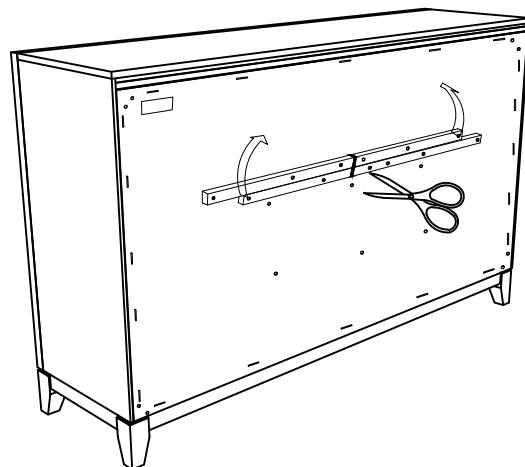



STEP 2 / ETAPE 2 :

Turn the MIRROR SUPPORT RAIL (C) upward at the back of DRESSER (B), Place the MIRROR FRAME (A) on the top of DRESSER (B). Tighten with CSK Screw (D).

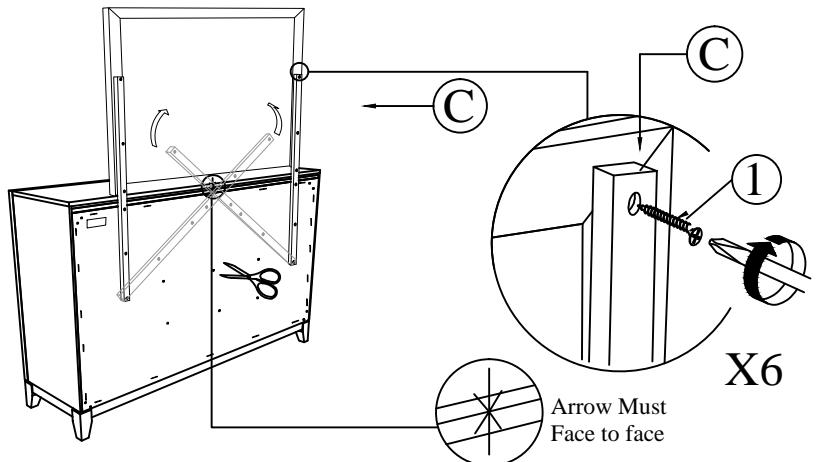

STEP 3 / ETAPE 3 :

Tighten the CSK Screw (D) as shown.

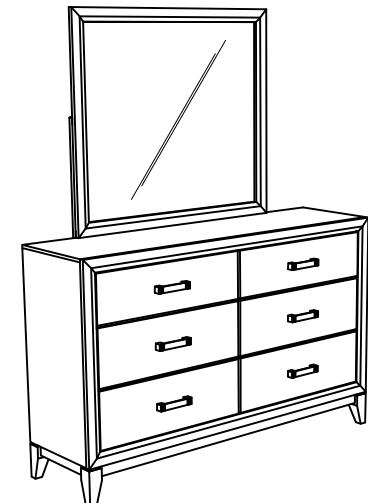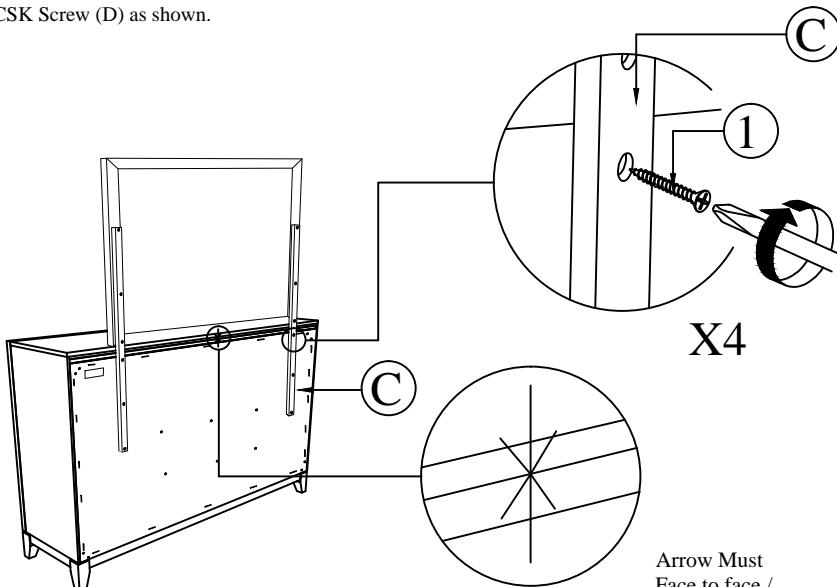

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.