



1

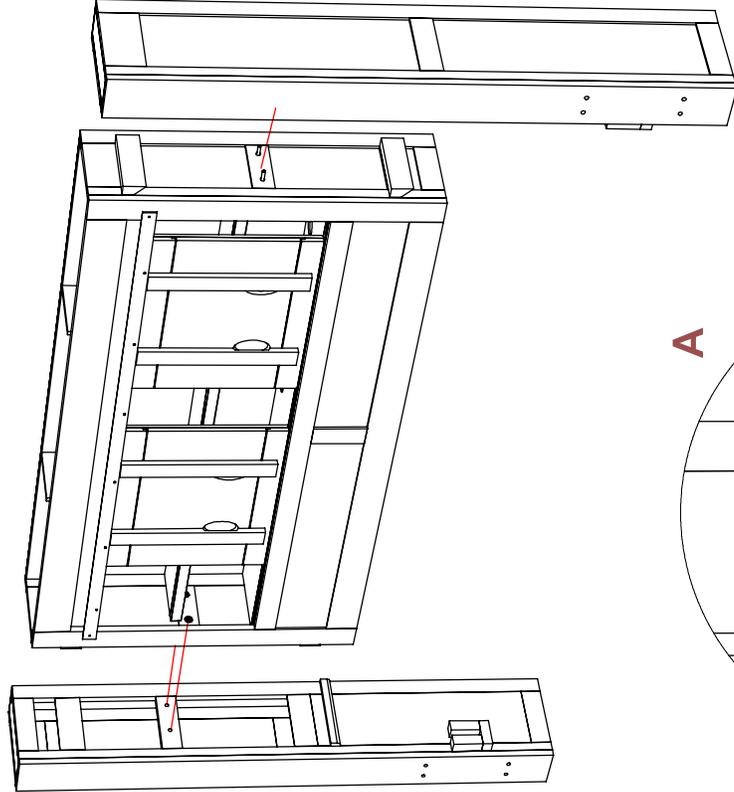

2

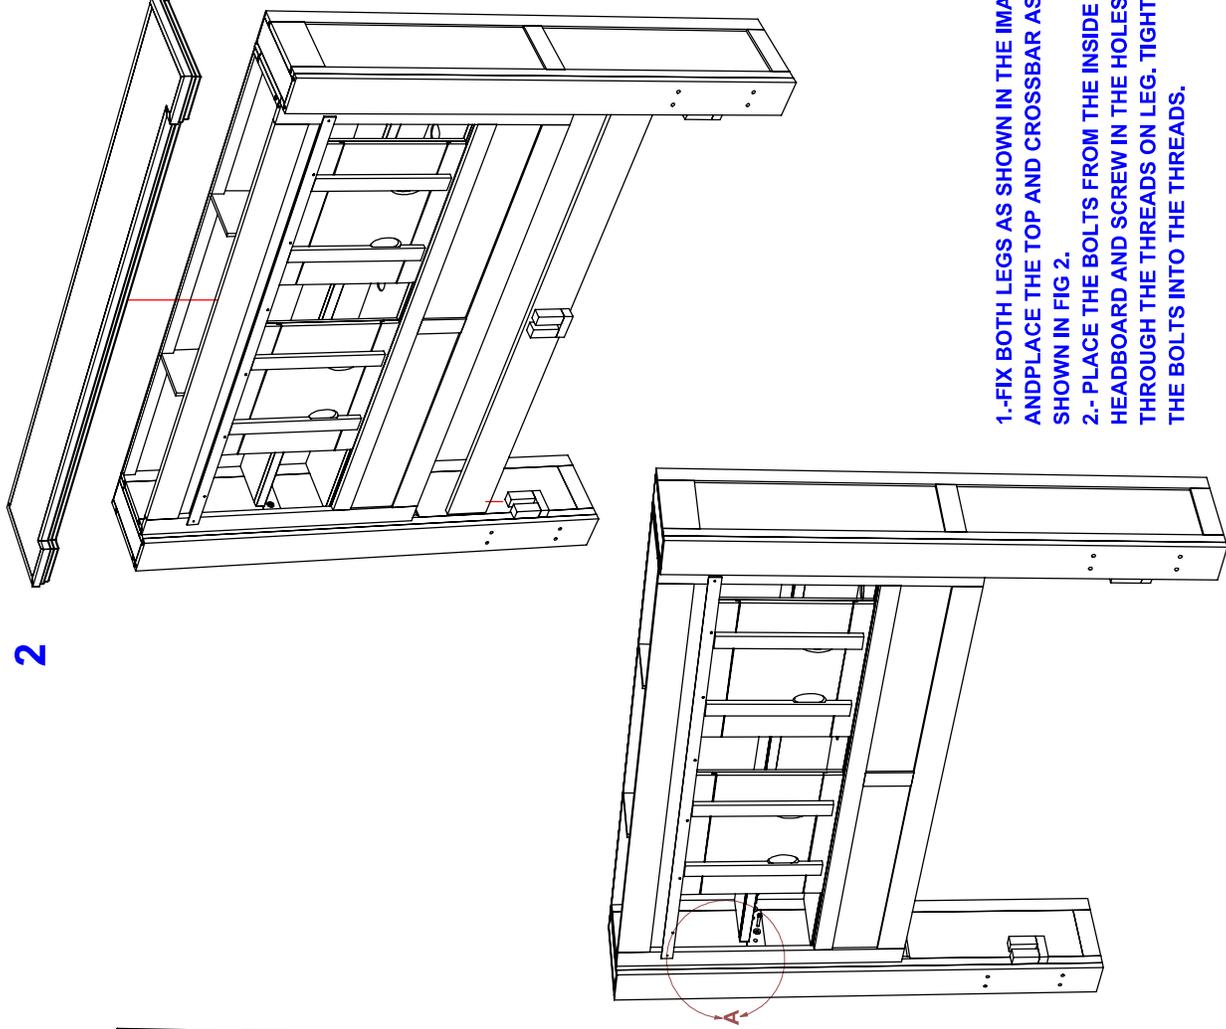

- 1.-FIX BOTH LEGS AS SHOWN IN THE IMAGE 1 AND PLACE THE TOP AND CROSSBAR AS SHOWN IN FIG 2.
- 2.- PLACE THE BOLTS FROM THE INSIDE OF HEADBOARD AND SCREW IN THE HOLES AND THROUGH THE THREADS ON LEG. TIGHTEN THE BOLTS INTO THE THREADS.



ASSEMBLING INSTRUCTIONS

I-HBD-E003

DESCRIPTION	#PZ
SOCKET BUTTON HEAD 5/16 x 2"	4
PLAIN WASHER 5/16 x 1 "	4
ALLEN KEY	1

ITEM	DESCRIPTION	#PZ
1TOR004	TORNILLO CABEZA BOLA ALLEN 5/16 x 2"	4
1RON003	RONDANA PLANA 5/16 x 1 " (NEGRA)	4
1HER251	LLAVE ALLEN 3/16	1



ASSEMBLING INSTRUCTIONS
5671 CABECERA