

# Assembly Instructions

## ITEM NO.

**B2210-110 LUMINA - 6/6-6/0 EK/WK LIGHTED HEADBOARD**






**B2210-120 LUMINA - 6/6-6/0 EK/WK FOOTBOARD & SLATS**






**B2210-330 LUMINA - 5/0-6/6 Q/EK SIDE RAILS**

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

**Caution :** please read the instruction thoroughly before assembly.


1. We recommended that you assemble this product with the assistance of another person, this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not tighten screws or bolt until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1 pc
B	FOOTBOARD		1 pc
C	SIDE RAIL		2 pcs
D	SLAT		4 pcs
E	SLAT SUPPORT LEG		8 pcs

HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	QTY
1	JCBB - M8 x 25/32"		8 pcs
2	FLAT WASHER - M8 x 23/32"		8 pcs
3	ALLEN KEY - M5		1 pc
4	PANHEAD - M4 x 1-3/16"		8 pcs
5	AC/DC ADAPTER		1 pc

<b>WEIGHT CAPACITY</b>	<b>800 lbs</b>
------------------------	----------------

**STEP 1 :** Assembly the Side Rail (C) to Headboard (A) and Footboard (B) by using Allen Key M5 (3) with hardware 1 and 2.

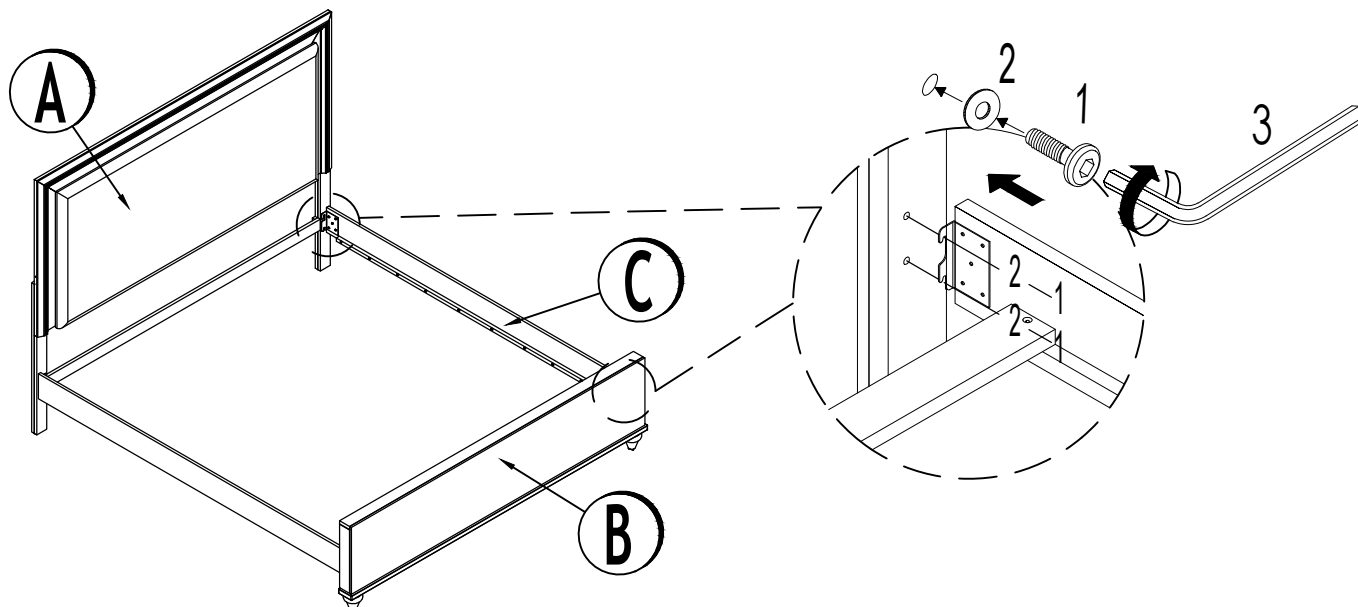


ITEM NO.

B2210-110 LUMINA - 6/6-6/0 EK/WK LIGHTED HEADBOARD


B2210-120 LUMINA - 6/6-6/0 EK/WK FOOTBOARD & SLATS

B2210-230 LUMINA - 5/0-6/6 Q/EK SIDE RAILS

**STEP 2 :** Assembly the Slat Support Leg (E) into to the Slat (D).

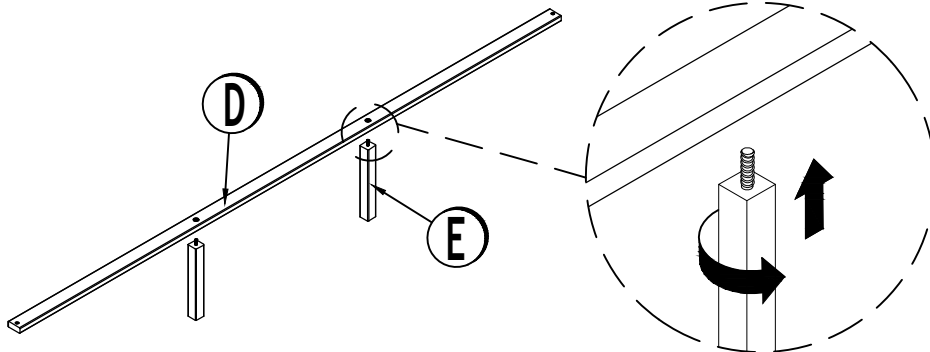

**STEP 3 :** Assembly the Slat (D) to the Side Rails (C) by using a screwdriver with hardware 4.

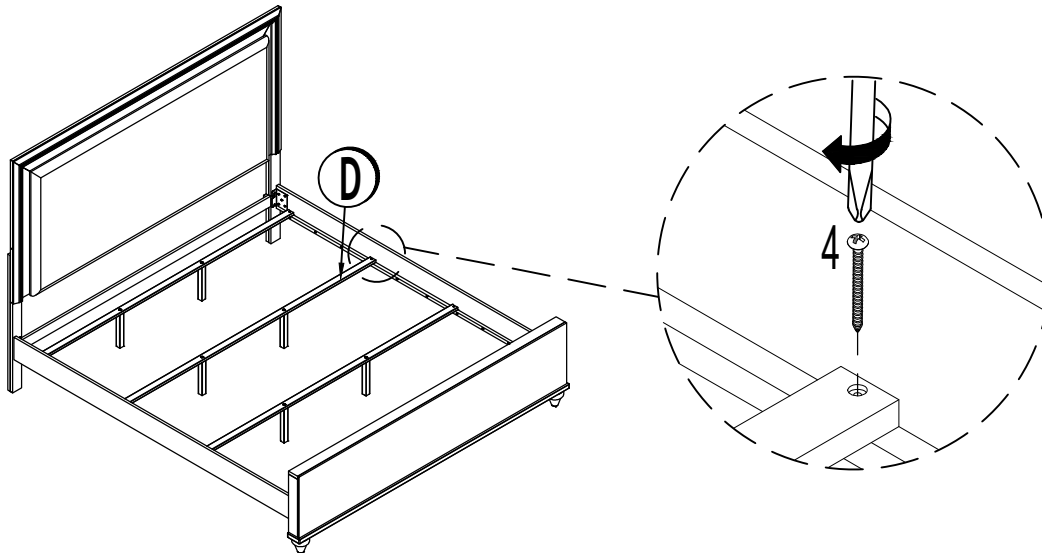

**STEP 4 :** Connect the AC/DC Adapter (5) with the connecting wire on the headboard (A).

