

















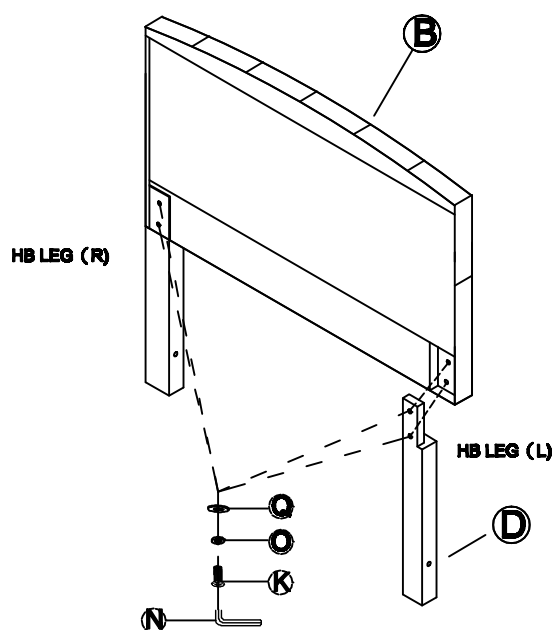


# ASSEMBLY INSTRUCTION


5111-Q

<b>A</b> RAIL  2PCS	<b>B</b> HEADBOARD  1PC	<b>C</b> Wingback(L&R)  2PCS	<b>D</b> HB LEG (L&R)  2PCS
<b>E</b> FOOTBOARD  1PC	<b>F</b> WOOD SLAT  3PCS	<b>G</b> SUPPORT LEG  3PCS	<b>H</b> CONNECTION STRAP  4PCS
<b>I</b> FB FEET  2PCS	<b>J</b> BOLT $\frac{5}{16}$ "x1"  16PCS	<b>K</b> BOLT $\frac{5}{16}$ "x2"  11PCS	<b>L</b> BOLT $\frac{5}{16}$ "x3"  2PCS
<b>M</b> BOLT $\frac{5}{16}$ "x5"  2PCS	<b>N</b> ALLEN WRENCH 5MM  1PC	<b>O</b> LOCK WASHER $\frac{5}{16}$ "*Ø12MM  31PCS	<b>P</b> FLAT WASHER $\frac{5}{16}$ "*Ø19MM  21PCS
<b>Q</b> FLAT WASHER $\frac{5}{16}$ "*Ø22MM  10PCS	<b>R</b> SCREW 8MMx1- $\frac{3}{4}$ "  6PCS		


## STEP 1

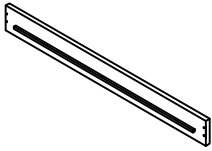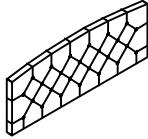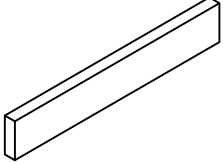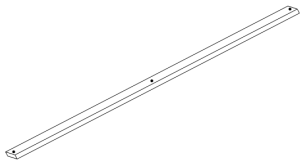


## STEP 2

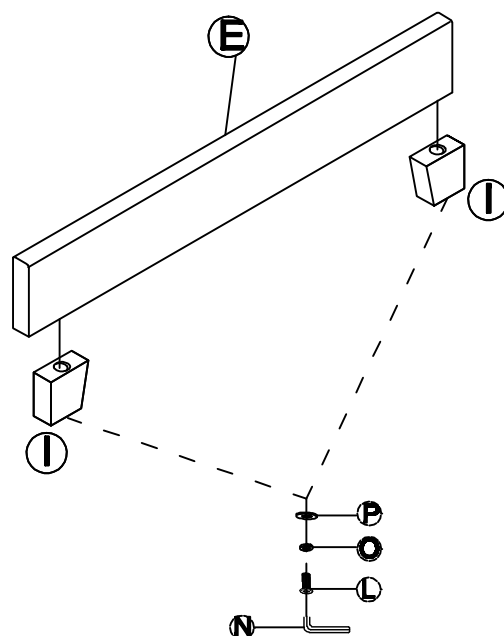


## STEP 3

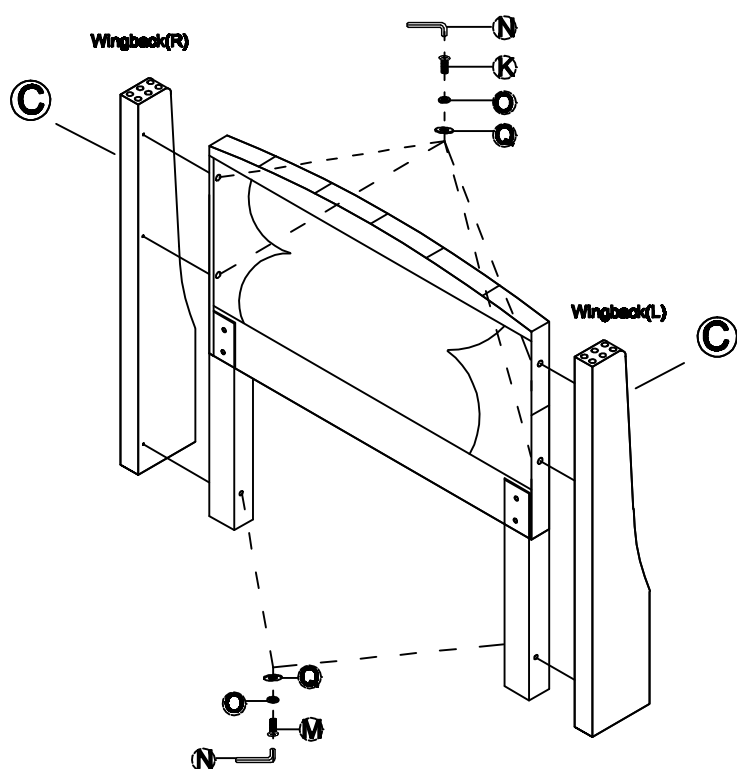


## STEP 4

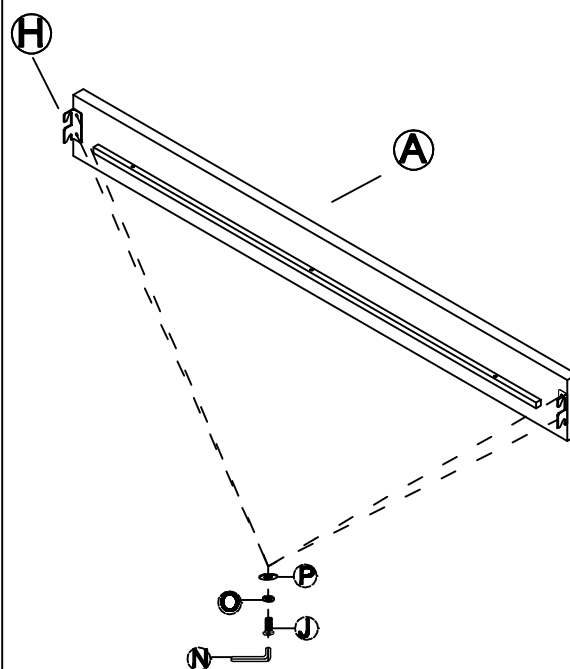


## STEP 5

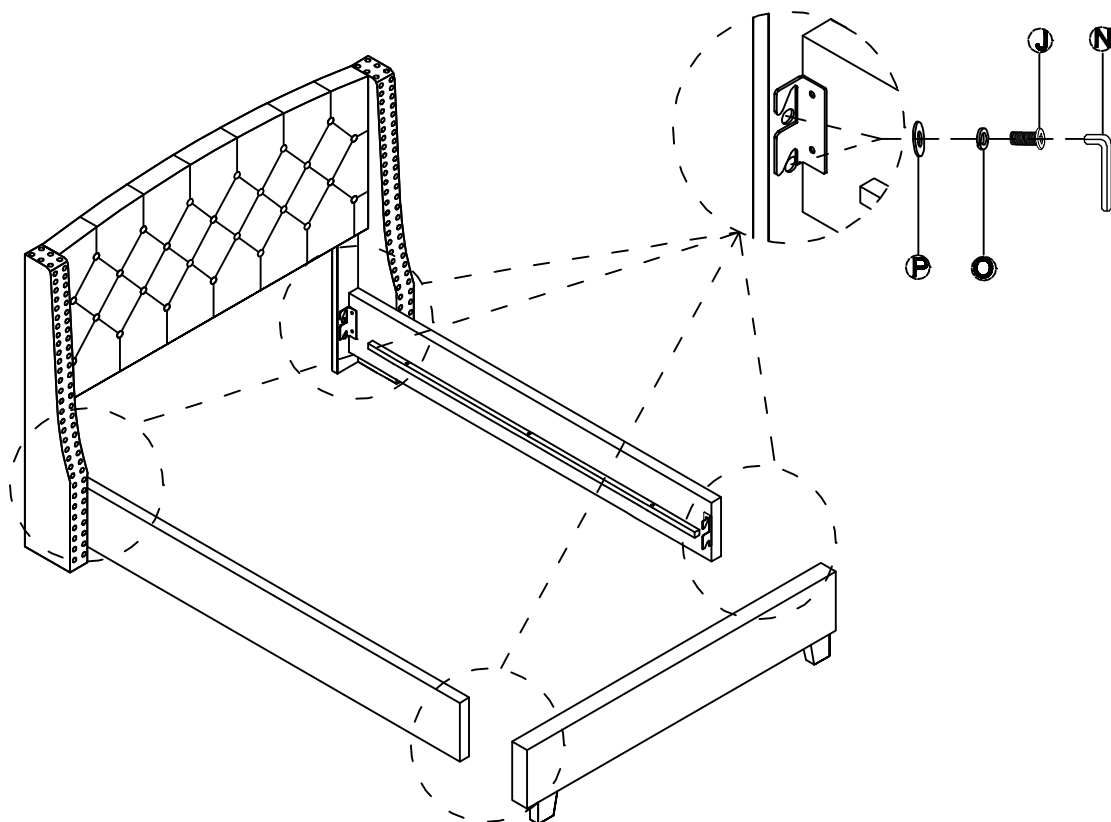

## STEP 6

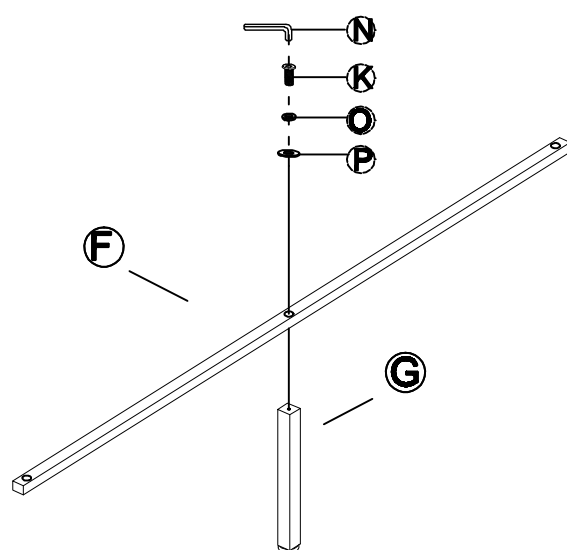

## STEP 7

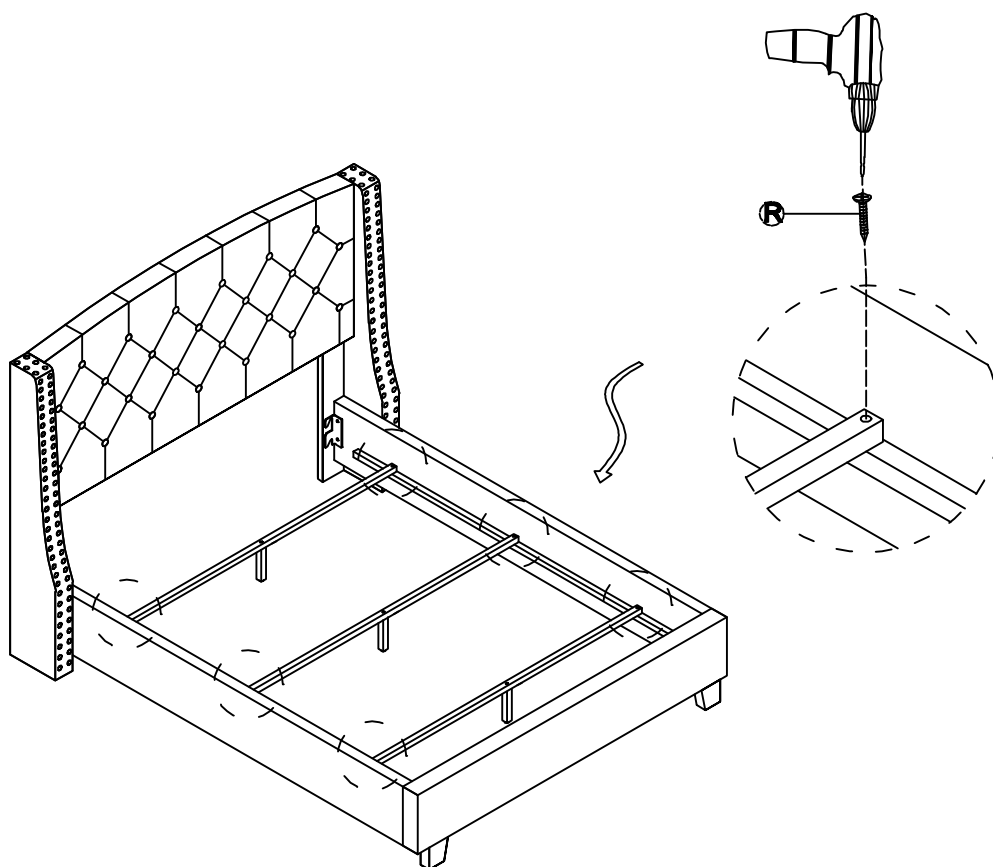

## STEP 8

