


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

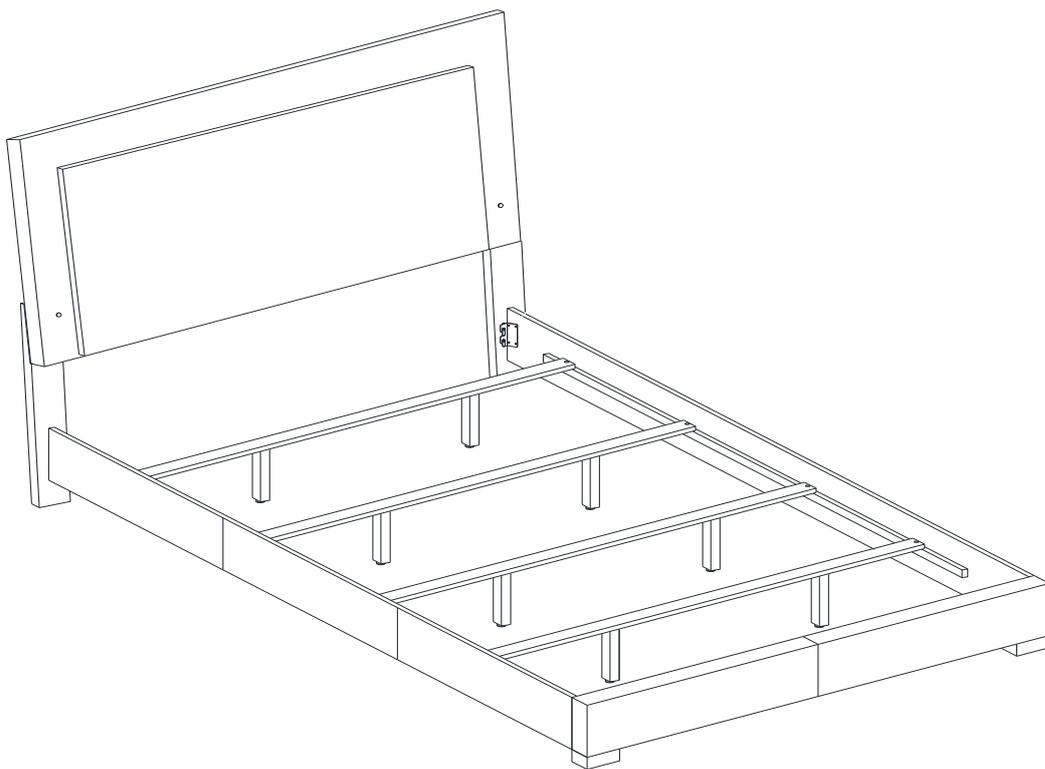

Fine Furniture for every stage of life

203500KE (B1&B2)
Eastern King Bed

REVISION 0 : 07/09/2015
REVISION 1 : 07/25/2019

ITEM: 203500KE (B1 & B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)


A HEADBOARD PANEL  1PC

B RIGHT HEADBOARD LEG  1PC


B2 (BOX 2)

D BED SLAT  4PCS

E BED SLAT SUPPORT WITH LEVELER  8PCS


F BED RAIL  2PCS

G FOOTBOARD LEG  2PCS

C LEFT HEADBOARD LEG  1PC

H FOOTBOARD PANEL  1PC

I ADAPTER PLUG  1PC

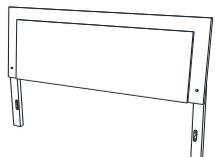HB 203500KE (B1) FROM BOX 1 HEADBOARD COMPLETE  1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 203500KE (B1 & B2)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 203500KE (B1)

1	BOLT (M6 x 30mm - BLK)		6PCS	3	FLAT WASHER (1/4" X 13mm - BLK)		6PCS
2	ALLEN WRENCH (M4 x 60MM - BLK)		1PC	4	LOCK WASHER (1/4" - BLK)		6PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203500KE (B2)


5	SHORT FLAT HEAD SCREW (M4 x 32mm - RBW)		8PCS	8	SMALL ALLEN WRENCH (M4 x 60MM - BLK)		1PC
6	LONG FLAT HEAD SCREW (M4 x 50mm - RBW)		6PCS	9	BIG ALLEN WRENCH (M5 x 65MM - BLK)		1PC
7	BOLT (M6 x 40mm - BLK)		8PCS				

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

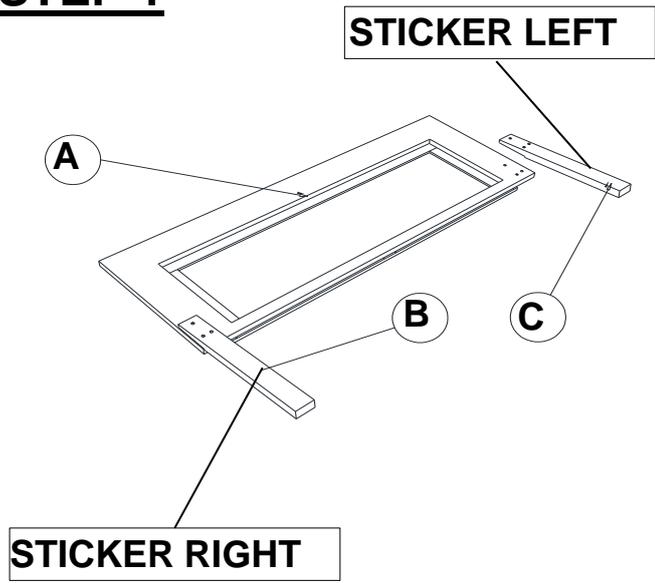


STEP 2

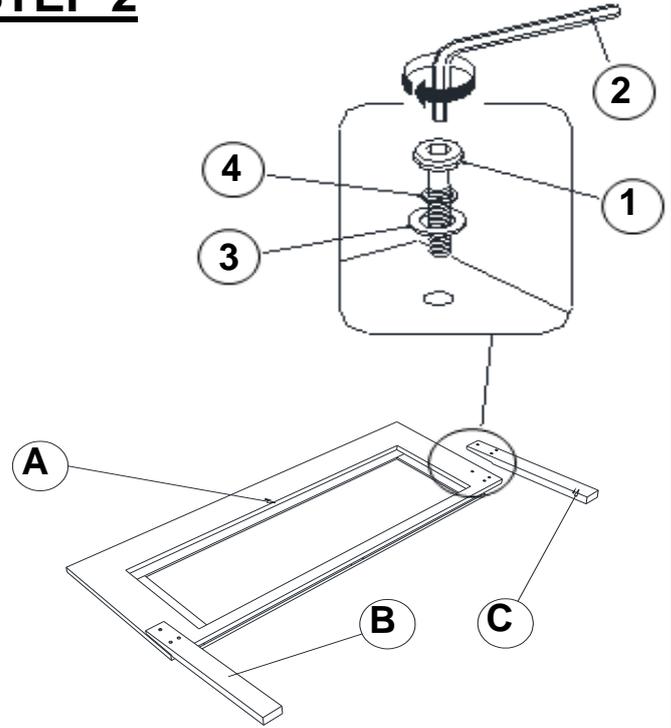

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS


STEP 3

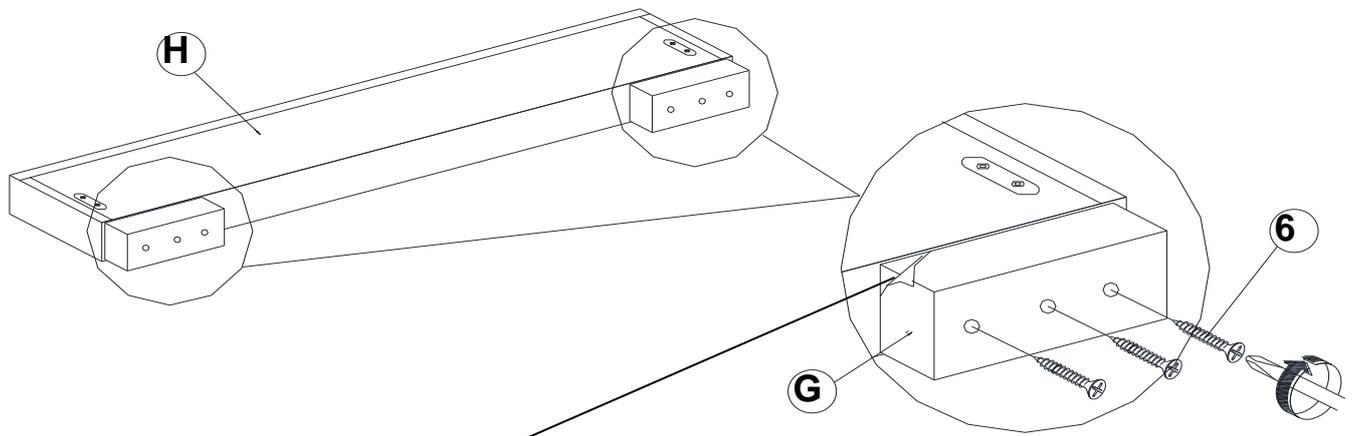


PLEASE REMOVE THE PROTECTIVE FILM BEFORE ASSEMBLY

ASSEMBLY INSTRUCTIONS


STEP 4

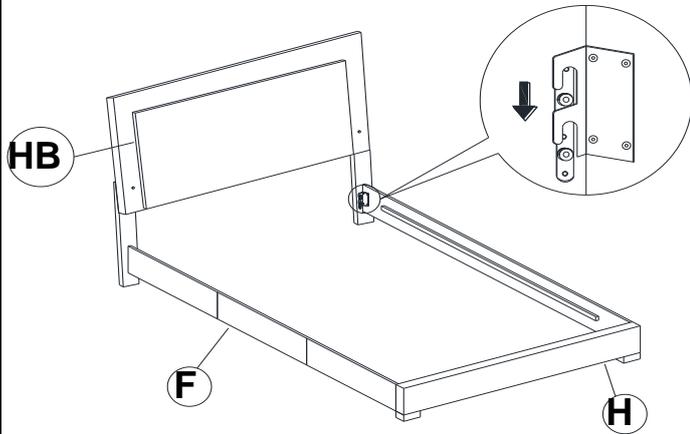

STEP 5

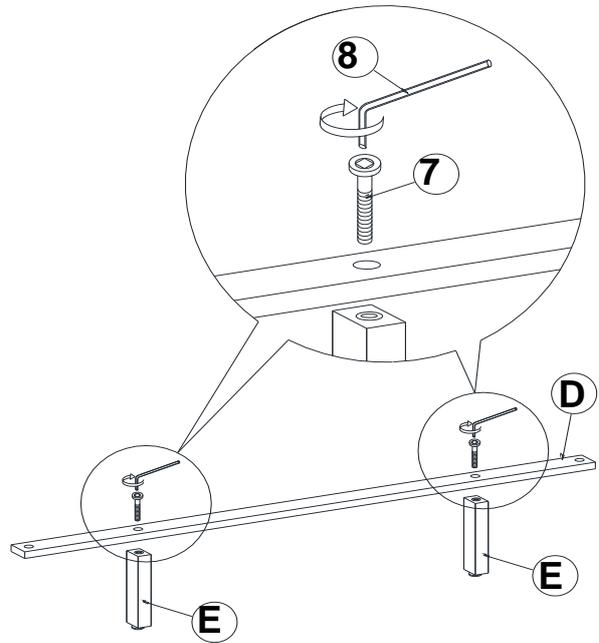


STEP 6

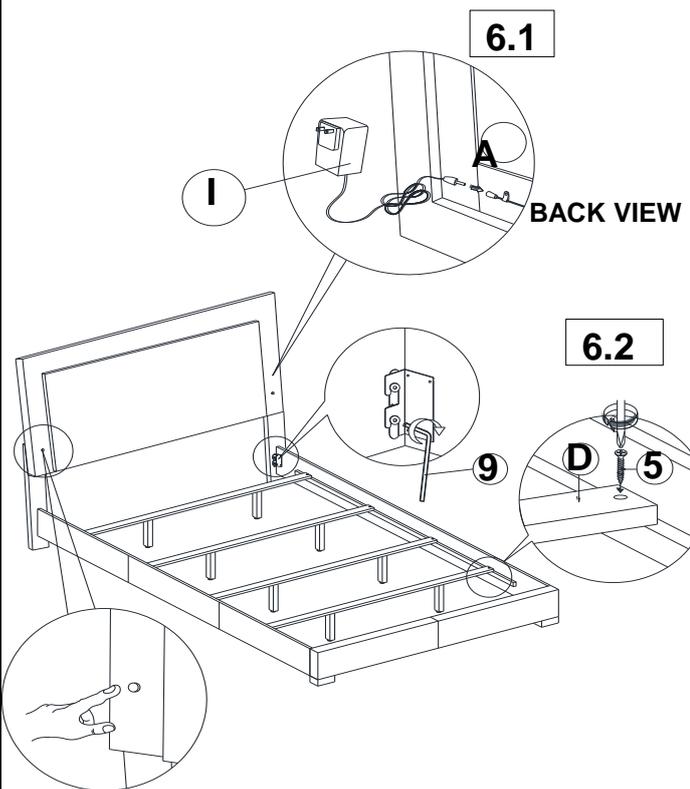


ON & OFF TOUCH SWITCH BUTTON

STEP 7
COMPLETE

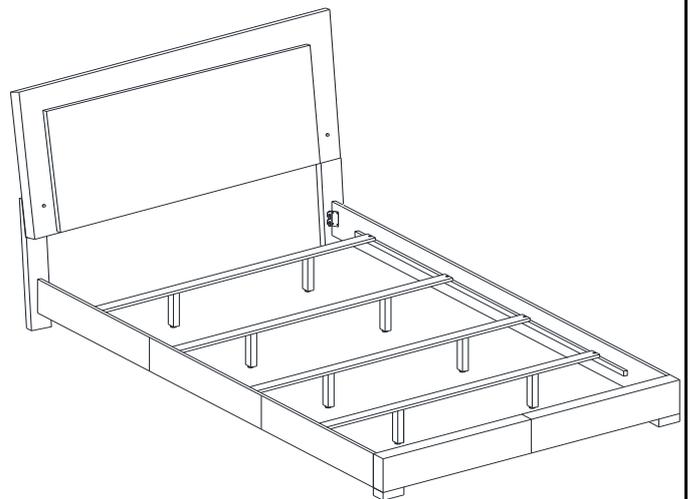

ITEM: 203500KE (B1&B2)

INNER SIZE : 76.77" X 81.10"

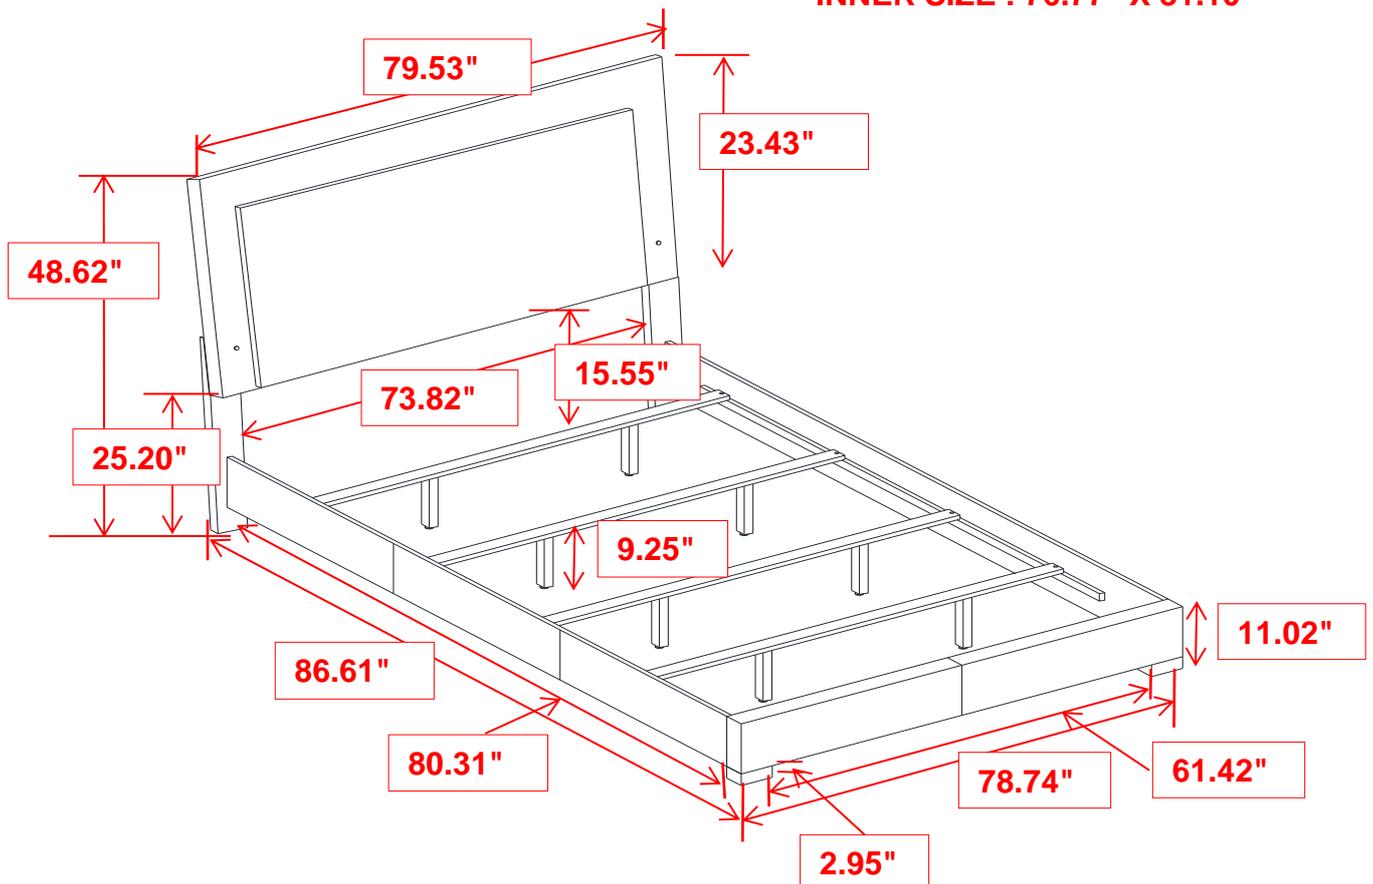

Note : Dimension tolerance $\pm 5\%$