






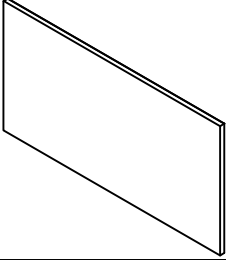


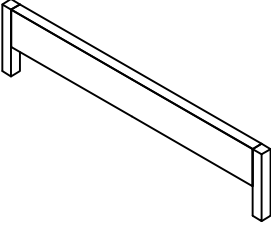
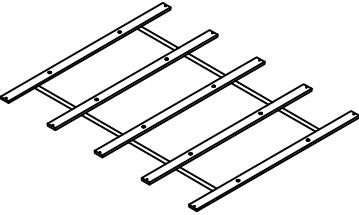


Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.








Hardware and Parts packed with the Headboard

91084 Panel Headboard  (H-A) 1 pc.	Headboard Post (Right)  (H-B) 1 pc.	Headboard Post (Left)  (H-C) 1 pc.	Stretcher  (H-D) 1 pc.
Ø5/16" x 1-3/4" Allen Head Bolt  (H-E) 10 pcs.	Ø5/16" x Ø13 Spring Washer  (H-F) 10 pcs.	Ø5/16" x Ø19 Flat Washer  (H-G) 10 pcs.	M4 x 2-1/2 Allen Key  (H-H) 1 pc.

Hardware and Parts packed with the Footboard

91081 Panel Footboard  (F-A) 1 pc.	Slat - 76" Long  (F-B) 1 Set	#4 x 30mm Wood Screw  (F-C) 10 pcs.	1-1/8" x 1-1/8" x 6-5/16" Support Leg  (F-D) 10 pcs.
---	--	---	--

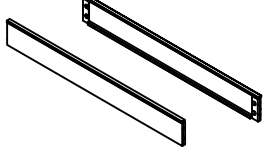Hardware and Parts packed with the Bed Rails


91072 Bed Rail  (R-A) 2 pcs.	Ø5/16" x 3-1/2" All-Thread Bolt  (R-B) 8 pcs.	Arc Washer 37*17mm  (R-C) 8 pcs.	Ø5/16" x Ø13mm Spring Washer  (R-D) 8 pcs.	Ø5/13" x Ø16mm Flat Washer  (R-E) 8 pcs.	Ø5/16"-18mm Hex Nut  (R-F) 8 pcs.	12 mm Open Wrench  (R-G) 1 pc.
--	---	---	--	--	--	---

6/0-6/6 King Bed


91084 - 6/0-6/6 Panel Headboard

91081 - 6/6 Panel Footboard


91072 - 5/0-6/6 Siderails

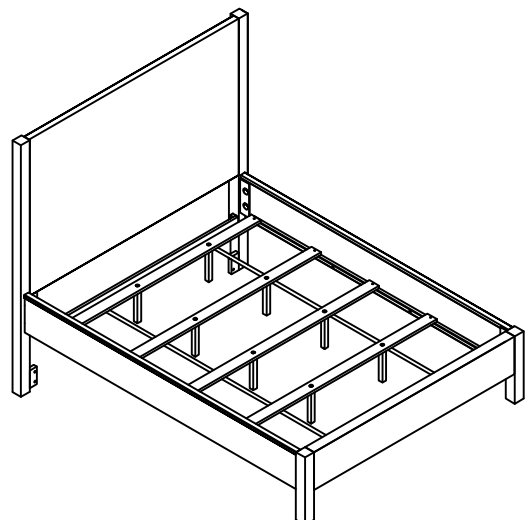


STEP 1

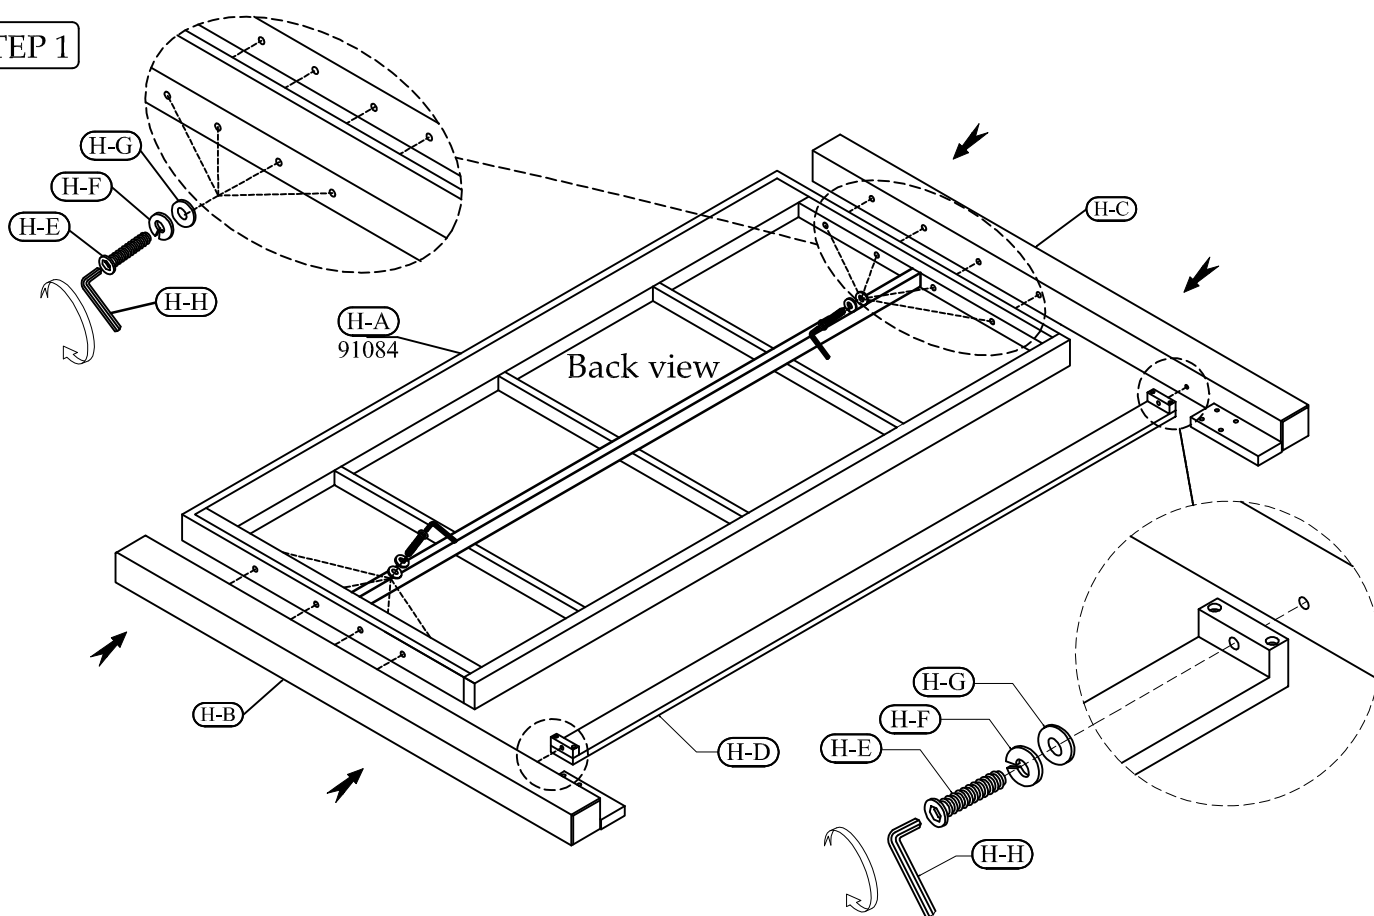


STEP 2

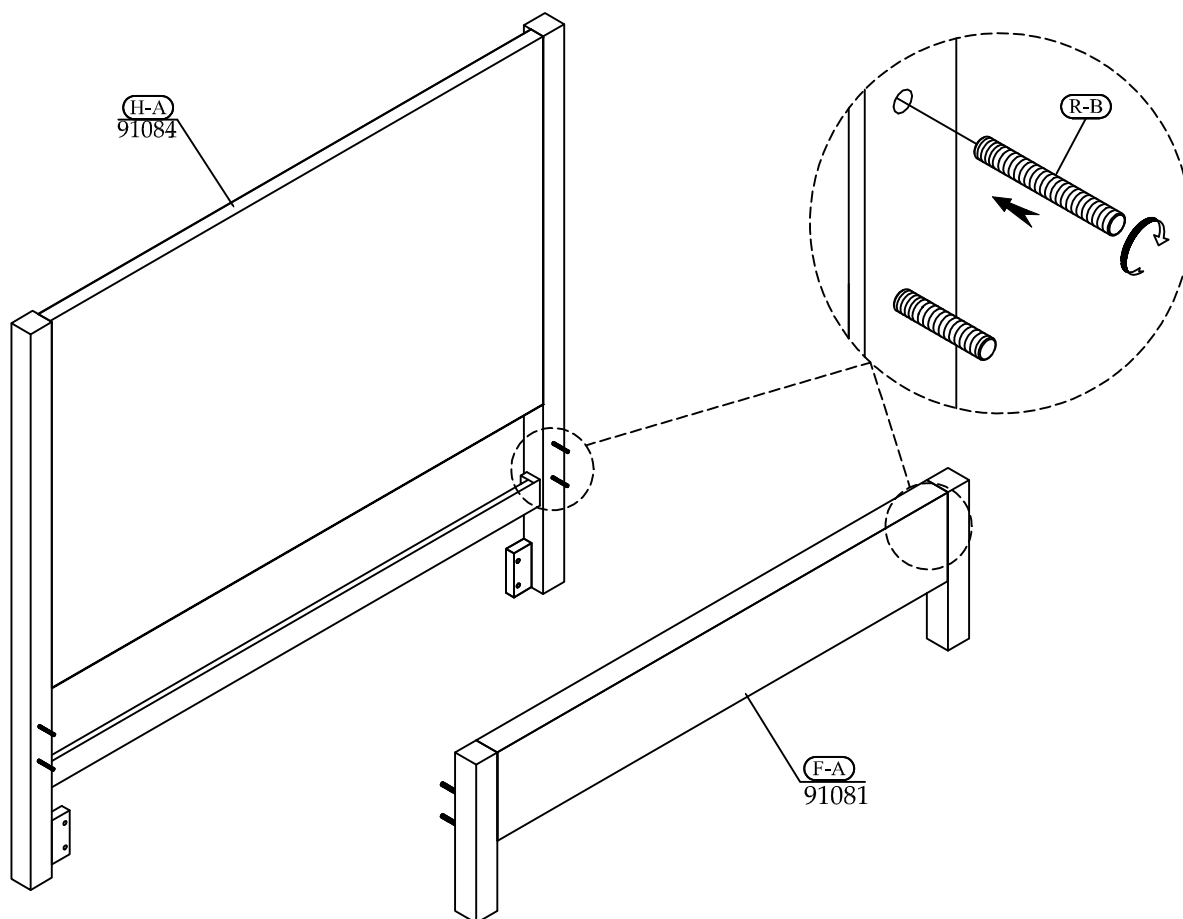



STEP 3

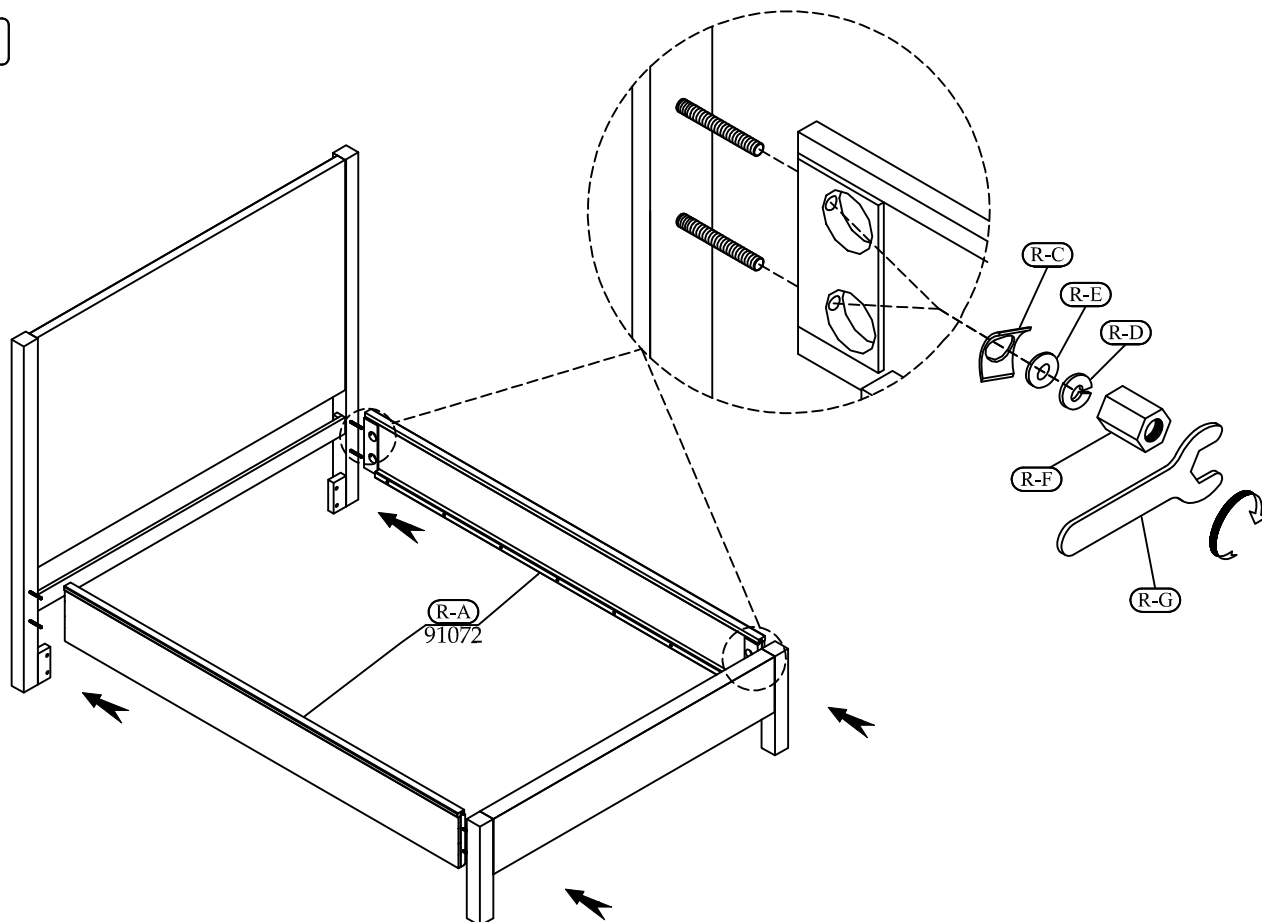

STEP 4

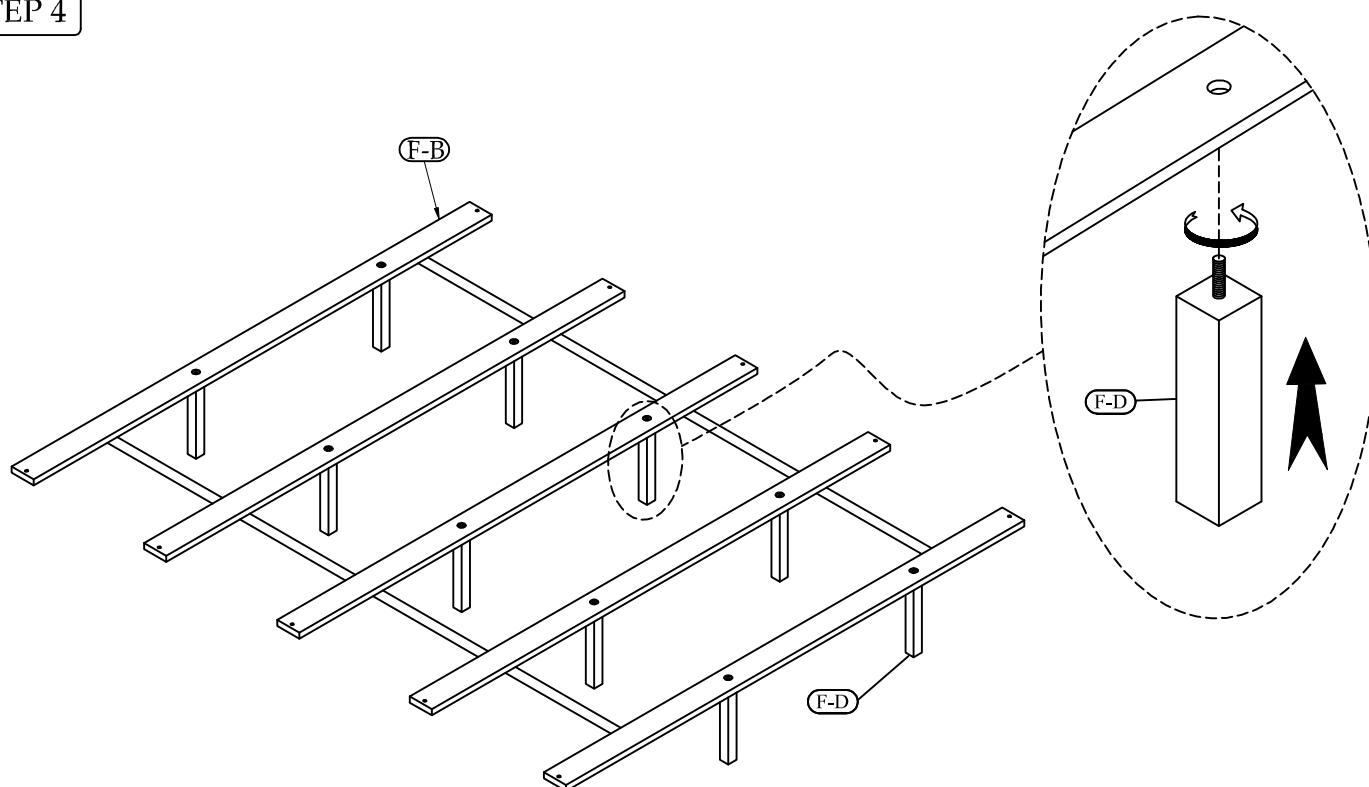


STEP 5

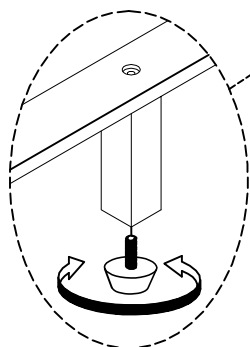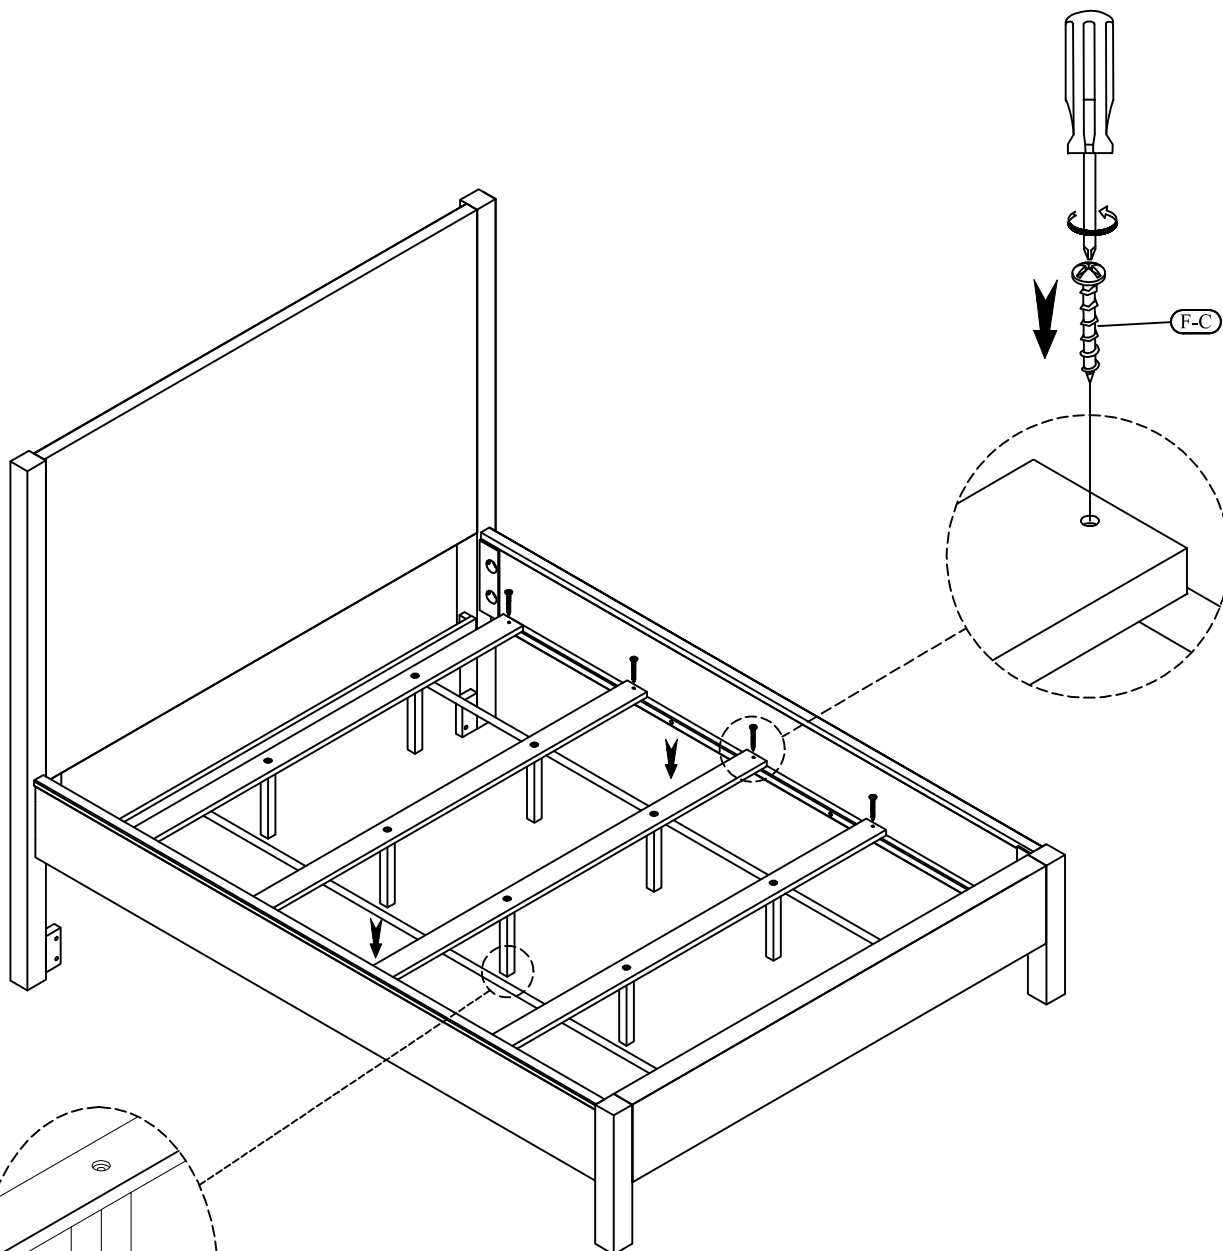

Adjustable leveler.

6/0-6/6 King Bed

91084 - 6/0-6/6 Panel Headboard

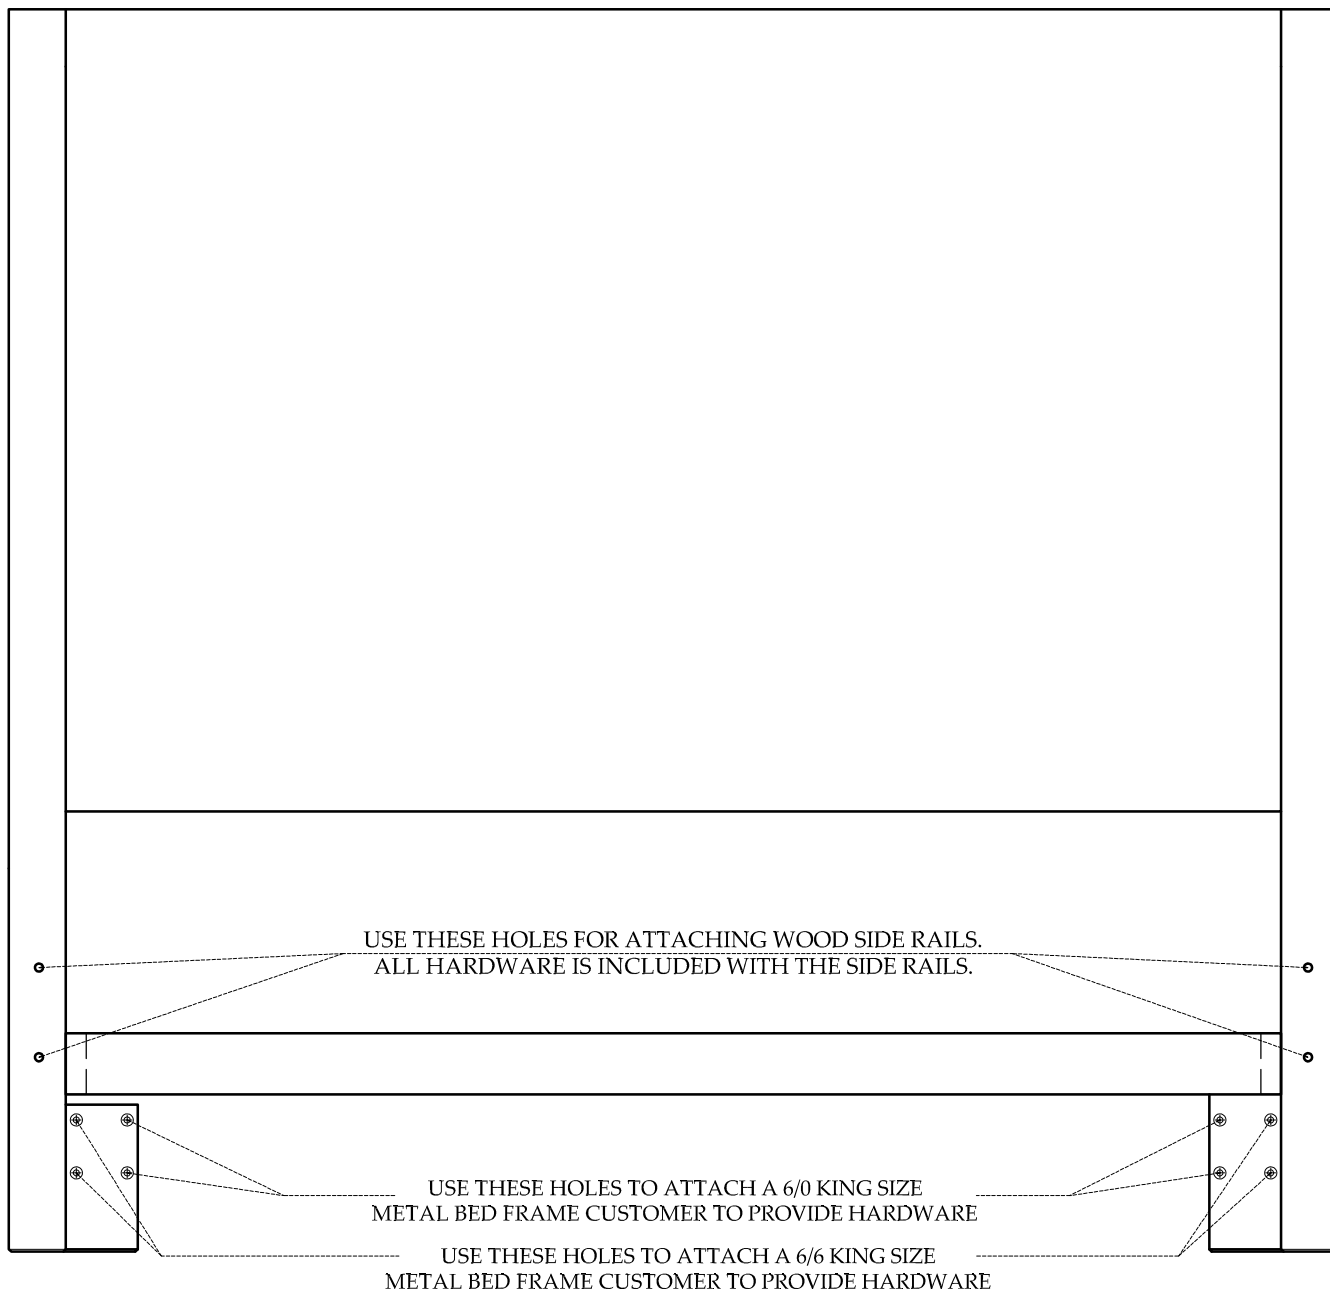

The headboard may be used alone with a Eastern King or California King size metal bed frame.