


ASSEMBLY INSTRUCTIONS

**MODEL :0361A/B & 0362A
YLIME
DRESSER & MIRROR**

(Box 1)
BOX OF MIRROR

NO	ITEM	QTY
	MIRROR	
A		1PC


(Box 2)
BOX OF DRESSER

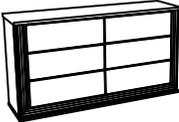NO	ITEM	QTY
	DRESSER	
B		1 PC
	MIRROR SUPPORT	
C		2 PCS


(Box 1)
HARDWARE LIST

NO	ITEM	QTY
1	Flat Head Chipboard Screw m4x32mm Rbw 	6 PCS
2	12V+12W+1A Adaptor With ETL Certificate 	1 PCS



STEP 1 : Cut the raffia string before assembly at back of Dresser as shown.
STEP 1.1 : Centralize the Mirror Support (C) to Vertical position as shown.

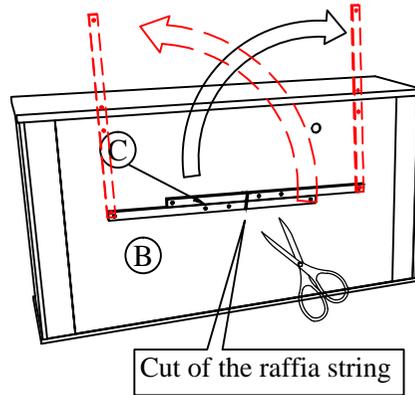

STEP 2 : Secure the mirror support (C) with Csk Screw (1) and tighten them with Screw Driver (NOT PROVIDED).

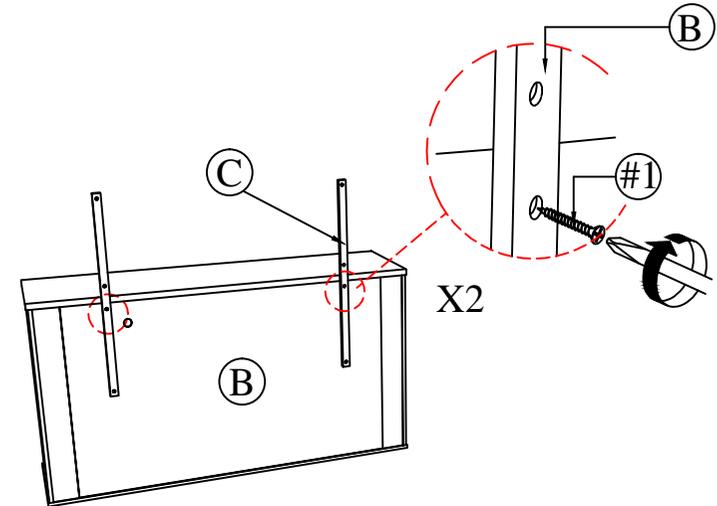

STEP 3 : Place mirror (A) on top of dresser (B). Align & fasten mirror support (C) to the back of dresser (B) using Csk Screw (1) and tighten them with ScevDriver (NOT INCLUDED).

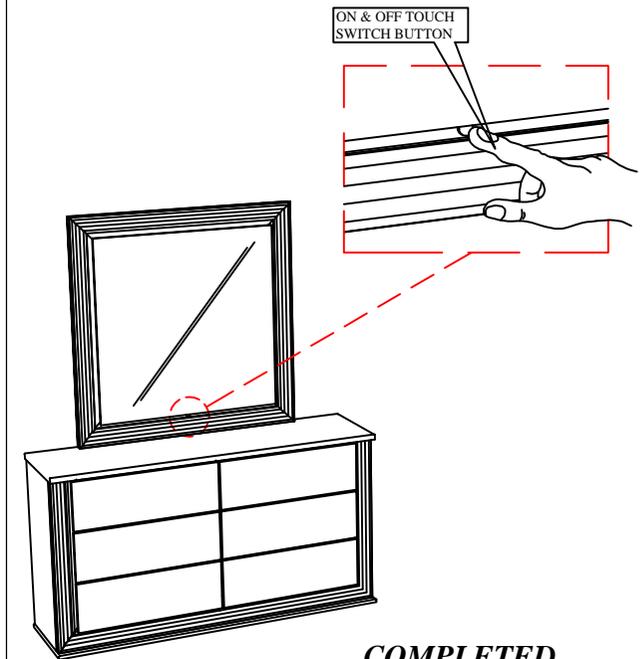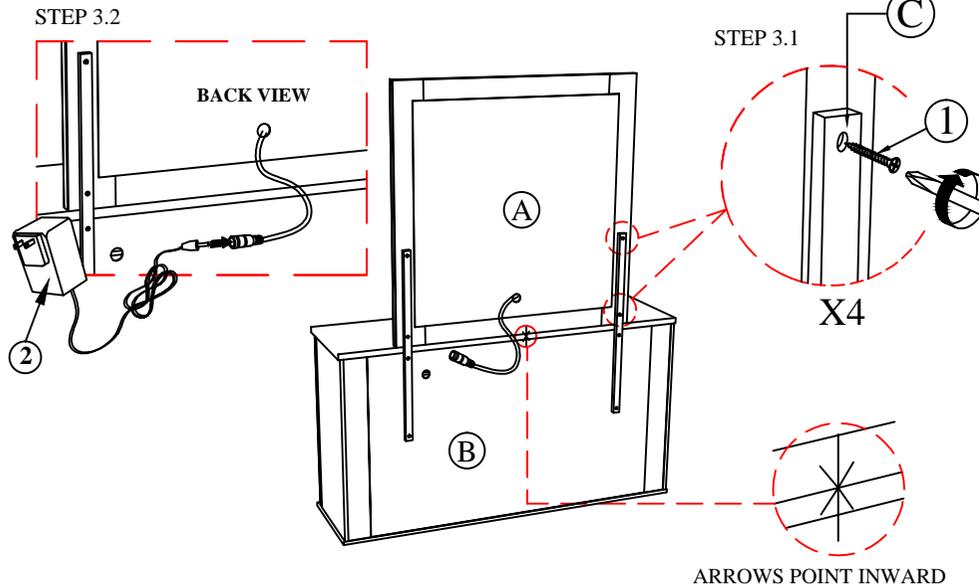

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.