

TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture


 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.


TOV

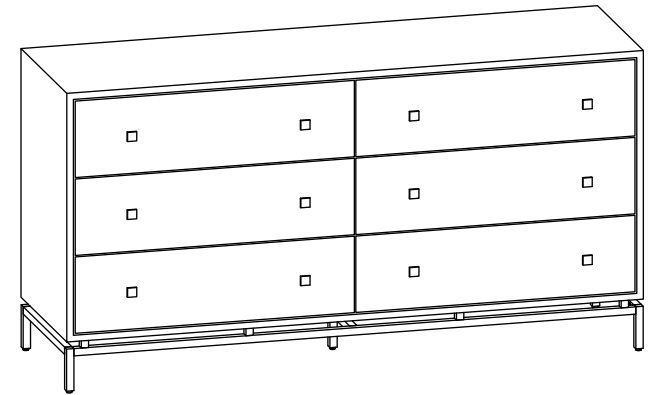

Pesce Dresser

DON'T BE BORING.


Hardware and Components

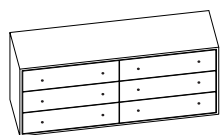

-----●A x1pc



-----●B x2pcs Leg Frame




-----●C x1pc Middle Cross Bar



-----●D x2pcs Cross Bar



-----●E x1pc (Allen Key - 4mm)



-----●F x21pcs (15mm x 6mm)



-----●G x21pcs (Ø16 x Ø6)

Step 1


Open box of hardware and legs.

This hardware box will be a smaller box inside of the main box. Look for the red streamer.




Step 2

- A.** Attach Cross Bar (D) and Middle Cross Bar (C) to Leg Frame (B), ensure the holes align with pre-install threaded nuts.
- B.** Gently tighten the Bolt (F) and Washer (G) with the Allen Key (E).

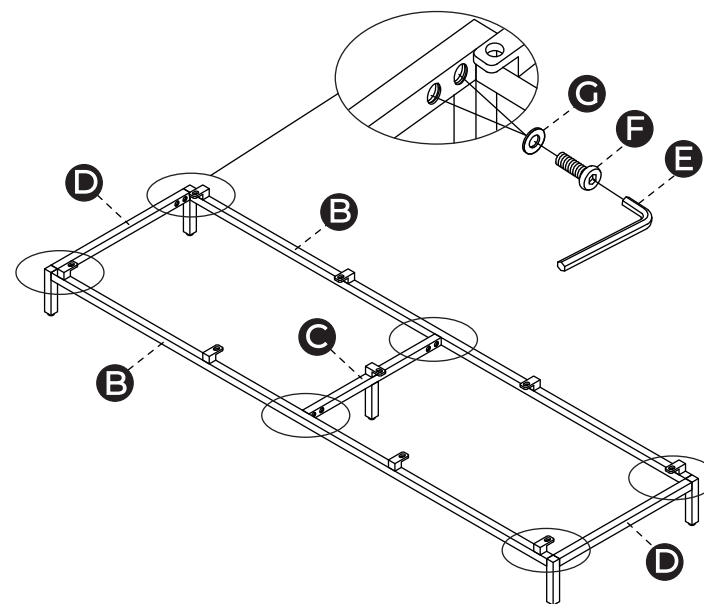


Step 3

- A.** Place the Dresser (A) upside down on a clean, non marring surface (i.e. packing foam).
- B.** Align the Legs to the holes on the bottom of Dresser (A) with pre-installed threaded nuts.
- C.** Gently tighten the legs with hardware (F), (G) and Allen Key (E). Then tighten all bolts.
- D.** With help, turn the Dresser over so it is standing in an upright position.

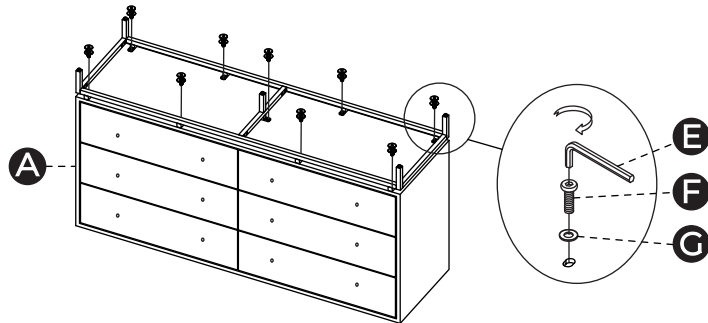


Step 4

- A.** The knob is fitted inside the drawer, open the drawer, unscrew and remove the knob.

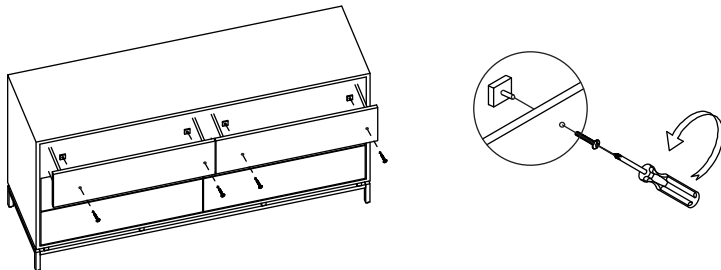


Step 4

- B.** Attach the knob onto outside of drawer using the screw.

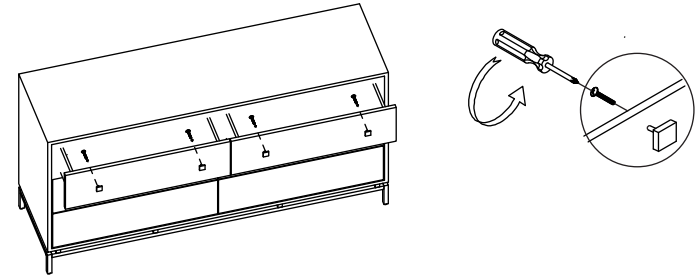

Step 5

- A.** If necessary, adjust the leveler on the legs until the Dresser is level.
- B.** Complete!

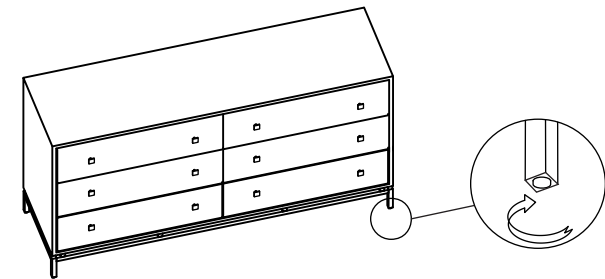

Stuck?

Contact our team @ 516-888-3355

Scan for product care!

