

# ASSEMBLY INSTRUCTION

## MODEL : B4520-1 DRESSER

### (BOX 1) BOX OF DRESSER PART LIST


NO	ITEM	QTY
A	DRESSER	1
B	Acrylic Leg	4
C	CENTER LEG	1

### (BOX 1) BOX OF DRESSER HARDWARE LIST

NO	ITEM	QTY
1	Wood Dowel Ø6 x 30mm	2
2	Flat Head Screw M4 x 32mm RBW	4
3	Flat Head Screw M4 X 28MM RBW	8


### STEP 1

Pull the drawer and take out the Metal Leg carton ( A ).

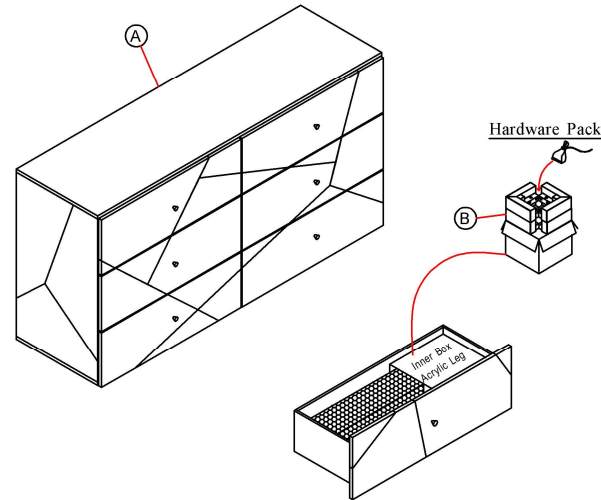

### STEP 2



Place Acrylic Leg (B) On Marking Line. Fix using Flat Head Chipboard screw (3) and securing with Screw Driver (NOT PROVIDED) as shown.

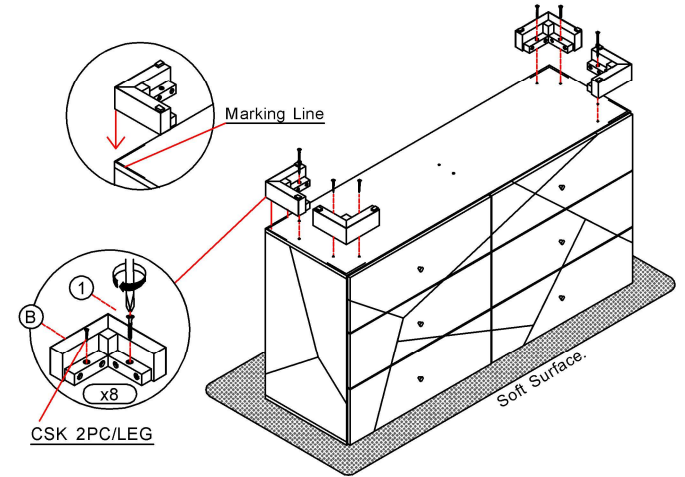

Remark : Turn the Dresser to upside down position as shown.

### STEP 3

Assemble the Center Leg (C) with Flat Head Chipboard screw (2) and securing with Screw Driver (NOT PROVIDED) as shown.

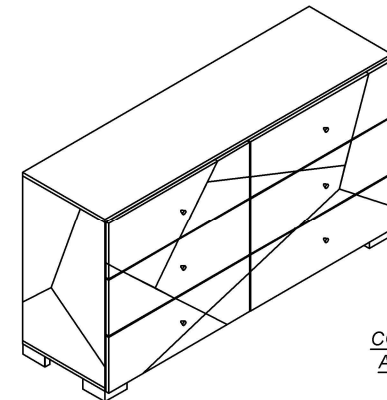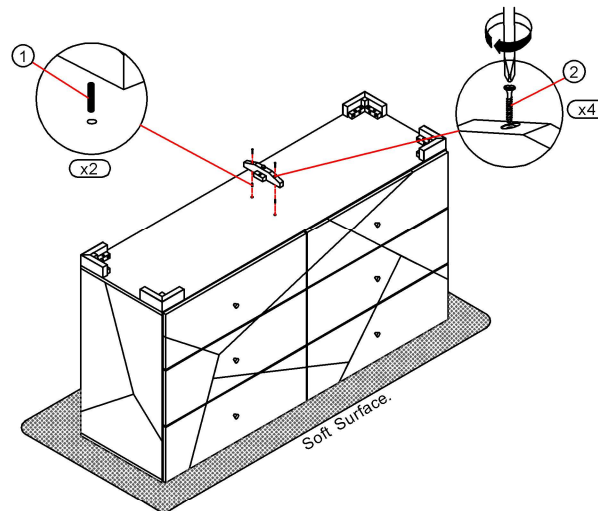

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

REMARK:THE HARDWARE IS LOCATED IN THE PACKING ITEMS . THE ANTI TIPPING HARDWARE IS LOCATED AT THE UPPER RIGHT DRAWER OF DRESSER.