ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL#92418 OFFICECHAIR

Thank you for purchasting this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS		
DESCRIP TION	PART NAME	Q'TY(PCS)
1	BACK	1
2	SEAT	1
3	GASLIFT	1
4	BASE	1
5	SUPPORTER	1
6	WHEEL	5

HARDWARES REQUIRED


- A DEED BOLT 6*25mm-4PCS
- B) DBOLT 6*18mm-4PCS
- (C) L ALLENKEYX1PC



Attention:

*** Mattreses not included.

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to odering replacements. PAGE 1/2

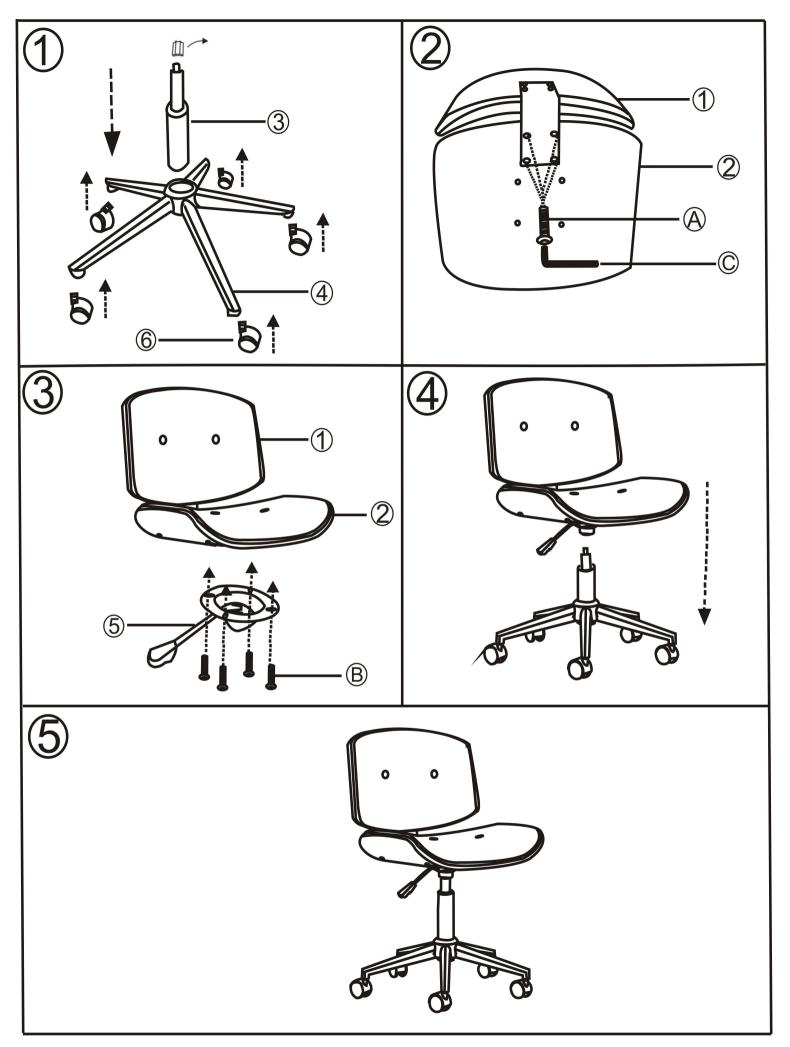

PAGE 2/2