
Riverside FURNITURE

email: info@riverside-furniture.com

Monterey Dining Room Assembly Instructions

Components and Hardware List

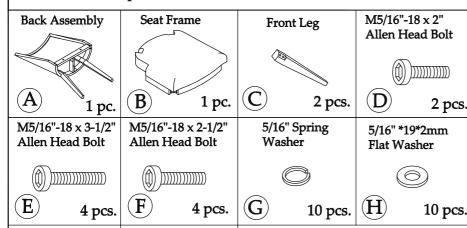

Made in Viet Nam

Page 1 of 2




5mm Allen Wrench

#8 x 1-1/8" Wood Screw

(I)1 pc. 1 pc. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

To prevent possible scratches and damage, this furniture must be assembled by two people on a soft surface such as a blanket or carpet.

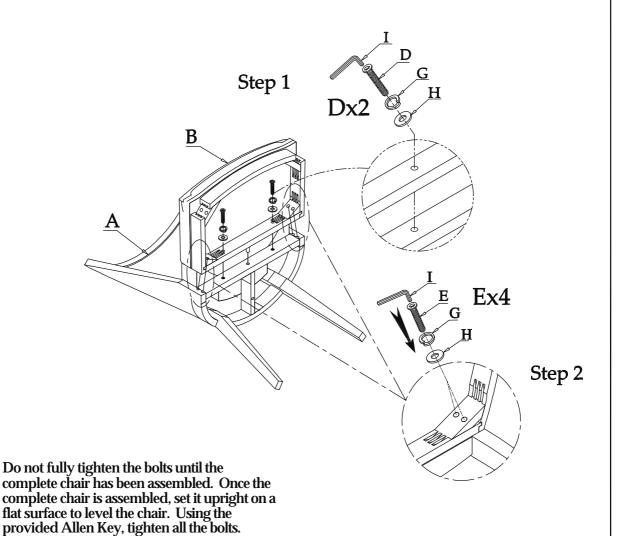

Riverside


email: info@riverside-furniture.com

Monterey
Dining Room
Assembly Instructions

Page 2 of 2

Made in Viet Nam

Step 3

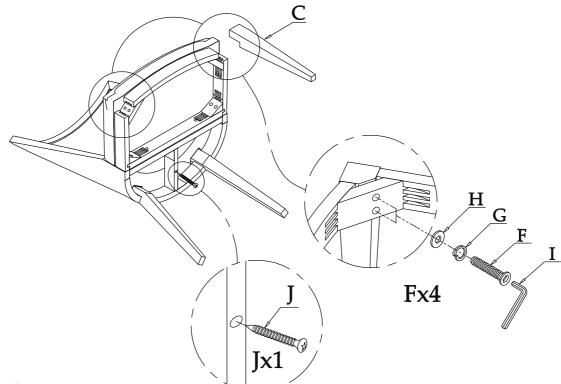

Step 4

