



ASSEMBLY INSTRUCTIONS



FOA Intro

MODEL # _____

MT-ADJ301

Questions? _____

GIVE US A CALL: 1-888-980-5122
MON-FRI 8:30AM - 5:30PM (PT)



Consumer Hotline
Toll-Free 1-888-980-5122



WEBSITE
www.foagroup.com



foagroup




Monday to Friday
8:30AM- 5:30PM (PT)



E-MAIL
cs.ec@foagroup.com




FurnitureOfAmerica

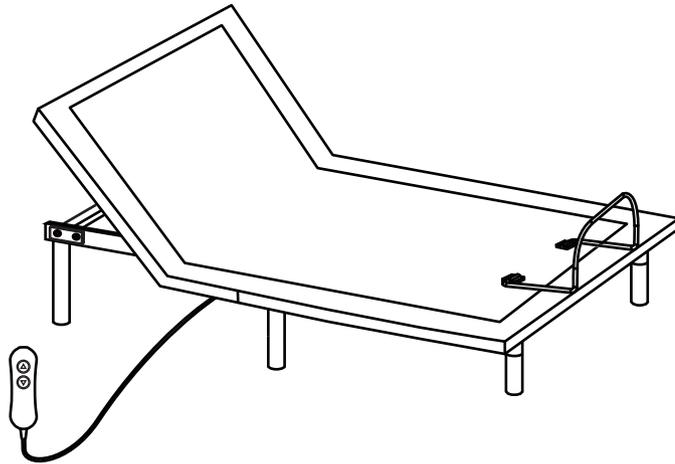

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.

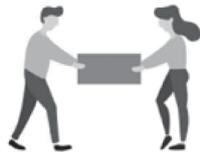

2 - People
Recommended

ASSEMBLY RATING



EASY → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING



Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.



Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!



Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!




Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

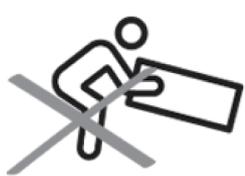

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.



Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

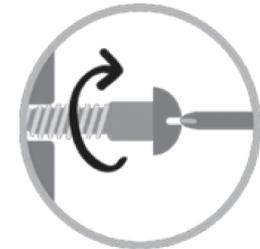

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.




Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

Setup the power foundation without the bed frame.

1 Open the box lid.

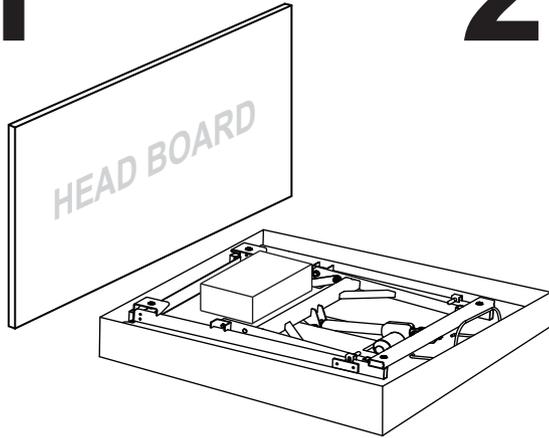

2 Take out all the accessories from the packaging and put them aside.

Mattress Retainer Bar



×1(2 for K/CK)

Accessories Box



×1

ACCESSORIES BOX:

Legs(11.3")

Legs(1.6")

Hand Control

Power Supply

AC Power Cord



×6



×2



×1




×1




×1

3 Install 4 legs (11.3"), make sure the legs are tight.

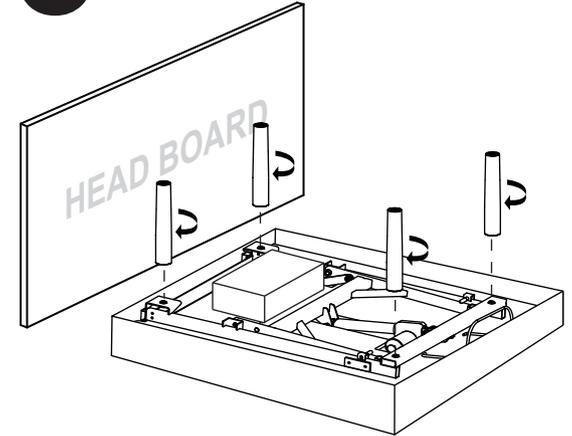


4 Remove the red plastic safety lock before unfolding your power foundation.


Remove the red plastic safety clip.

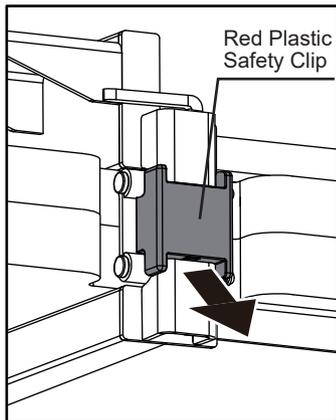


Turn the locking pin 90° in counter clockwise direction.

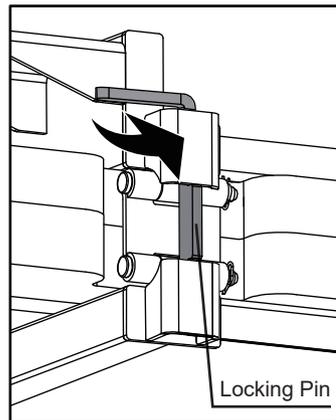


Remove the folding locking pin by pulling upwards.

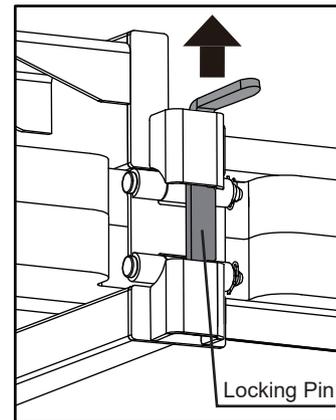


5 Attach the 1.6" leg section to 11.3" section. The (2) legs will be installed on Step 8.

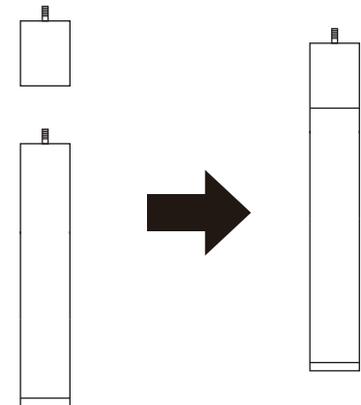


6 Remove the bed from the box with a flipping motion, let the bed stand on the 4 legs.

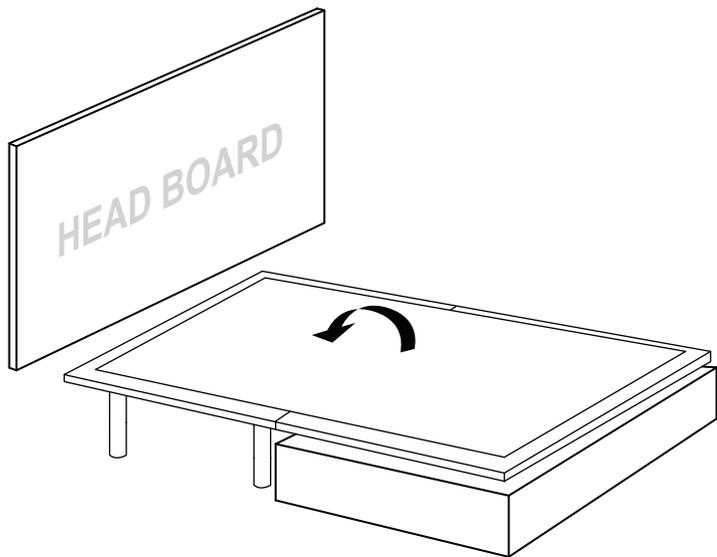


7 Flip the foot end of the bed from the box and lay it on top of the end at the headboard.

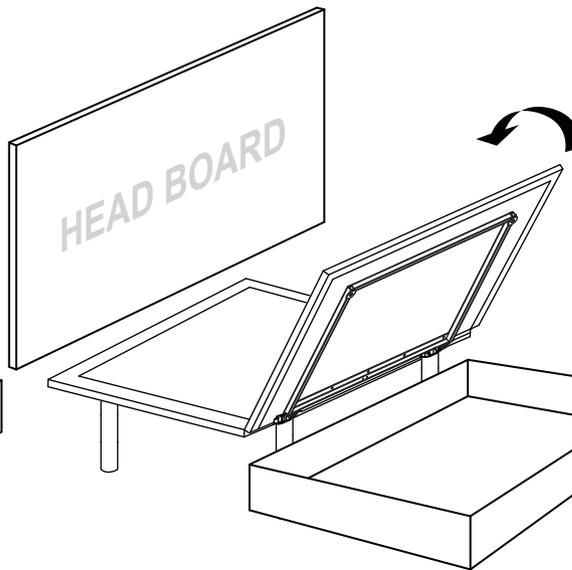


8 Install the remaining 2 legs on the foot end of the bed, make sure the legs are tight. Uncoil the DC power cord and the hand control connector.

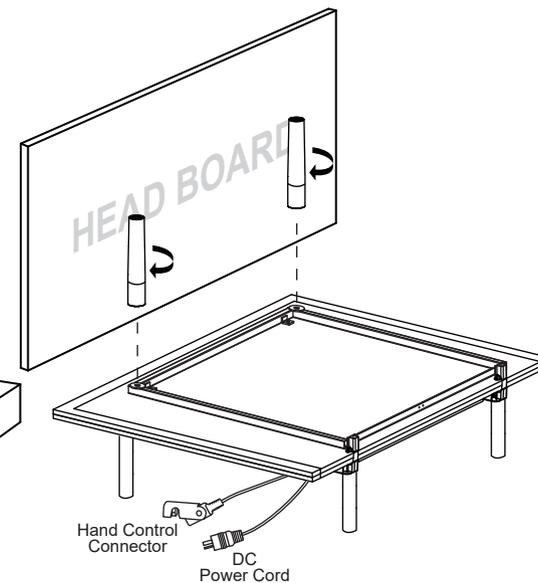

9 Connect the hand control and secure it with the connector lock. Uncoil the AC power cord, connect the DC power cord to the power supply.

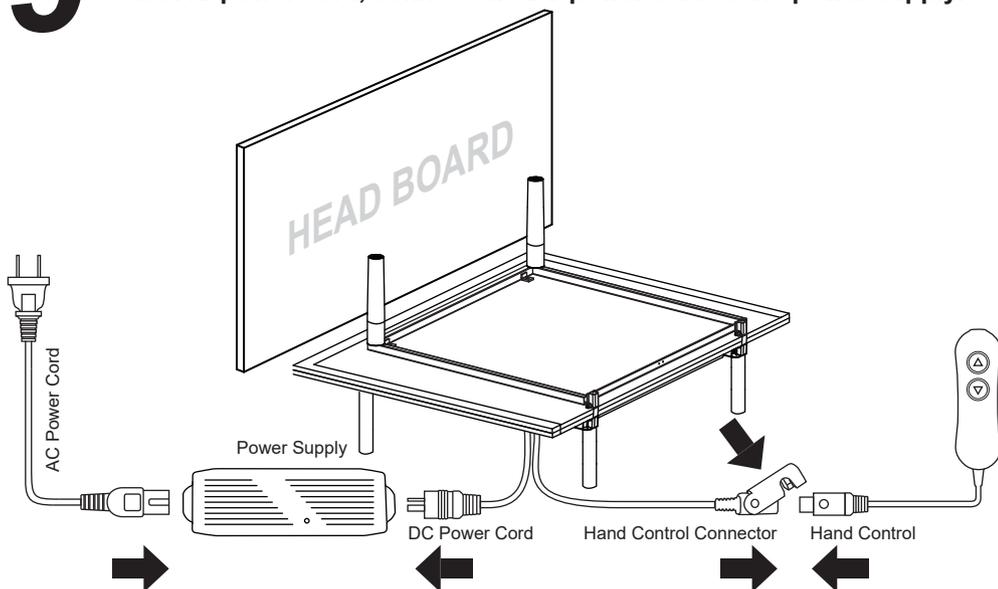


10 Make the bed completely flat.

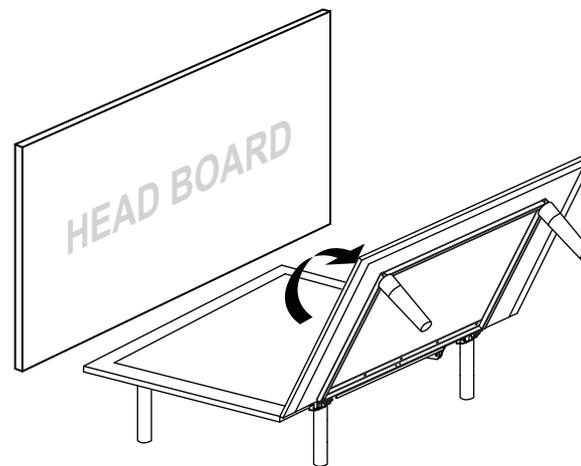


11

Install the mattress retainer bar one side after another.

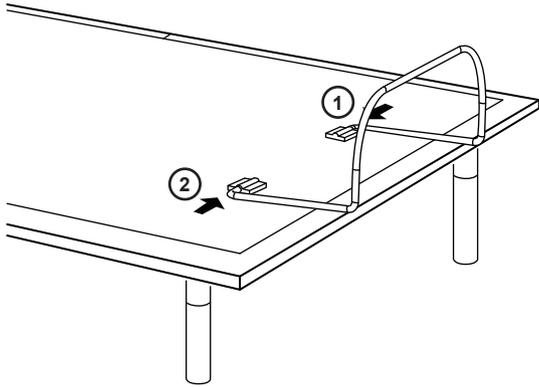

12

Connect the power supply to the AC power source.

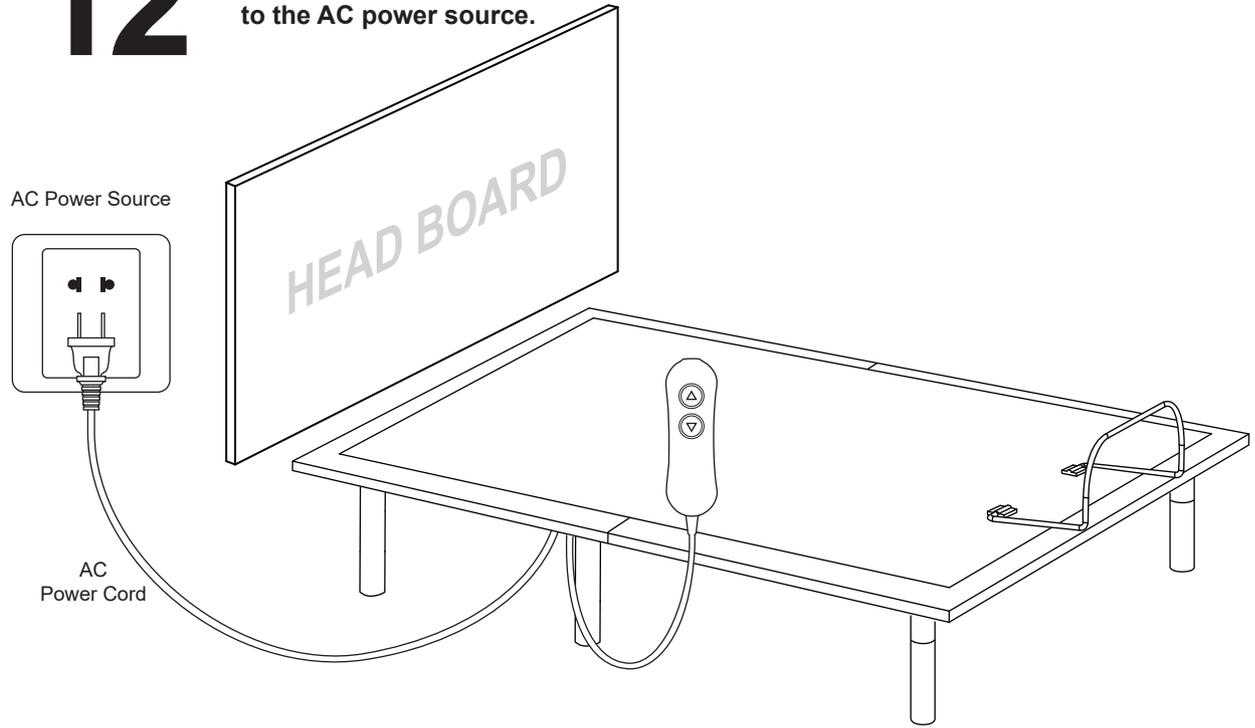


DONE!


Setup the power foundation with the bed frame and slat base.

***NOTE:** Optional parts are required.


- 1** Take the bed out of the box, put it on the slat base, do not install any legs. Uncoil the DC power cord and hand control connector.

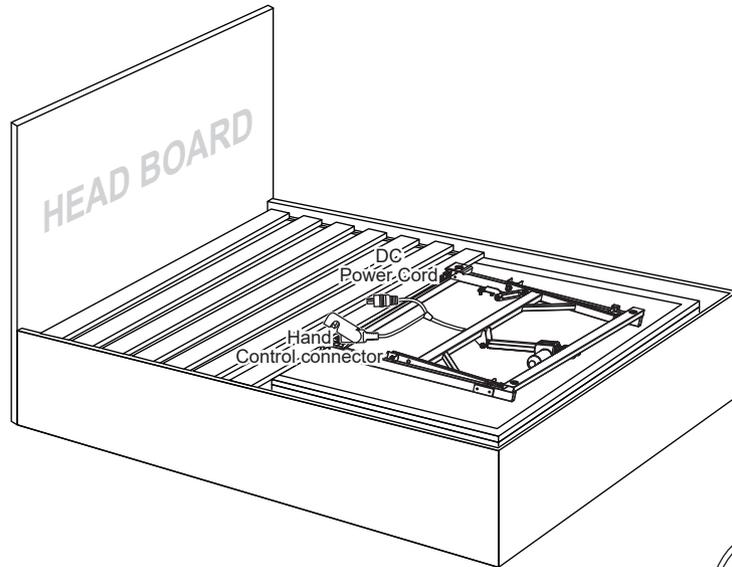


- 2** Connect the hand control and secure it with the connector lock. Uncoil the AC power cord, connect the DC power cord to the power supply and pull the AC power cord towards the direction of the AC power source through either the bottom or the side of the bed frame.

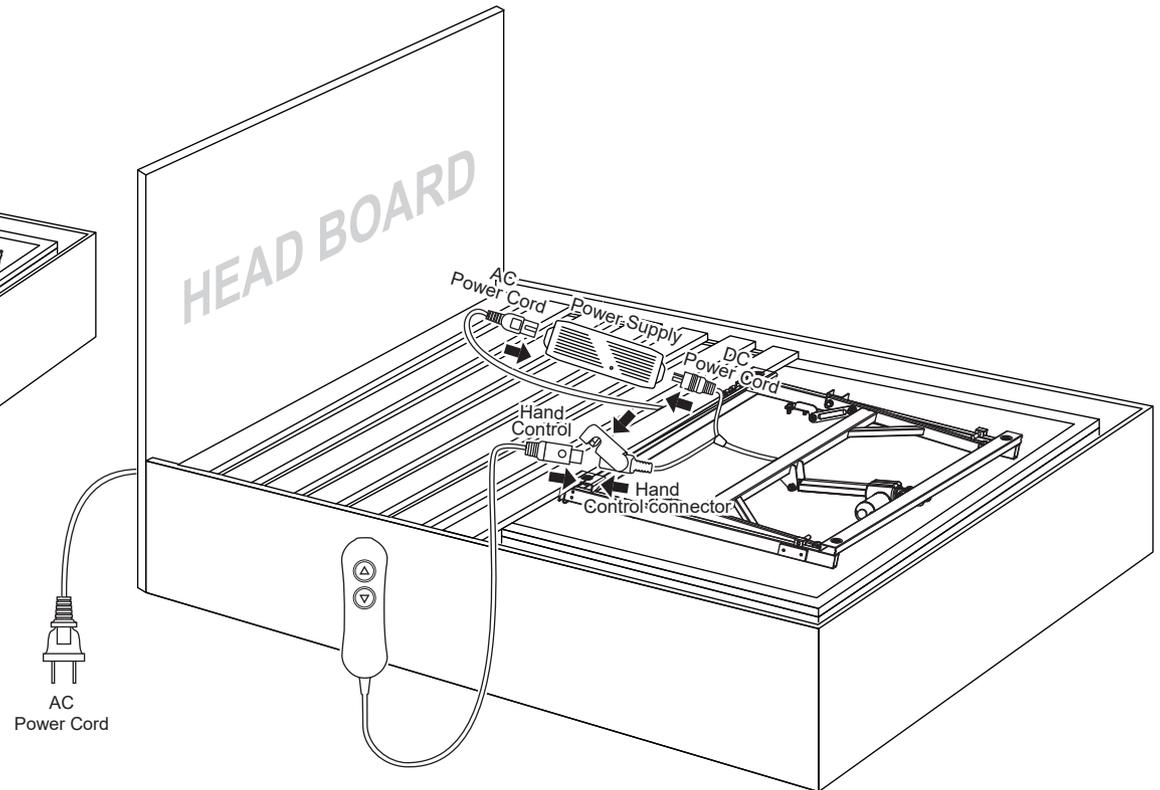


3 Turn over the bed. Install the middle stabilizer bracket as shown. (*Optional parts are required to perform this setup.)

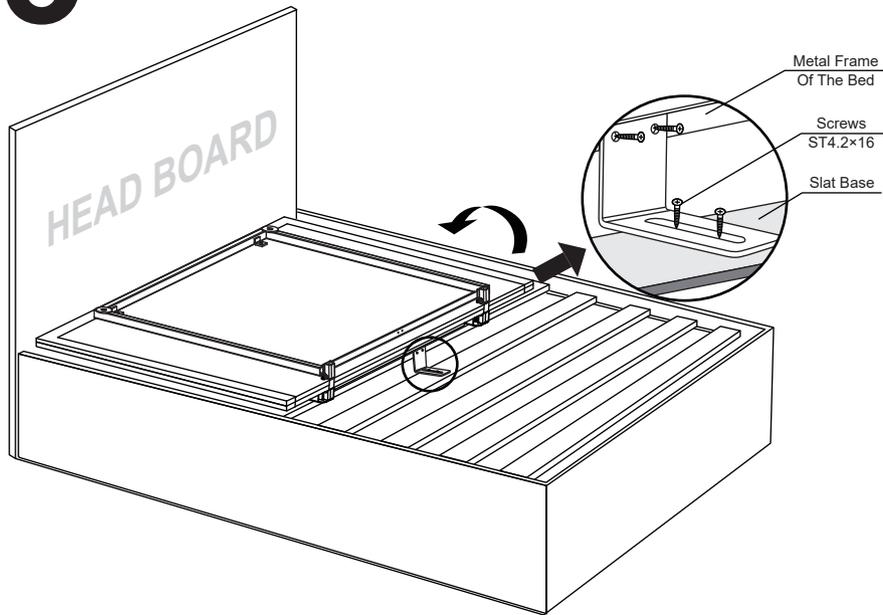


4 Install the 1.6" metal legs onto the foot end of the frame.

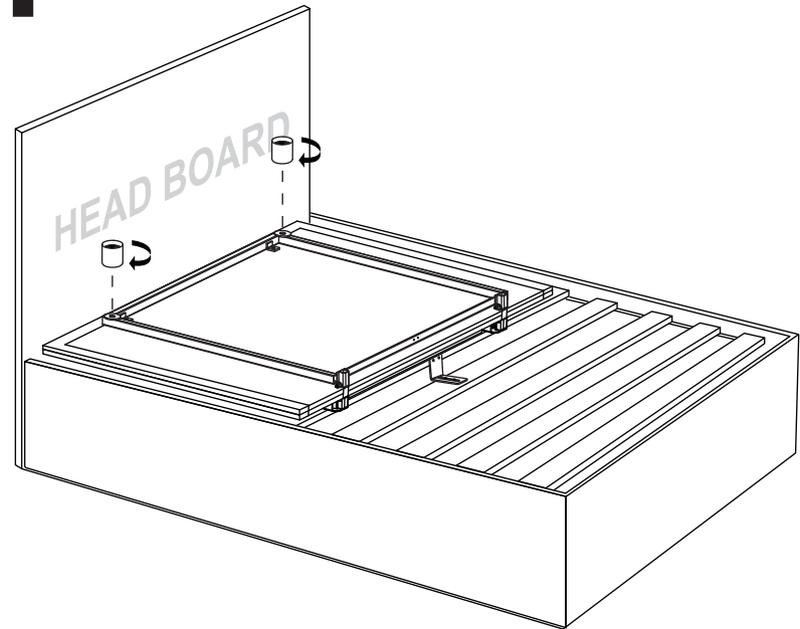

5 Make the bed completely flat with a flipping motion.

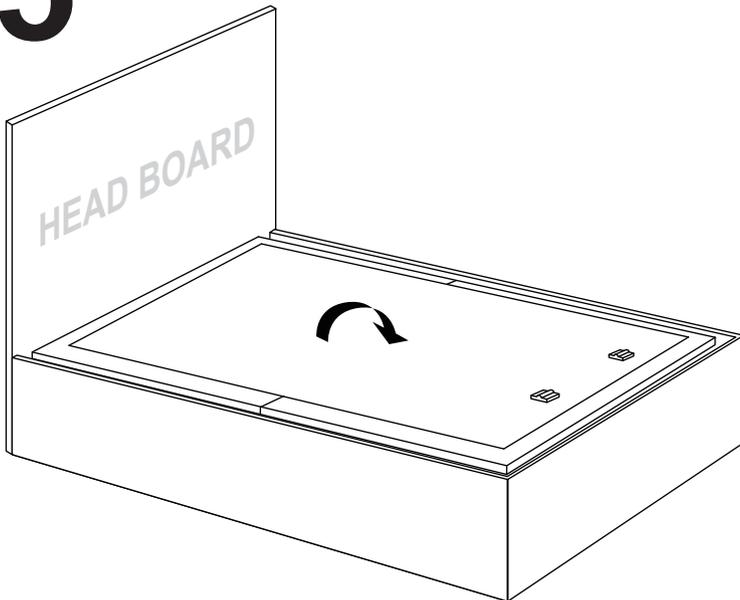


6 Install the mattress retainer bar one side after another.

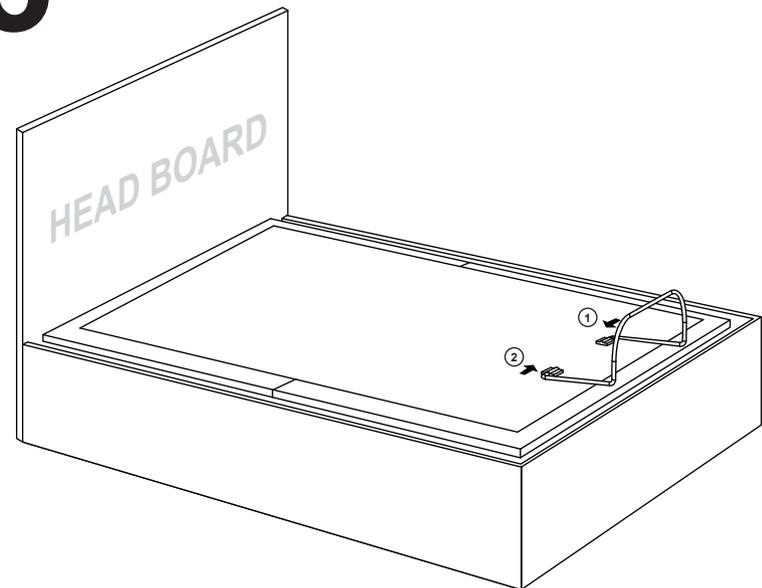


7

Connect the power supply to the AC power source.

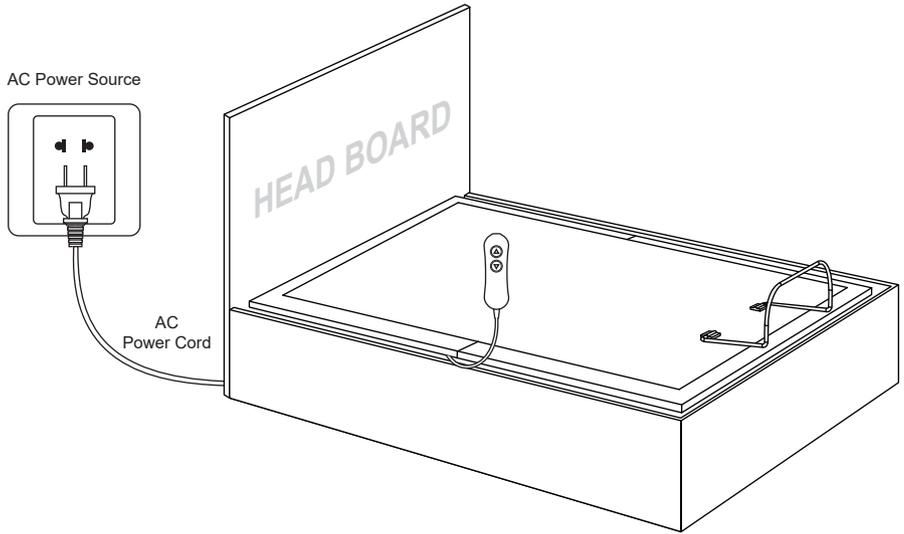


8

Lift the head of the bed by hand control. Install the two stabilizer brackets as shown. (*Optional parts are required to perform this setup.)

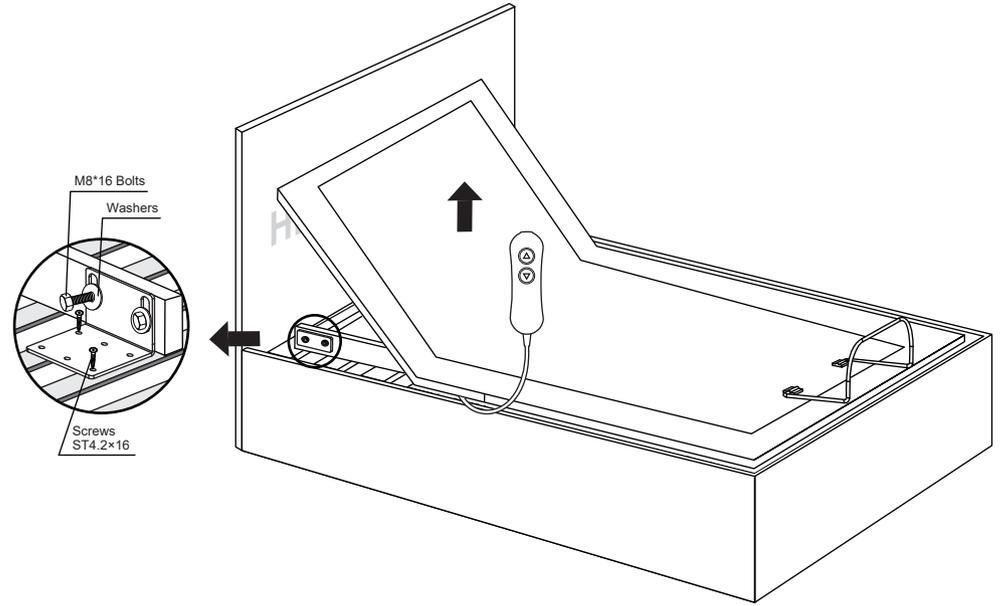

DONE!

Hand Control Instructions

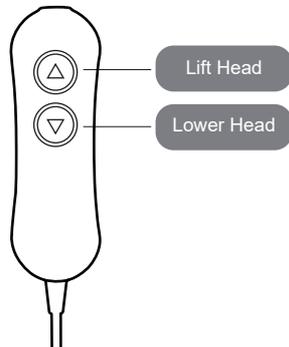


ADJUST

- ▲ This button lifts the head section of the foundation.
- ▼ This button lowers the head section of the foundation.


Headboard Bracket Installation Guide (Optional)

Headboard brackets are optional and not included. A 1/2" (13 mm) socket and 1/2" (13 mm) wrench are required to complete the installation.


HEADBOARD BRACKET COMPONENTS				
(2) Headboard Brackets	(2) T-Brackets	(8) M8*16	(4) Nuts	(4) Washers
				

STEP 1

a) Align the slot hole of the headboard bracket to the sleeve into which the leg threads. **DO NOT OVERTIGHTEN.** Too much force may damage the thread.


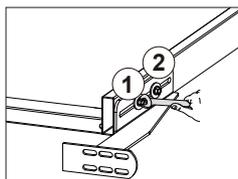


b) The headboard bracket has 2 adjustable slots to accommodate any frame type. Use the bolts and washers to secure the bracket. Make sure the bolts are tight.

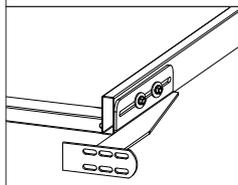

STEP 2

a) To put the T-Bracket and Headboard Bracket together, you will need (2) M8×16 bolts and (2) nuts. Slip the bolts through the holes from T-Bracket to Headboard Bracket with the head of bolt facing outward. Use the 1/2" (13 mm) socket and 1/2" (13mm) wrench to tighten the bolts.

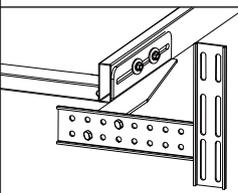
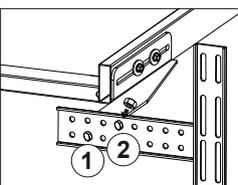


STEP 3


You may now connect your headboard to the attachment plates using the remaining short bolts and nuts to secure it to the brackets. The heads of the bolts will face outward. Use a 1/2" (13mm) socket and 1/2" (13mm) wrench to tighten the bolts.

Parts List

All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.

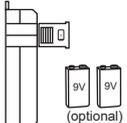INCLUDED WITH POWER FOUNDATION					
(1) Hand Control	(1) Power Supply with Battery Backup Box	(1) AC Power Cord	(6) Legs (11.3")	(1) Mattress Retainer Bar (2 for King)	(2) Legs (1.6")
					

OPTIONAL EQUIPMENT/PART (NOT INCLUDED)	
Socket and Wrench 1/2" (13 mm)	
	

(2) Stabilizer Brackets	(1) Socket Wrench	(8) Screws ST4.2×16	(4) M8*16 Bolts	(4) Washers	(1) Middle Stabilizer Brackets
					

PRODUCT PROTECTED BY FOLLOWING PATENT:
— US PATENT: 10, 306, 994

Customer Service Toll Free: 1-888-980-5122