

# ASSEMBLY INSTRUCTIONS









ITEM NO : T3518-22  
COLLECTION : MARA TWO DRAWER END  
TABLE / BEDSIDE TABLE


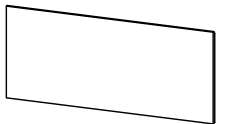




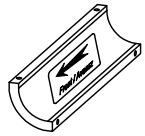
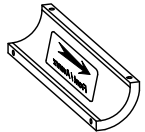
Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.



Please read the instructions thoroughly before assembly.

1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not tighten screws or bolts until the assembly is completed.
3. To level the chairs or table, before tightening all the screws, the chairs or table must be placed on a flat surface and then tighten the screws.
4. Please put all parts on a non-abrasive floor before assembly and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

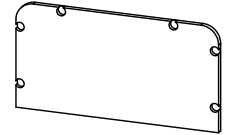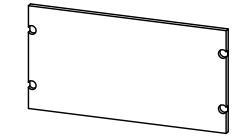PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY
1	TOP PANEL		1 PC
2	SIDE PANEL - L		1 PC
3	SIDE PANEL - R		1 PC
4	FRONT BONE - UP		1 PC
5	FRONT BONE		1 PC
6	BACK PANEL - 1		1 PC
7	BACK PANEL - 2		1 PC
8	MIDDLE PANEL		1 PC






PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY
9	DRAWER FRONT - 1		1 PC
10	DRAWER FRONT - 2		1 PC
11	DRAWER BACK		2 PCS
12	DRAWER SIDE - L		2 PCS
13	DRAWER SIDE - R		2 PCS
14	DRAWER BOTTOM		2 PCS
15	LEG CORNER - L		1 PC
16	LEG CORNER - R		1 PC


# ASSEMBLY INSTRUCTIONS

ITEM NO : T3518-22

COLLECTION : MARA TWO DRAWER END  
TABLE / BEDSIDE TABLE


## HARDWARE LIST

NO.	DESCRIPTION	SKETCH	QTY
A	WOOD DOWEL M6 x 1-3/16"		12 PCS
B	WOOD DOWEL M8 x 1-3/16"		10 PCS
C	C.B SCREW M3.5 x 5/8"		28 PCS
D	5/8" PVC NAIL LEG		4 PCS
E	SUPPORT PANEL (CIRCLE)		4 PCS

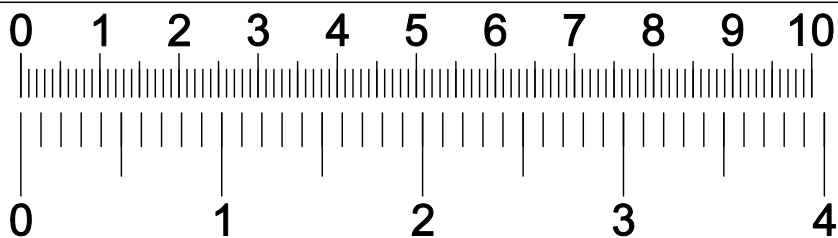


## HARDWARE DIMENSIONS VERIFICATION TOOL


**STEP 1 :** Insert hardware wood dowel (B) onto panel (1), (2), (3) and (5).

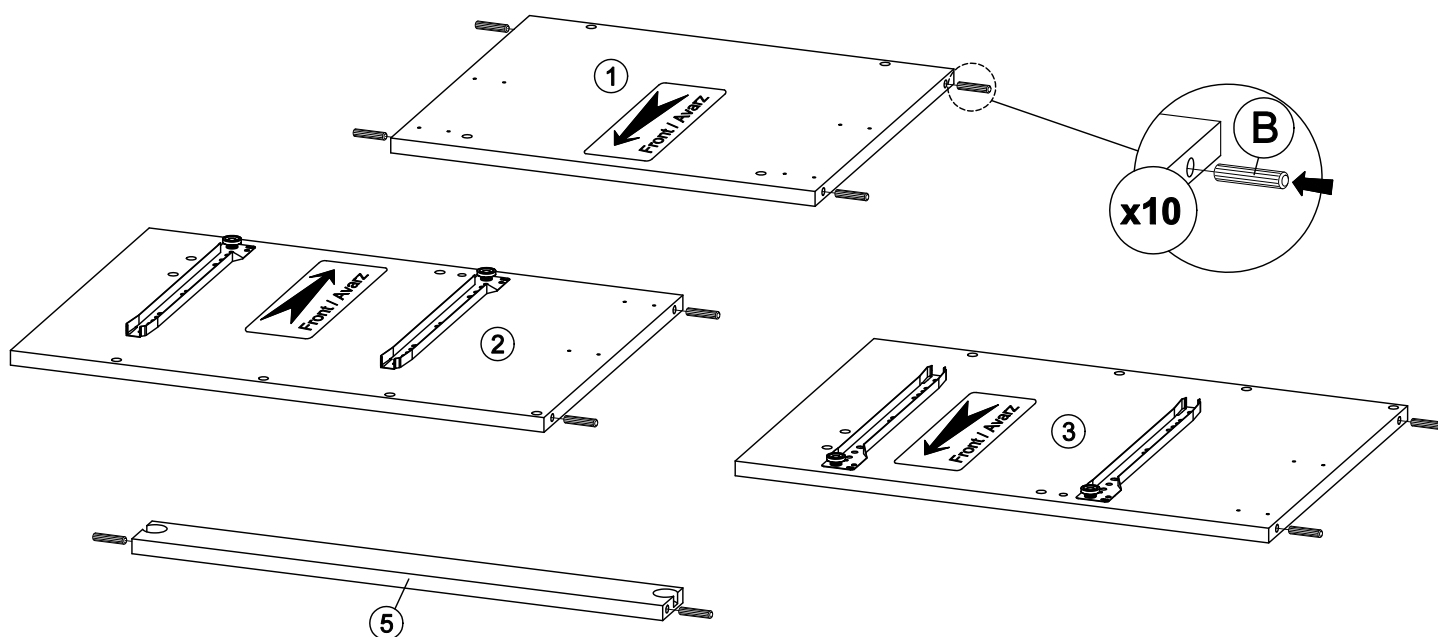

**STEP 2 :** Attach panel (2), (3), (5) and (8) to panel (9) and (10).  
Switch Thumbfix from Unlock to Lock.

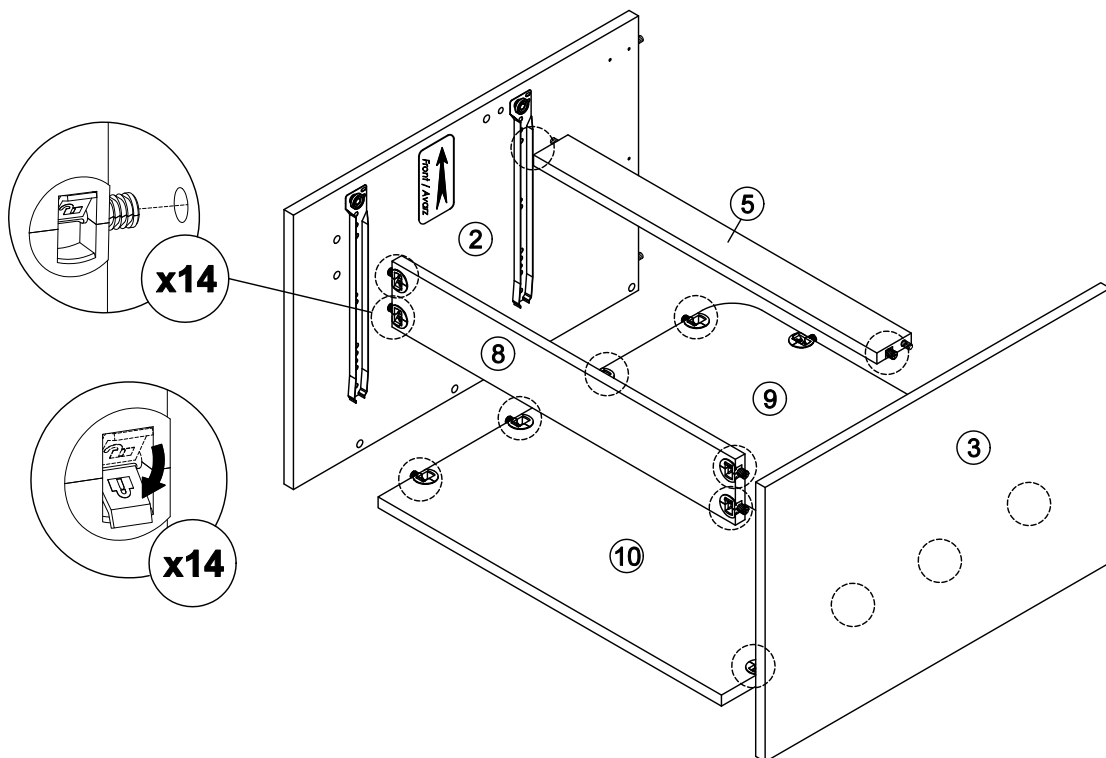

**STEP 3 :** Attach panel (4) to panel (1).  
Switch Thumbfix from Unlock to Lock.

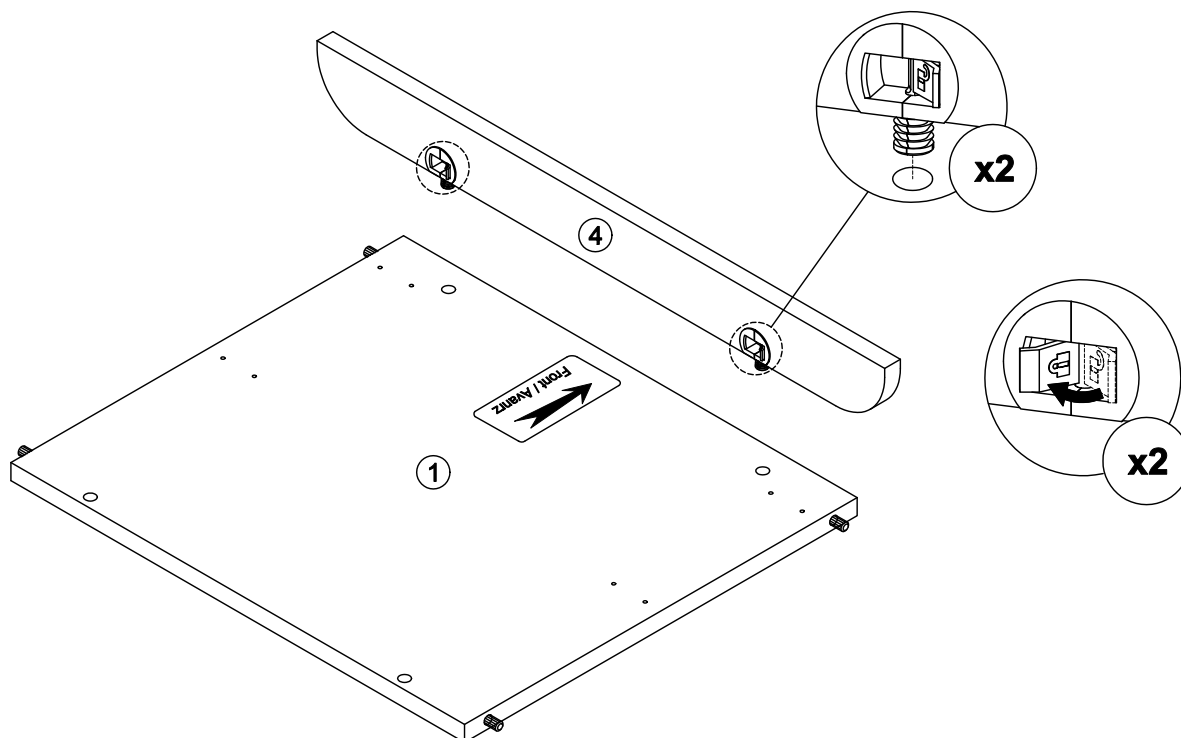


# ASSEMBLY INSTRUCTIONS


ITEM NO : T3518-22

COLLECTION : MARA TWO DRAWER END  
TABLE / BEDSIDE TABLE

**STEP 4 :** Attach panel (15) and (16) to panel (1).

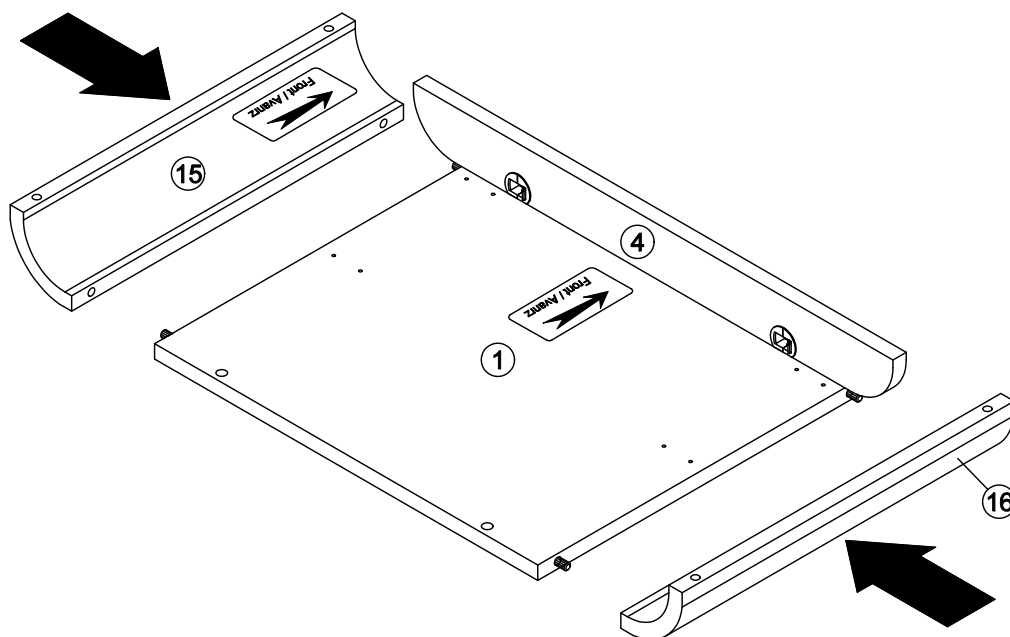


**STEP 5 :** Attach panel (1), (15) and (16) to panel (9).  
Switch Thumbfix from Unlock to Lock.

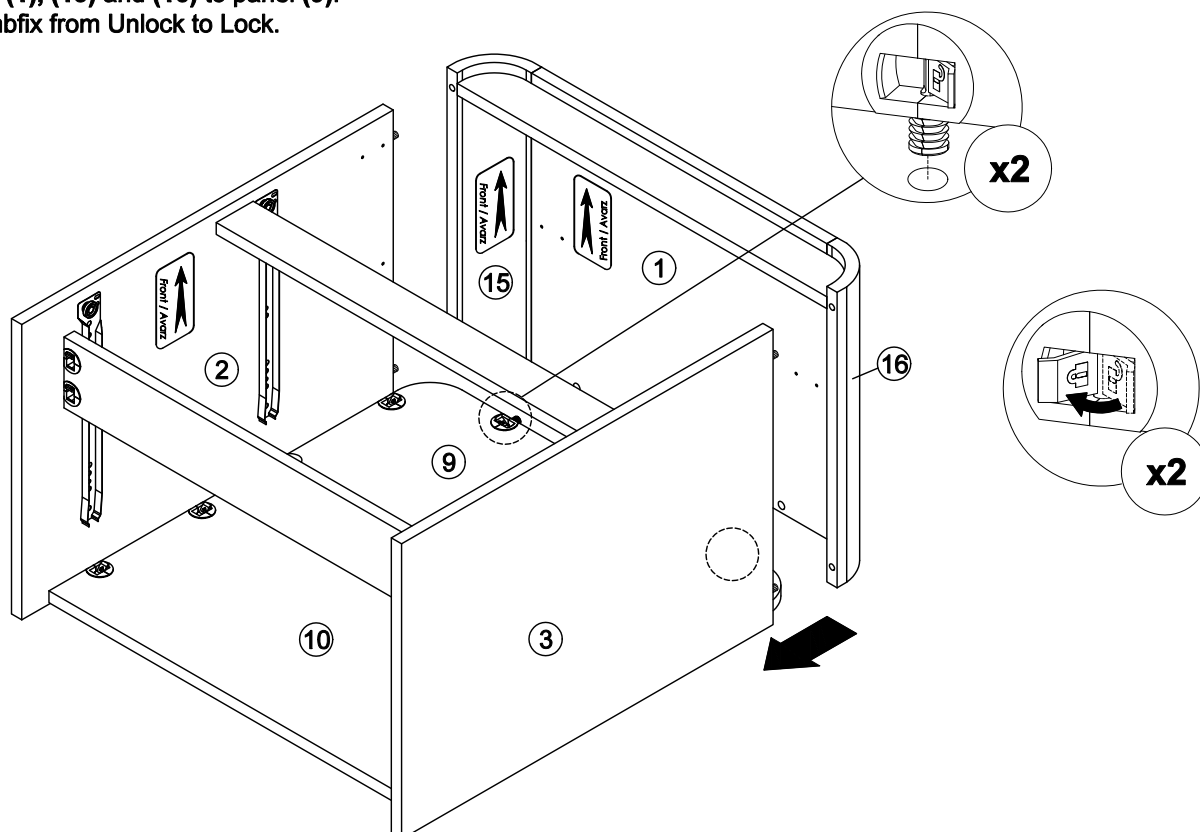


# ASSEMBLY INSTRUCTIONS

ITEM NO : T3518-22  
COLLECTION : MARA TWO DRAWER END TABLE / BEDSIDE TABLE

**STEP 6 :** Assemble hardware (E) to panel (15) and (16) by using hardware (C).

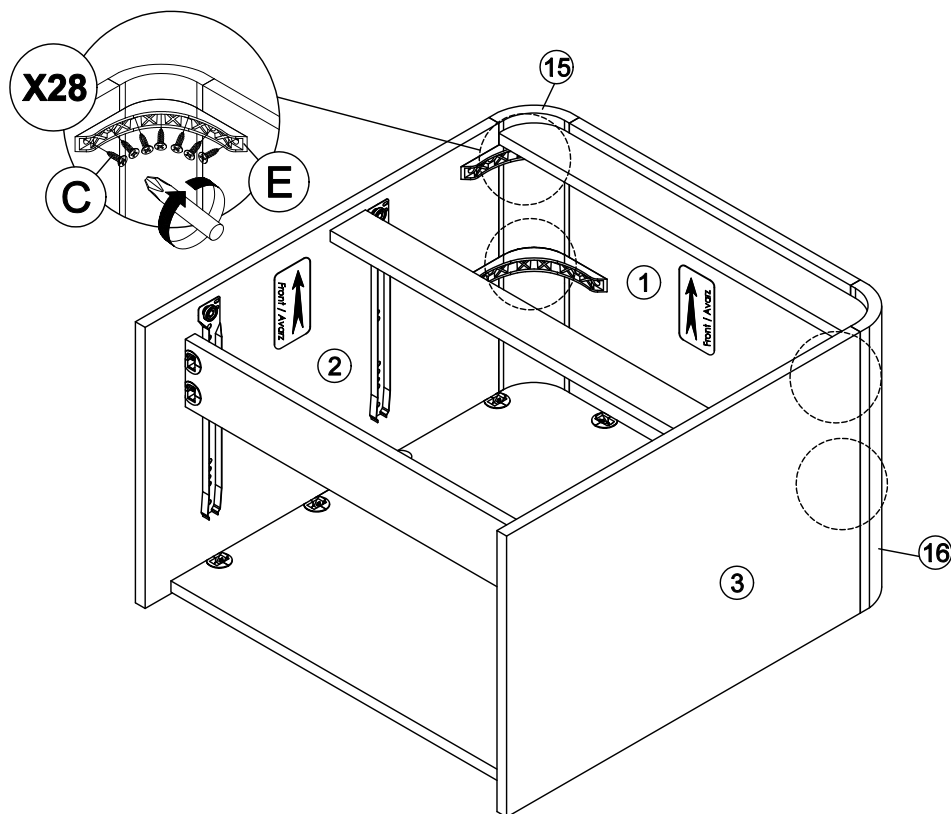


**STEP 7 :** Hit hardware (D) into bottom of panel (2) and (3).

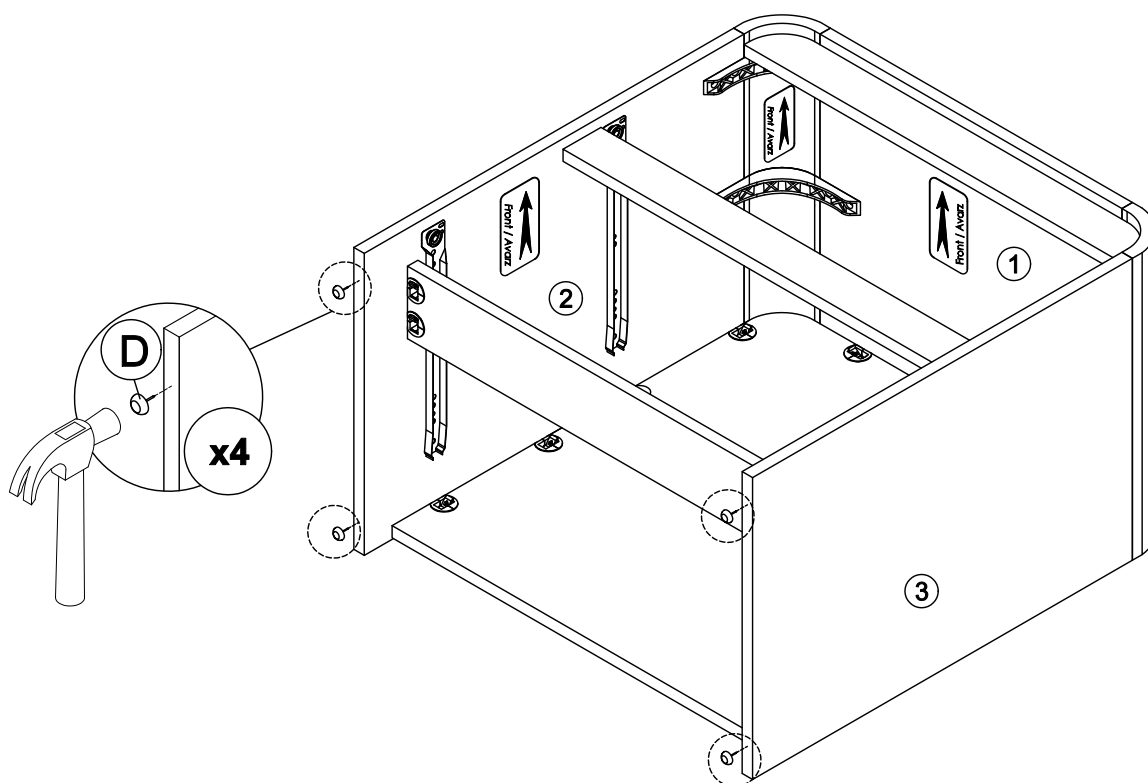


# ASSEMBLY INSTRUCTIONS

ITEM NO : T3518-22  
COLLECTION : MARA TWO DRAWER END TABLE / BEDSIDE TABLE


**STEP 8 :** Insert hardware wood dowel (A) onto panel (11), (12) and (13).

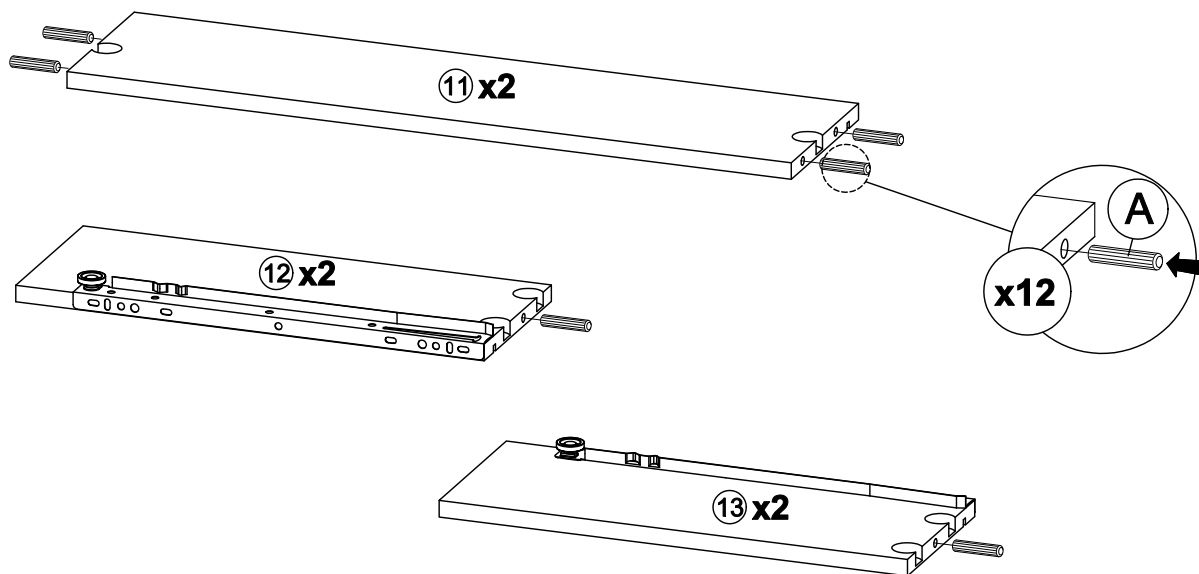


**STEP 9 :** Assembly panel (12) and (13) to panel (11).  
Switch Thumbfix from Unlock to Lock.

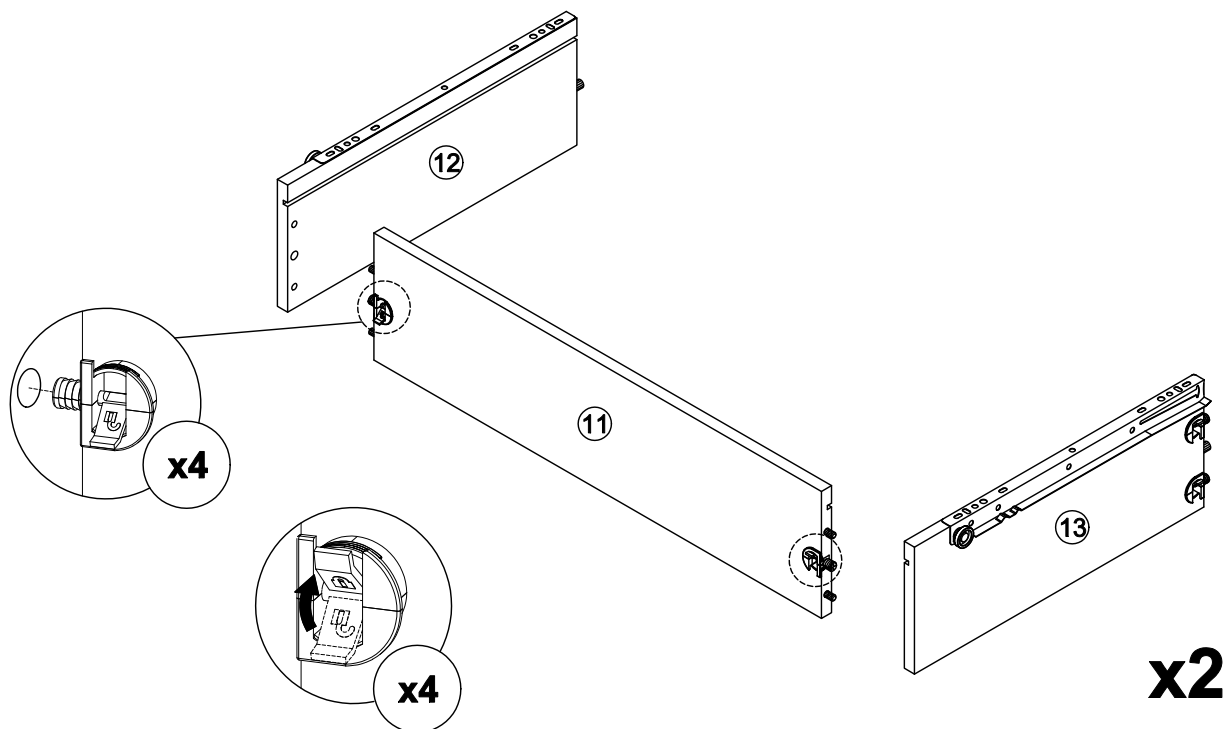

**STEP 10 :** Insert panel (14) along the slot.

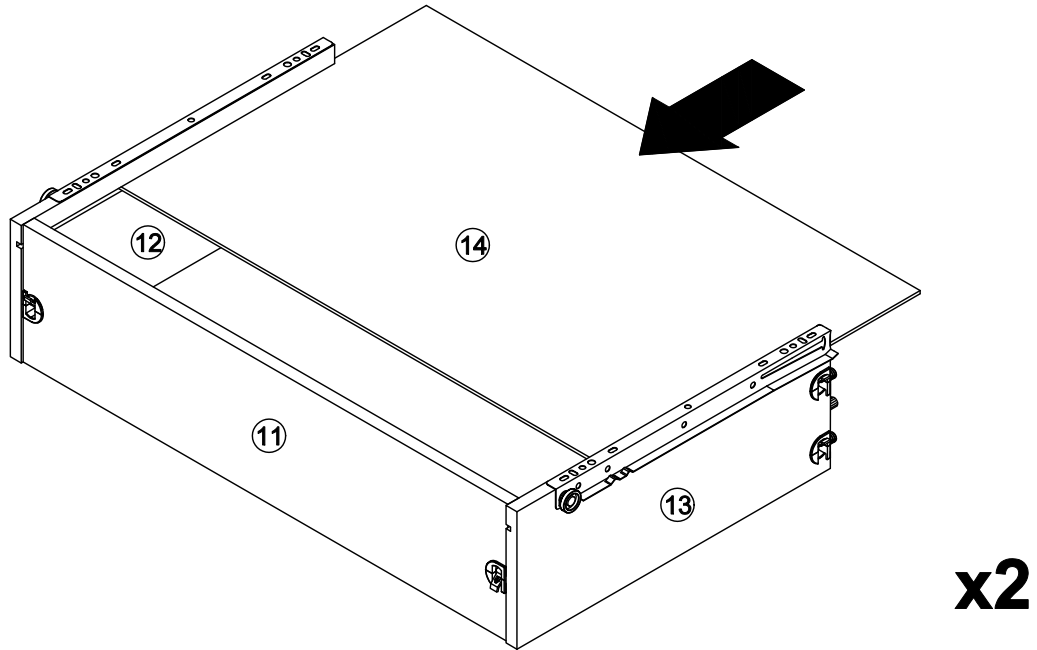

**STEP 11 :** Assembly panel (9) and (10) to panel (12) and (13).  
Switch Thumbfix from Unlock to Lock.

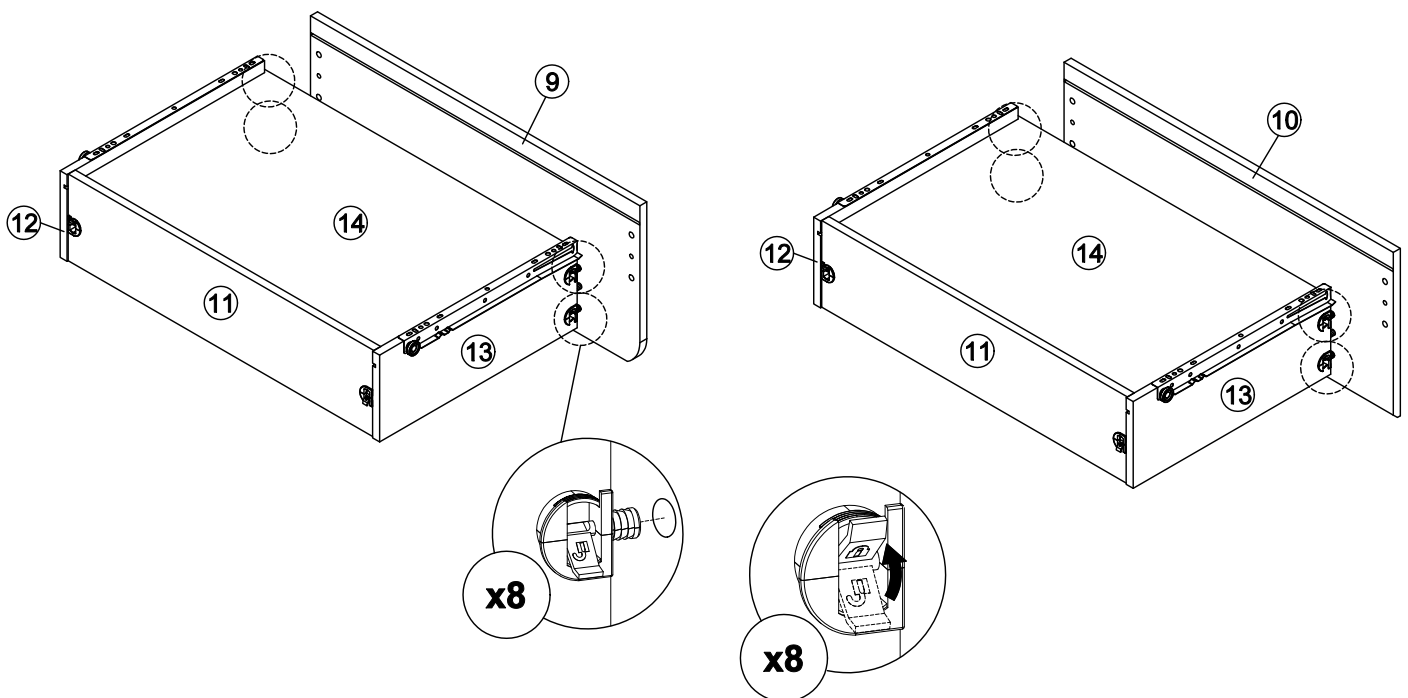


# ASSEMBLY INSTRUCTIONS

ITEM NO : T3518-22

COLLECTION : MARA TWO DRAWER END  
TABLE / BEDSIDE TABLE

**STEP 12 :** Put all the drawer in place along the drawer slides.

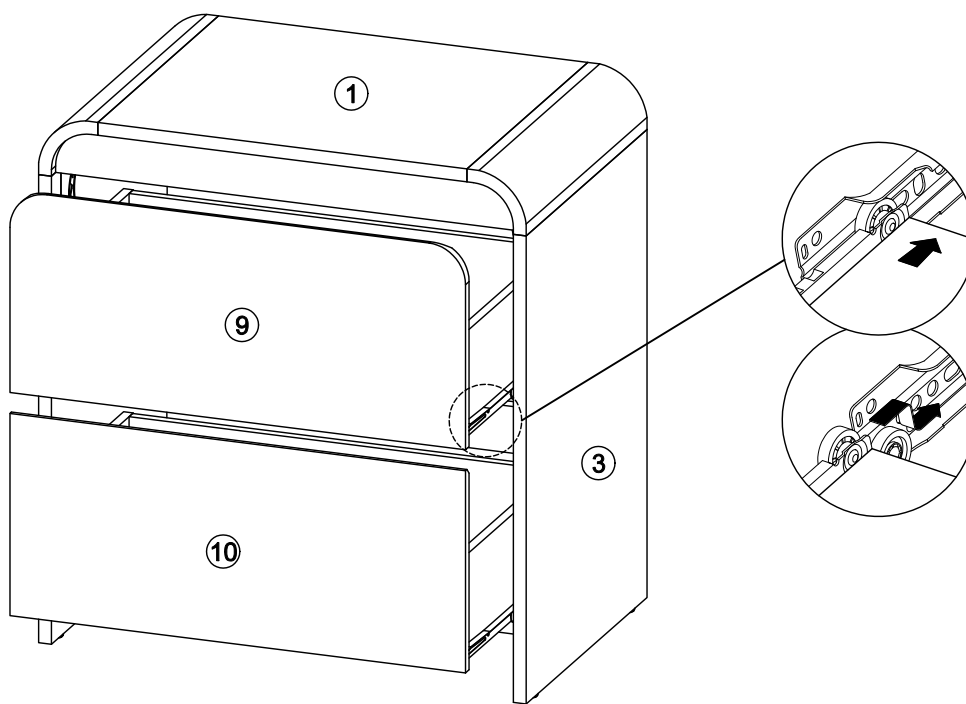

**ASSEMBLY COMPLETED**

