

TOV



# Follow us!

Show your new purchase some love by  
tagging it on our Instagram !

 @tovfurniture

 516-888-3355


 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female- your furniture should  
be, too. No mahogany in sight. Sexy settees  
shaped like lips. Price points for any budget.

At TOV, we do things differently.

TOV

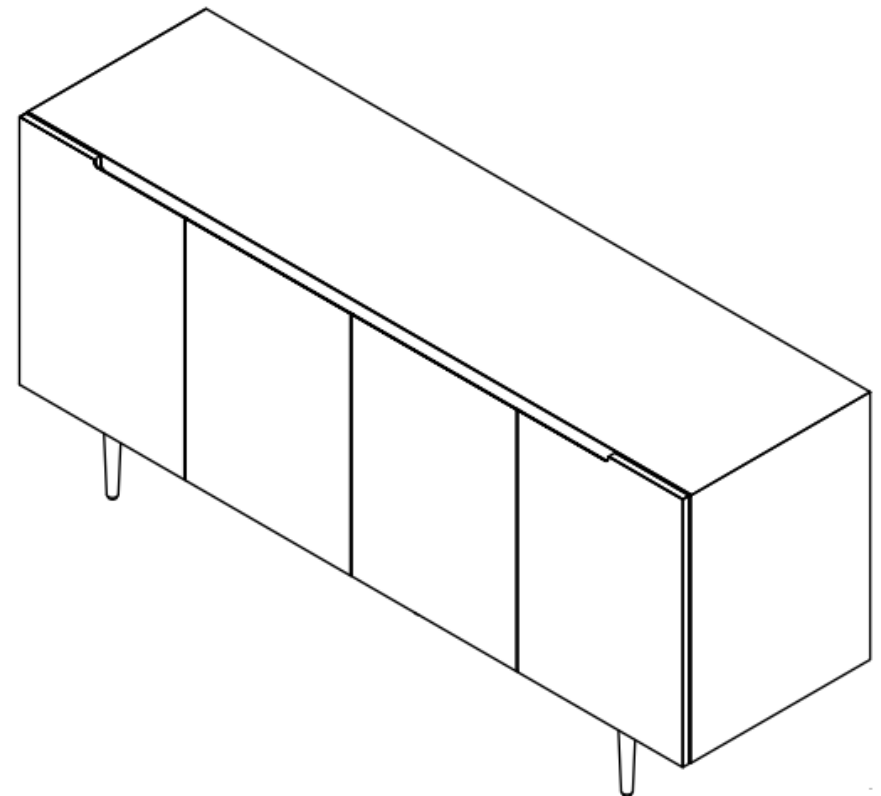


## ECHO SIDEBORD

# DON'T BE BORING.




FINISH

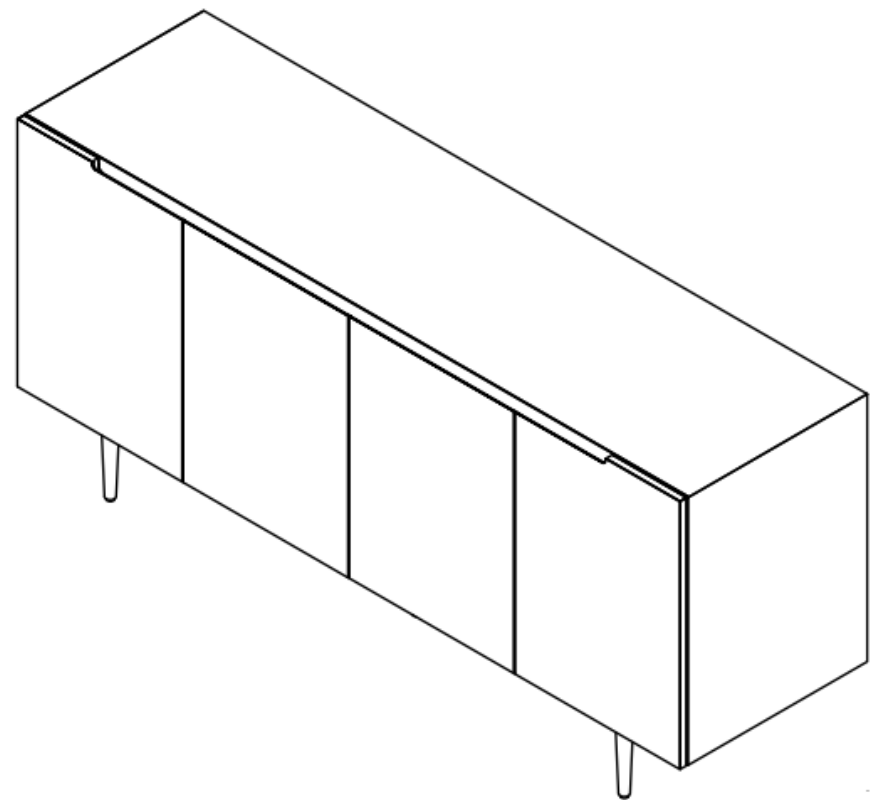

Stuck?  
Contact our team @ 516-888-3355  
Scan for product care!



Hardware and Components

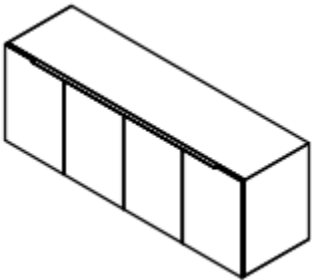

A x1pc



B x2pcs



C x1pc



D x8pcs



E x8pcs



F x8pcs



G x2pcs



H x4pcs



I x4pcs



J x4pcs



K x1pc


## STEP 1

Open box of hardware and legs.  
This hardware box will be a smaller  
box inside of the main box. Look for  
the red streamer.




## STEP 2

1. Place the sideboard (A) with the back down on a flat and soft surface.
2. Attach both legs (B) to the preinstalled frame on the bottom of sideboard (A) with hardware (D), (E) & (F) by Allen key (K).

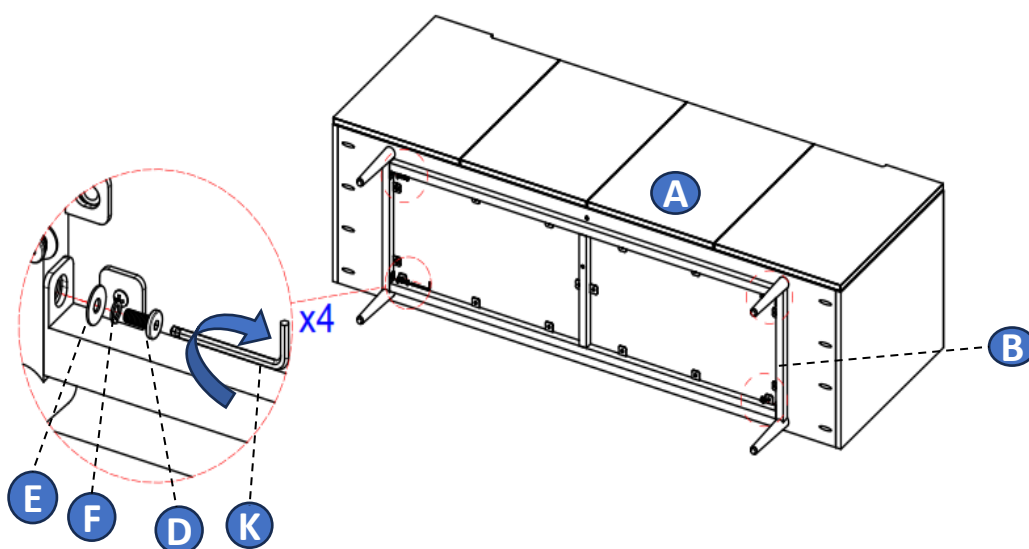

## STEP 3


3. Secure the legs (B) to the base of sideboard (A) with hardware (D), (E) & (F) by Allen key (K).

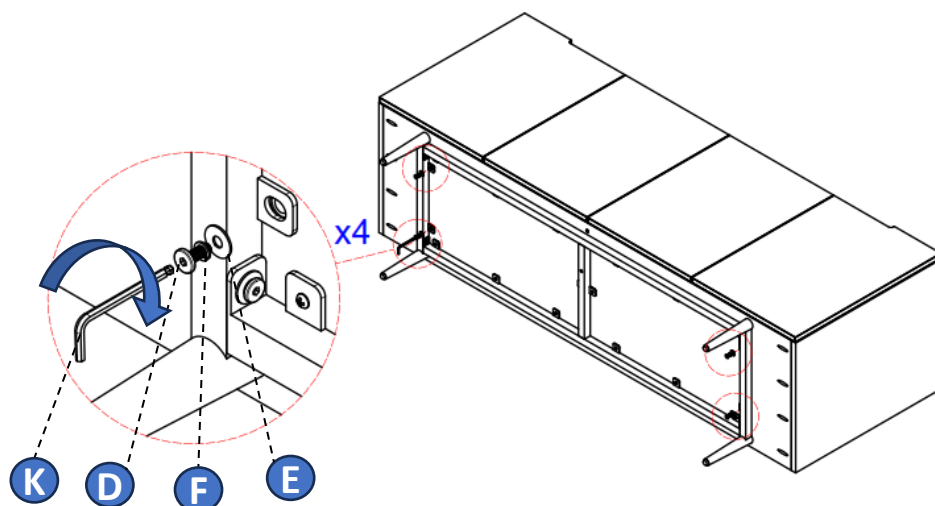

Note: Please screw the screws/bolts at 80%, and fully tighten them  
after all screws/bolts are fully in place.


## STEP 4

4. Attach middle leg (C) to the frame as shown.

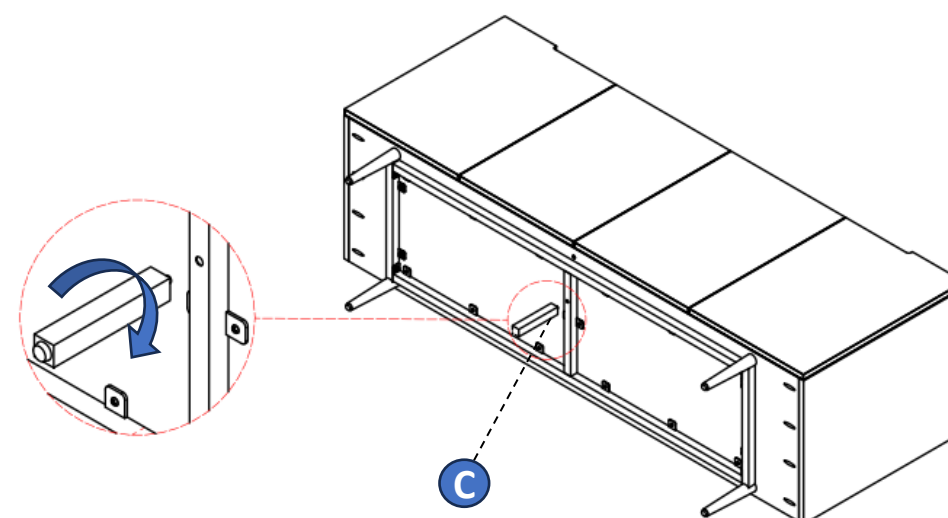

## STEP 5

5. Install the Anti Tip Kits (G) to the back of the sideboard, and attach it securely to the wall.

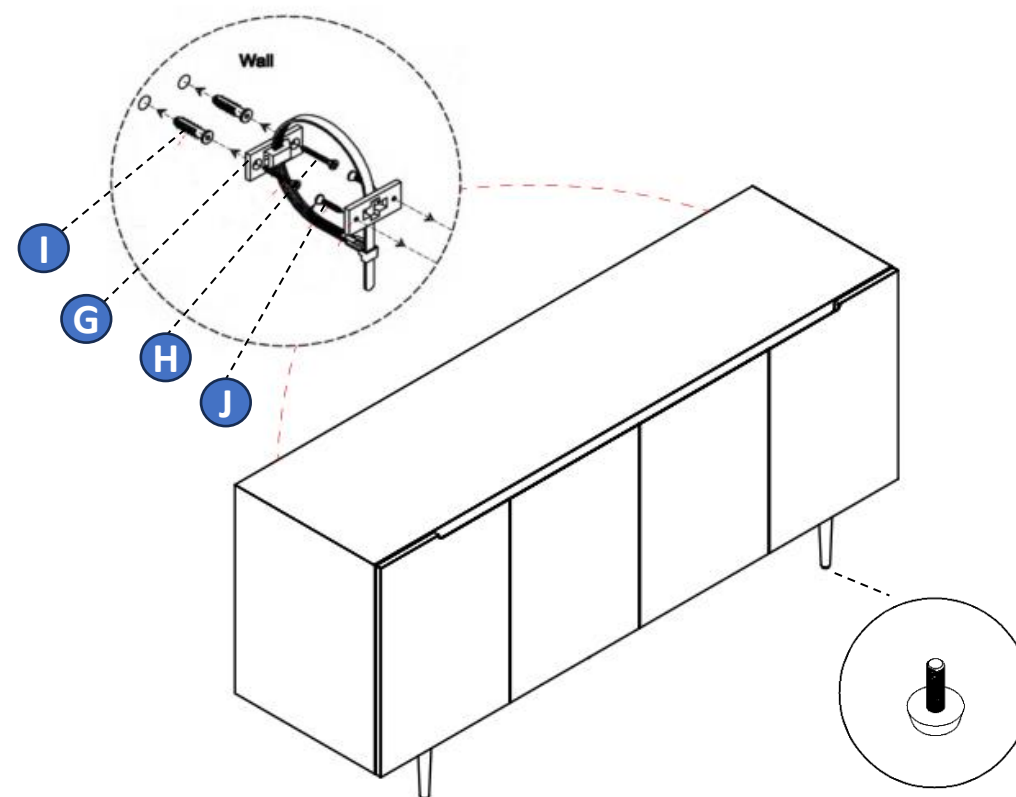

Adjust levelers on  
floating center legs to  
allow for a 2-3mm clearance