



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

# **193611(B1&B2)**

## **Dining Table**

# ITEM: 193611(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




**ASSEMBLY TIME**

**10 MINUTES**

## PARTS IDENTIFICATION

### B1 (BOX 1)


**A TOP WITH LEAF**



**1PC**


### B2 (BOX 2)

**B LEG PANEL SUPPORT**




**2PCS**

**C MOUNTING BOARD**



**2PCS**

**D LEG PANEL**

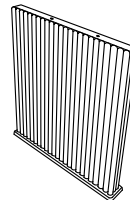


**2PCS**

## HARDWARE IDENTIFICATION


### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 193611 (B1)

**1 BOLT WITH SMALL WASHER**  
(M6 x 40mm - BLK)



**4PCS**

**2 BOLT WITH BIG WASHER**  
(M6 x 40mm - BLK)



**12PCS**

**3 ALLEN WRENCH**  
(M4 x 55mm - GD)



**1PC**


# ITEM : 193611(B1&B2)

## ASSEMBLY INSTRUCTIONS




### STEP 1

**IMPORTANT NOTE:** Take out the Extension Leaf.

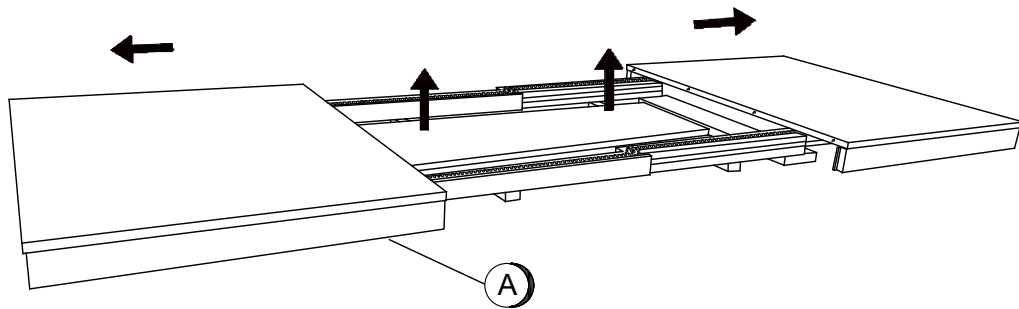

### STEP 2

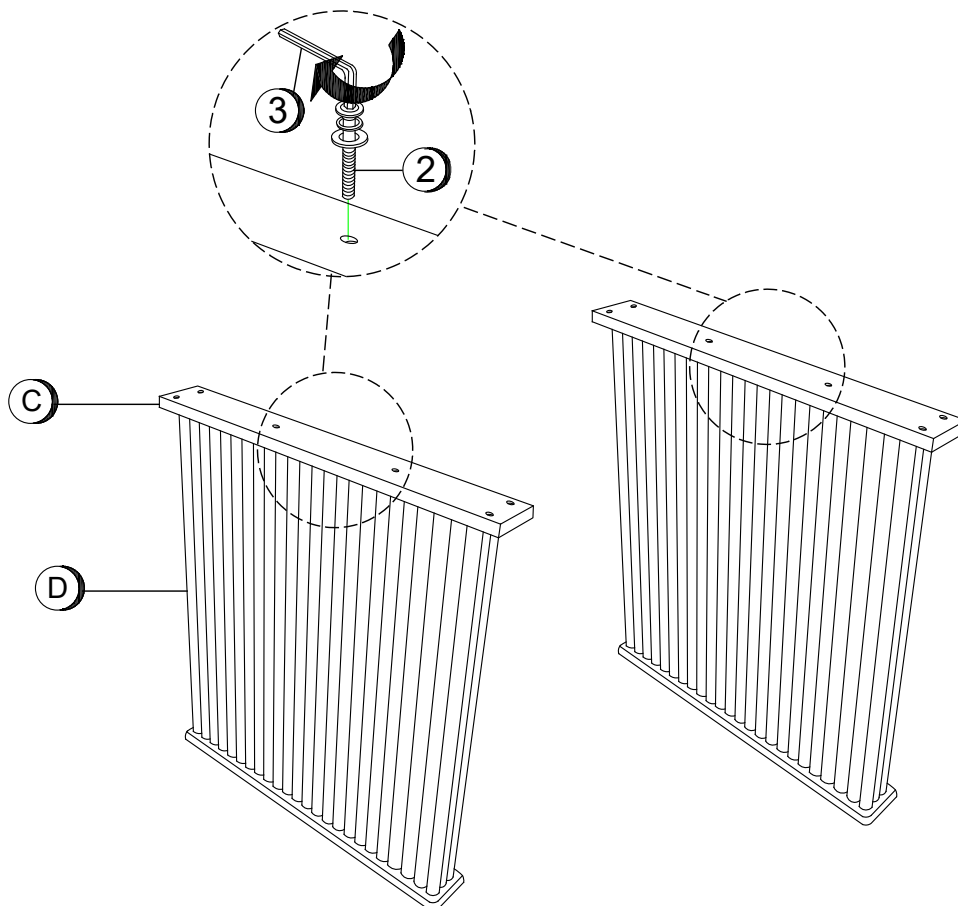


# ITEM : 193611(B1&B2)

## ASSEMBLY INSTRUCTIONS




### STEP 3

Do not fully tighten until all bolts are attached.

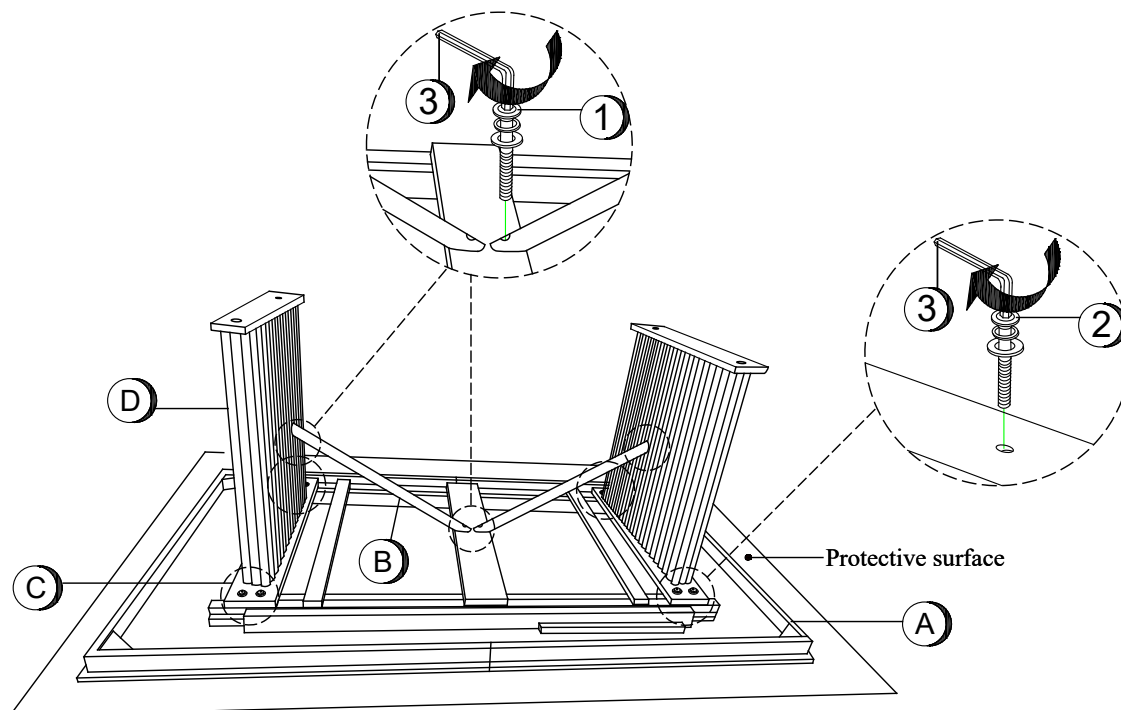

### STEP 4

Fully tighten all bolts on this step.

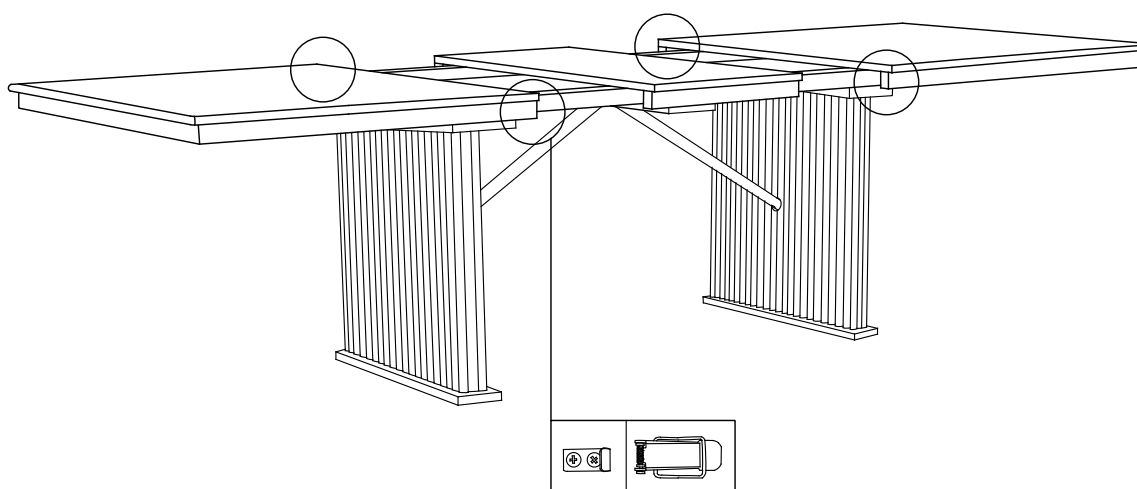


Turn counter-clockwise to unlock

# ITEM : 193611(B1&B2)

## ASSEMBLY INSTRUCTIONS




### STEP 5

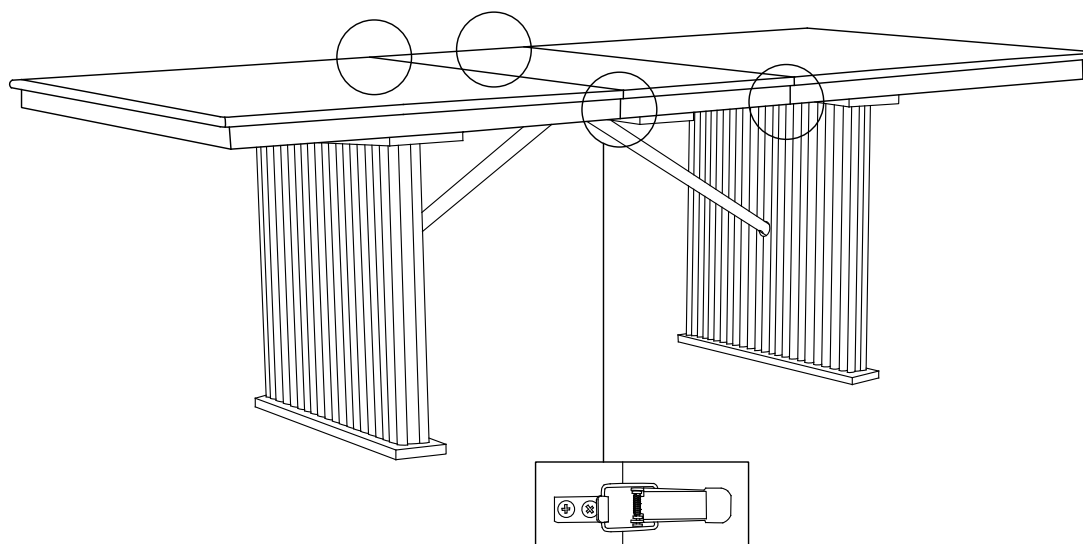


Turn clockwise to lock

### STEP 6

## COMPLETE

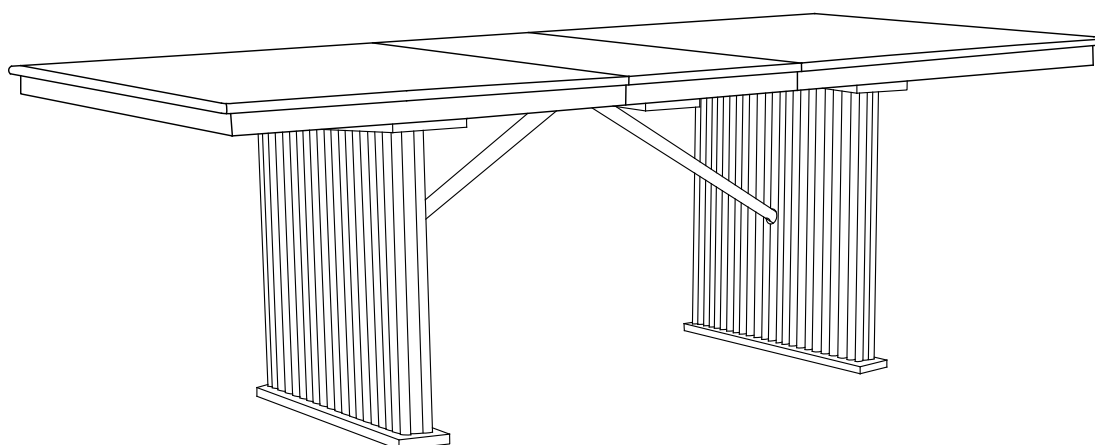

# ITEM : 193611(B1&B2)

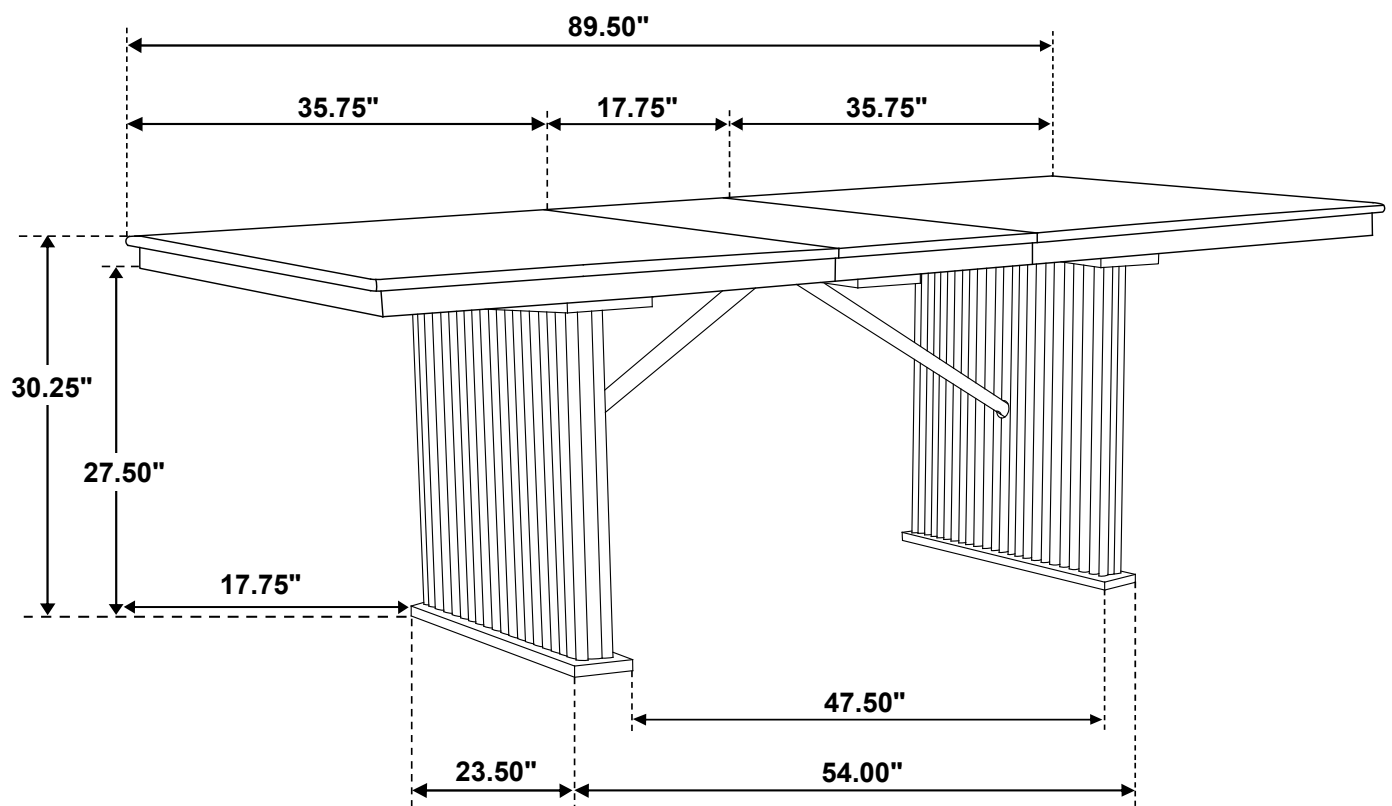

**Note: Dimension tolerance  $\pm 5\%$**



# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

# **193611(B1&B2)**

## **Dining Table**

# ITEM: 193611(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




**ASSEMBLY TIME**

**10 MINUTES**

## PARTS IDENTIFICATION

### B1 (BOX 1)


**A TOP WITH LEAF**



**1PC**


### B2 (BOX 2)

**B LEG PANEL SUPPORT**




**2PCS**

**C MOUNTING BOARD**



**2PCS**

**D LEG PANEL**

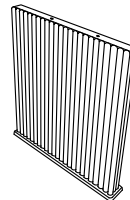


**2PCS**

## HARDWARE IDENTIFICATION

### Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 193611 (B1)

**1**


**BOLT WITH SMALL WASHER**  
(M6 x 40mm - BLK)



**4PCS**

**2**

**BOLT WITH BIG WASHER**  
(M6 x 40mm - BLK)



**12PCS**

**3**

**ALLEN WRENCH**  
(M4 x 55mm - GD)



**1PC**




# ITEM : 193611(B1&B2)

## ASSEMBLY INSTRUCTIONS




### STEP 1

**IMPORTANT NOTE:** Take out the Extension Leaf.

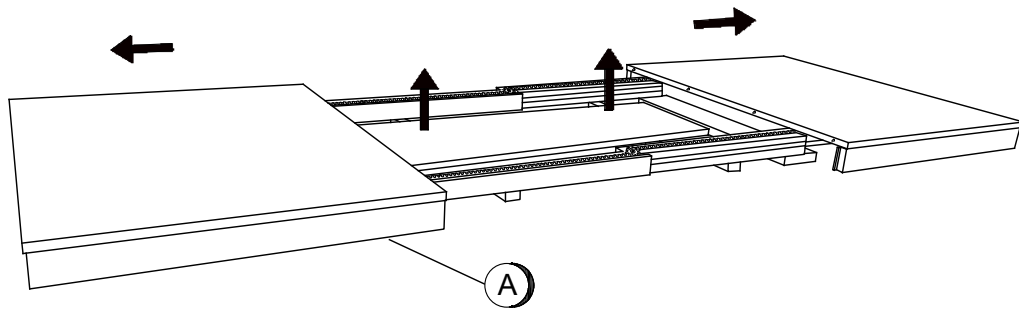

### STEP 2

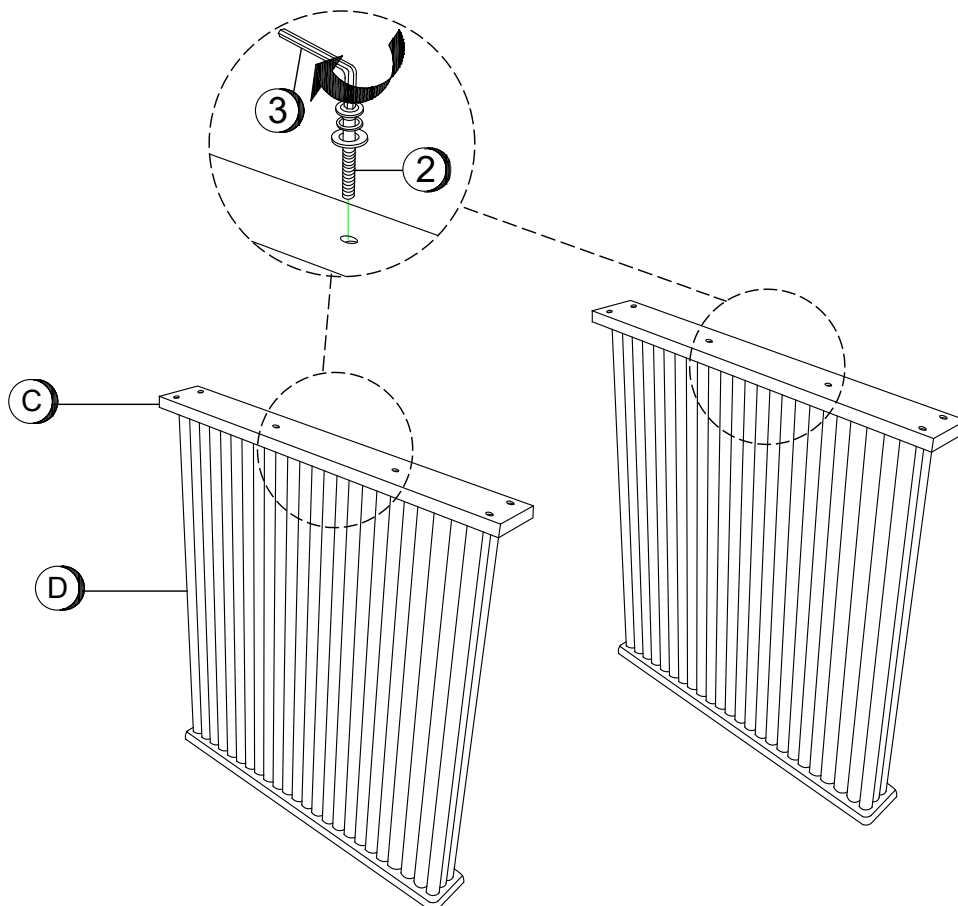


# ITEM : 193611(B1&B2)

## ASSEMBLY INSTRUCTIONS




### STEP 3

Do not fully tighten until all bolts are attached.

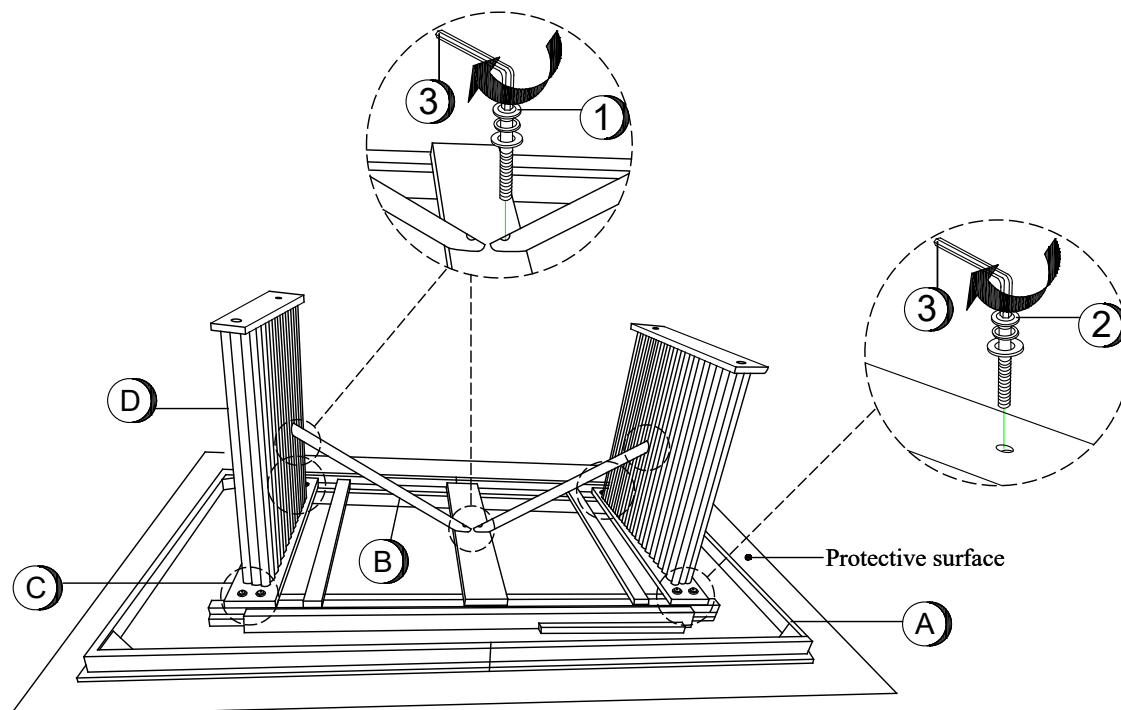

### STEP 4

Fully tighten all bolts on this step.

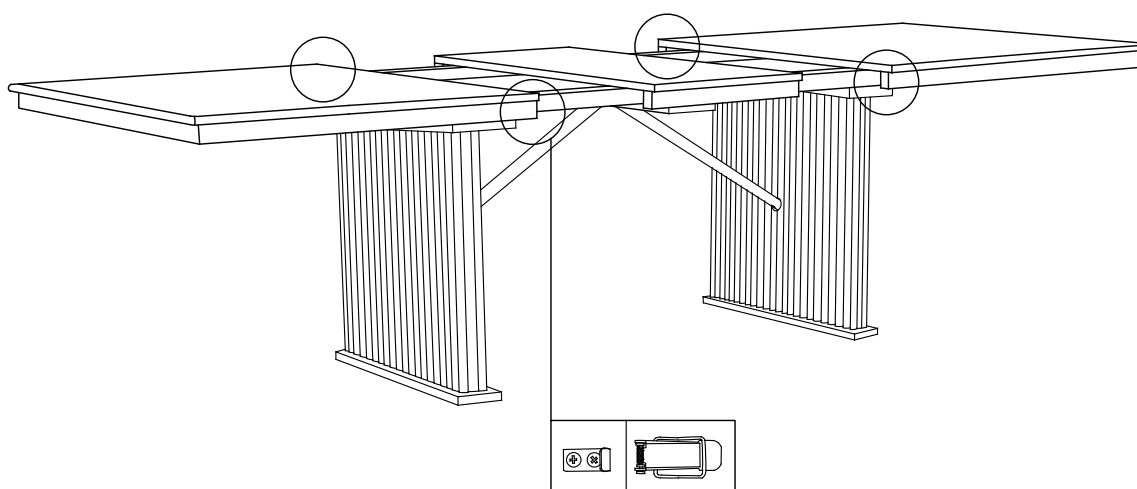


Turn counter-clockwise to unlock

# ITEM : 193611(B1&B2)

## ASSEMBLY INSTRUCTIONS




### STEP 5

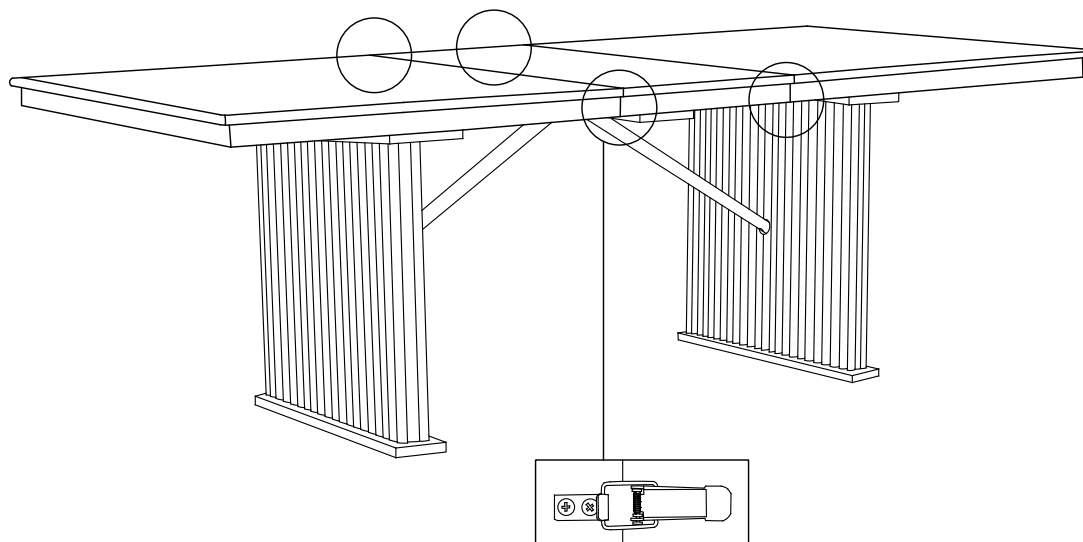


Turn clockwise to lock

### STEP 6

## COMPLETE

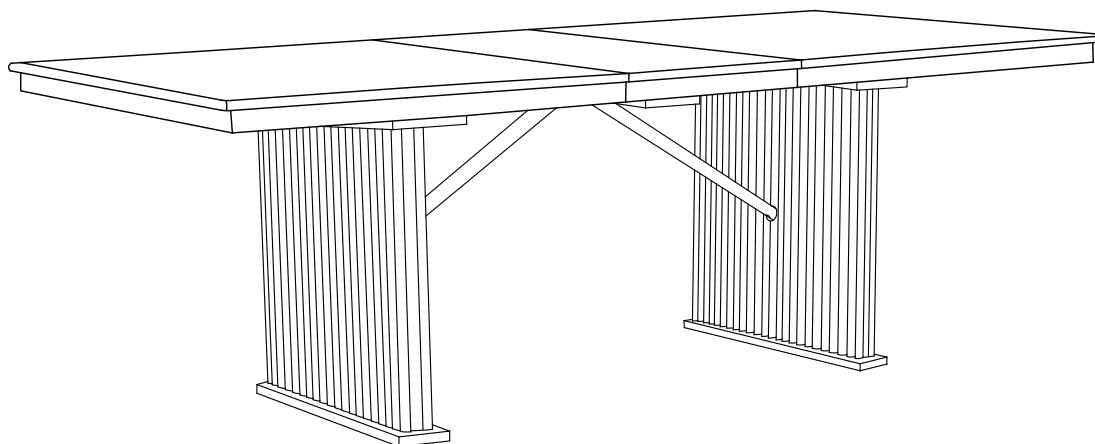

# ITEM : 193611(B1&B2)

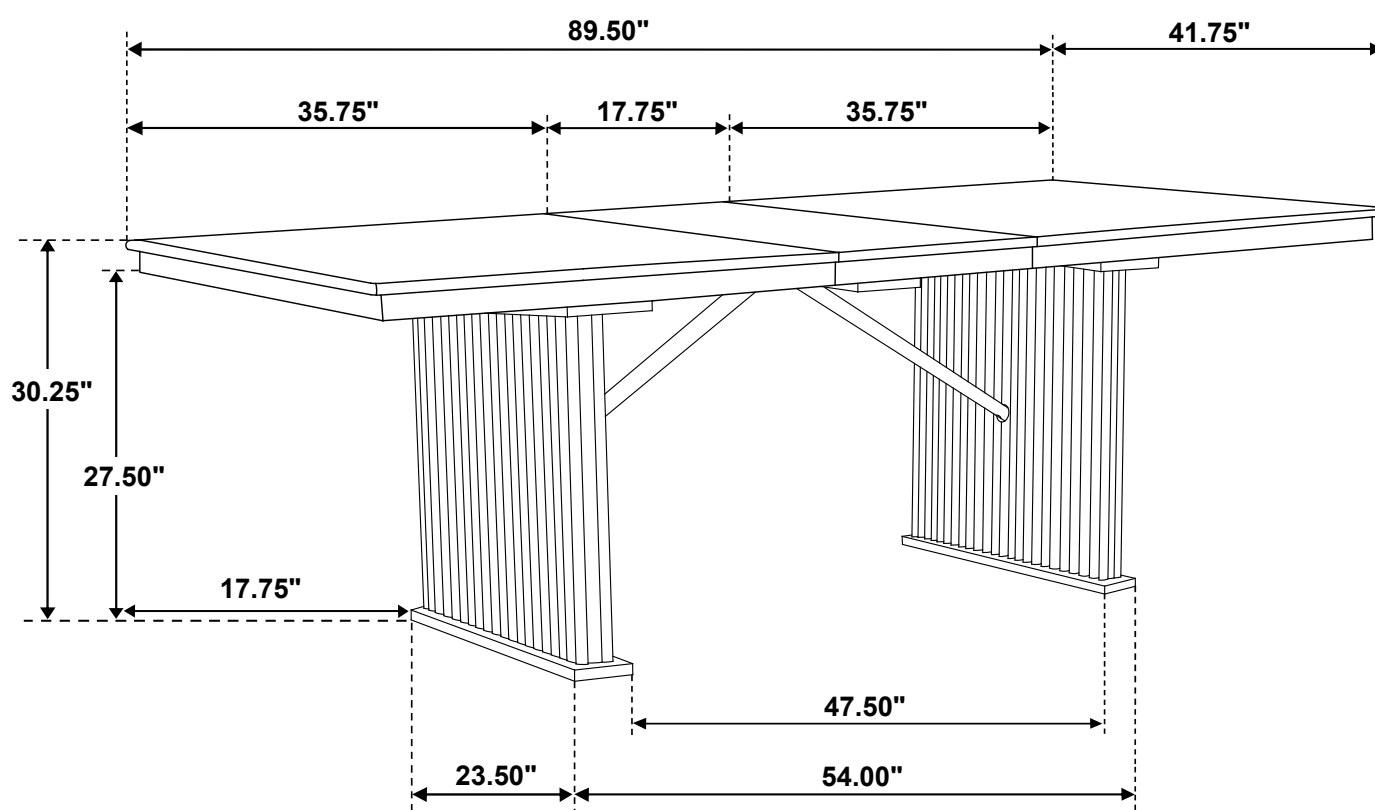

**Note: Dimension tolerance  $\pm 5\%$**