


## ASSEMBLY INSTRUCTION MADE IN CHINA

T650-01A

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.  
Before you start assembly: Please read all instructions carefully before beginning the assembly process.  
It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.


CAUTION: For your safety, this product requires two people to lift.

### Assembled Dimensions

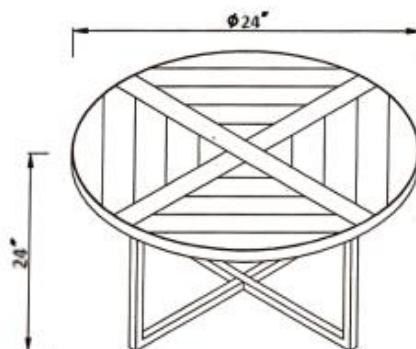

10 MINUTES

APPROXIMATE ASSEMBLY TIME

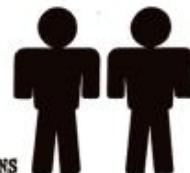

REQUIRED ASSEMBLY SPACE

ITEM NO.: T650-01A


#### PART LIST



| NO. | PART LIST         | QTY |
|-----|-------------------|-----|
| (1) | WOOD TABLE TOP    | 1   |
| (2) | U SHAPE METAL LEG | 1   |
| (3) | L SHAPE METAL LEG | 2   |

#### HARDWARE LIST

|                       |                                    |               |                                    |           |                                      |   |                         |   |     |   |                    |
|-----------------------|------------------------------------|---------------|------------------------------------|-----------|--------------------------------------|---|-------------------------|---|-----|---|--------------------|
|                       | 2x                                 |               | 16x                                |           | 18x                                  |   | 18x                     |   | 1x  |   | 1x                 |
| A                     | $\frac{1}{4} \times \frac{3}{4}$ " | B             | $\frac{1}{4} \times \frac{3}{4}$ " | C         | $\frac{1}{4}$ "                      | D | $\frac{1}{4} \times 16$ | E | 4MM | F | 4MM <sup>3</sup> " |
| COUNTER SINK HEX BOLT | FLAT HEAD HEX BOLT                 | SPRING WASHER | FLAT WASHER                        | ALLEN KEY | STRAIGHT HEXAGONAL (FOR POWER DRILL) |   |                         |   |     |   |                    |

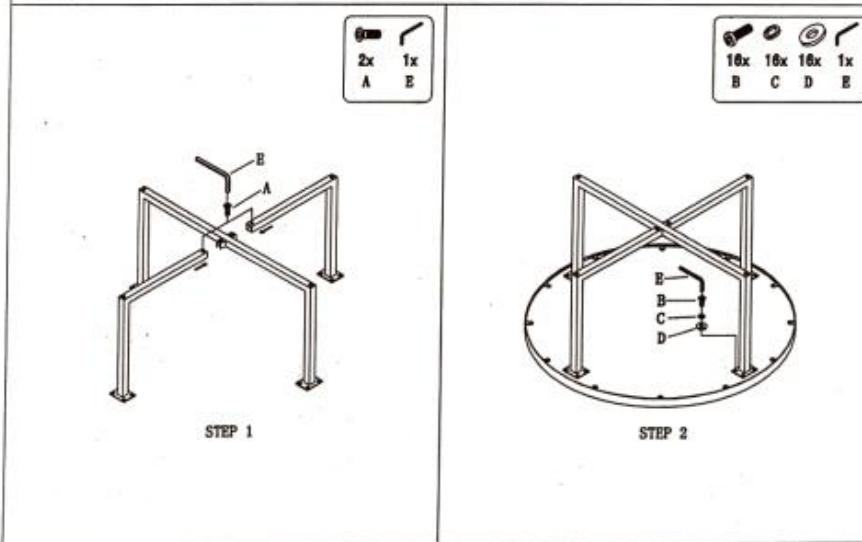

Note: please do not tighten firmly any screw before you put all of them in place.