


21X

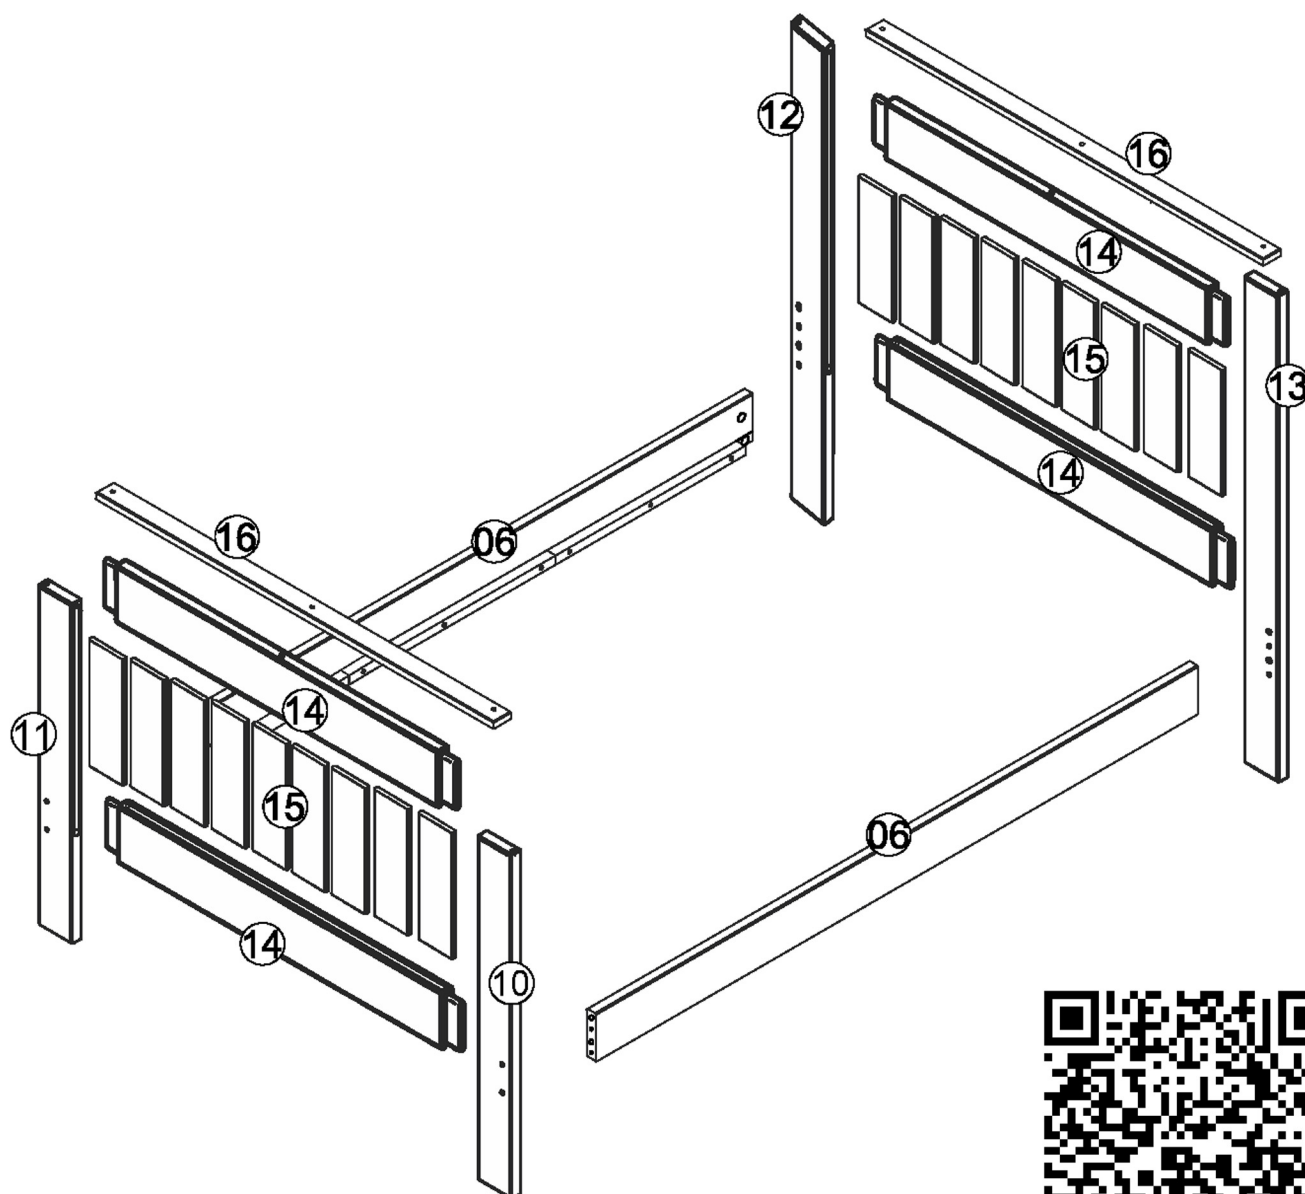

Scan Here
for Assembly Animation




OPEN YOUR
CAMERA









AIM IT AT THE
QR CODE




TAP THE
BANNER

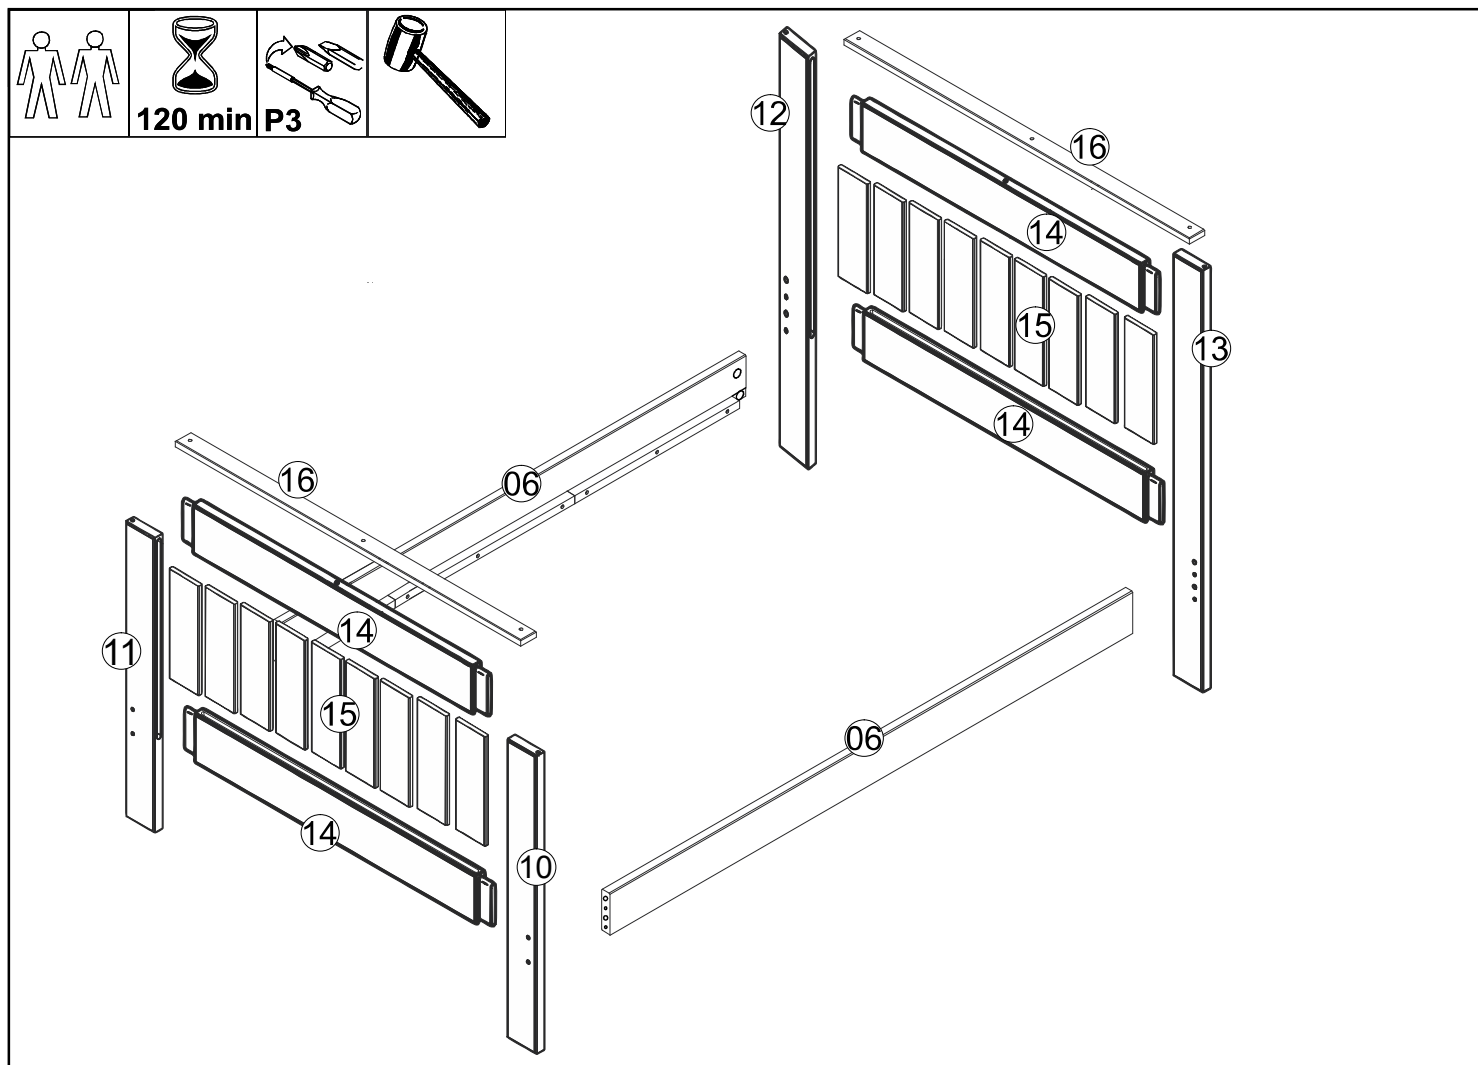

A	 BLACK 4,5X20	16
B	 40mm Ø10 10X40	08
C	 BLACK 1/4X70	08
D	 SILVER	08
E	 30mm Ø8 8X30	06
F	 35mm P3 Ø4,5 GOLD	06
G	 SILVER	02
H	 HOLE COVER	06

I	 50mm 10mm 10X50	04
---	--	----

01

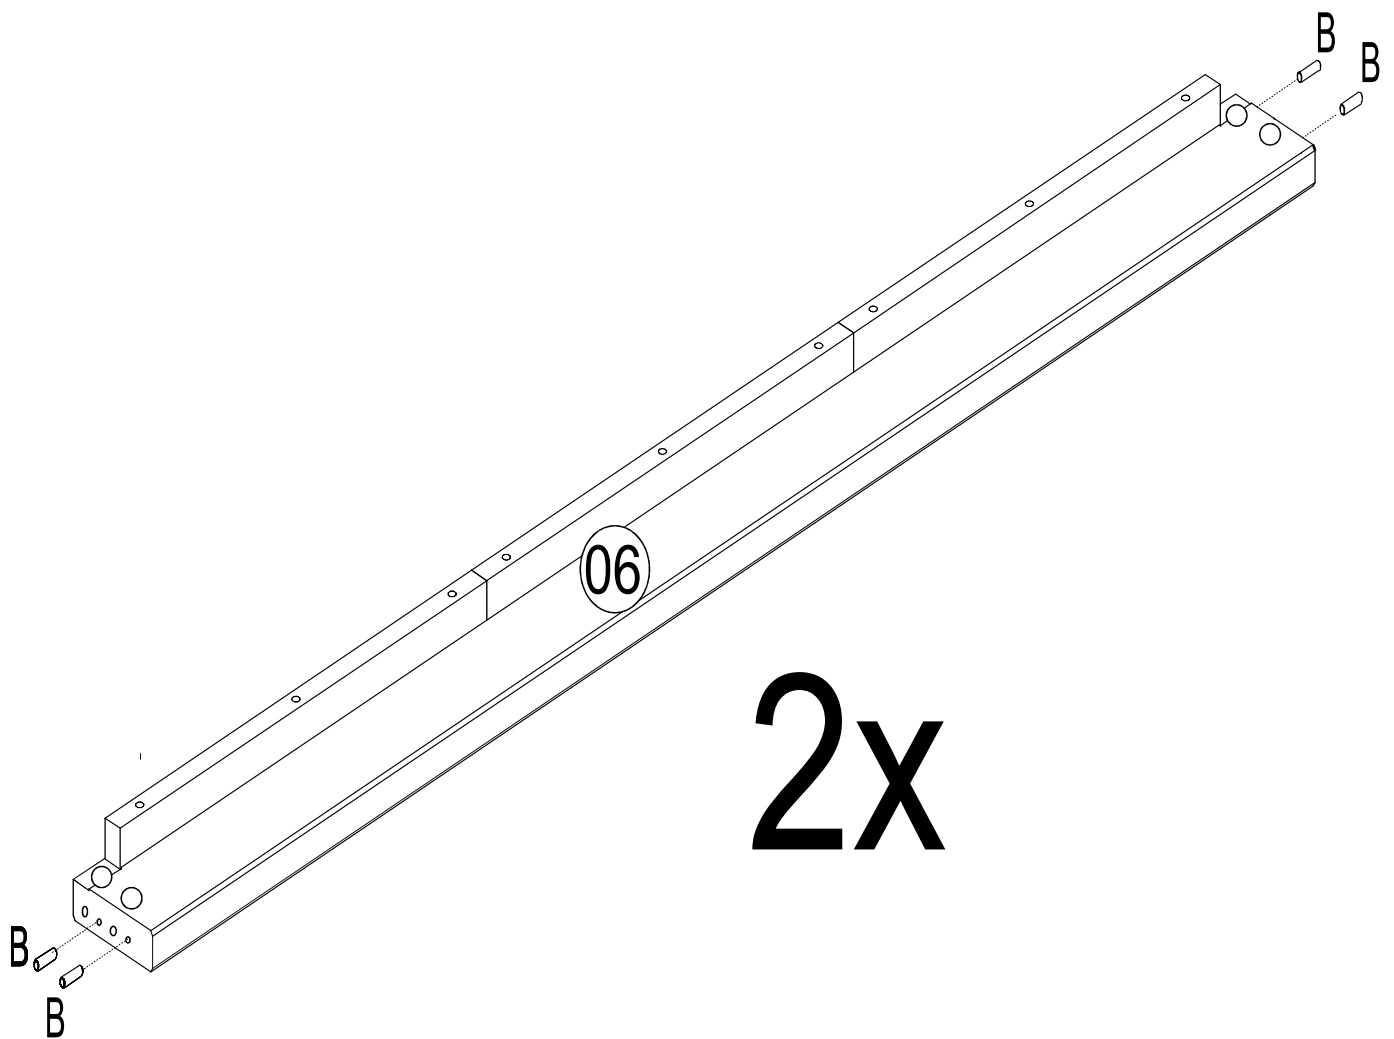

B




10X40


08

02

HEADBOARD ASSEMBLY

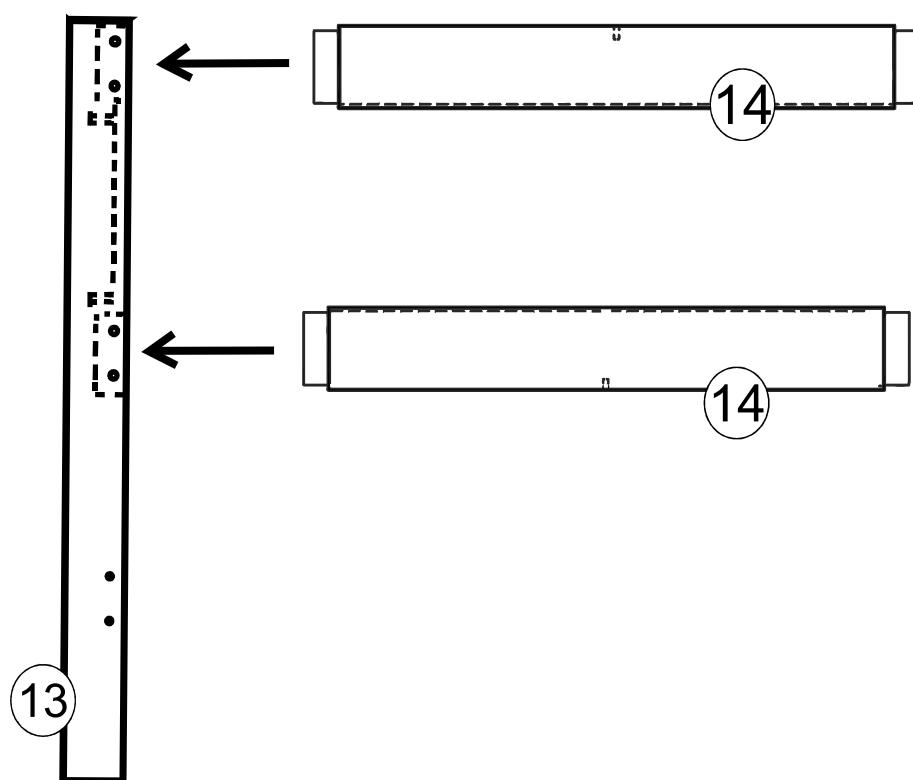

03

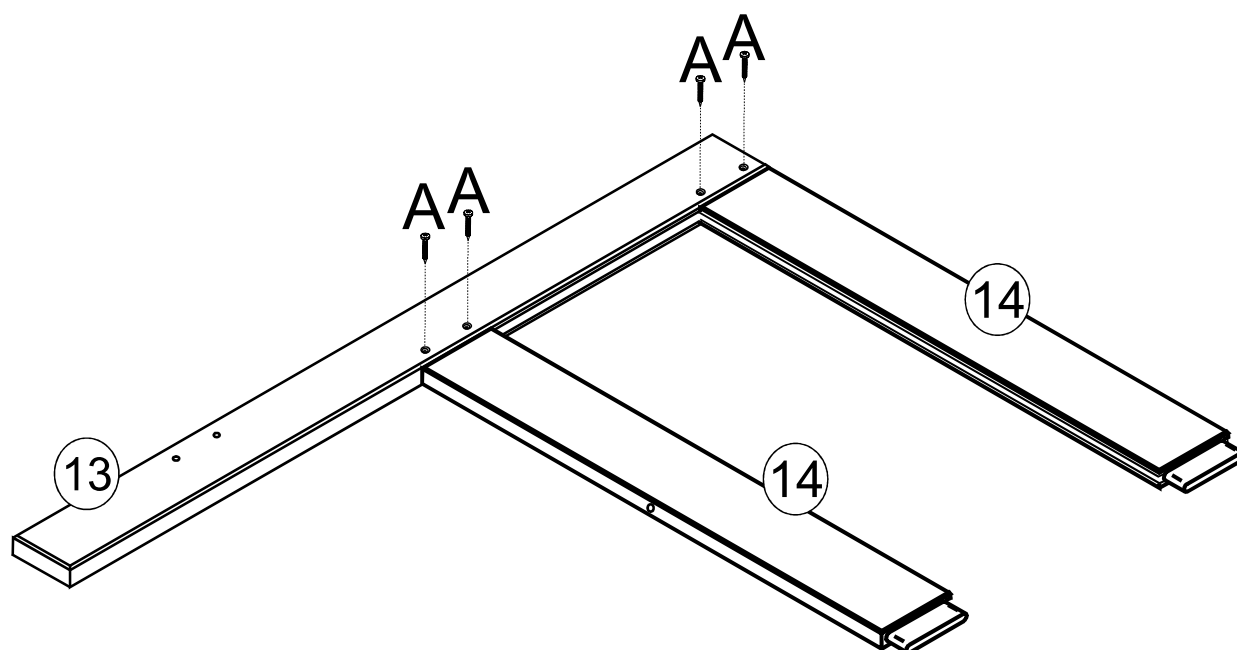


A



BLACK 4,5X20

04

04

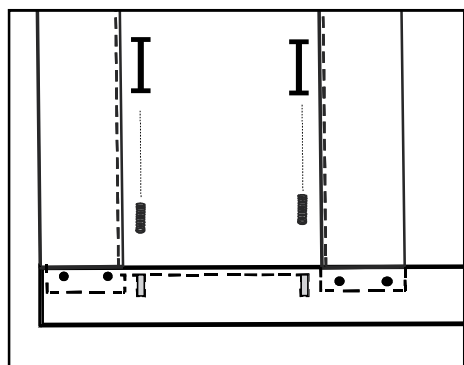

15


9X

14

14


13

I



02

05

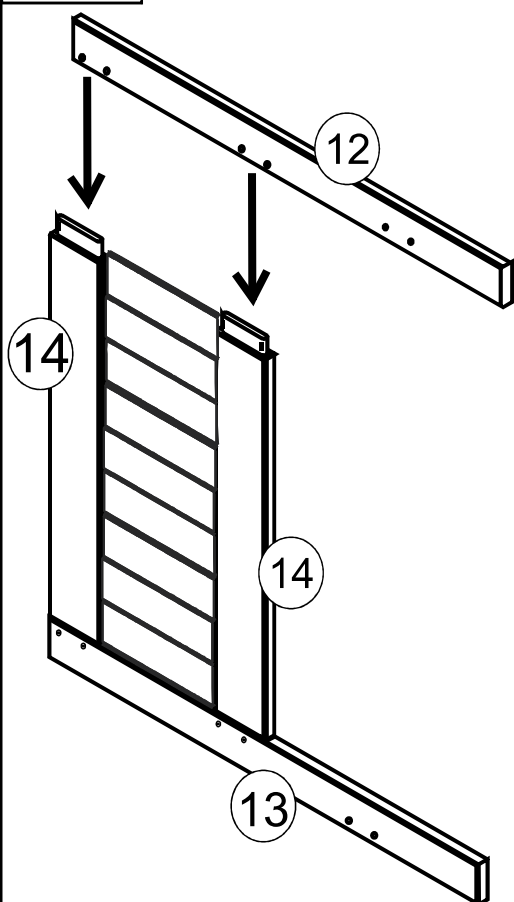

06

A
A

14

12

A
A

14


13

A




BLACK 4,5X20

04

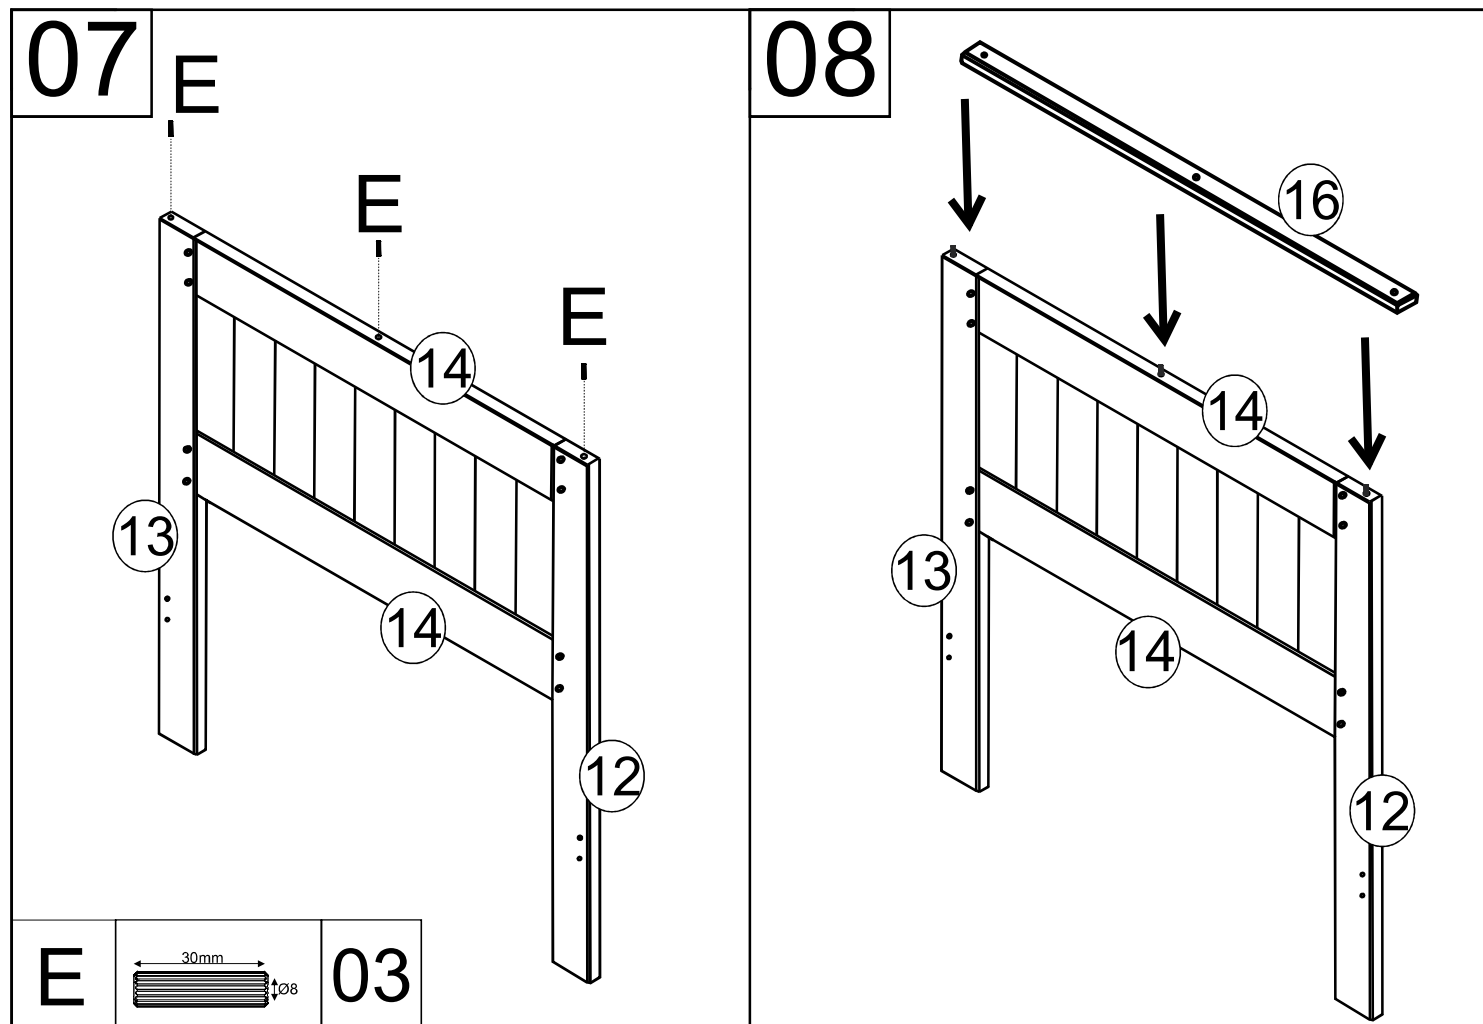


11

FOOTBOARD ASSEMBLY

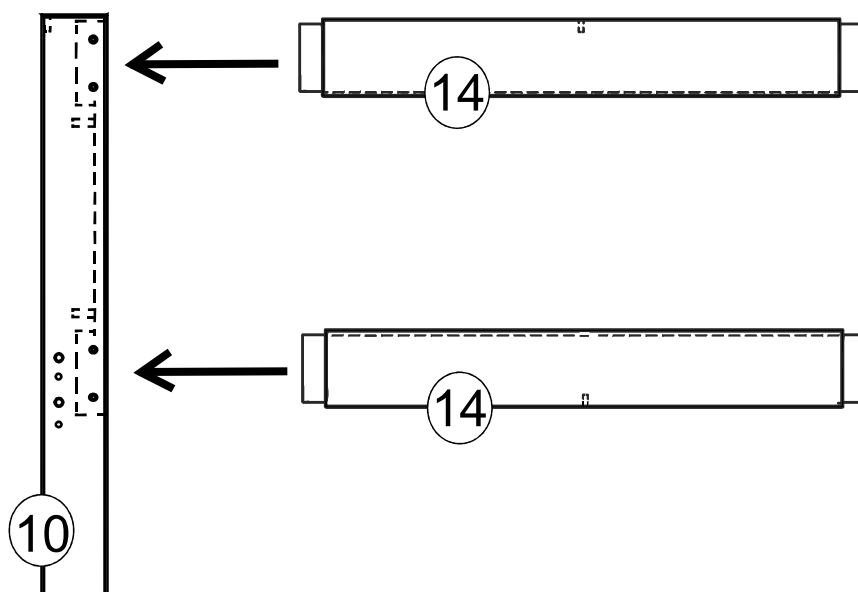

12

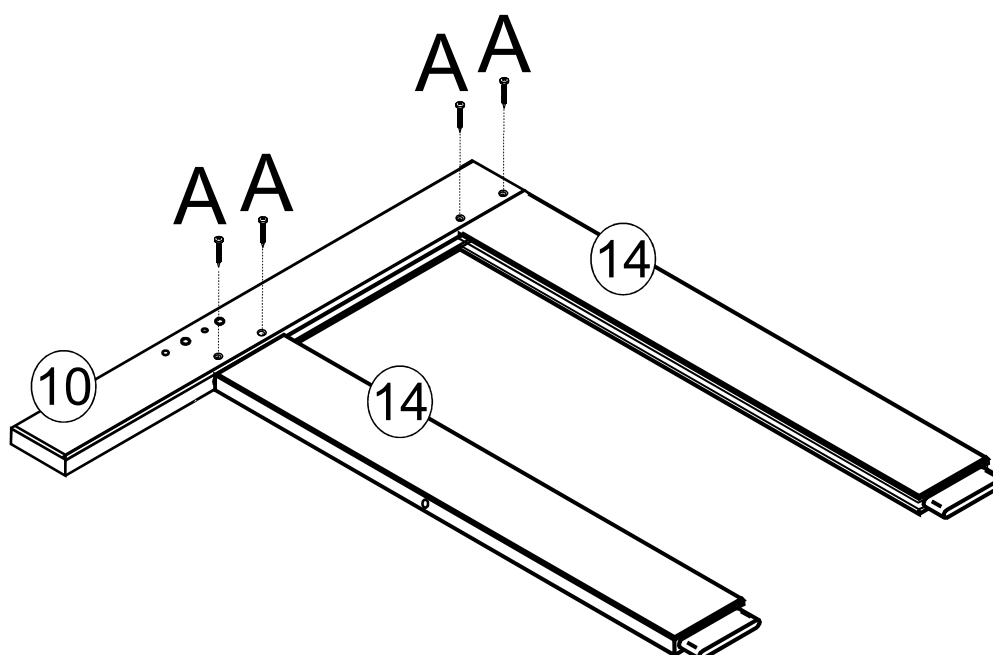


A




BLACK 4,5X20

04


13

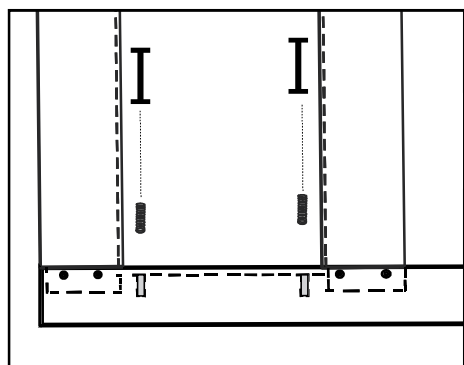

15 **9x**

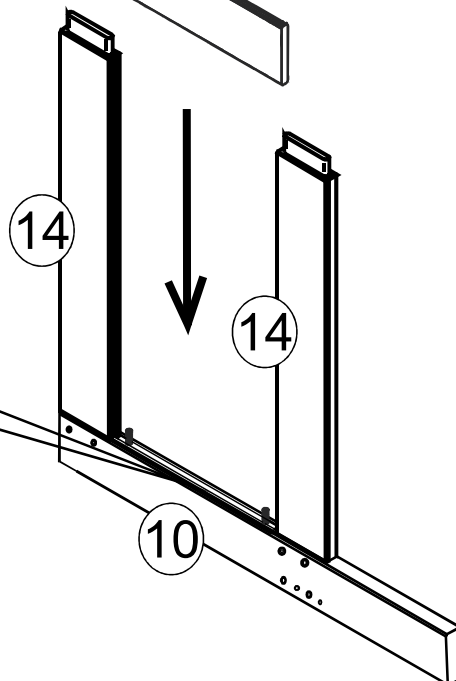


I




02

14

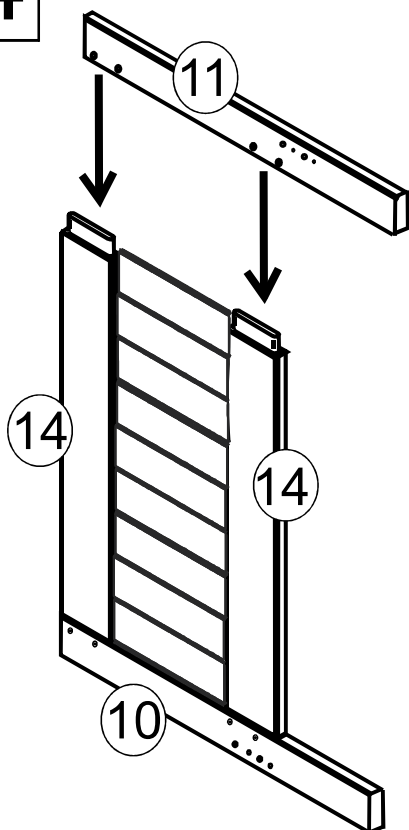

15

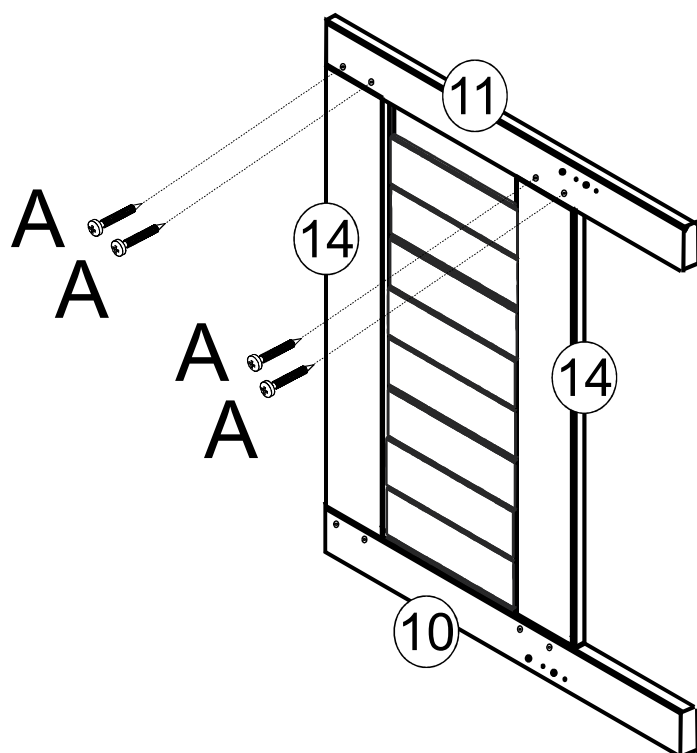



A




04

16

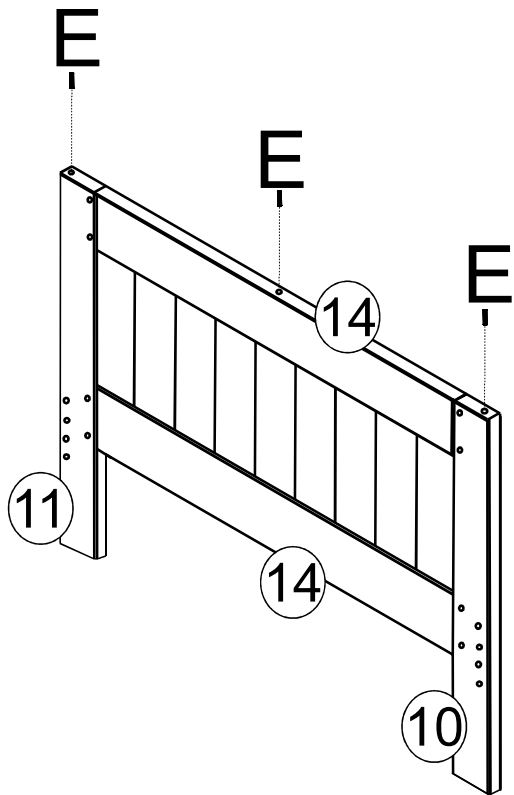



E		03
---	--	----

17

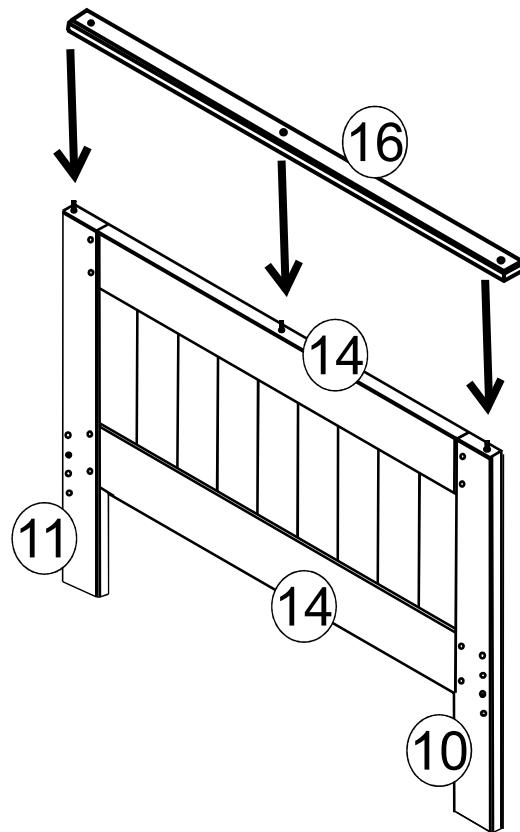


18


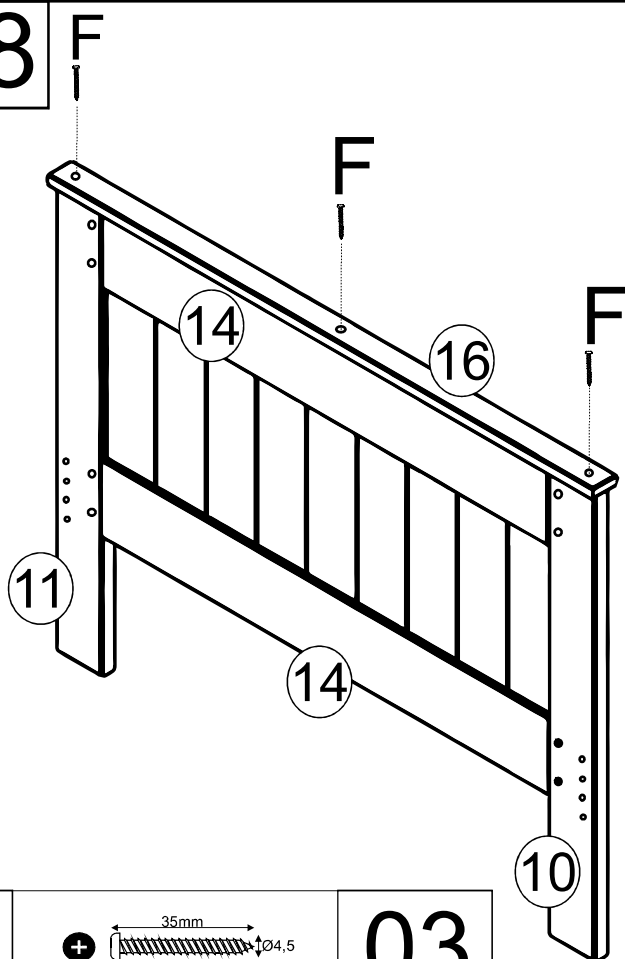


F		03
---	---	----

19

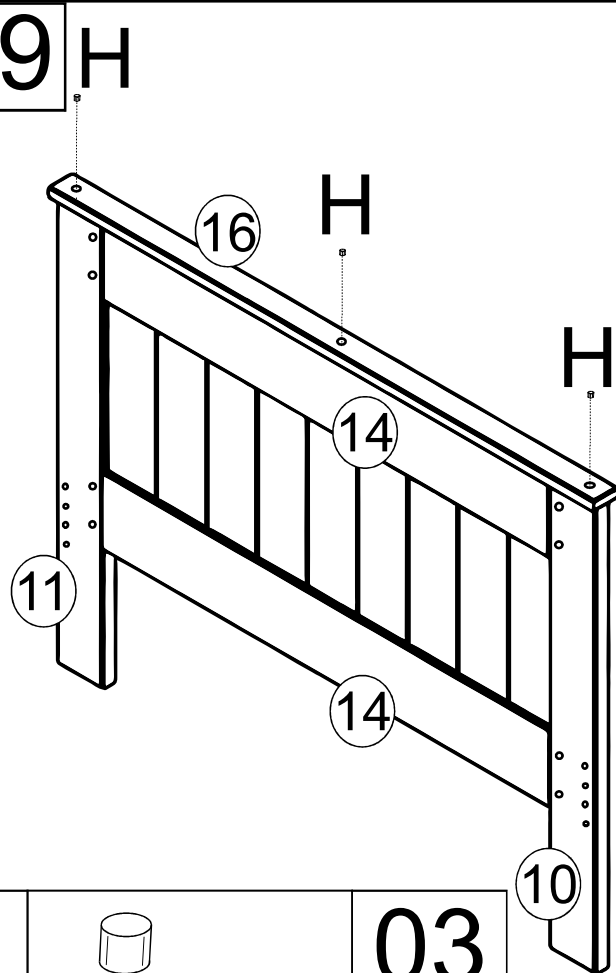

H		03
---	--	----

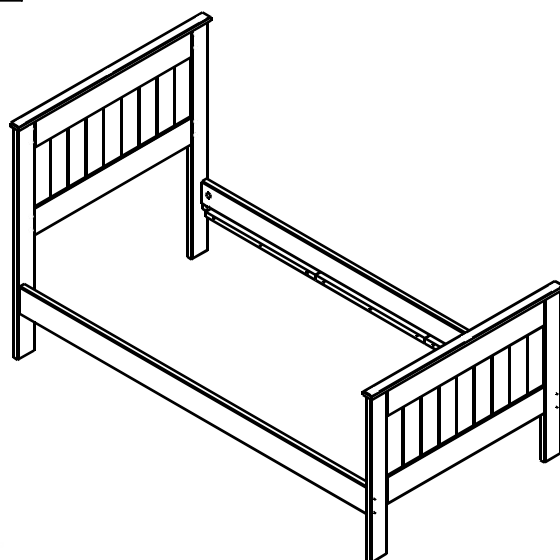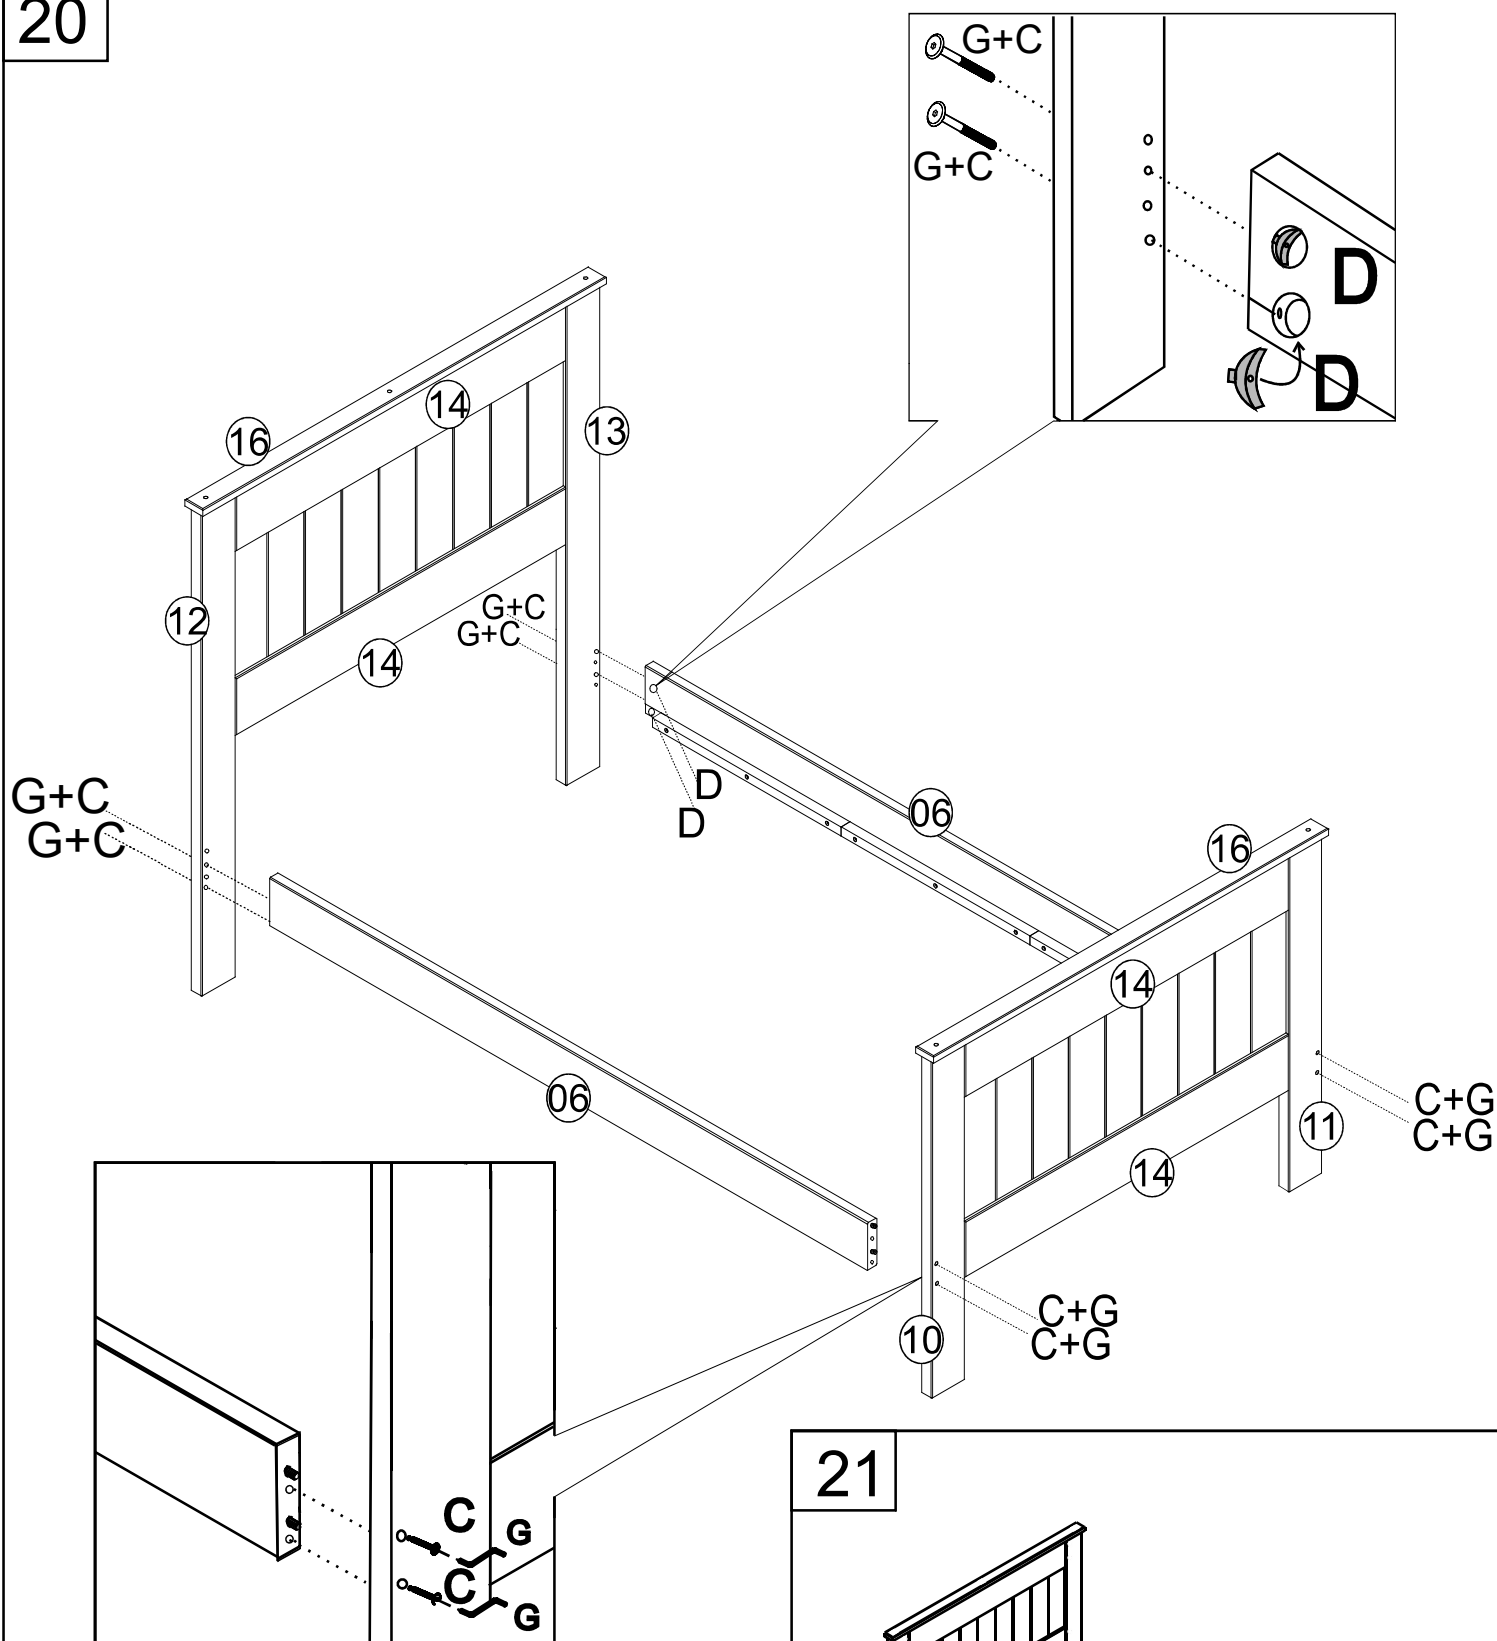

C	 BLACK 1/4X70	08
D	 SILVER	08
G	 SILVER	02