


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

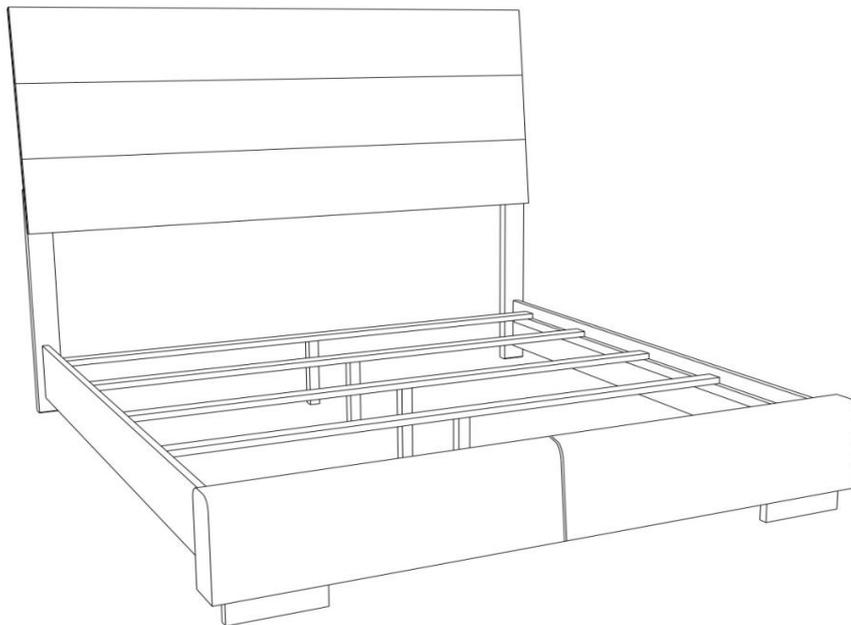

Fine Furniture for every stage of life

203501Q (B1 & B2)
Queen Bed

REVISION 0 : 05/16/2014
REVISION 1 : 05/27/2014
REVISION 2 : 07/25/2019

ITEM: 203501Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A	HEADBOARD PANEL		1PC
B	RIGHT HEADBOARD LEG		1PC

C	LEFT HEADBOARD LEG		1PC
			1PC

B2 (BOX 2)

D	BED SLAT		4PCS
E	BED SLAT SUPPORT WITH LEVELER		4PCS
F	BED RAIL		2PCS
G	FOOTBOARD LEG		2PCS

H	FOOTBOARD PANEL		1PC
HB	203501Q (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 203501Q (B1&B2)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 203501Q (B1)

1 **BOLT**
(M4 x 30mm - BLK)



6PCS

2 **SMALL ALLEN
WRENCH**
(M4 x 60MM - BLK)



1PC

3 **FLAT WASHER**
(1/4" X 13mm - BLK)



6PCS

4 **LOCK WASHER**
(1/4" - BLK)



6PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203501Q (B2)

5 **SHORT FLAT HEAD
SCREW**
(M4 x 32mm - RBW)




8PCS

6 **LONG FLAT HEAD
SCREW**
(M4 x 50mm - RBW)



6PCS

7 **BOLT**
(M6 x 40mm - BLK)




4PCS

8 **SMALL ALLEN
WRENCH**
(M4 x 60MM - BLK)



1PC

9 **BIG ALLEN WRENCH**
(M5 x 65MM - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 203501Q (B1&B2)




ASSEMBLY INSTRUCTIONS

STEP 1

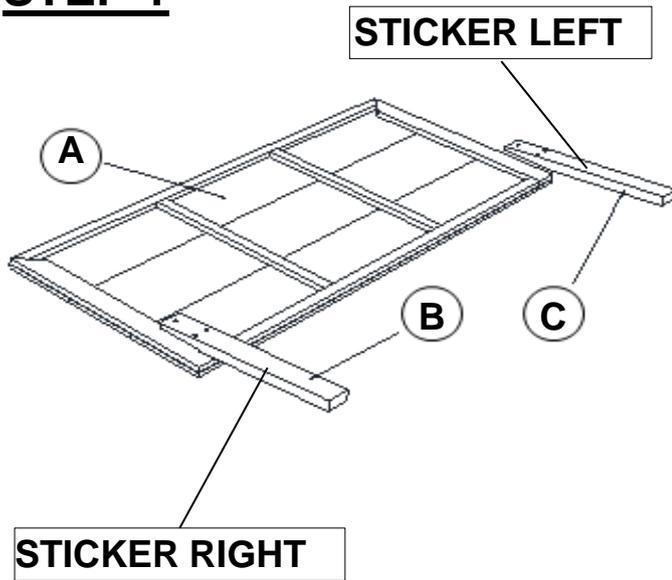


STEP 2

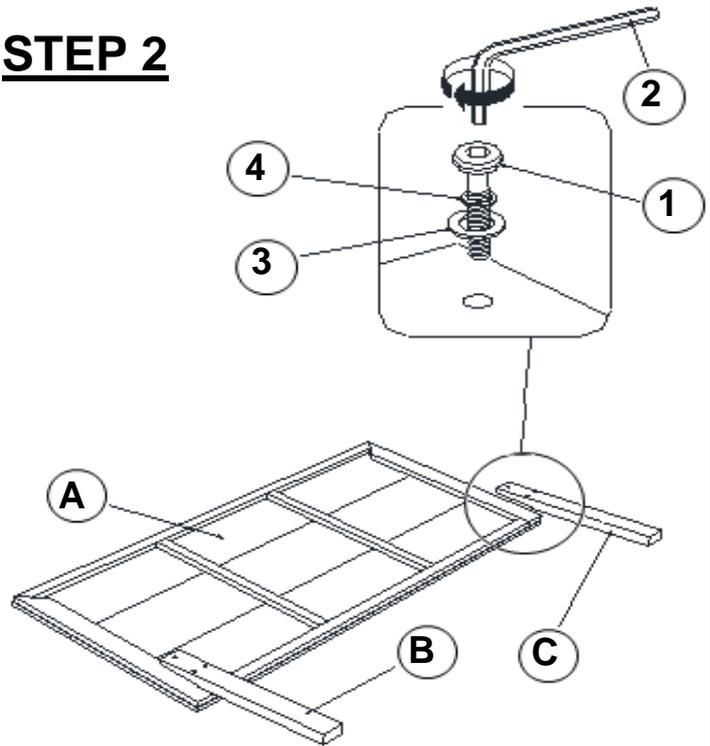

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS


STEP 3

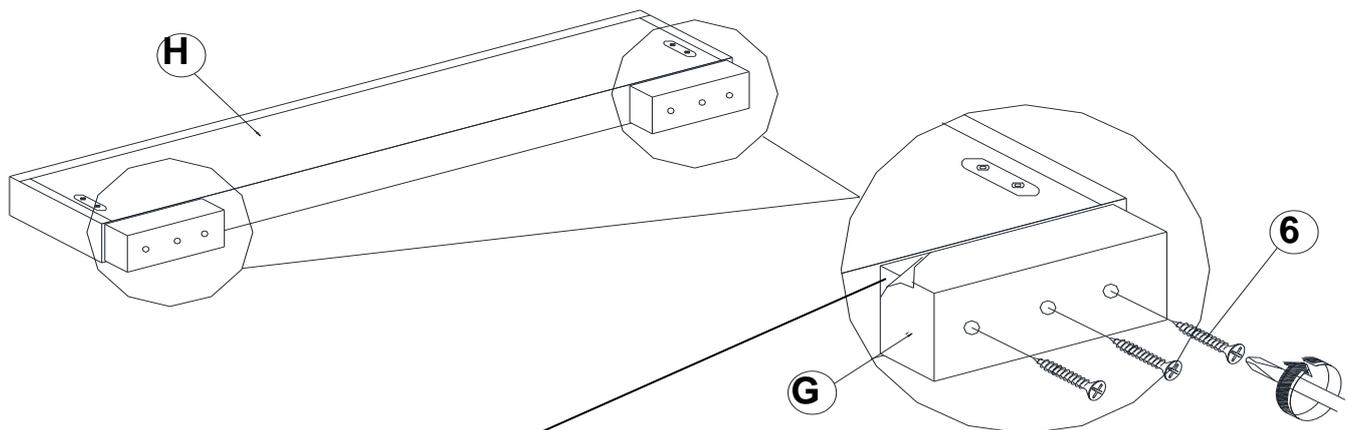


PLEASE REMOVE THE PROTECTIVE FILM BEFORE ASSEMBLY

ASSEMBLY INSTRUCTIONS


STEP 4

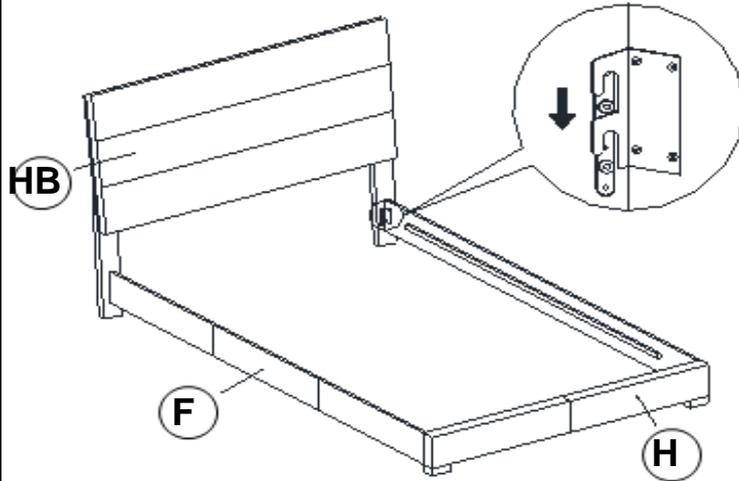


STEP 5

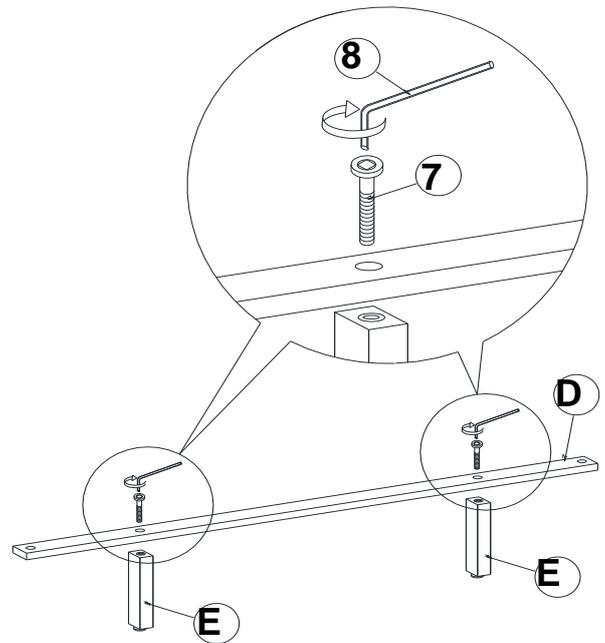

STEP 6

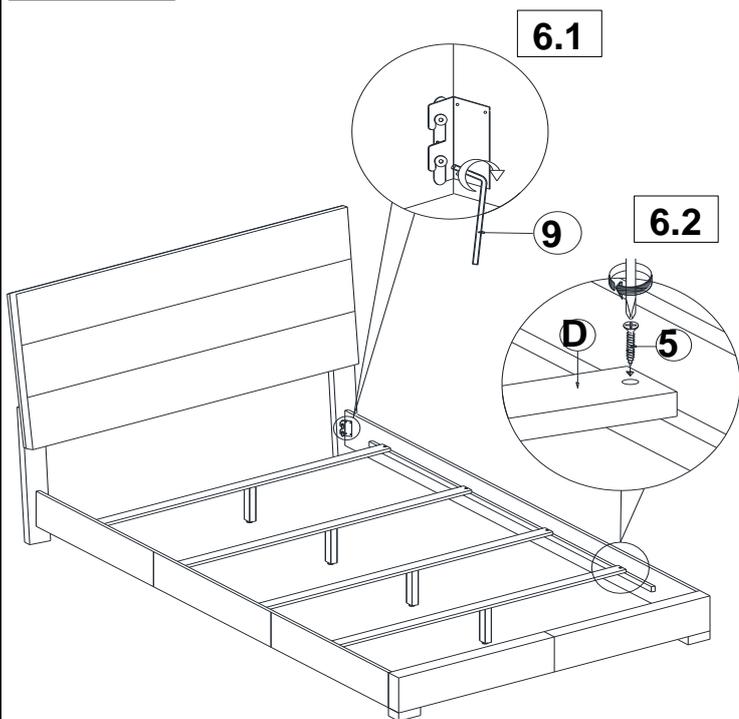


**STEP 7
COMPLETE**

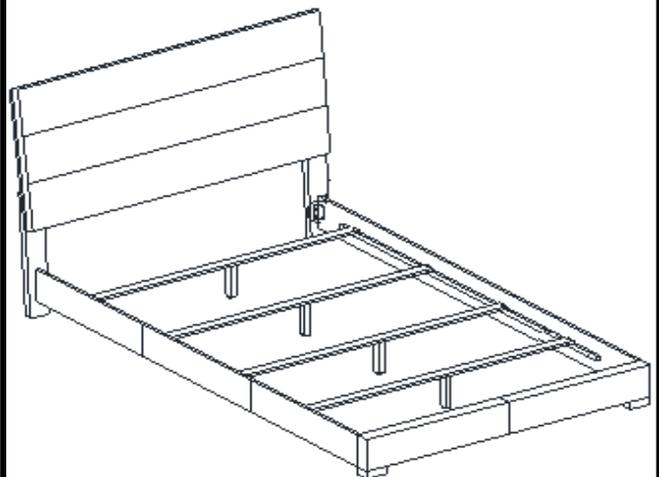

ITEM: 203501Q (B1&B2)



INNER SIZE : 60.63" x 80.31"

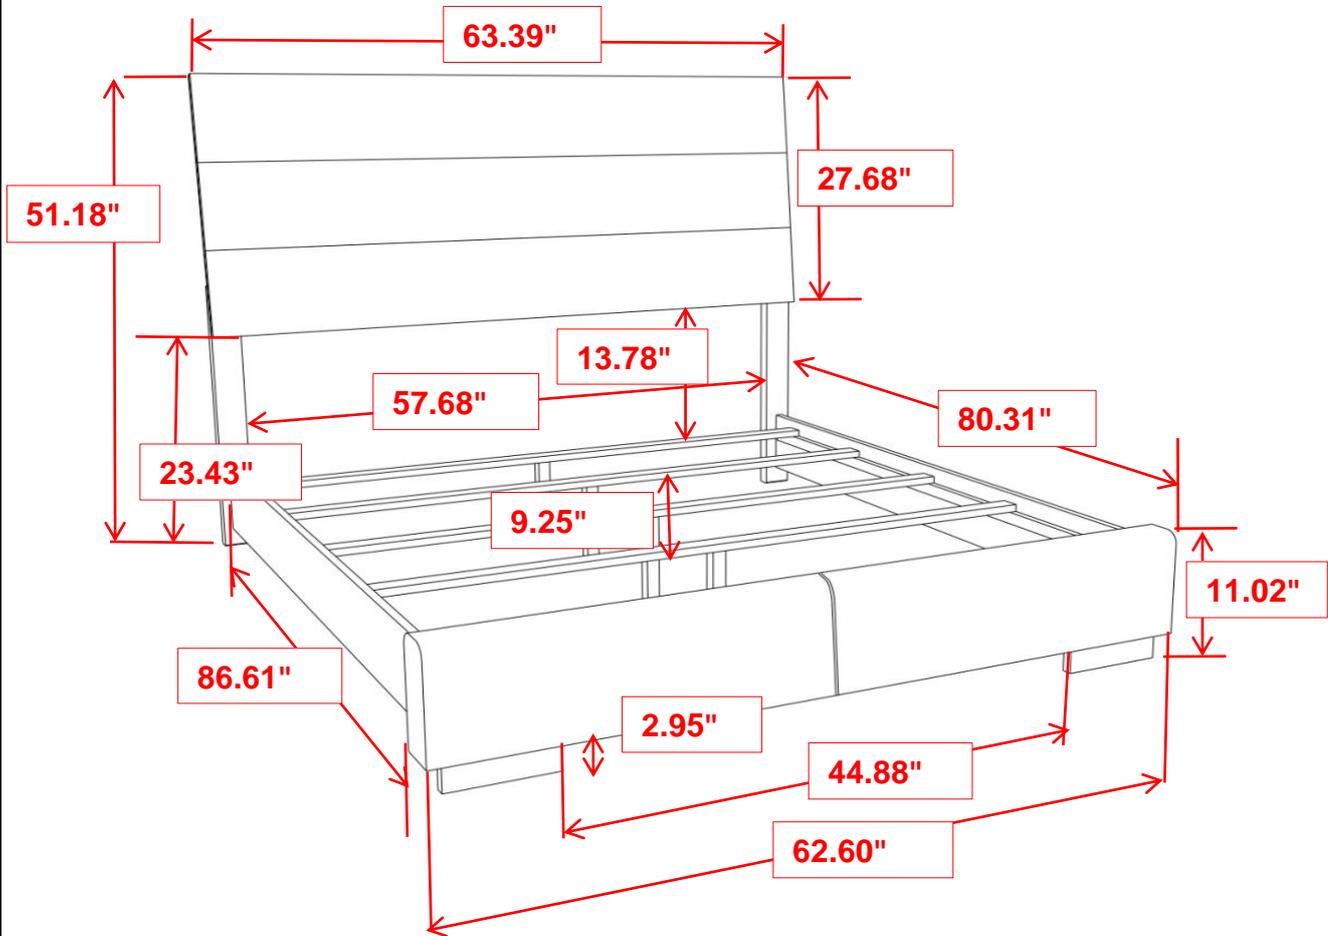

Note : Dimension tolerance $\pm 5\%$