




ASSEMBLY INSTRUCTION FOR






6-DRAWERS DRESSER


MC400DR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESC.	PART	CODE	QTY
A	DRESSER		MC400DR	1 pc
B	LEG		PMC400CGLEG	4 pcs
C	VERTICAL LEG		PMC400DR	1 pc


HARDWARE LIST					
NO.	HARDWARE DESC.	PART	SIZE	CODE	QTY
1	ALLEN BOLT		M6 x 30mm	PMC400HADS	8 pcs
2	SPRING WASHER		M8		8 pcs
3	FLAT WASHER		M8 x 18mm		8 pcs
4	ALLEN KEY		M4		1 pc
5	TIPPING RESTRAINT			PMC400ATKT	1 pc

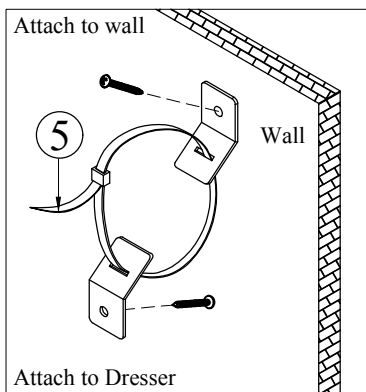


STEP 1 : Take out the legs (B)

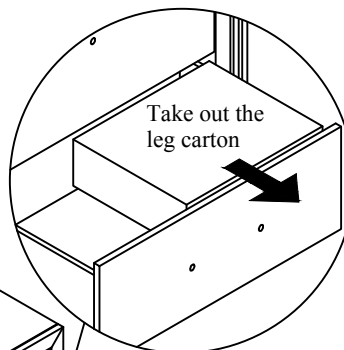

STEP 4 : Assemble the handle from inside the drawer head to the front drawer head.

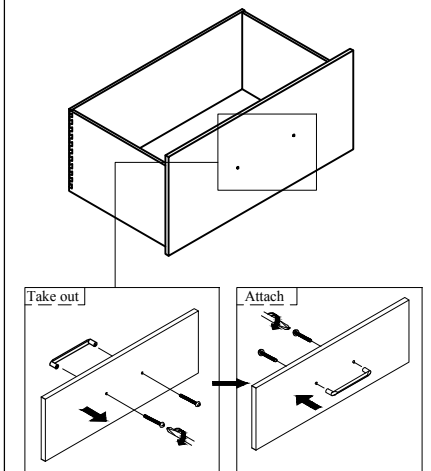

STEP 2 : Assemble the Turning Leg (B) to Night Stand (A).

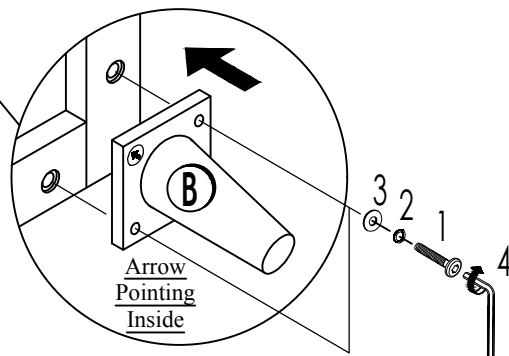

COMPLETED.

STEP 3 : Assemble the Vertical Leg (C) to Dresser (A).

MADE IN MALAYSIA

PAGE 1 OF 1