






**CROSLEY**  
FURNITURE


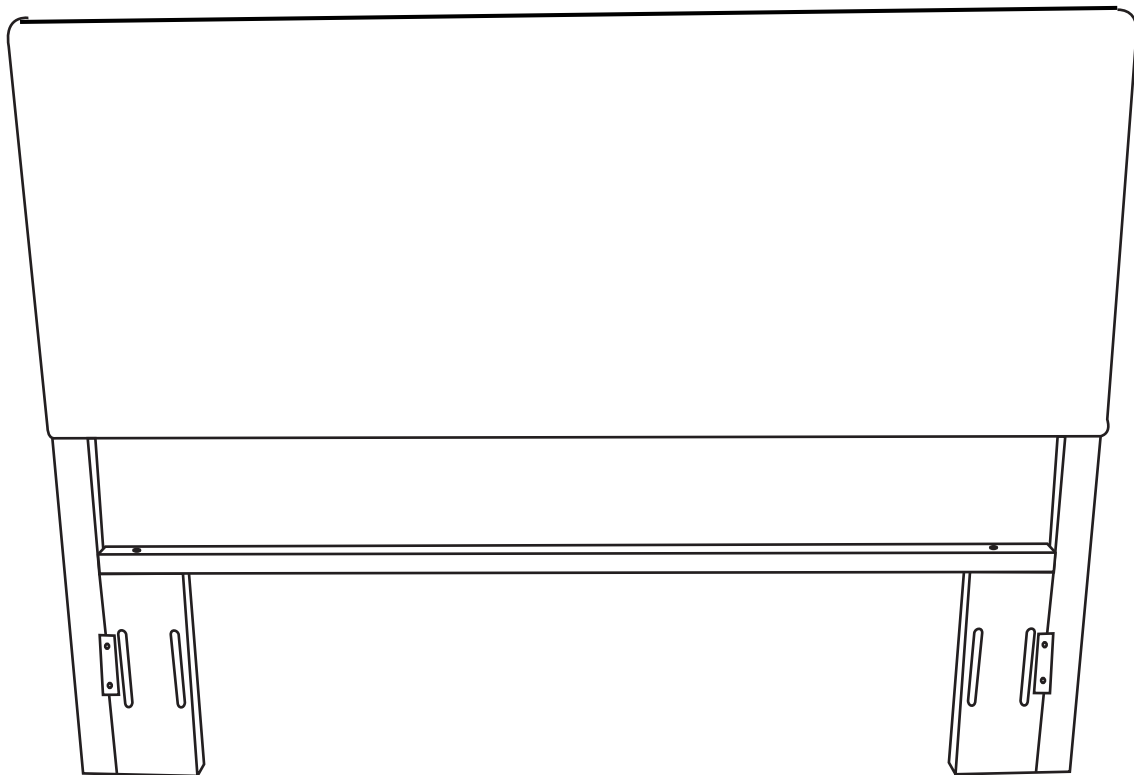


Queen / King Headboard  
CF92005-501 / 601

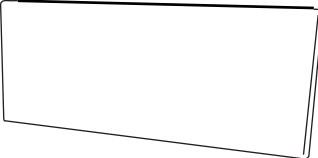

# PART LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 
Headboard 1 PC	Right Post 1 PC	Left Post 1 PC	Crossbar 1 PC

# HARDWARE LIST

<div>#1</div>  $\frac{1}{2}$ " x 1.1/2" L	<div>#2</div>  $\frac{1}{2}$ " x 2" L	<div>#3</div> 	<div>#4</div> 
Short Bolt 6 PCS (Extra 1)	Bolt 2 PCS (Extra 1)	Small Flat Washer 8 PCS (Extra 1)	Allen Wrench 1 PC

Step 1. Lay headboard (part A) upside down on a soft surface, such as carpet. Attach posts (parts B & C) to headboard (part A) using short bolts (part #1), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

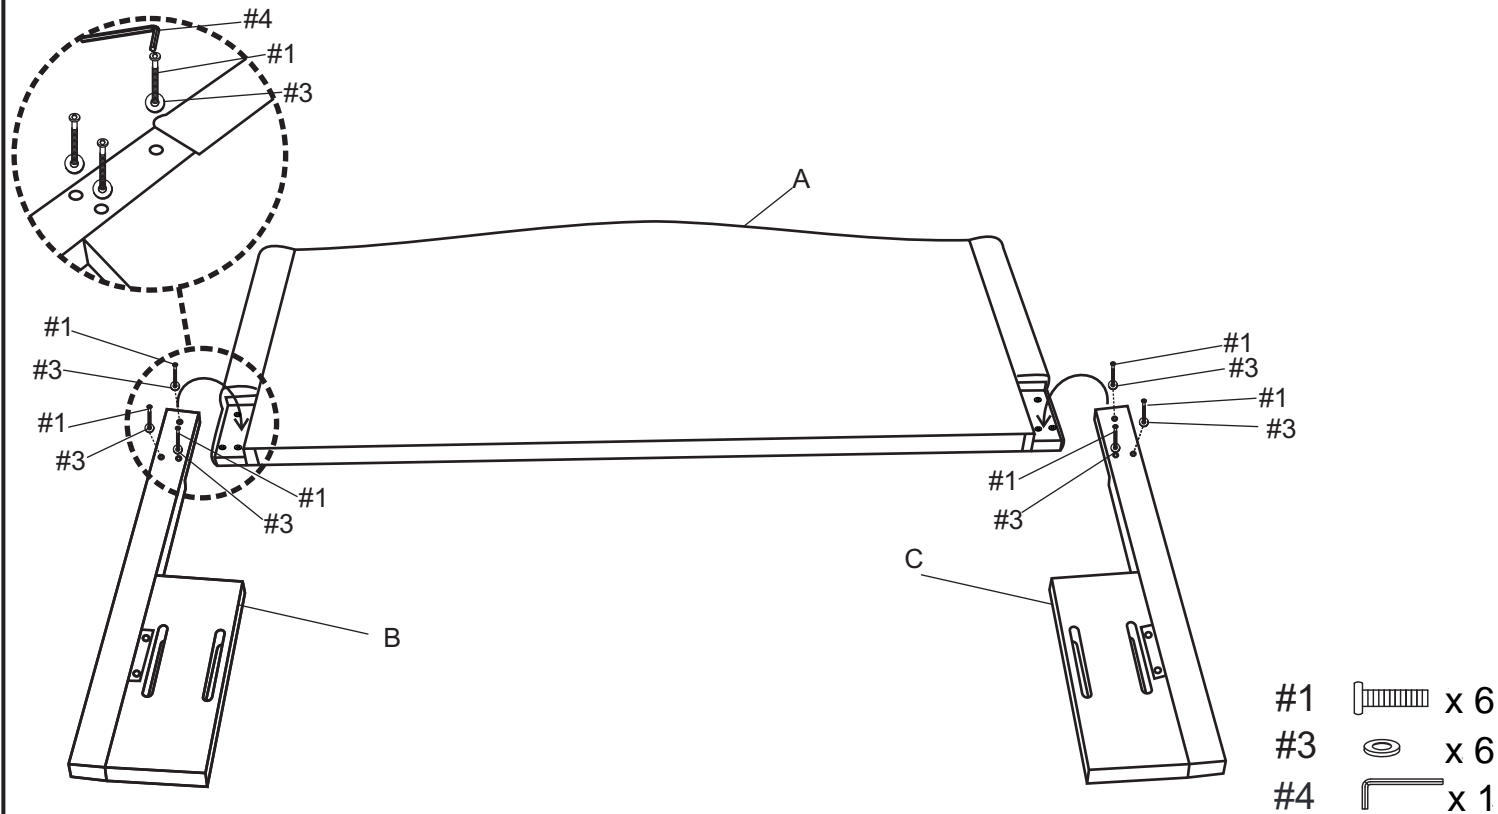

Step 2. Attach crossbar (part D) to posts (parts B & C) using bolts (part #2), small flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

