

INTERCON















FURNITURE FOR LIFE

ASSEMBLY INSTRUCTION


DESCRIPTION: BAYSIDE NIGHTSTAND, 2 DRAWER

ITEM NO: BY-BR-9802-WHT-C / BY-BR-9802-BLK-C


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.

1  CABINET 1 PC	2  FRONT KD LEG LEFT 1 PC	3  FRONT KD LEG RIGHT 1 PC	4  BACK KD LEG LEFT 1 PC	5  BACK KD LEG RIGHT 1 PC	6  SIDE STRETCHER- L 1 PC	7  SIDE STRETCHER- R 1 PC	8  CENTER STRETCHER 1 PC
A  BOLT M6 x 20mm 4 PCS	B  SPRING WASHER M6 x 10 4 PCS	C  FLAT WASHER M6 x 16 4 PCS	D  WOOD SCREW M4 x 40 8 PCS	E  ALLEN KEY M4 1 PC	F  TIPPING RESTRAINS 1 SET		



STEP 1

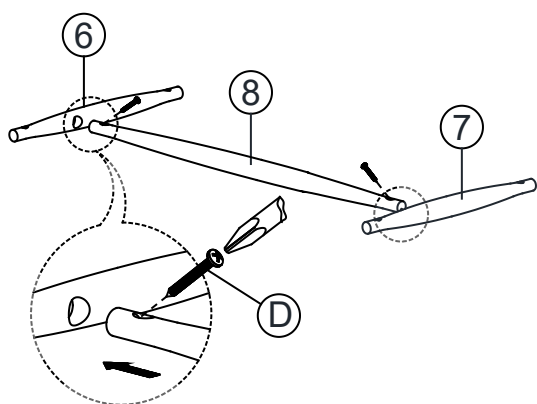

STEP 2

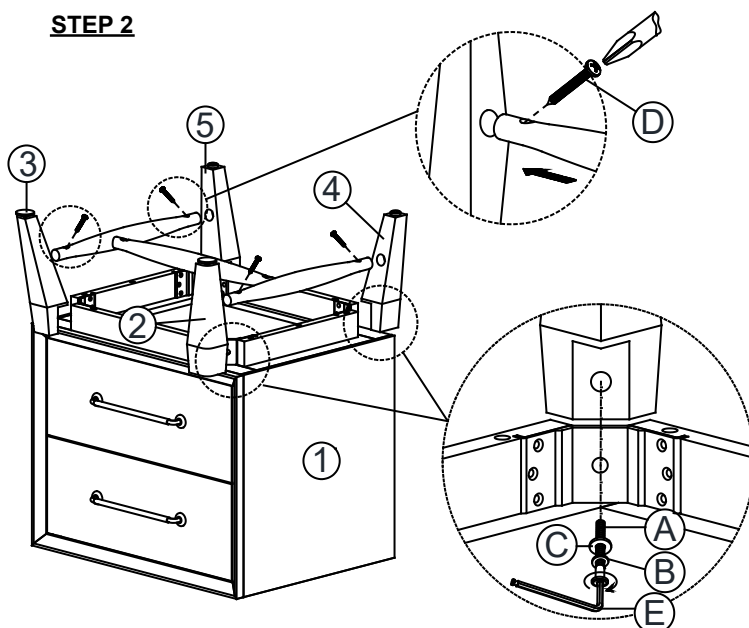

STEP 3

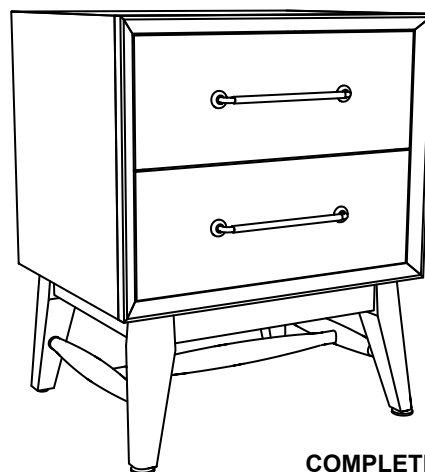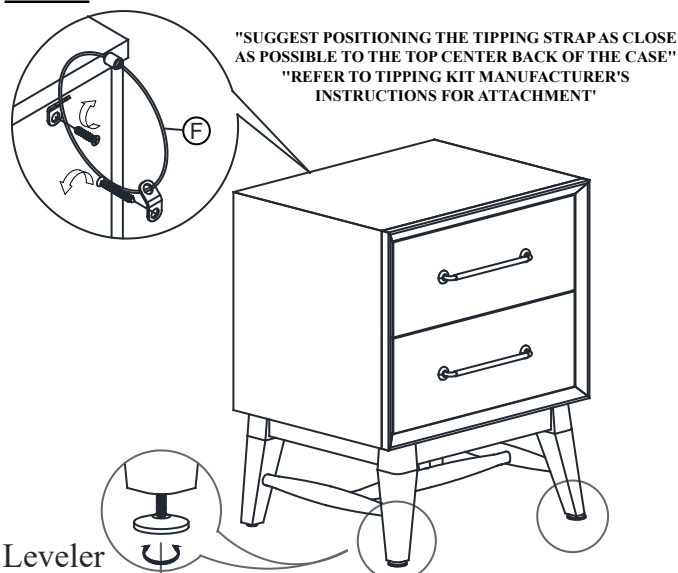


COMPLETE ASSEMBLY

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

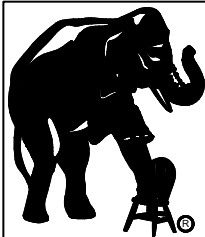







INTERCON
FURNITURE FOR LIFE

ASSEMBLY INSTRUCTION


DESCRIPTION: BAYSIDE DRESSER MIRROR

ITEM NO: BY-BR-9891-WHT-C / BY-BR-9891-BLK-C

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.

1  LANDSCAPE MIRROR 1 PC	2  MIRROR SUPPORT 2 PCS						
A  JCBC BOLT M6 x 35mm 8 PCS	B  SPRING WASHER M6 8 PCS	C  FLAT WASHER M6 8 PCS	D  ALLEN KEY M4 1 PCS				

STEP 1

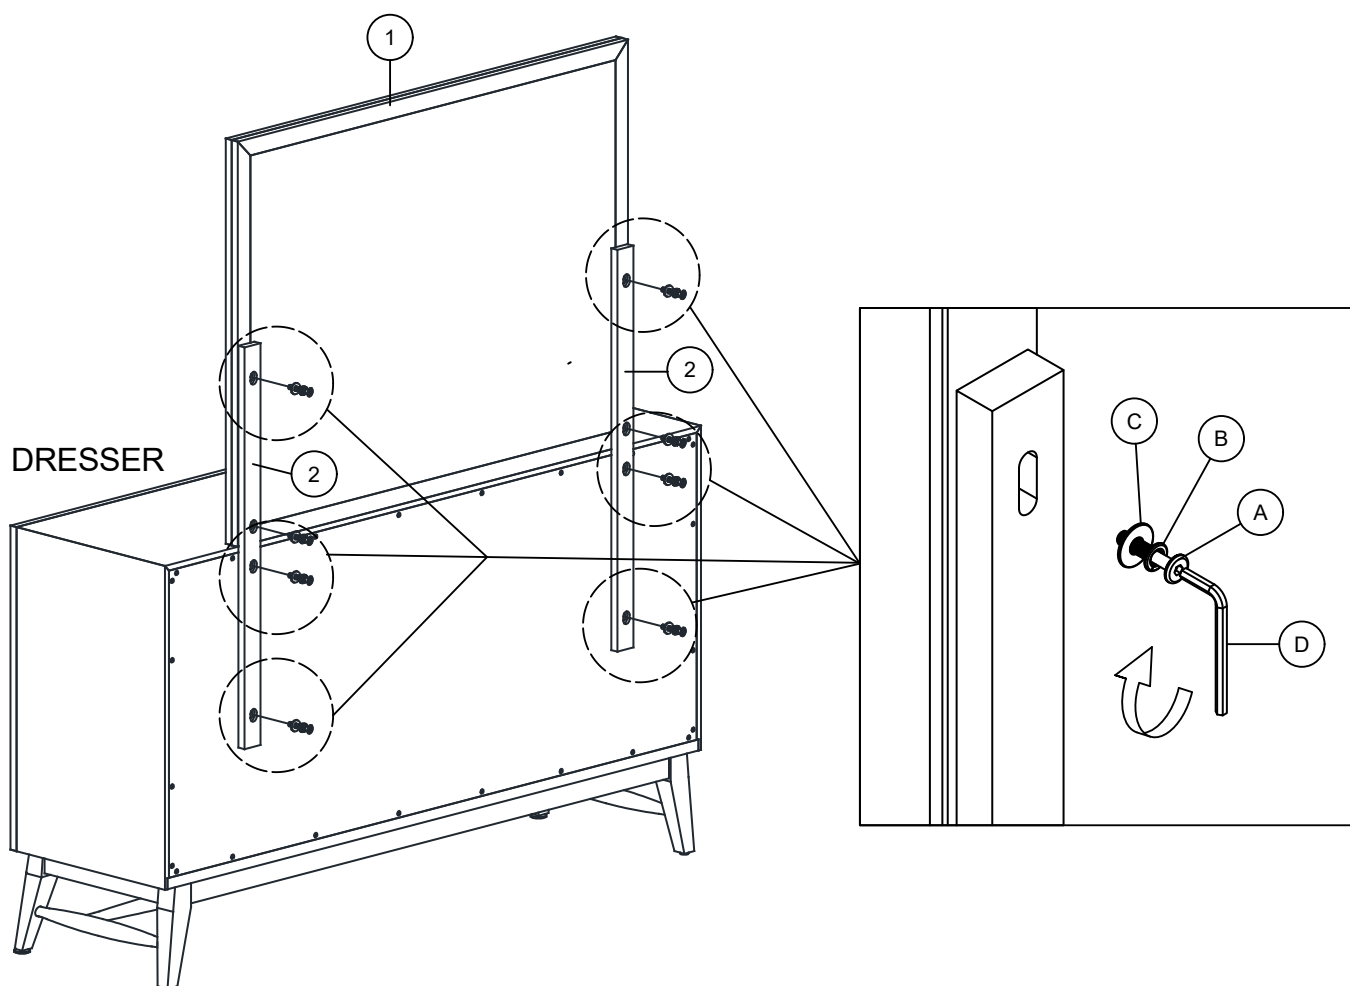


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

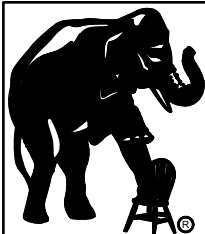
















INTERCON
FURNITURE FOR LIFE


ASSEMBLY INSTRUCTION

DESCRIPTION: BAYSIDE DRESSER, 6 DRAWER
ITEM NO: BY-BR-9806-WHT-C / BY-BR-9806-BLK-C


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.

1  CABINET 1 PC	2  FRONT KD LEG LEFT 1 PC	3  FRONT KD LEG RIGHT 1 PC	4  BACK KD LEG LEFT 1 PC	5  BACK KD LEG RIGHT 1 PC	6  SIDE STRETCHER- L 1 PC	7  SIDE STRETCHER- R 1 PC	8  CENTER STRETCHER 1 PC
9  CENTER LEG 1 PC		A  BOLT M6 x 20mm 4 PCS	B  SPRING WASHER M6 x 10 4 PCS	C  FLAT WASHER M6 x 16 4 PCS	D  WOOD SCREW M4 x 40 8 PCS	E  ALLEN KEY M4 1 PC	F  TIPPING RESTRAINS 1 SET



STEP 1

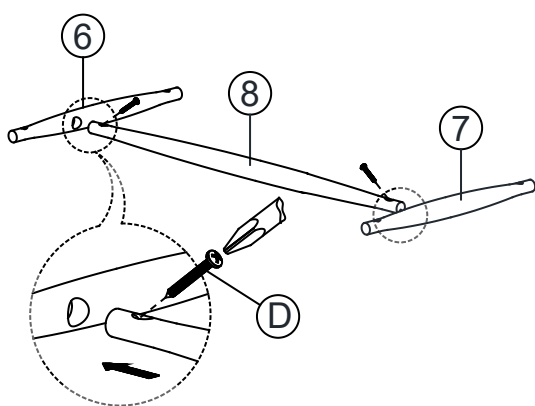

STEP 2

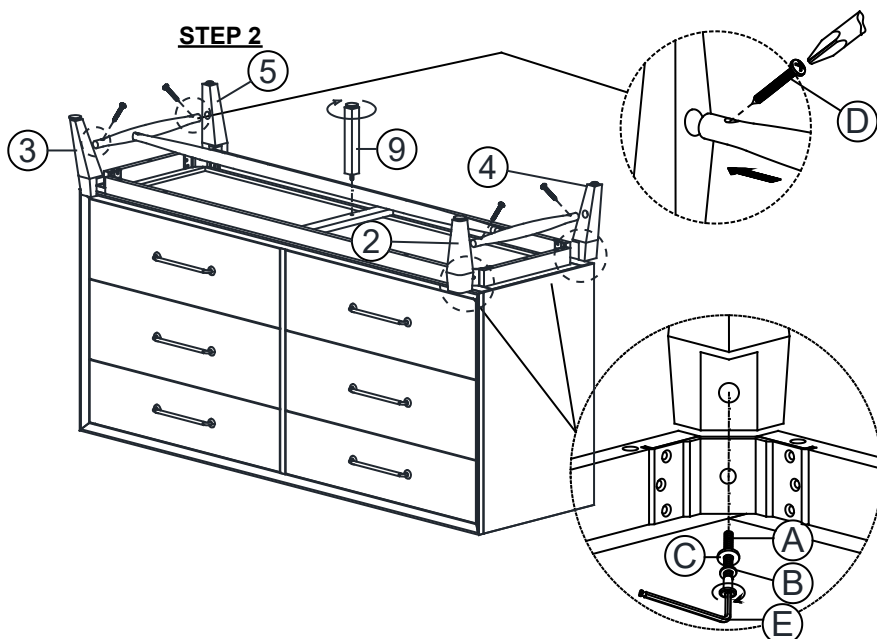

STEP 3

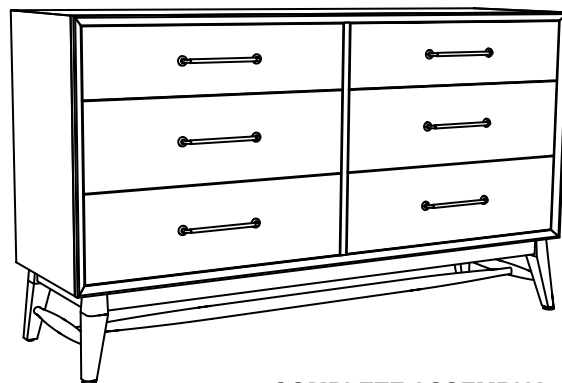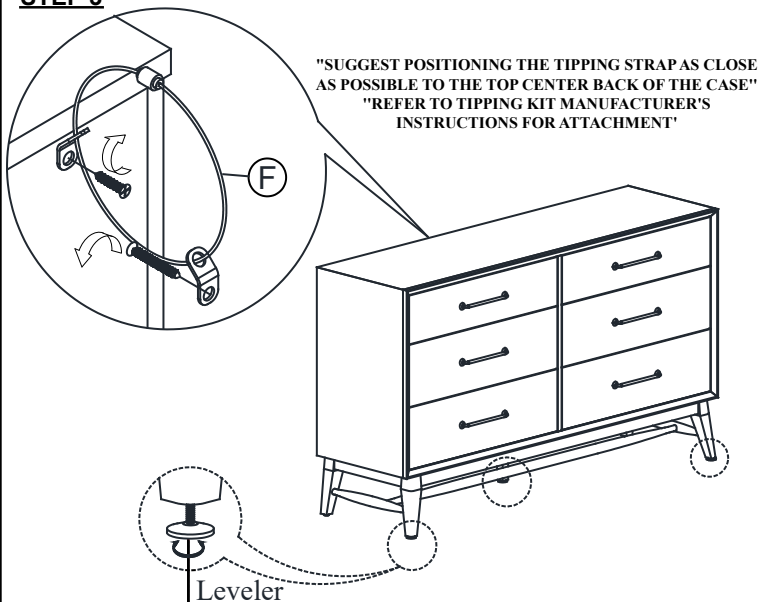


COMPLETE ASSEMBLY

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

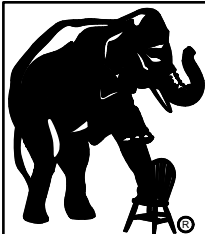















INTERCON
FURNITURE FOR LIFE

ASSEMBLY INSTRUCTION


DESCRIPTION: BAYSIDE CHEST, 5 DRAWER

ITEM NO: BY-BR-9805-WHT-C / BY-BR-9805-BLK-C


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.

1  CABINET 1 PC	2  FRONT KD LEG LEFT 1 PC	3  FRONT KD LEG RIGHT 1 PC	4  BACK KD LEG LEFT 1 PC	5  BACK KD LEG RIGHT 1 PC	6  SIDE STRETCHER- L 1 PC	7  SIDE STRETCHER- R 1 PC	8  CENTER STRETCHER 1 PC
A  BOLT M6 x 20mm 4 PCS	B  SPRING WASHER M6 x 10 4 PCS	C  FLAT WASHER M6 x 16 4 PCS	D  WOOD SCREW M4 x 40 8 PCS	E  ALLEN KEY M4 1 PC	F  TIPPING RESTRAINS 1 SET		


STEP 1

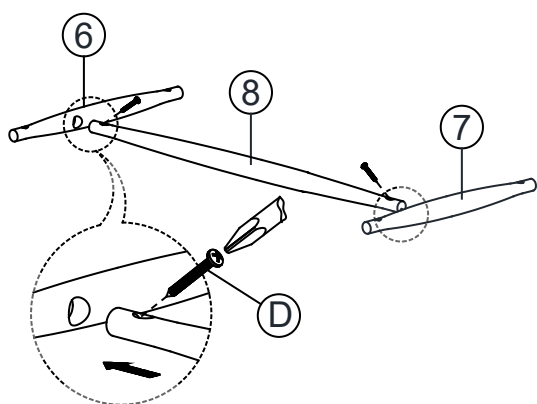

STEP 2

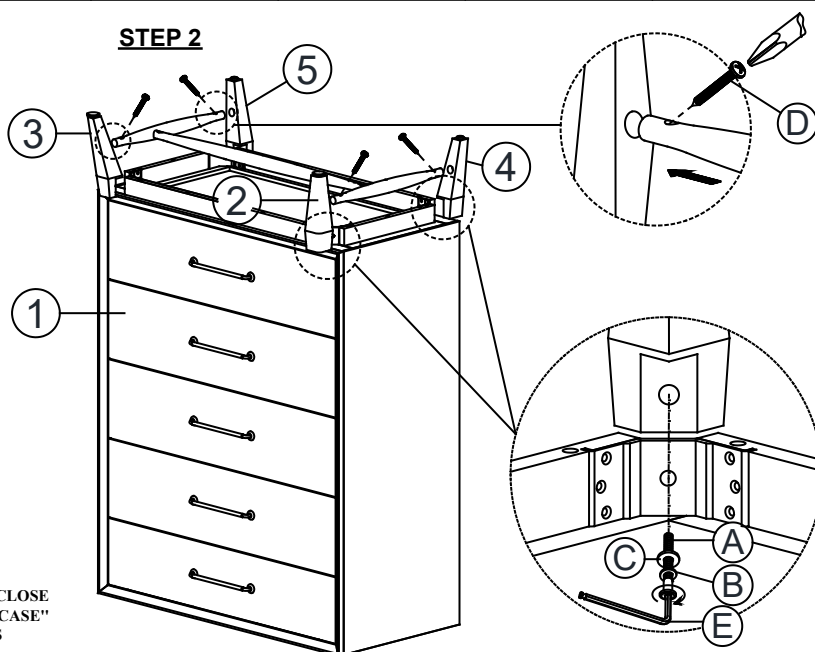

STEP 3

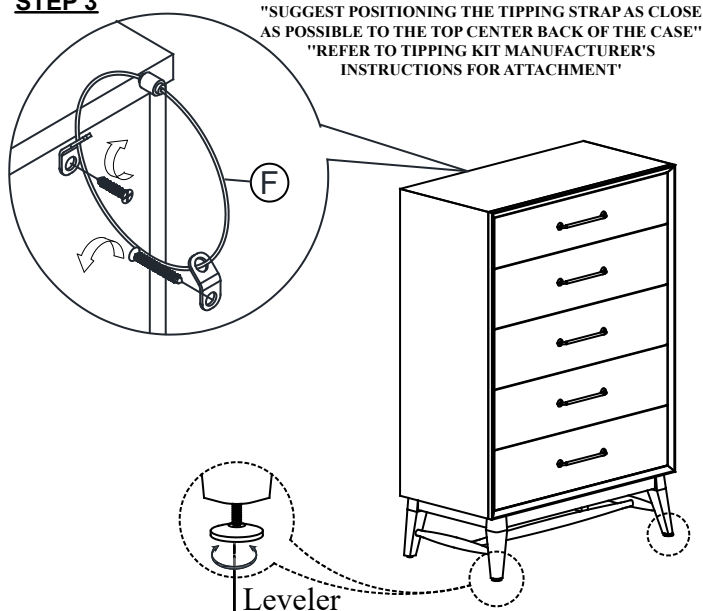


COMPLETE ASSEMBLY

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

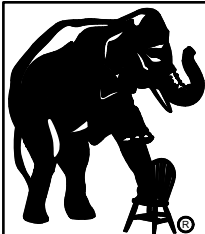
















INTERCON
FURNITURE FOR LIFE

ASSEMBLY INSTRUCTION


DESCRIPTION: BAYSIDE GENTLEMAN'S CHEST,
4 DRAWER, 2 DOOR

ITEM NO: BY-BR-9804GC-WHT-C / BY-BR-9804GC-BLK-C


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.

1  CABINET 1 PC	2  FRONT KD LEG LEFT 1 PC	3  FRONT KD LEG RIGHT 1 PC	4  BACK KD LEG LEFT 1 PC	5  BACK KD LEG RIGHT 1 PC	6  SIDE STRETCHER- L 1 PC	7  SIDE STRETCHER- R 1 PC	8  CENTER STRETCHER 1 PC
9  CENTER LEG 1 PC		A  BOLT M6 x 20mm 4 PCS	B  SPRING WASHER M6 x 10 4 PCS	C  FLAT WASHER M6 x 16 4 PCS	D  WOOD SCREW M4 x 40 8 PCS	E  ALLEN KEY M4 1 PC	F  TIPPING RESTRAINS 1 SET

STEP 1


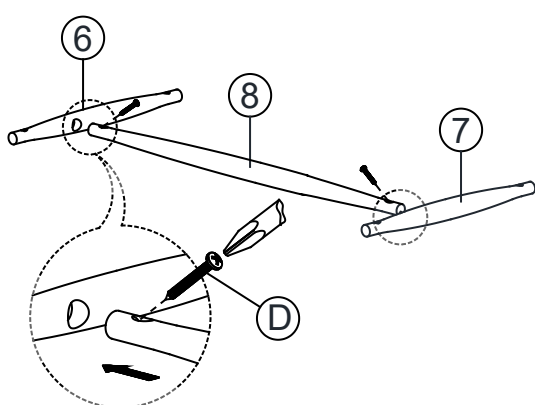


STEP 2

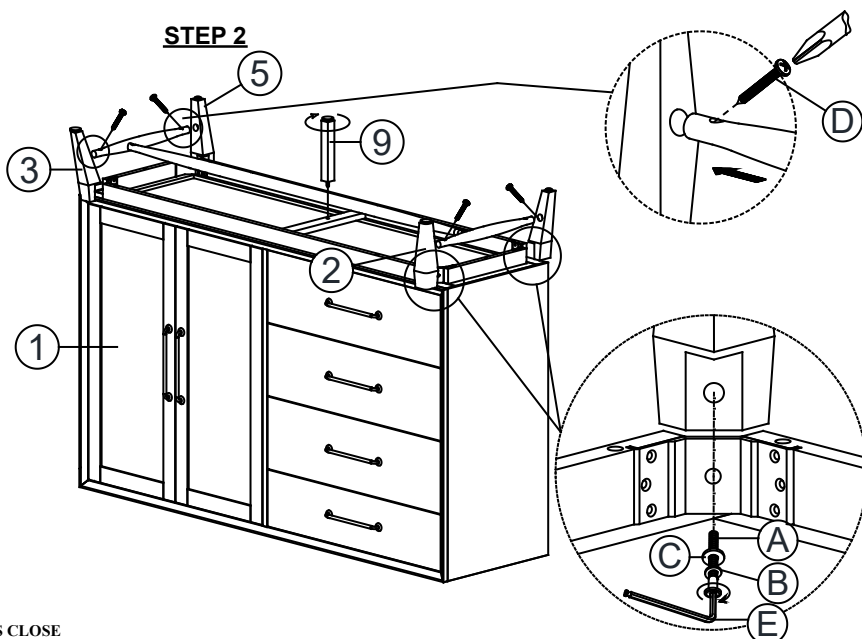

STEP 3

"SUGGEST POSITIONING THE TIPPING STRAP AS CLOSE AS POSSIBLE TO THE TOP CENTER BACK OF THE CASE"
"REFER TO TIPPING KIT MANUFACTURER'S INSTRUCTIONS FOR ATTACHMENT"

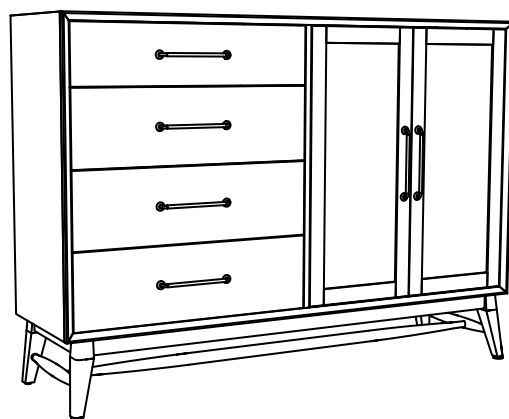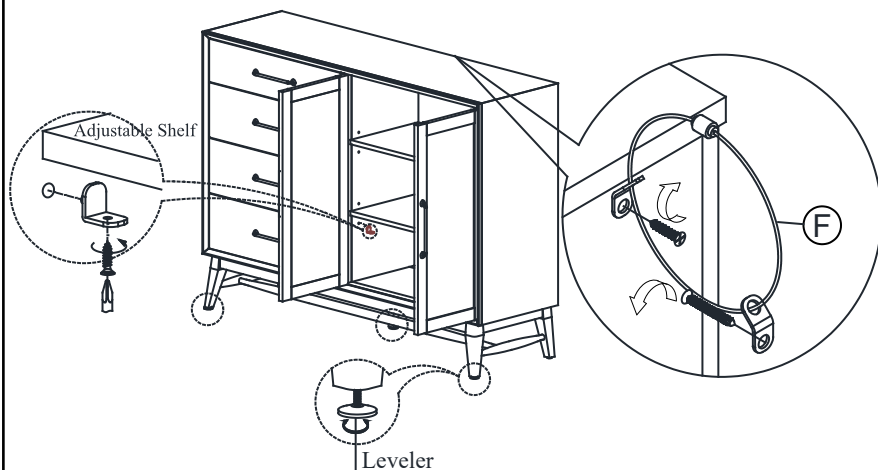


COMPLETE ASSEMBLY

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

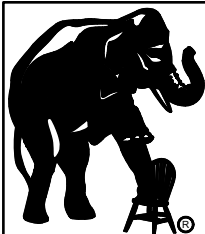

INTERCON
FURNITURE FOR LIFE

ASSEMBLY INSTRUCTION

DESCRIPTION: BAYSIDE SPINDLE QUEEN BED

ITEM NO: BY-BR-9860Q-WHT-HB / BY-BR-9860Q-BLK-HB


BY-BR-9860Q-WHT-FB / BY-BR-9860Q-BLK-FB

BY-BR-9860S-WHT-RS / BY-BR-9860S-BLK-RS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.

1 QUEEN SPINDLE HB 1 PC	2 QUEEN PANEL FOOTBOARD 1 PC	3 Q/K SIDE RAIL LEFT 1 PC	4 Q/K SIDE RAIL RIGHT 1 PC	5 SLAT 5 PCS	6 CENTER LEGS 5 PCS	7 DESKLING PANEL 4 PCS	
A THREAD BOLT M8 x 90mm 8 PCS	B SPRING WASHER M8 8 PCS	C CURVE WASHER 8 PCS	D HEX NUT M8 8 PCS	E WOOD DOWEL 10 x 40 8 PCS	F WOOD SCREW M4 x 30 10 PCS	G WRENCH 1 PC	



STEP 1

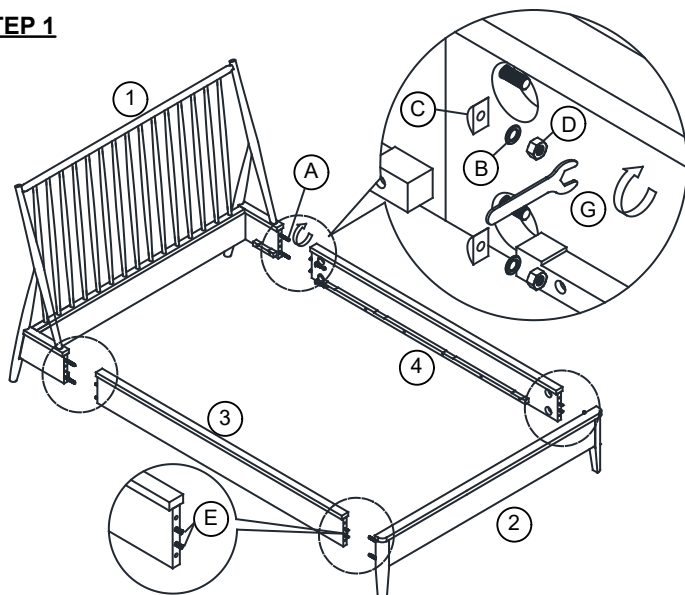

STEP 2

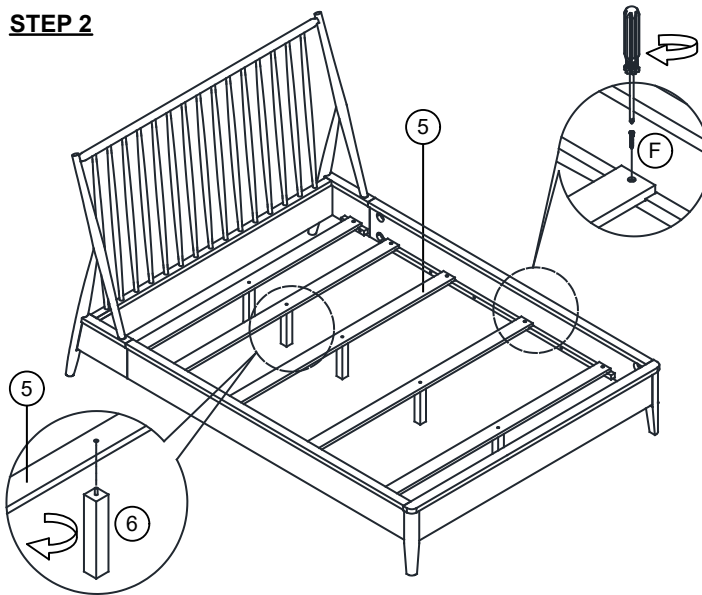

STEP 3

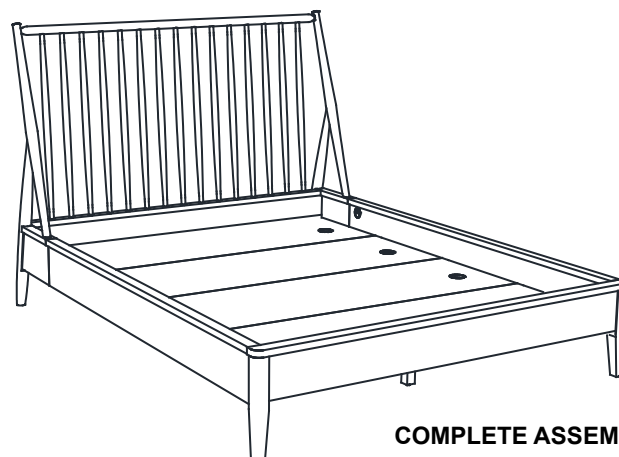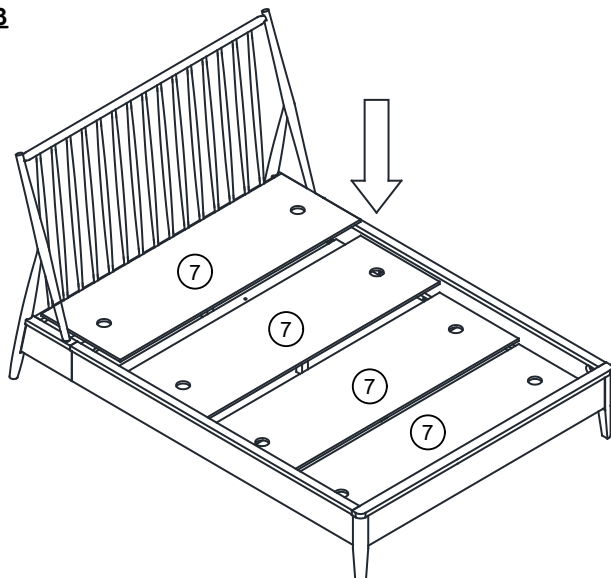


COMPLETE ASSEMBLY

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

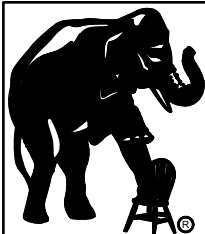

INTERCON
FURNITURE FOR LIFE

ASSEMBLY INSTRUCTION

DESCRIPTION: BAYSIDE SPINDLE KING BED

ITEM NO: BY-BR-9860K-WHT-HB / BY-BR-9860K-BLK-HB


BY-BR-9860K-WHT-FB / BY-BR-9860K-BLK-FB

BY-BR-9860S-WHT-RS / BY-BR-9860S-BLK-RS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Please keep all hardware out of reach of small children.

1 KING SPINDLE HB 1 PC	2 KING PANEL FOOTBOARD 1 PC	3 Q/K SIDE RAIL LEFT 1 PC	4 Q/K SIDE RAIL RIGHT 1 PC	5 SLAT 5 PCS	6 CENTER LEGS 10 PCS	7 DESKLING PANEL 4 PCS	
A THREAD BOLT M8 x 90mm 8 PCS	B SPRING WASHER M8 8 PCS	C CURVE WASHER 8 PCS	D HEX NUT M8 8 PCS	E WOOD DOWEL 10 x 40 8 PCS	F WOOD SCREW M4 x 30 10 PCS	G WRENCH 1 PC	



STEP 1

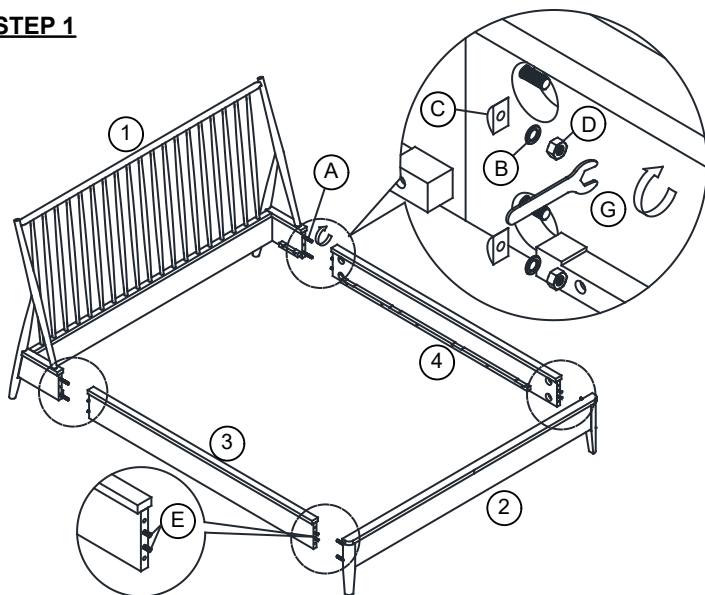

STEP 2

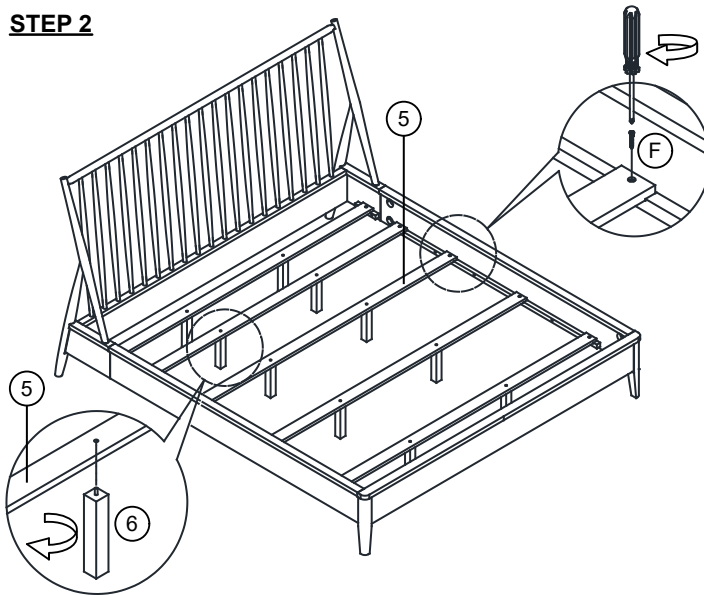

STEP 3

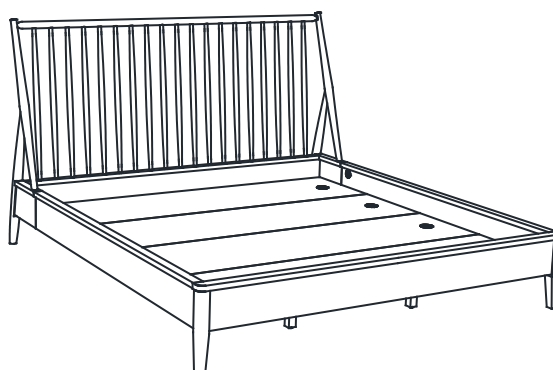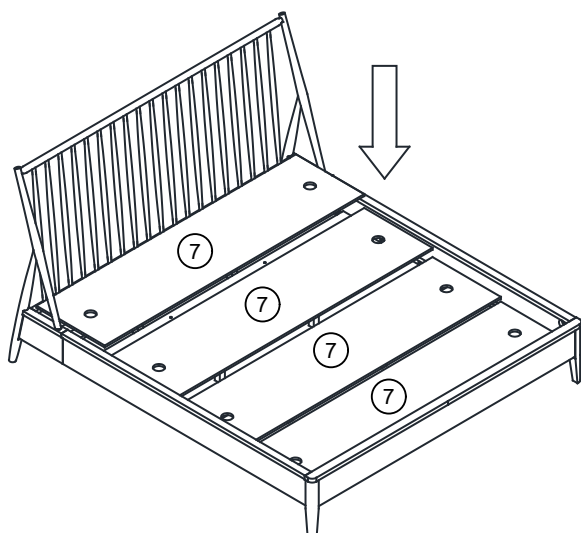

COMPLETE ASSEMBLY

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.