

Elements

Assembly instruction for DESCRIPTION : EMILY QUEEN HEADBOARD : EMILY QUEEN FOOTBOARD : EMILY QUEEN RAILS : QUEEN SLATS & SUPPORT LEGS ITEM NO : PEM300QHF/PEM300QRD/PEM300QLD/PEM300QR

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non - abrasive floor before assembly. and follow the assembly step to assemble your newly purchased product correctly and efficiently .

(BOX 1)

BOX OF HEADBOARD & FOOTBOARD

NO	ITEM	CODE	QTY
A	Headboard	QHB	1
B	Footboard	QFB	1
C	Headboard Leg (L/R)	HBLL/HBRL	2
D	Triangle Support Panel -9 x 200 x 200	HBSPN	2

(BOX 1)

HARDWARE LIST

NO	ITEM	CODE	QTY
1	FLAT HEAD CHIPBOARD SCREW m4 x 32mm RBW	-	8
2	PAN HEAD CHIPBOARD SCREW m3.5 x 16mm BLK	-	8
3	JCBC BOLT M6 x 35MM BLK	-	4
4	JCBC BOLT M6 x 50MM BLK	-	2
5	SPRING WASHER 1/4" RBW	-	6
6	FLAT WASHER 1/4" ID x 13mmOD BLK	-	6
7	ALLEN KEY m4 x 110mm BLK	-	1

(BOX 2)

BOX OF SIDERAIL

NO	ITEM	CODE	QTY
E	Side Rail (L/R)	QKR	2
F	Bed Slat	QST	5
G	F/Board Drawer Frame	QFDWF	1
H	Concealed Panel	QKCPN	5
I	H/board Back Support - 20 x 30 x 1560mm	QHBSR	1
J	Drawer Suppt. Rail - 1	QRDWSR	1
K	Drawer Suppt. Rail - 2	FDWSR	4
L	Support Leg 1 - 30 x 30 x 518mm	SPL1	5
M	Support Leg 2 - 30 x 30 x 95mm	SPL2	1
N	Support Leg 3 - 30 x 30 x 107mm	SPL3	1
O	H/board Back Support -1x1 18x45x1560	QHBR	1

(BOX 2)

HARDWARE LIST

NO	ITEM	CODE	QTY
8	FLAT HEAD CHIPBOARD SCREW m4 x 32mm RBW	-	16
9	PAN HEAD CHIPBOARD SCREW m3.5 x 16mm BLK	-	27
10	JCBC BOLT M6 x 35MM BLK	-	15
11	JCBC BOLT M6 x 50MM BLK	-	6
12	SPRING WASHER 1/4" RBW	-	15
13	FLAT WASHER 1/4" ID x 13mmOD BLK	-	15
14	Z-BRACKET	-	1
15	ALLEN KEY m4 x 110mm BLK	-	1

(BOX 3 & 4)

BOX OF PART & HARDWARE

NO	ITEM	CODE	QTY
P	Drawer - 1	QKFBW1/QKF BDW2/QKFB W/QKFBW4	4
Q	Drawer - 2	QKLDW1/QKR DW1	2
16	HANDLE	HDS	8
17	T/HEAD M. SCREW HANDLE M4 x 48MM BLK	-	4
18	T/HEAD M. SCREW HANDLE M4 x 50MM BLK	-	4


(BOX 1)

BOX OF HEADBOARD & FOOTBOARD

NO	ITEM	CODE	QTY
A1	Headboard Drawer	HBDW1 /HBDW2	2

REMARK!!!


* DRAWER 1 (P) & 2 (Q)
ARE IDENTICAL AND COULD BE
USED IN COMMON, REGARDLESS
LEFT OR RIGHT.

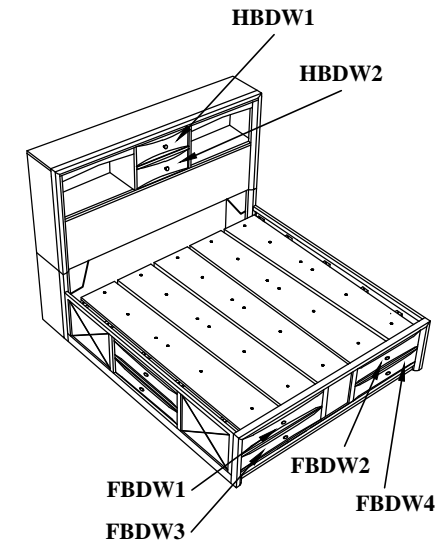


NOTE : DURING ASSEMBLY, DO NOT TIGHTEN
ANY HARDWARE UNTIL THE COMPLETE
UNIT HAS BEEN ASSEMBLED.

ASSEMBLY INSTRUCTIONS

STEP 1 : Attached and tighten the Headboard Leg L/R (C) to the Headboard (A).Insert Spring Washer (5) Flat Washer (6),use JCBC Bolt (3) to fix with Allen Key (7).

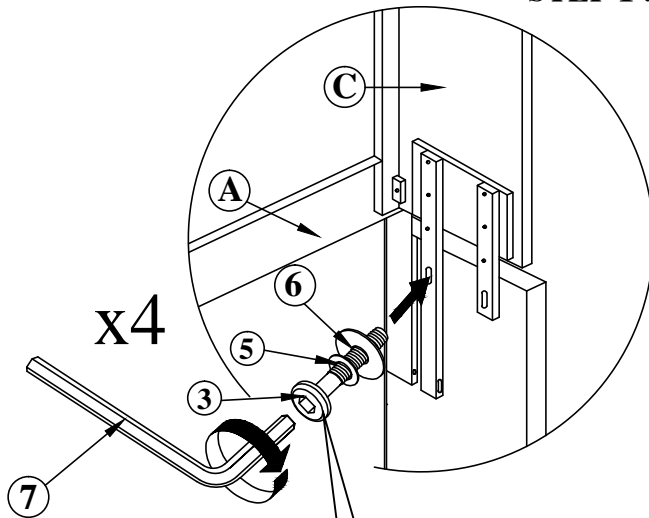


WARNING !!! USE SHORT BOLT (M6 x 35mm)

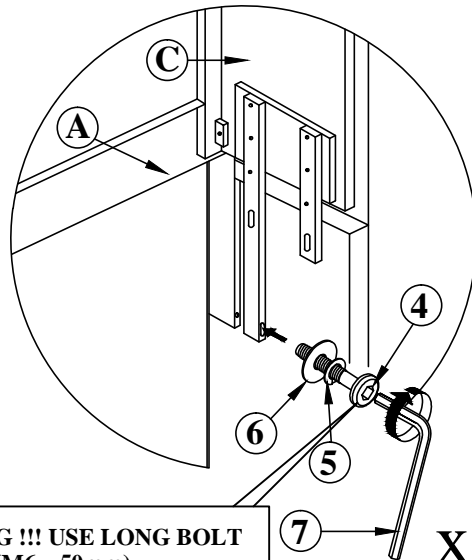


WARNING !!! USE LONG BOLT (M6 x 50mm)

STEP 2 : Attached and tighten the Headboard Leg L/R (C) to the Headboard (A).Insert Spring Washer (5) Flat Washer (6),use JCBC Bolt (4) to fix with Allen Key (7).

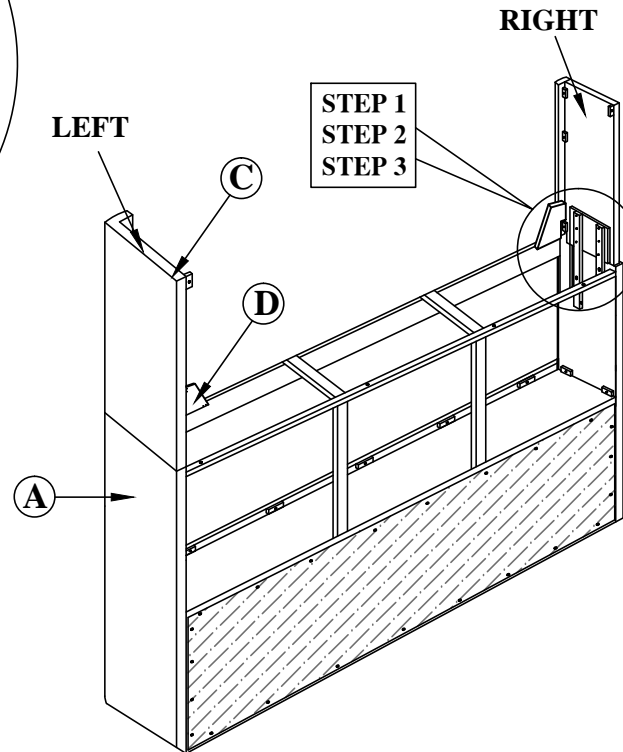


STEP 3 : Attached and tighten the Triangle Support Panel (D) to the Headboard and fix the Panhead Screw (2) using Screw Driver.(Not Included)

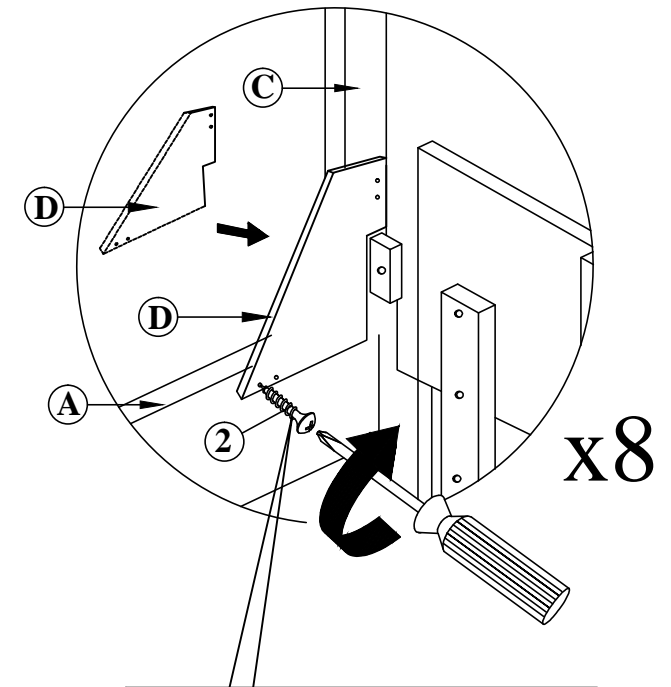


WARNING !!! USE SHORT CHIPBOARD SCREW (M3.5 x 16mm)

ASSEMBLY INSTRUCTIONS

**STEP 4 : Attach Headboard Back Support (I) and (O) follow the picture.Fix the CSK Screw (1) using a Screw Driver.
(Not Included)**

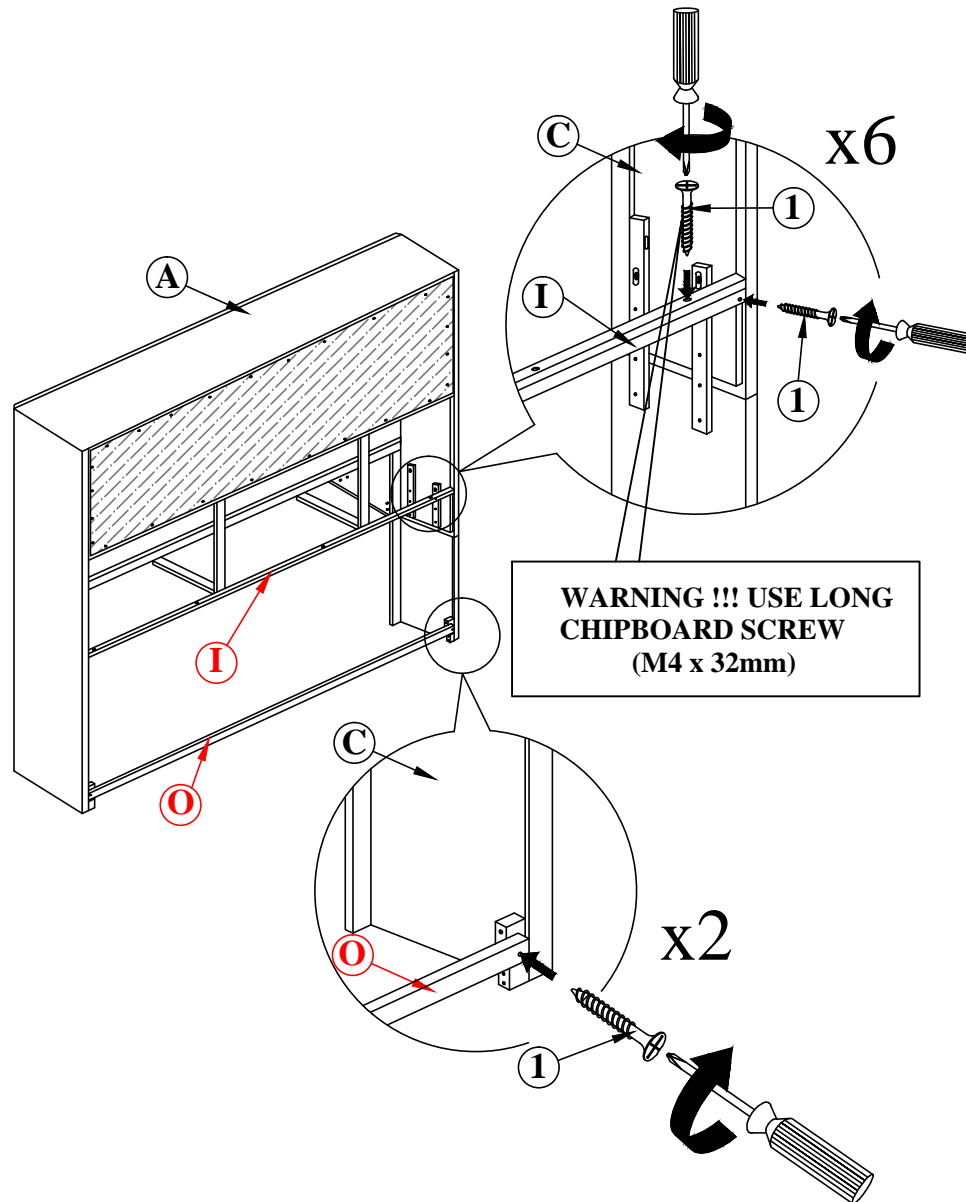

STEP 5 : Attach the Side Rail (E) to the Headboard Leg (C) and Footboard (B).Insert Spring Washer (12) , Flat Washer (13),use JCBC Bolt (10) to fix with Allen Key (15).

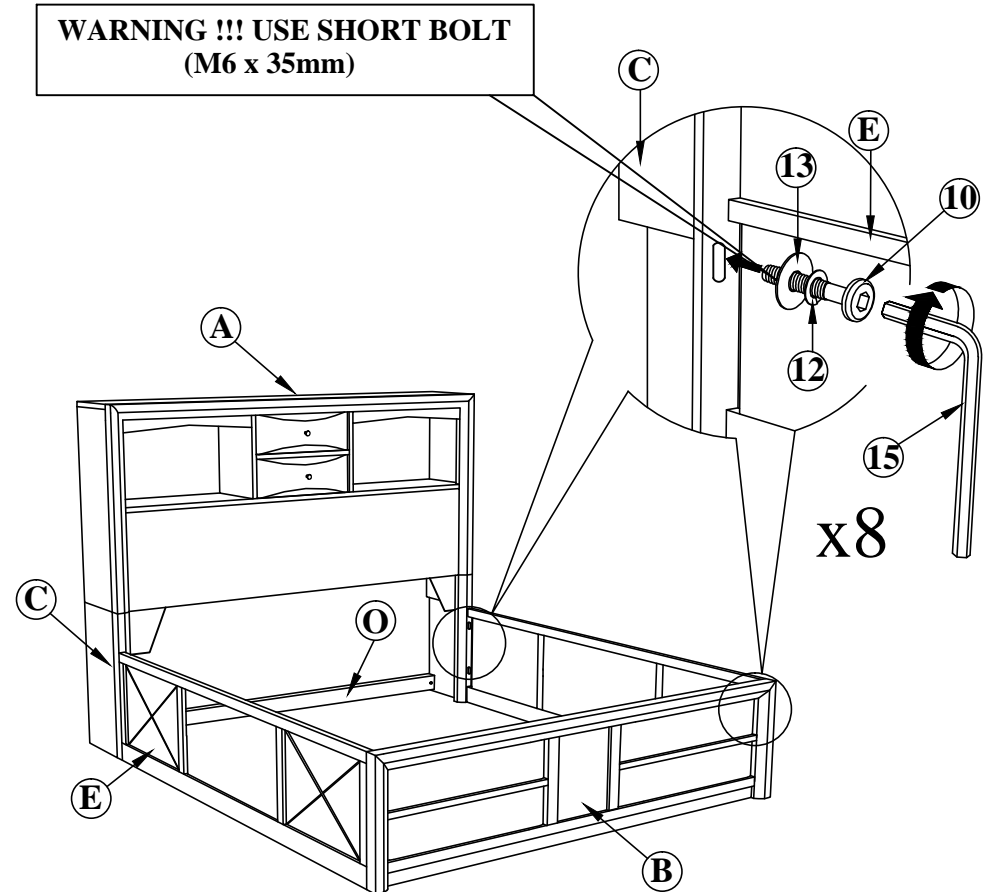

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


PAGE 3 OF 7

ASSEMBLY INSTRUCTIONS

STEP 6 : Attach the Footboard Drawer Frame (G) to the Side Rail (E). Insert Spring Washer (12), Flat Washer (13) & JCBC Bolt (10) to fix with Allen Key (15).


STEP 9 : Attach the Drawer Support Rail (K) to the Footboard Drawer Frame (G). Insert Spring Washer (12), Flat Washer (13) & JCBC Bolt (10) to fix with Allen Key (7).

WARNING !!! USE SHORT BOLT (M6 x 35mm)

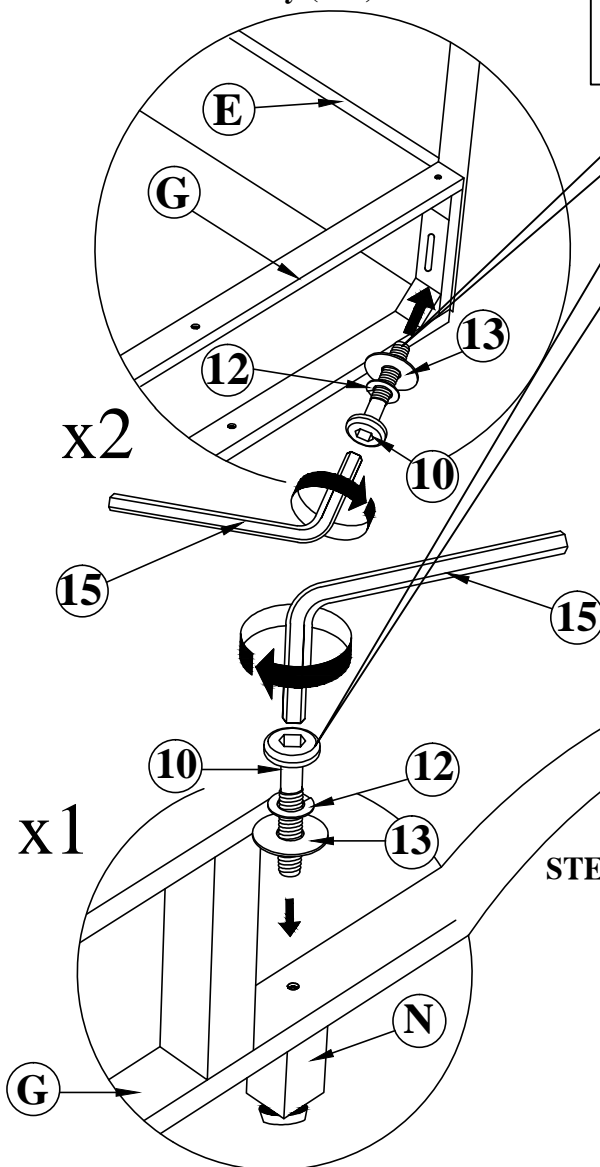

STEP 7 : Attach Support Leg 3 (N) to the Footboard Drawer Frame (G). Insert Spring Washer (12), Flat Washer (13) & JCBC Bolt (10) to fix with Allen Key (15).

STEP 8 : Attach the Drawer Support Rail (K) to the Footboard (B) using CSK Screw (8) and tighten with Screw Driver.(Not Included)

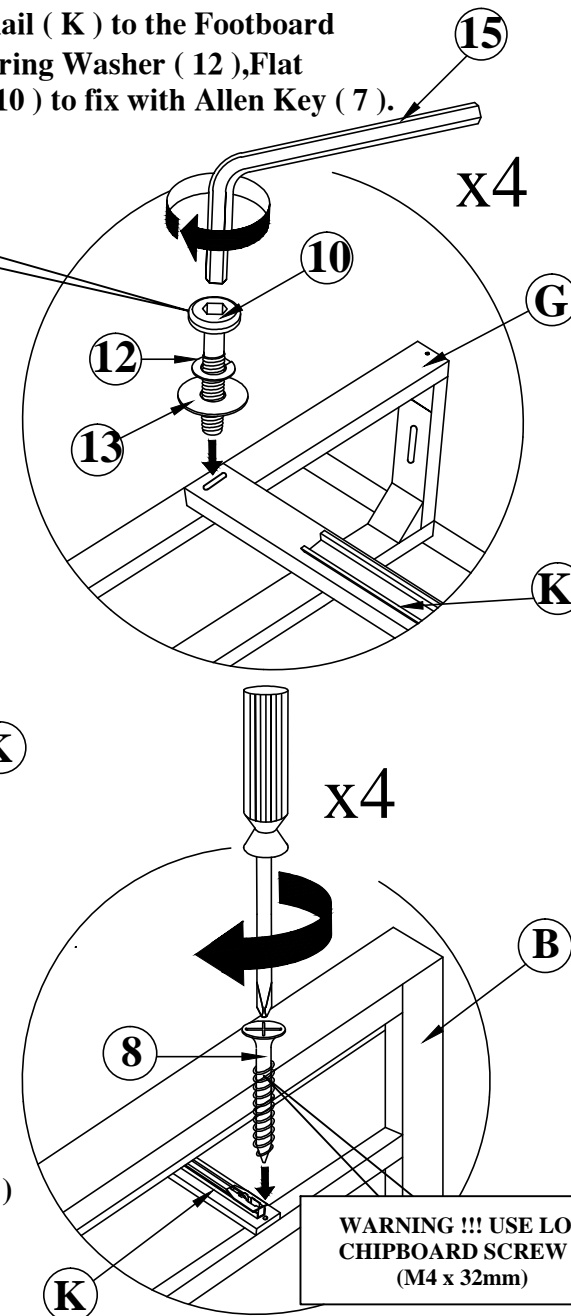

ASSEMBLY INSTRUCTIONS

STEP 10 : Attach Support Leg 2 (M) to the Drawer Support Rail (J).Use JCBC Bolt (11) to fix with Allen Key (15).

**Step 12 : Attach Bed Slat (F) to the Bed Slat Support (L).
Use JCBC Bolt (11) to fix with Allen Key (15).
(Loosen and tighten the Adjuster to stability of bed)**

**WARNING !!! USE LONG BOLT
(M6 x 50mm)**

**" Make sure Support Leg 1 place
as picture shown "**


**STEP 13 : Attach Z-Bracket (14) to the Bed Slat
Support (L) and Support Leg 2 (M).Use
Panhead Screw (9) and tighten with
Screw Driver. (Not Included)**

**STEP 11 : Attach Drawer Support Rail (J) to the
Side Rail (E) using Csk Screw (8) and
tighten with Screw Driver.(Not Included)**

**WARNING !!! USE LONG
CHIPBOARD SCREW
(M4 x 32mm)**

**WARNING !!! USE SHORT
CHIPBOARD SCREW
(M3.5 x 16mm)**

" Make sure follow the arrow as picture show "

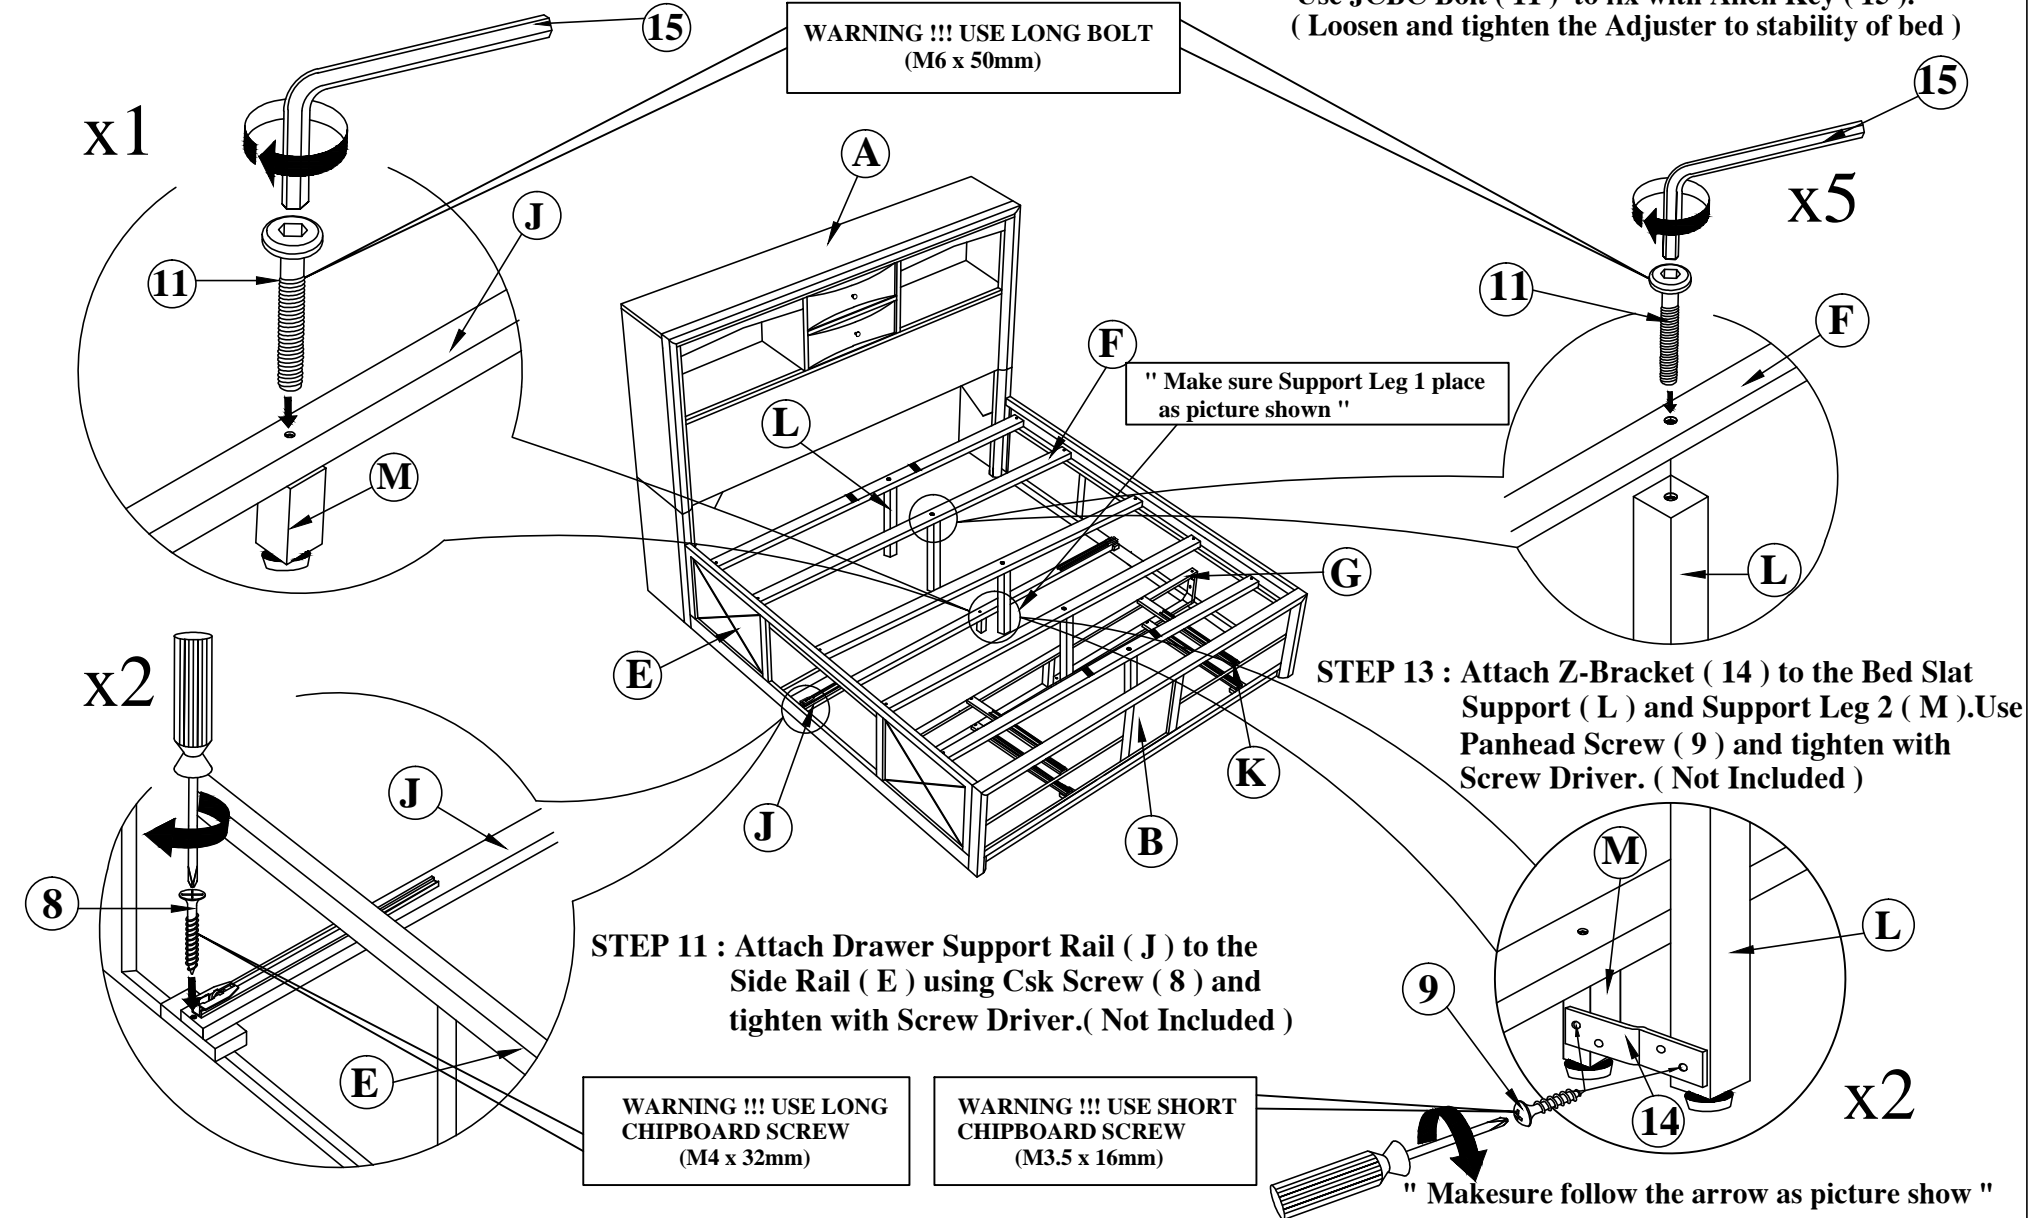


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


PAGE 5 OF 7

ASSEMBLY INSTRUCTIONS


STEP 14 : Attach Drawer-2 (Q) on Drawer Support Rail -1 (J).

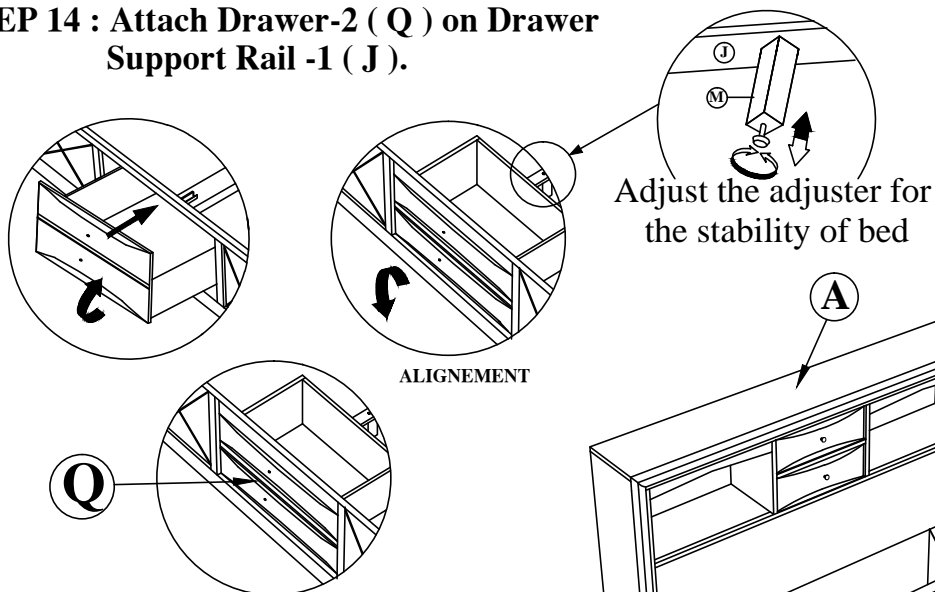


STEP 15 : Attach Drawer-1 (P) on Drawer Support Rail -2 (K).

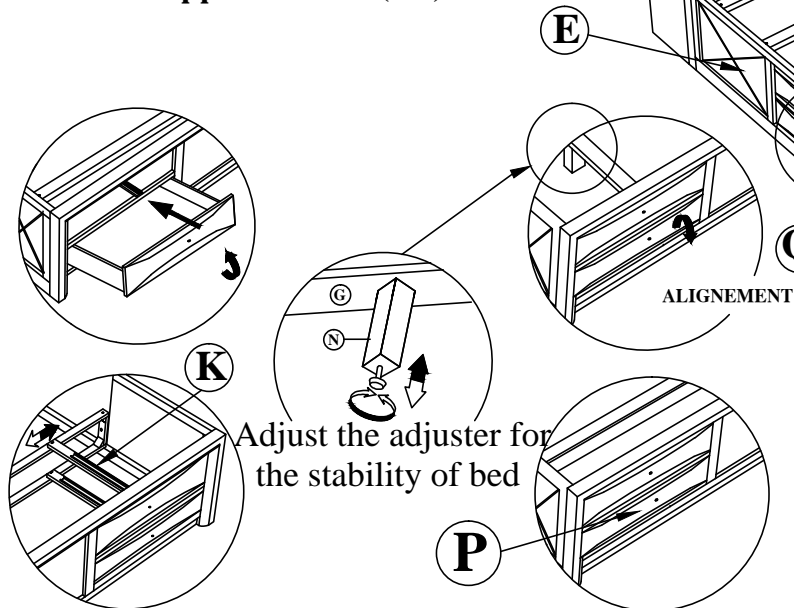

STEP 16 : Install the Handle (16) in front of drawer. Tighten the Handle Screw (18) using Screw Driver.(Not Included)

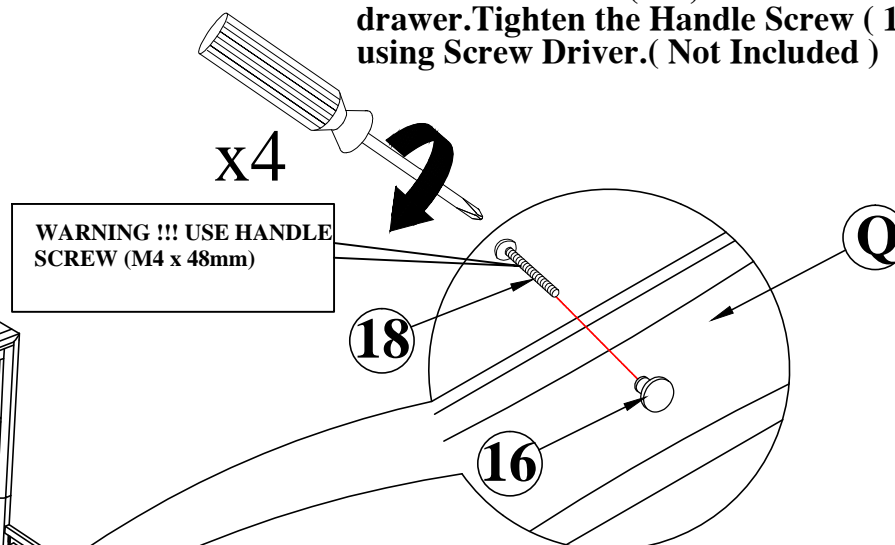

STEP 17 : Install the Handle (16) in front of drawer.Tighten the Handle Screw (17) using Screw Driver.(Not Included)

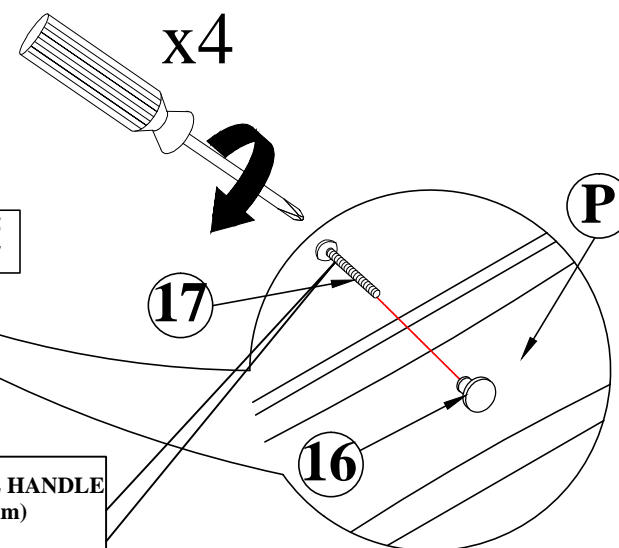


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

ASSEMBLY INSTRUCTIONS

**STEP 18 : Push the Side Rail (E) with Bed Slat (F) and tighten with CSK Screw (8) by using Screw Driver.(Not Included)
(Make sure follow the center Marking Line as shown)**

STEP 20 : Attach Concealed Panel Slat (H) at the Upper Bed Slat (F) using Panhead Screw (9) and tighten with Screw Driver. (Not Included)

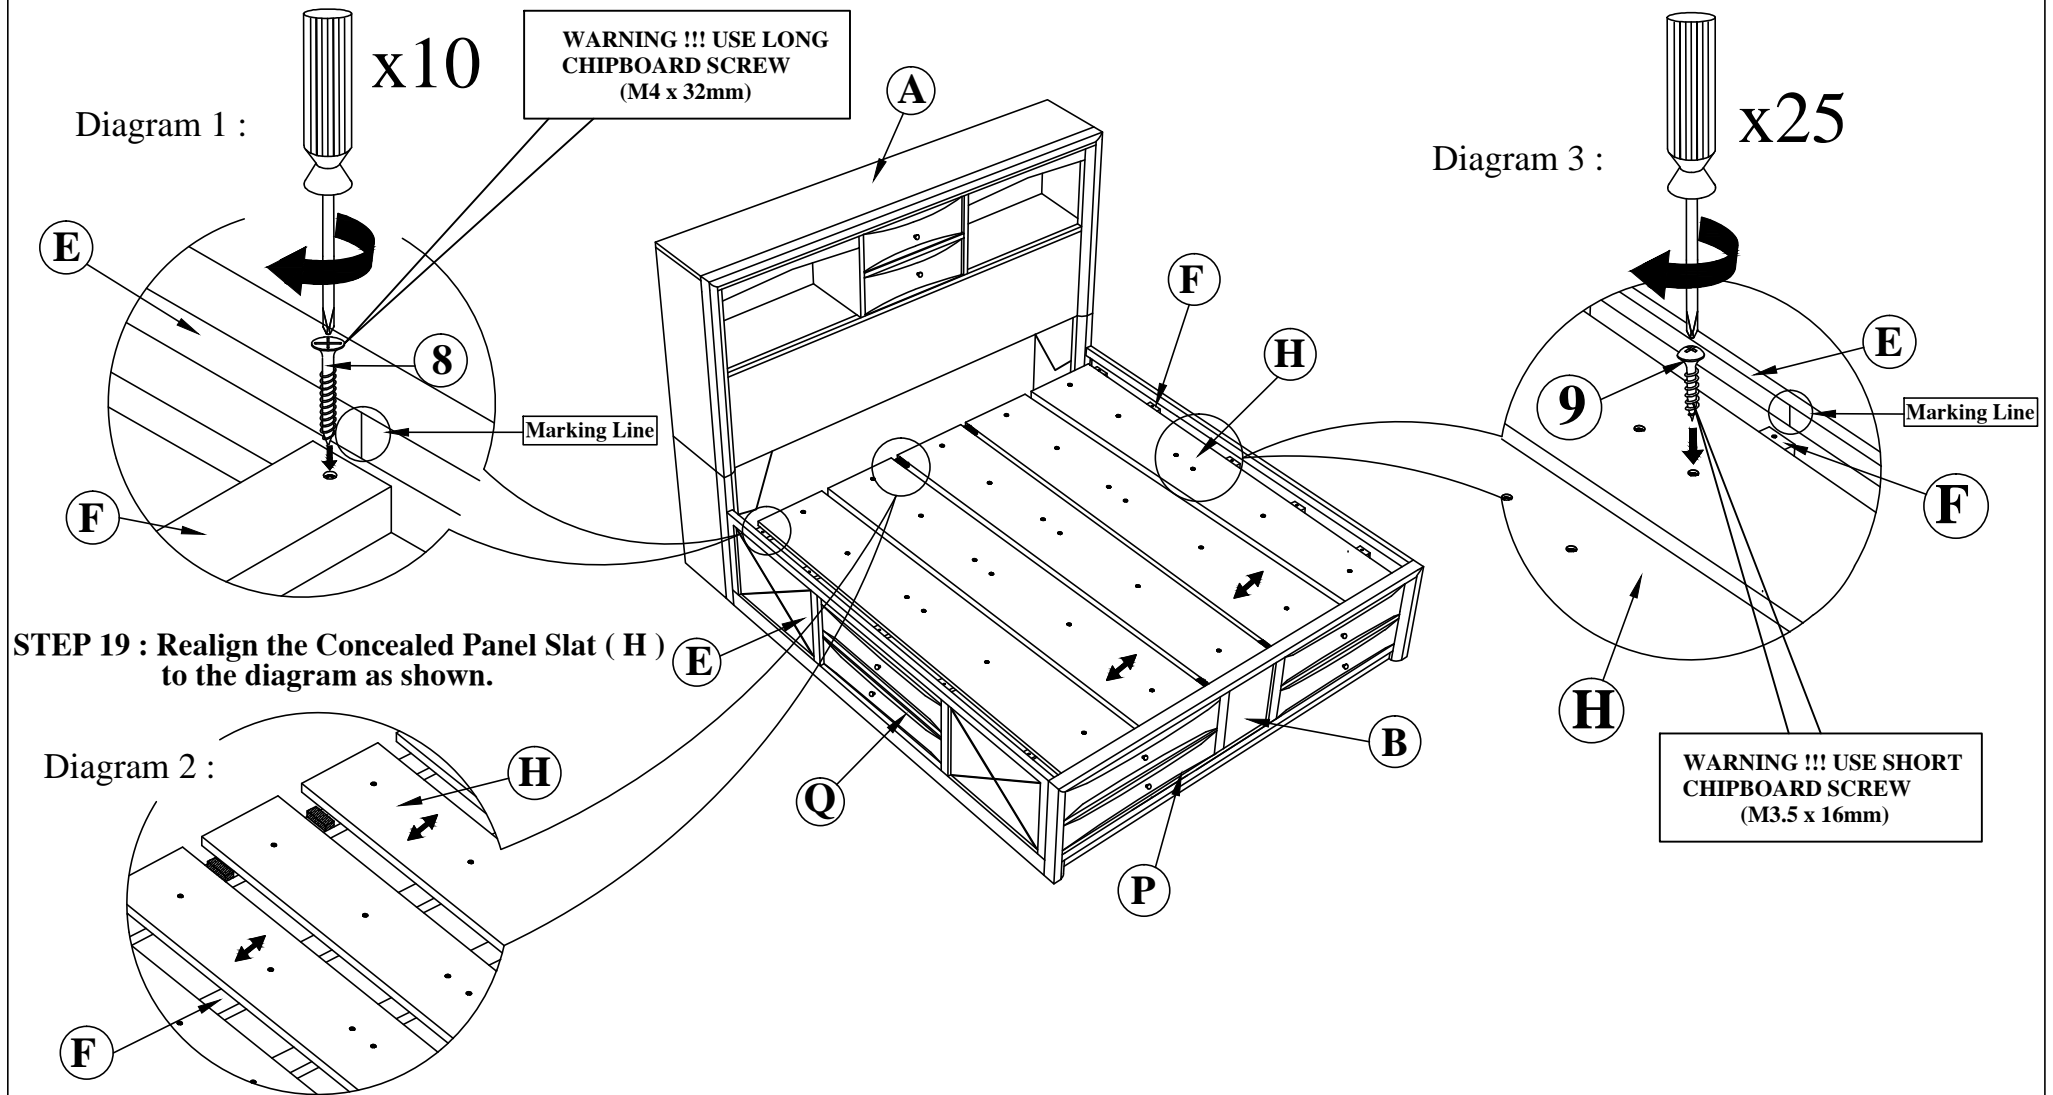

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 7 OF 7