



ITEM NO: I07-412-PEP/BLK-1 Queen Panel HB
I07-402-PEP/BLK-1 Queen Rails
I07-403-PEP/BLK-1 Queen Low Profile FB


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I07-412-1

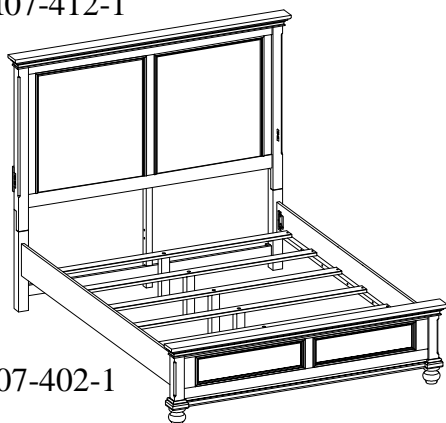

I07-402-1

I07-403-1

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I07-412-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-9/16"		3 PCS
C	Bolt Ø5/16"*1-3/8"		4 PCS
D	Lock Washer Ø5/16"		13 PCS
E	Flat Washer Ø5/16"*3/4"		13 PCS
F	Allen Wrench 5mm		1 PC

HARDWARE LIST: I07-402-1

No.	Description	Sketch	Quantity
G	Wood Screw M4*1-3/16"		12 PCS
H	Hanger Bolt Ø5/16"*3-1/16"		8 PCS
I	Lock Washer Ø5/16"		8 PCS
J	Flat washer Ø5/16"*5/8"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC

COMPONENTS LIST: I07-412-1

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I07-402-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS

COMPONENTS LIST: I07-403-1

No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support leg (for slats)		6 PCS
3	Bun foot		2 PCS



FOR INDOOR USE ONLY



ITEM NO: I07-412-PEP/BLK-1
I07-402-PEP/BLK-1
I07-403-PEP/BLK-1



Queen Panel HB
Queen Rails
Queen Low Profile FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

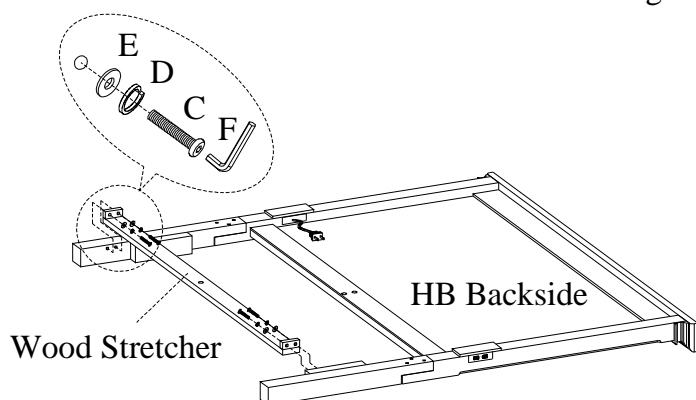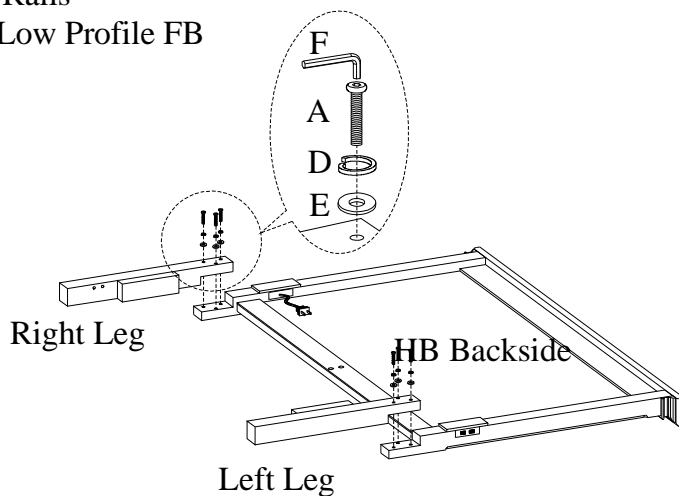


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E).

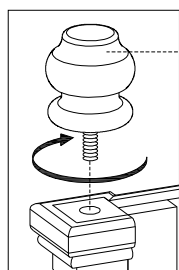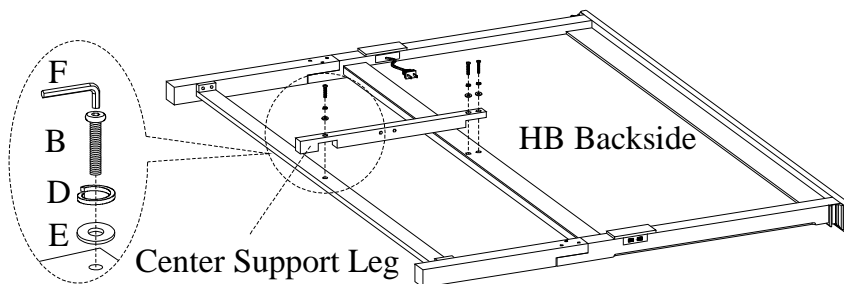


Bun Foot

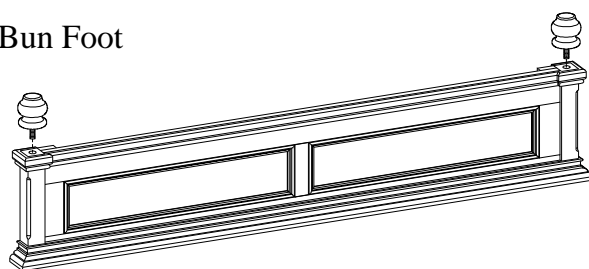

STEP 4: Put footboard upside down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.


STEP 5: The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 6.

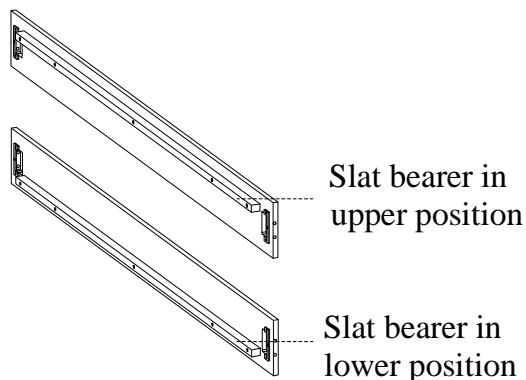




ITEM NO: I07-412-PEP/BLK-1 Queen Panel HB
I07-402-PEP/BLK-1 Queen Rails
I07-403-PEP/BLK-1 Queen Low Profile FB

STEP 6: Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washers(J), lock washers(I) and nuts(K). Then use a hex wrench(L) to tighten all the nuts.

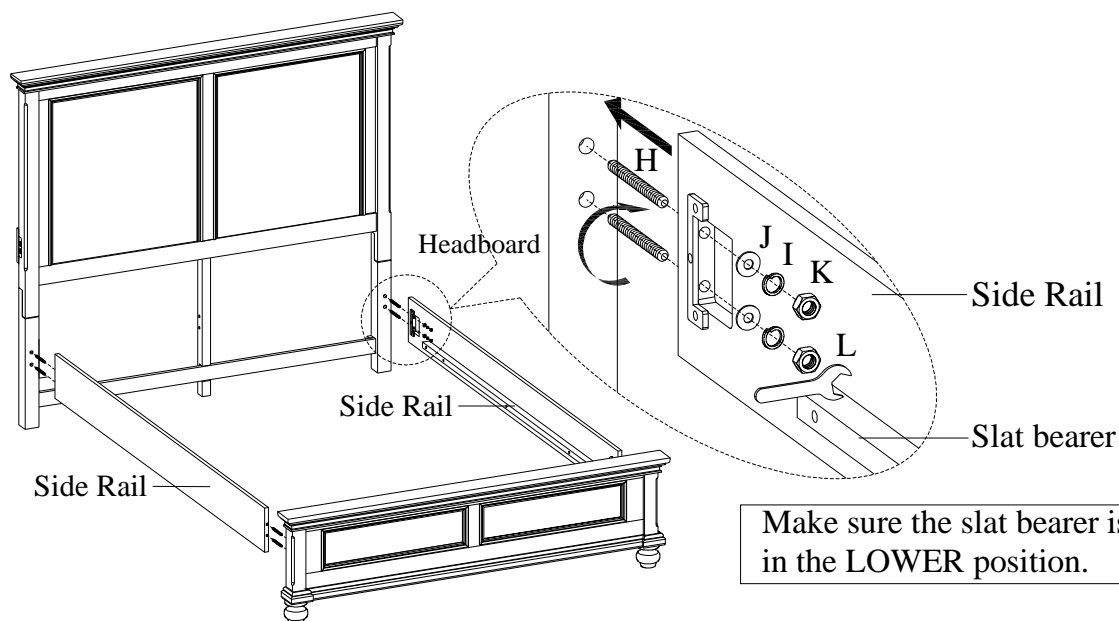

STEP 7: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

STEP 8: Arrange the slats on the slat bearer equally and attach to the slat bearer with wood screws(G).

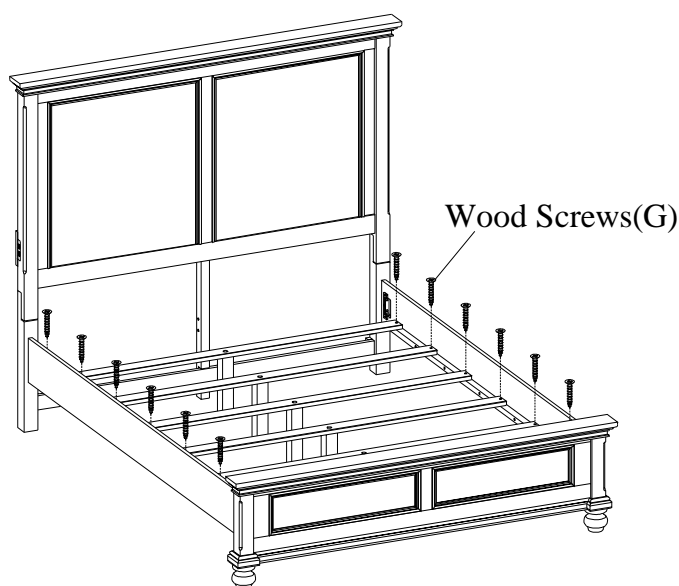




aspenhome®

Distributed by Furniture Values International, LLC

ASSEMBLY INSTRUCTIONS

ITEM NO: I07-412-PEP/BLK-1 Queen Panel HB
I07-402-PEP/BLK-1 Queen Rails
I07-403-PEP/BLK-1 Queen Low Profile FB

FUNCTIONALITY INSTRUCTION

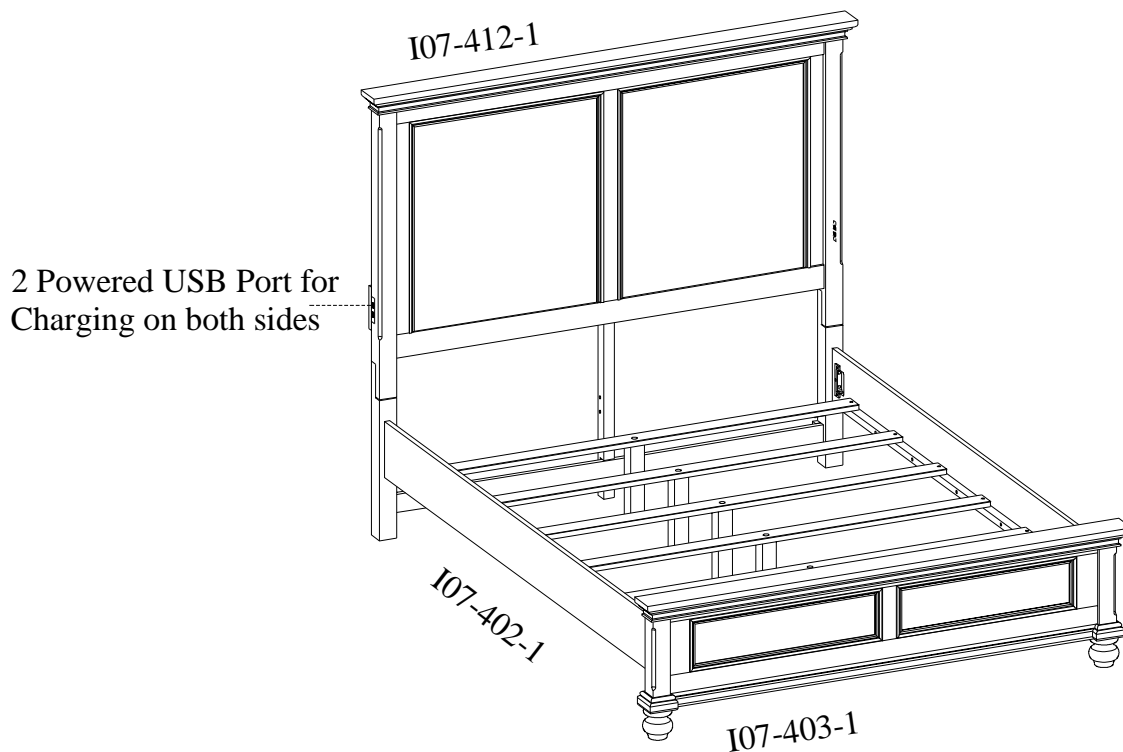




ITEM NO: I07-412-PEP/BLK-1 Queen Panel HB
I07-402-PEP/BLK-1 Queen Rails
I07-403D-PEP/BLK-1 Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

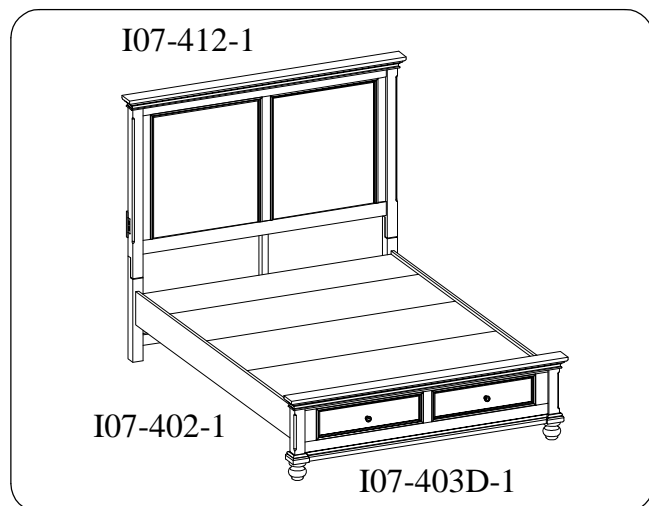

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I07-412-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-9/16"		3 PCS
C	Bolt Ø5/16"*1-3/8"		4 PCS
D	Lock Washer Ø5/16"		13 PCS
E	Flat Washer Ø5/16" *3/4"		13 PCS
F	Allen Wrench 5mm		1 PC

HARDWARE LIST: I07-402-1

No.	Description	Sketch	Quantity
G	Wood Screw M4*1-3/16"		12 PCS
H	Hanger Bolt Ø5/16"*3-1/16"		8 PCS
I	Lock Washer Ø5/16"		8 PCS
J	Flat washer Ø5/16"*5/8"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC

HARDWARE LIST: I07-403D-1

No.	Description	Sketch	Quantity
M	Wood Screw M4*1		8 PCS
N	Bolt Ø5/16"*1-3/16"		8 PCS
O	Lock Washer Ø5/16"		8 PCS
P	Flat washer Ø5/16"*3/4"		8 PCS
Q	Allen Wrench 5mm		1 PC

COMPONENTS LIST: I07-412-1

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I07-402-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS

COMPONENTS LIST: I07-403D-1

No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support Leg (for center rail)		2 PCS
3	Support Leg (for pedestal)		3 PCS
4	Decking		4 PCS
5	Center rail (Short)		1 PCS
6	Bun foot		2 PCS



FOR INDOOR USE ONLY



ITEM NO: I07-412-PEP/BLK-1
I07-402-PEP/BLK-1
I07-403D-PEP/BLK-1


Queen Panel HB
Queen Rails
Queen Storage FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).


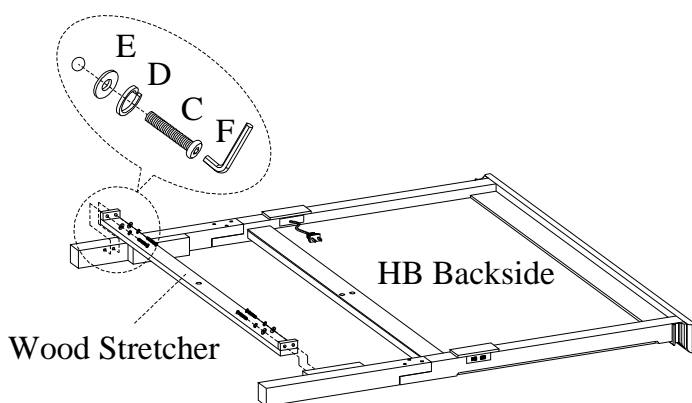
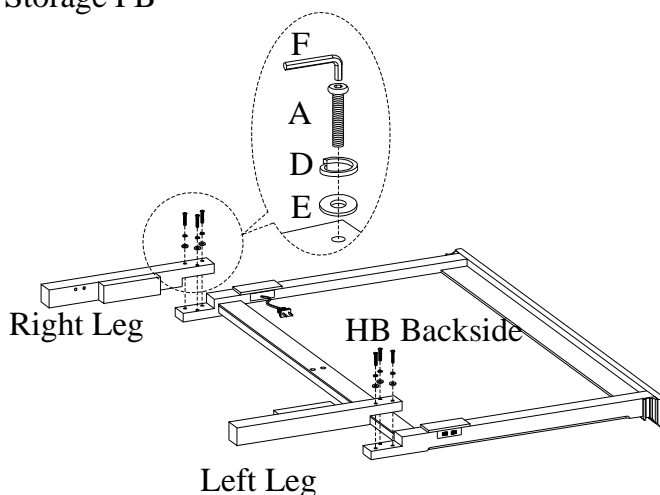


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E).

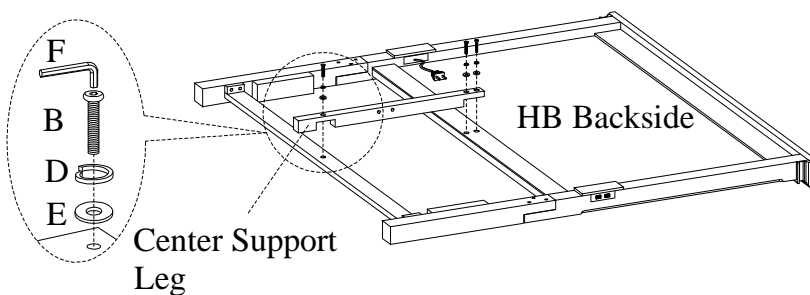


STEP 4: Put footboard upside down on a padded, clean surface. Attach support legs (for pedestal) and bun feet to footboard. Turn footboard right side up.

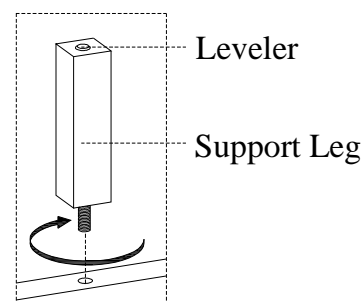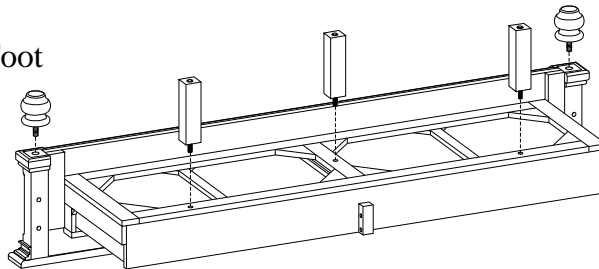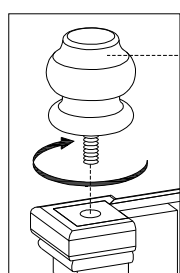


ASSEMBLY INSTRUCTIONS

Queen Panel HB
Queen Rails
Queen Storage FB


STEP 5: The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment in STEP 6.

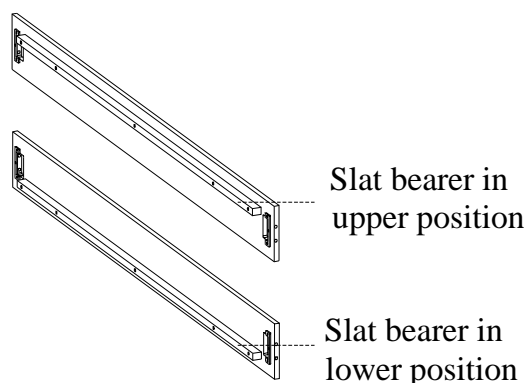

STEP 6: Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washers(J), lock washers(I) and nuts(K).Then use a hex wrench(L) to tighten all the nuts.

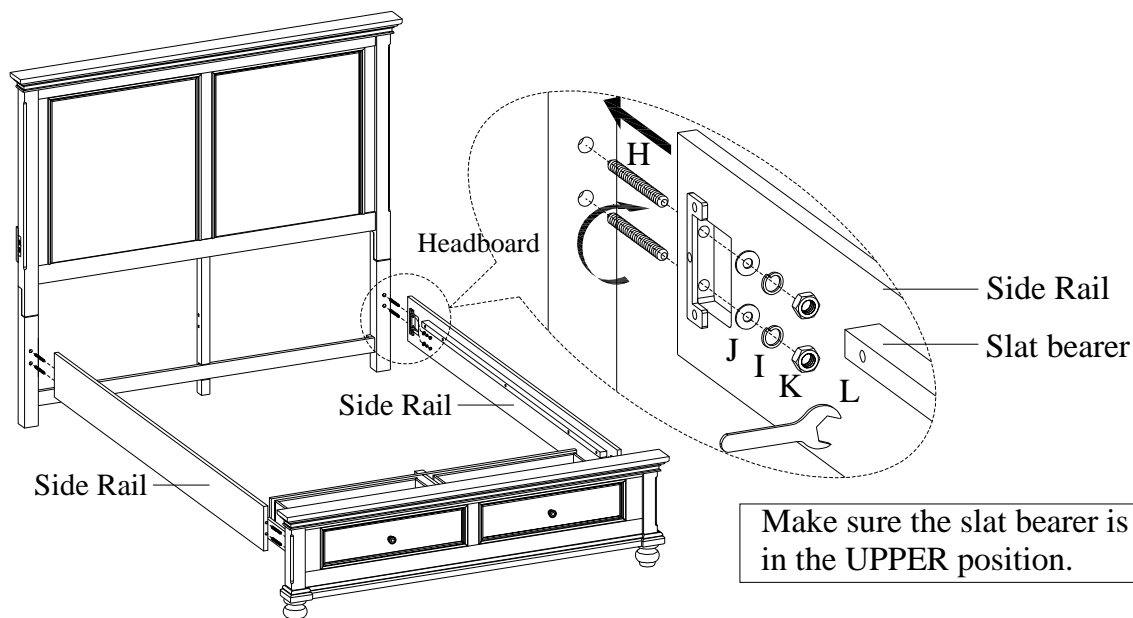

STEP 7: Attach center rail to the footboard and center support leg of headboard using 4 bolts(N), lock washers(O) and flat washers(P).

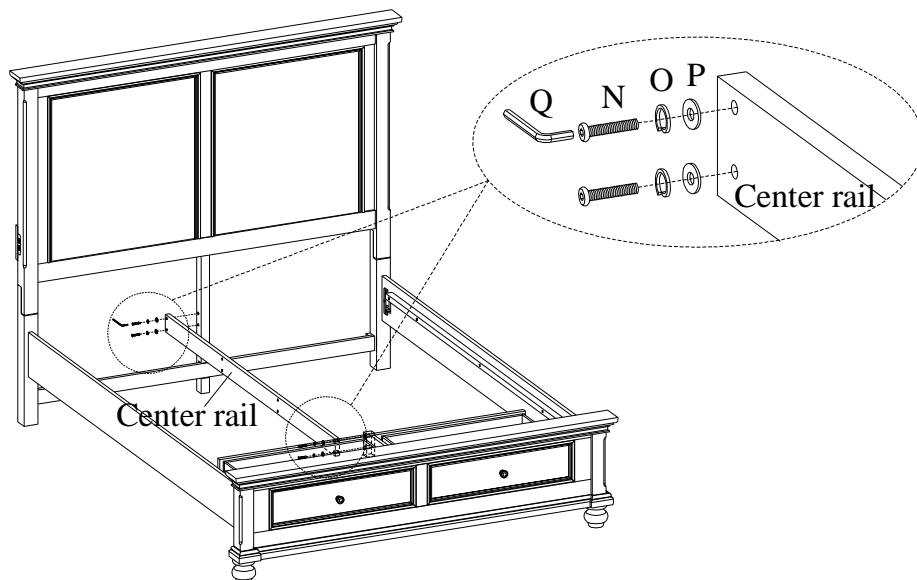





aspenhome®

Distributed by Furniture Values International, LLC

ASSEMBLY INSTRUCTIONS


ITEM NO: I07-412-PEP/BLK-1 Queen Panel HB
I07-402-PEP/BLK-1 Queen Rails
I07-403D-PEP/BLK-1 Queen Storage FB

STEP 8: Attach 2 support legs (for center rail) to the center rail using 4 bolts(N), lock washers(O) and flat washers(P). Use the Allen Wrench (Q) to tighten all of the bolts.

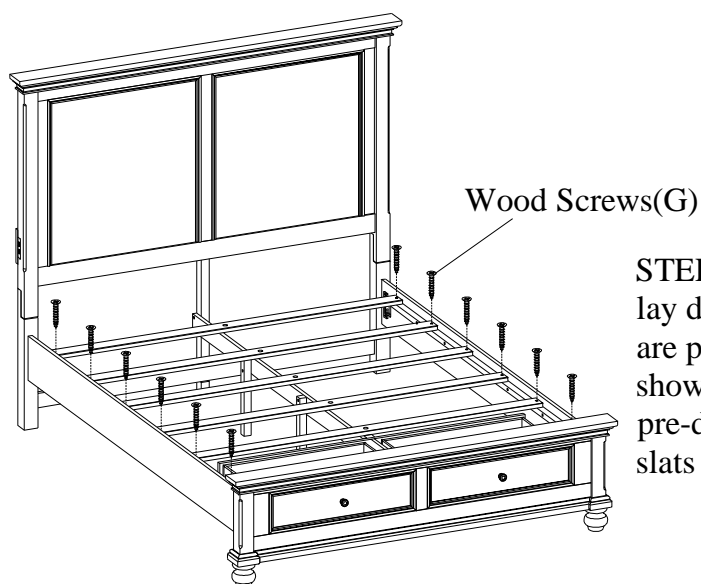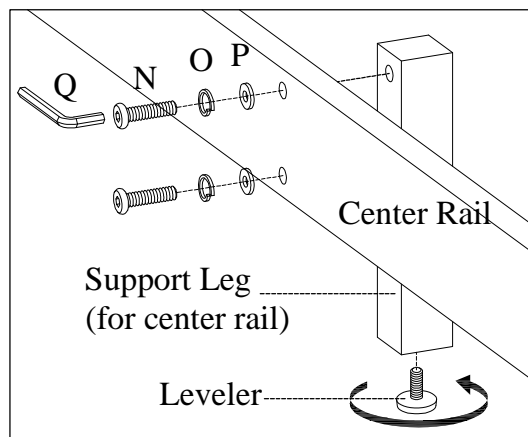

STEP 9: Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 9 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws(G).

STEP 10: Put the decking over the slats, secure decking to the slats with wood screws(M) through the pre-drilled holes in the decking as shown below.

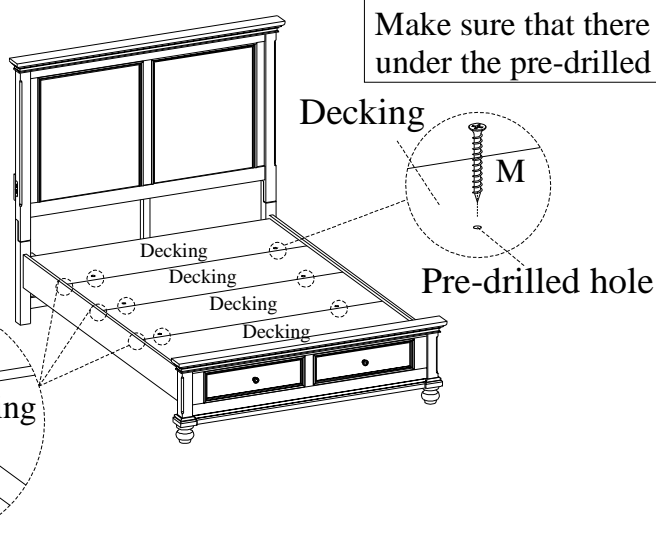


Make sure that there is a slat under the pre-drilled hole.

The slat should support both pieces of decking.



ITEM NO: I07-412-PEP/BLK-1	Queen Panel HB
I07-402-PEP/BLK-1	Queen Rails
I07-403D-PEP/BLK-1	Queen Storage FB

FUNCTIONALITY INSTRUCTION

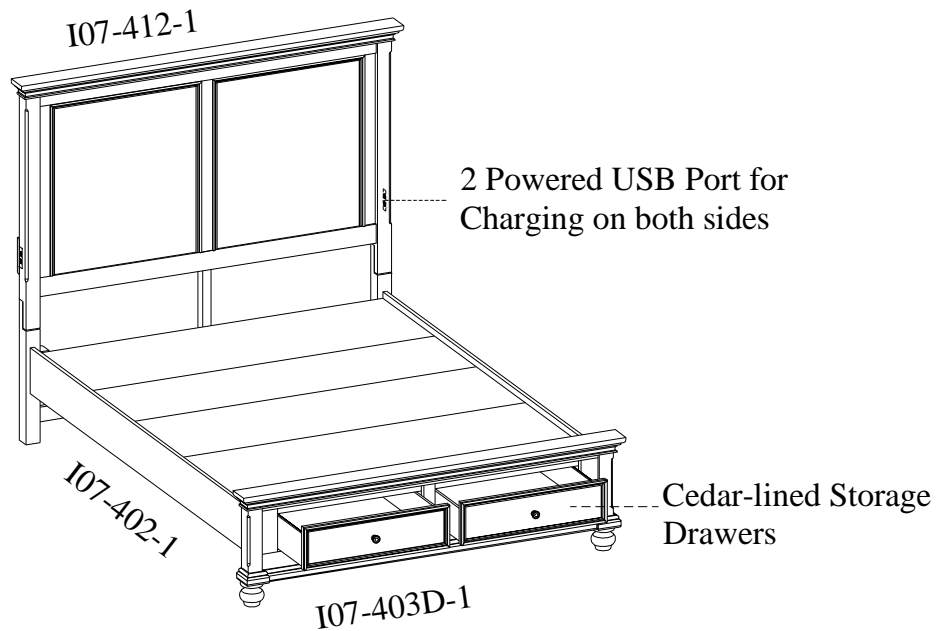

ITEM NO: I07-415-PEP/BLK-1 King Panel HB
 I07-406-PEP/BLK-1 King Rails
 I07-410-PEP/BLK-1 Cal King Rails
 I07-407-PEP/BLK-1 King Low Profile FB


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I07-415-1

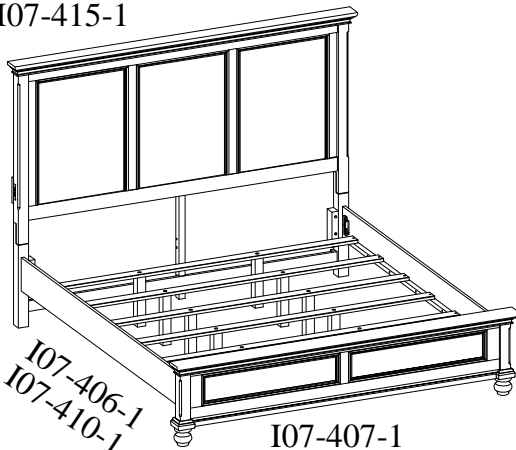

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I07-415-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-9/16"		3 PCS
C	Bolt Ø5/16"*1-3/8"		4 PCS
D	Lock Washer Ø5/16"		13 PCS
E	Flat Washer Ø5/16" *3/4"		13 PCS
F	Allen Wrench 5mm		1 PC

HARDWARE LIST: I07-406-1/410-1

No.	Description	Sketch	Quantity
G	Wood Screw M4*1-3/16"		12 PCS
H	Hanger Bolt Ø5/16"*3-1/16"		8 PCS
I	Lock Washer Ø5/16"		8 PCS
J	Flat washer Ø5/16"*5/8"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Cap (Only for 410)		8 PCS

COMPONENTS LIST: I07-415-1

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I07-406-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS

COMPONENTS LIST: I07-410-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I07-407-1

No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support leg (for slats)		12 PCS
3	Bun foot		2 PCS

FOR INDOOR USE ONLY





aspenhome®

Distributed by Furniture Values International, LLC

ASSEMBLY INSTRUCTIONS



ITEM NO: I07-415-PEP/BLK-1 King Panel HB
I07-406-PEP/BLK-1 King Rails
I07-410-PEP/BLK-1 Cal King Rails
I07-407-PEP/BLK-1 King Low Profile FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

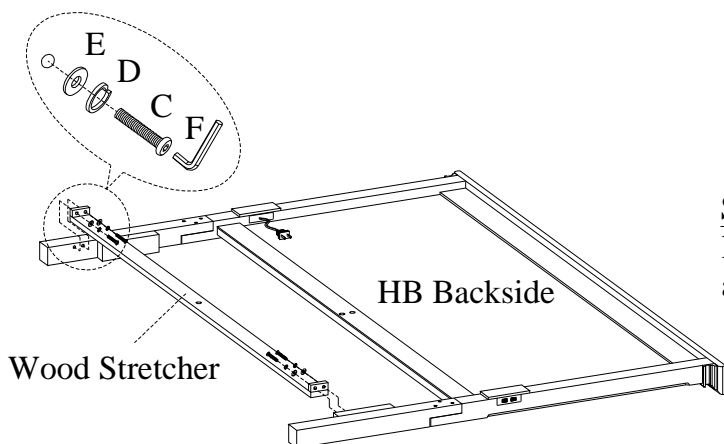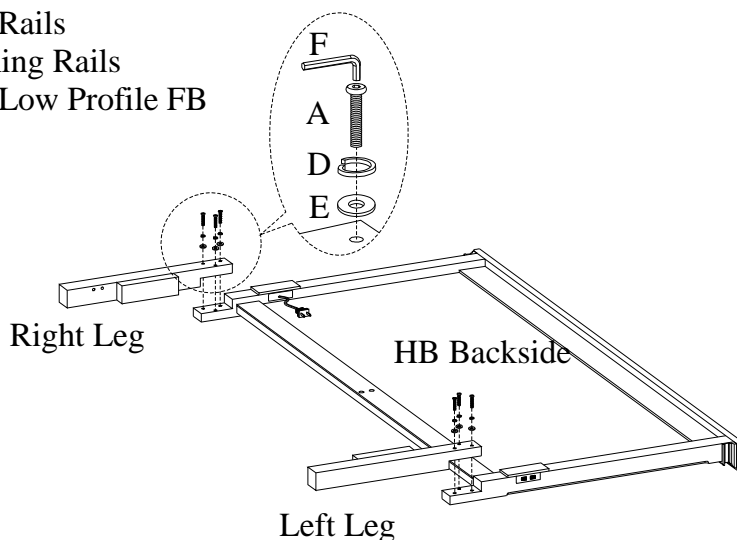


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E).

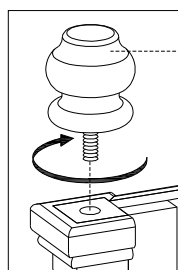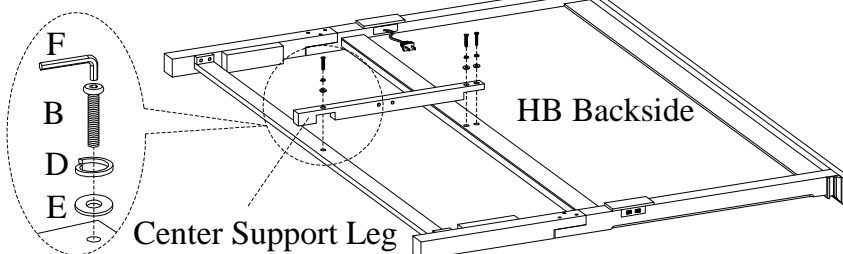


Bun Foot

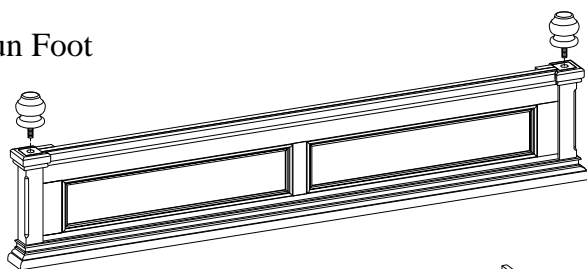


STEP 4: Put footboard upside down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.

STEP 5: The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 6.


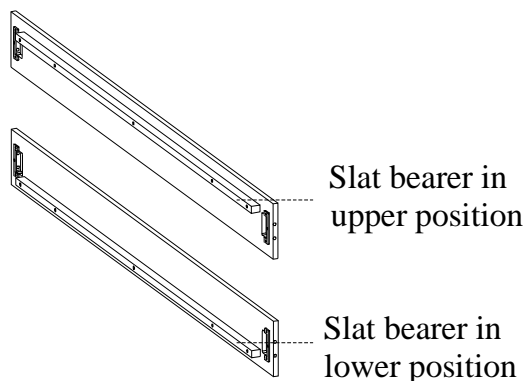


ITEM NO: I07-415-PEP/BLK-1 King Panel HB
 I07-406-PEP/BLK-1 King Rails
 I07-410-PEP/BLK-1 Cal King Rails
 I07-407-PEP/BLK-1 King Low Profile FB

STEP 6: Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(J), lock washers(I) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

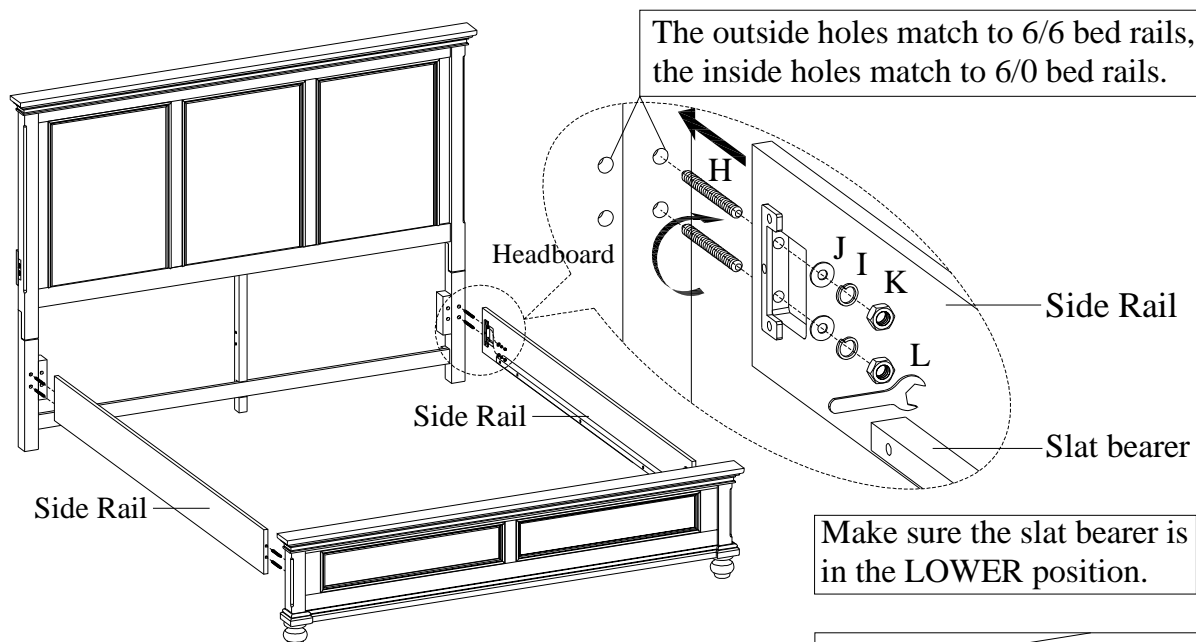


STEP 7: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

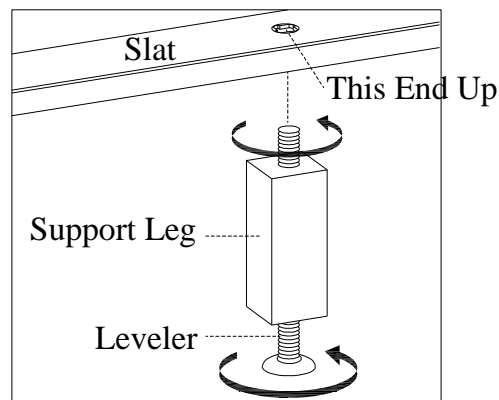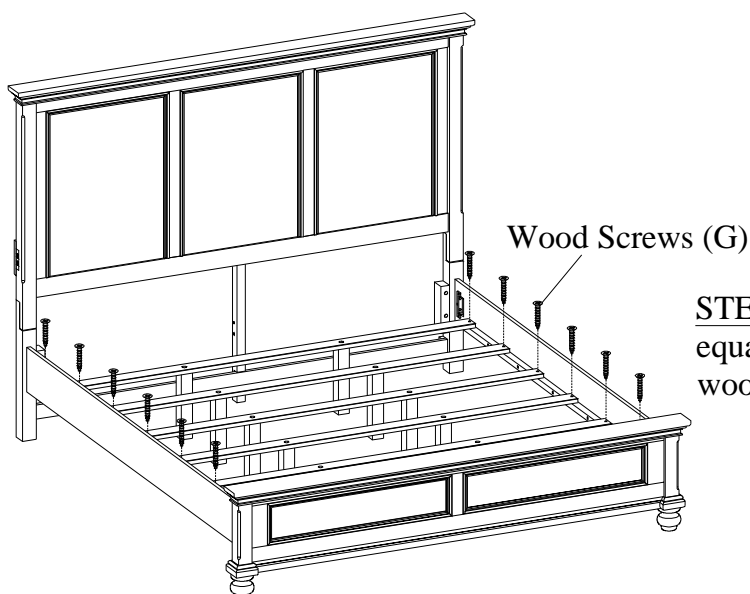

STEP 8: Arrange the slats on the slat bearer equally and attach to the slat bearer with wood screws(G).

STEP 9: For Cal King bed, insert wood caps(M) into the holes on headboard and footboard. For regular King bed, skip this step.

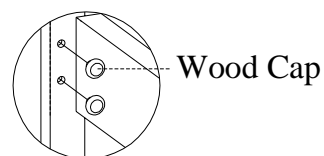





ITEM NO: I07-415-PEP/BLK-1	King Panel HB
I07-406-PEP/BLK-1	King Rails
I07-410-PEP/BLK-1	Cal King Rails
I07-407-PEP/BLK-1	King Low Profile FB

FUNCTIONALITY INSTRUCTION

2 Powered USB Port for
Charging on both sides

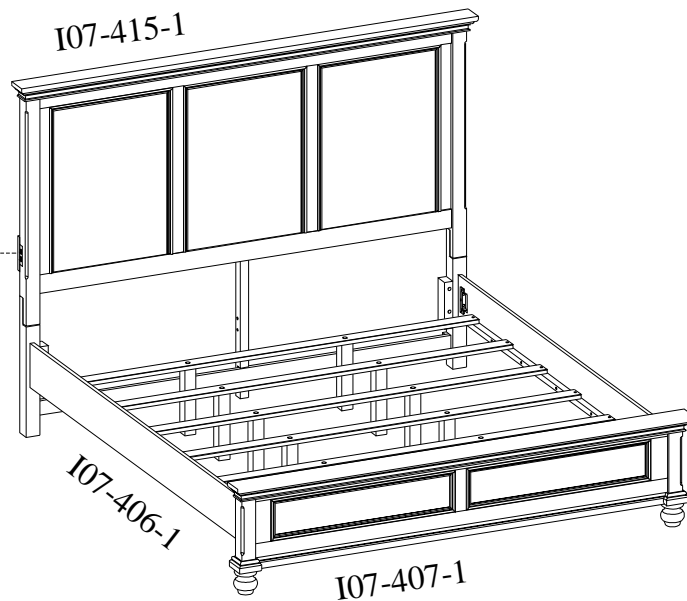

2 Powered USB Port for
Charging on both sides

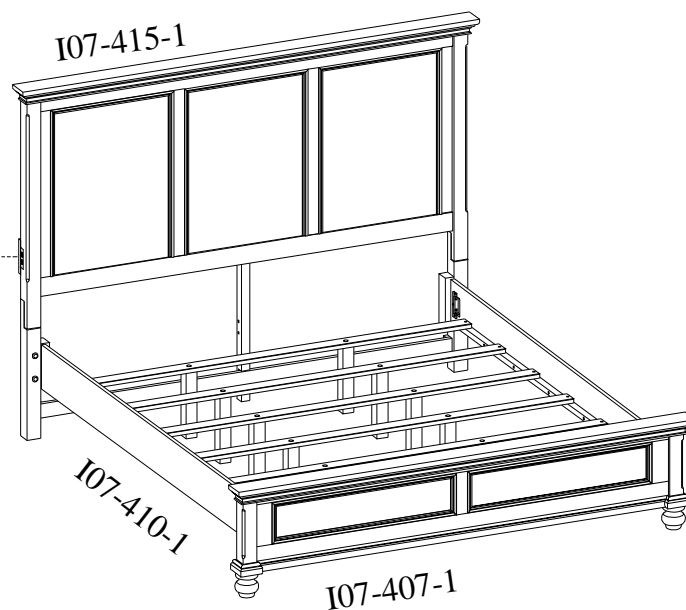

ITEM NO: I07-415-PEP/BLK-1 King Panel HB
 I07-406-PEP/BLK-1 King Rails
 I07-410-PEP/BLK-1 Cal King Rails
 I07-407D-PEP/BLK-1 King Storage FB


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I07-415-1

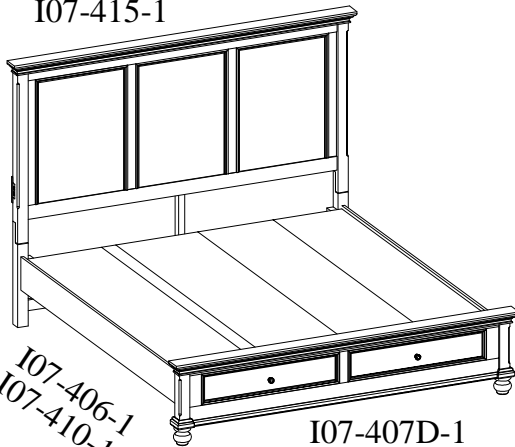

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

UTILITY KNIFE (FOR CAL KING)

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I07-415-1

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-9/16"		3 PCS
C	Bolt Ø5/16"*1-3/8"		4 PCS
D	Lock Washer Ø5/16"		13 PCS
E	Flat Washer Ø5/16"*3/4"		13 PCS
F	Allen Wrench 5mm		1 PC

HARDWARE LIST: I07-406-1/410-1

No.	Description	Sketch	Quantity
G	Wood Screw M4*1-3/16"		12 PCS
H	Hanger Bolt Ø5/16"*3-1/16"		8 PCS
I	Lock Washer Ø5/16"		8 PCS
J	Flat washer 5/16"*5/8"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Cap (Only for 410)		8 PCS

HARDWARE LIST: I07-407D-1

No.	Description	Sketch	Quantity
N	Wood Screw M4*1		6 PCS
O	Bolt Ø5/16"*1-3/16"		8 PCS
P	Lock Washer Ø5/16"		8 PCS
Q	Flat washer Ø5/16"*3/4"		8 PCS
R	Allen Wrench 5mm		1 PC

COMPONENTS LIST: I07-415-1

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I07-406-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PC
2	Slats		6 PC

COMPONENTS LIST: I07-410-1

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		6 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I07-407D-1



No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support Leg (for center rail)		2 PCS
3	Support leg (for pedestal)		3 PCS
4	Decking		4 PCS
5	Center rail (Short)		1 PCS
6	Filler		1 PCS
7	Bun foot		2 PCS

FOR INDOOR USE ONLY




ITEM NO: I07-415-PEP/BLK-1 King Panel HB
I07-406-PEP/BLK-1 King Rails
I07-410-PEP/BLK-1 Cal King Rails
I07-407D-PEP/BLK-1 King Storage FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

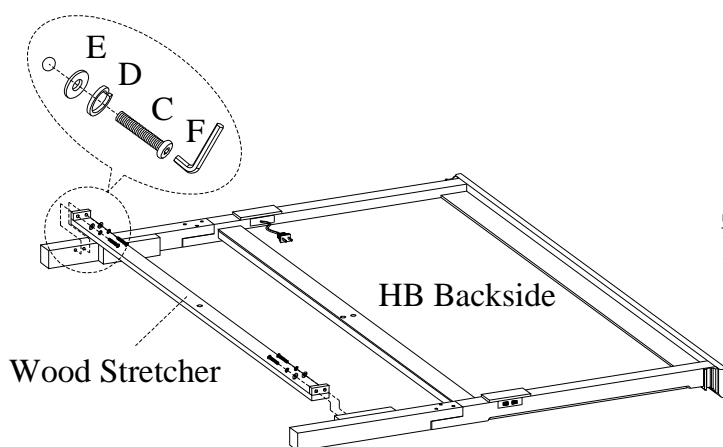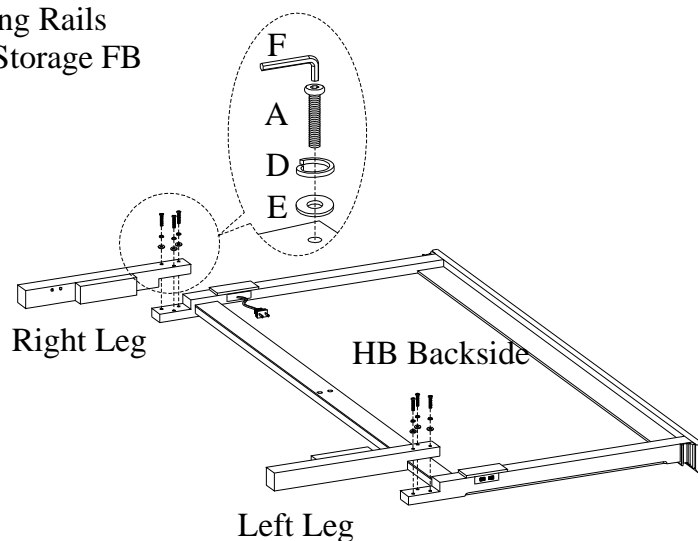


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(C), lock washers(D) and flat washers(E).



STEP 3: Attach the center support leg to headboard and wood stretcher by using 3 bolts(B), lock washers(D) and flat washers(E).

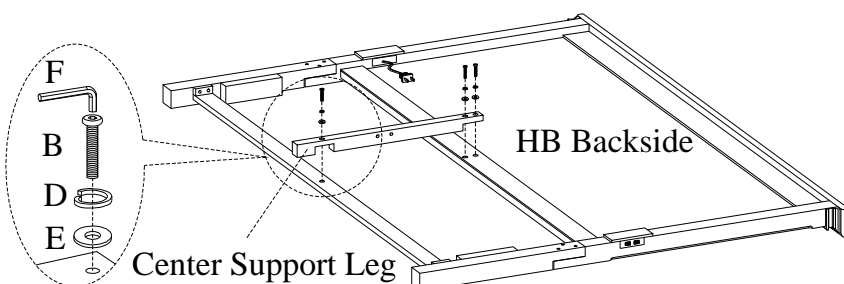

STEP 4: Put footboard upside down on a padded, clean surface. Attach support legs (for pedestal) and bun feet to footboard. Turn footboard right side up.

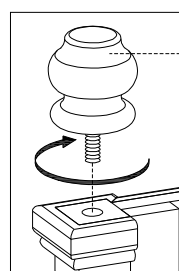

Bun Foot

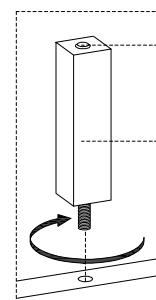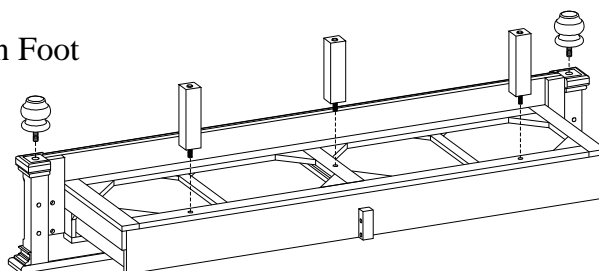


Leveler


Support Leg

ITEM NO: I07-415-PEP/BLK-1 King Panel HB
 I07-406-PEP/BLK-1 King Rails
 I07-410-PEP/BLK-1 Cal King Rails
 I07-407D-PEP/BLK-1 King Storage FB


STEP 5: The side rails may be used on either side.
 Arrange the side rails so the slat bearers are in
 UPPER POSITION prior to attachment in STEP 6.

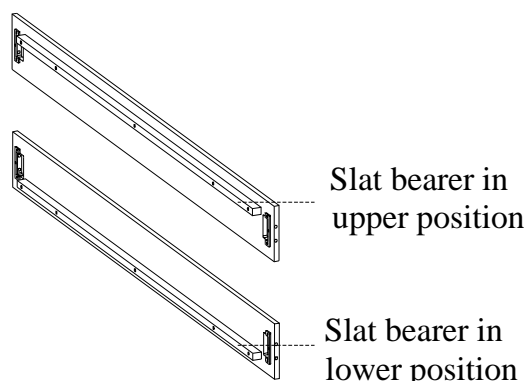

STEP 6: Screw the bolts(H) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(J), lock washers(I) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.


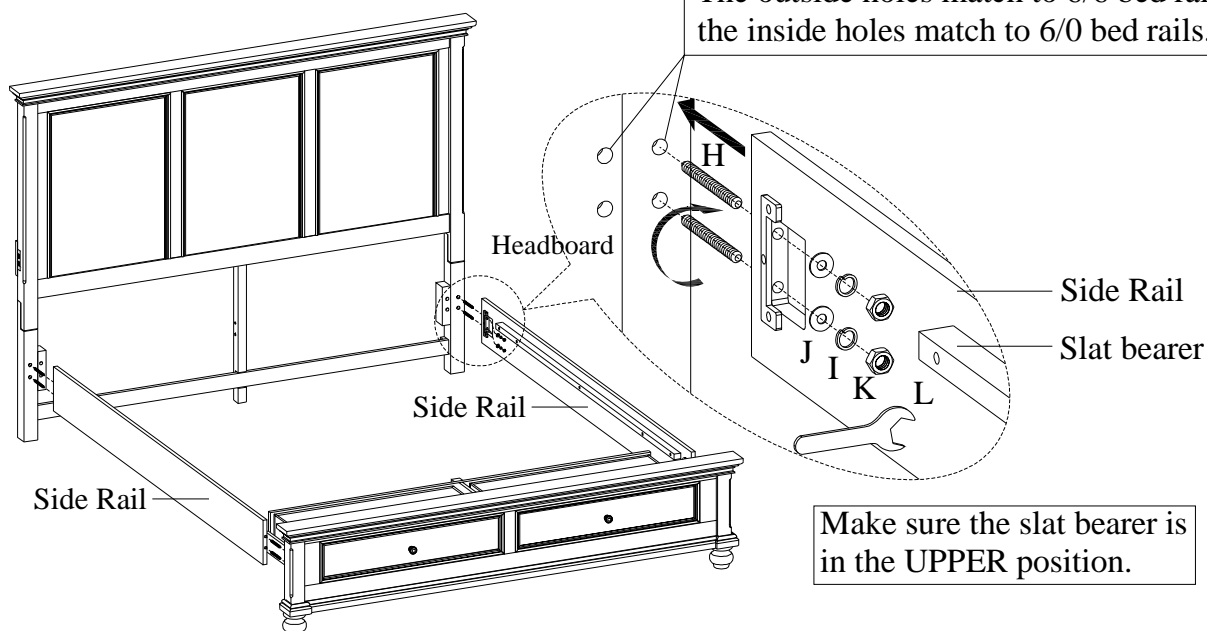


STEP 7: Attach center rail to the footboard and center support leg of headboard using 4 bolts(O), lock washers(P) and flat washers(Q).

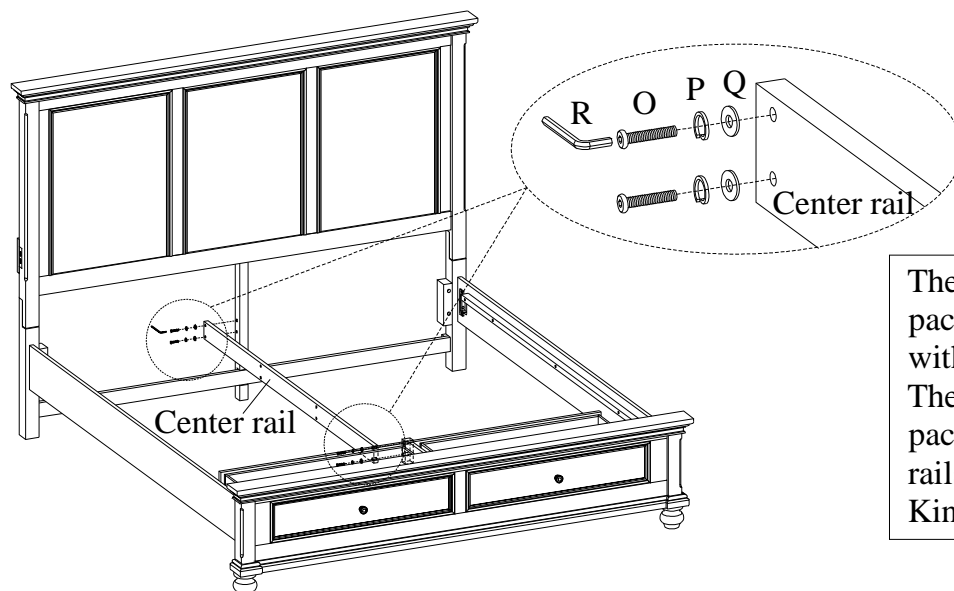


ITEM NO: I07-415-PEP/BLK-1 King Panel HB
 I07-406-PEP/BLK-1 King Rails
 I07-410-PEP/BLK-1 Cal King Rails
 I07-407D-PEP/BLK-1 King Storage FB

STEP 8: Attach 2 support legs (for center rail) to the center rail using 4 bolts(O), lock washers(P) and flat washers(Q). Use the Allen Wrench (R) to tighten all of the bolts.

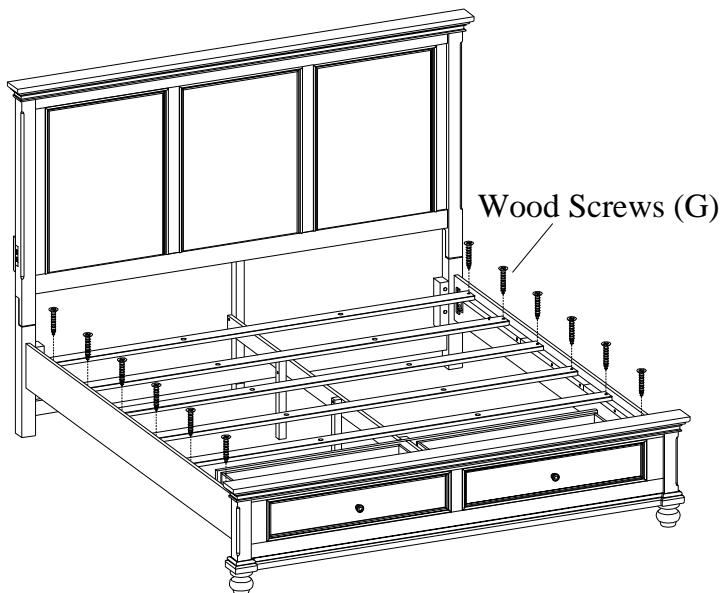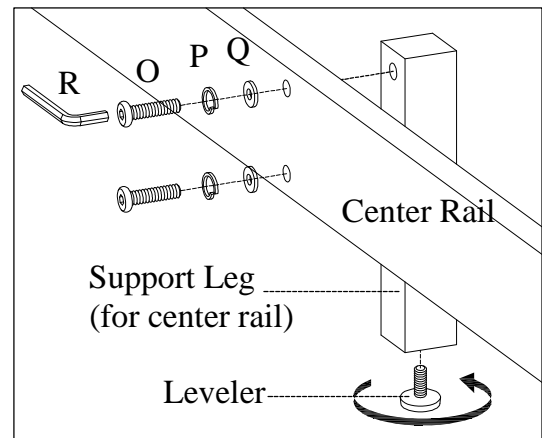


STEP 9: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 11. Remove the decking and attach slats to the slat bearers with wood screws(G).


STEP 10: For Cal King bed, use a utility knife to cut off the small piece at the notch and discard. For regular King bed, skip this step.

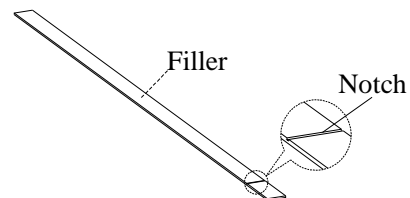

STEP 11: Put the decking over the slats, secure decking to the slats with wood screws(N) through the pre-drilled holes in the decking as shown below.

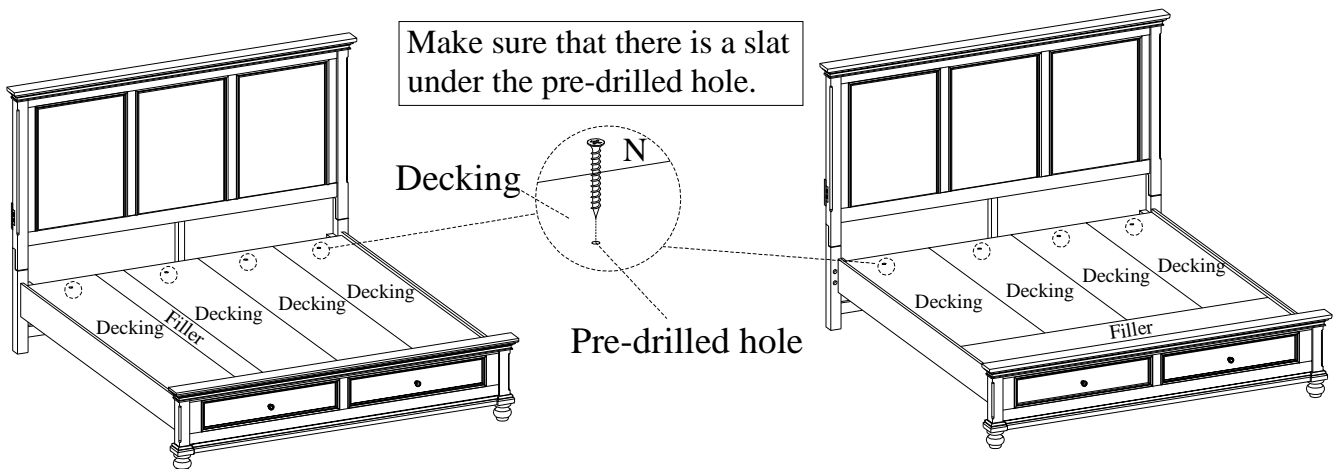

STEP 12: For Cal King bed, insert wood caps(M) into the holes on headboard and footboard. For regular King bed, skip this step.

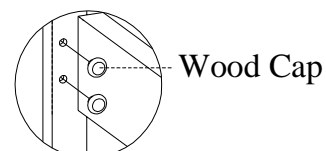



ITEM NO: I07-415-PEP/BLK-1	King Panel HB
I07-406-PEP/BLK-1	King Rails
I07-410-PEP/BLK-1	Cal King Rails
I07-407D-PEP/BLK-1	King Storage FB

FUNCTIONALITY INSTRUCTION

