ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED

B-13030-3-QH/ B-13030-3-QF/ B-13030-3-QKR

B-13030-5-QH/ B-13030-5-QF/ B-13030-5-QKR

B-13030-7-QH/ B-13030-7-QF/ B-13030-7-QKR


Cautions: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in parking.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton druring shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST FOR HEADBOARD					
No.	Part description	Code.	Q'ty		
A	QUEEN PANEL HEADBOARD		1		
B1	HEADBOARD LEFT LEG	PB-13030-3-HBLEG1 PB-13030-5-HBLEG1 PB-13030-7-HBLEG1	1		
B2	HEADBOARD RIGHT LEG	PB-13030-3-HBLEG2 PB-13030-5-HBLEG2 PB-13030-7-HBLEG2	1		
С	BOTTOM STRETCHER	PB-13030-3-QHSTR PB-13030-5-QHSTR PB-13030-7-QHSTR	1		

HARDWARE LIST								
No.		Hardware Description	Code.	Q'ty				
1	() mm 1111111111	Bolt (Ø1/4" x 1 3/4")	PB-13030-KBHW1	10				
2	ð	Lock Washer (Ø1/4" x 3/8")		10				
3	0	Small Flat washer (Ø1/4"x1/2")		10				
4		Allen key (4 x 59mm)		1				
HeadBoard Hardware Packed with HeadBoard								

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

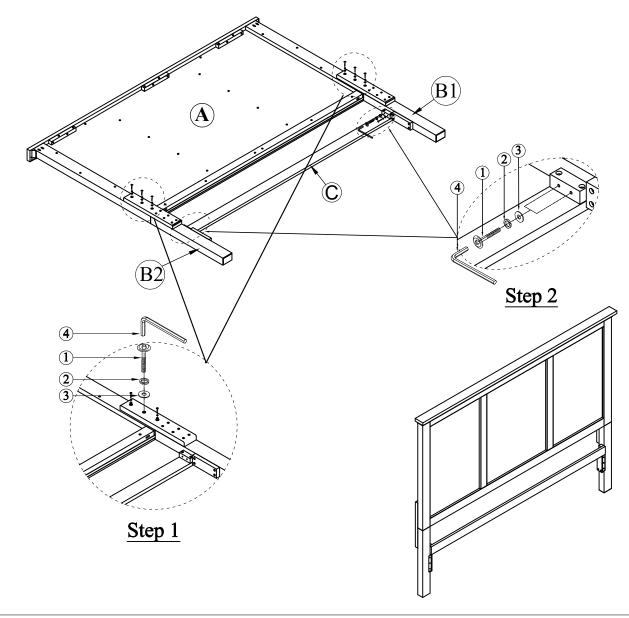

ASSEMBLY INSTRUCTION FOR

QUEEN PANEL BED

B-13030-3-QH/ B-13030-3-QF/ B-13030-3-QKR

B-13030-5-QH/ B-13030-5-QF/ B-13030-5-QKR

B-13030-7-QH/B-13030-7-QF/B-13030-7-QKR

PART LIST FOR FOOTBOARD					
No.	Part Description	Code	Q'ty		
D	QUEEN PANEL FOOTBOARD		1		
Е	QUEEN/KING SIDE RAIL		2		
F	SLAT FOR SUPPORT LEG	PB-13030-QSFSLT1	4		
G	SLATS SUPPORT LEG WITH LEVELER	PB-13030-BDSPL1	4		

HARDWARE LIST							
No	Hardware Description Code Q'ty			Q'ty			
5	()111 11111	Short Bolt (Ø5/16" x 1")	PB-13030-KBHW1	12			
6	_	Allen key(4 x 59mm)	1 D-13030-KB11W1	1			
RAILS HARDWARE PACKED WITH RAIL							
7	(†)	Screw (Ø4 x 30mm)	PB-13030-KBHW1	8			
FOOTBOARD HARDWARE PACKED WITH FOOTBOARD							

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

