


King Storage Bed



CROWNMARK:
B4277/B4288-K-HBFB
B4277/B4288-K-RAIL
B4277/B4288-KQ-DRW

Assembly Installation Guide

DESCRIPTION:
King Headboard
King Footboard
King Side Rails
King Slat & Support Legs
Storage Drawer

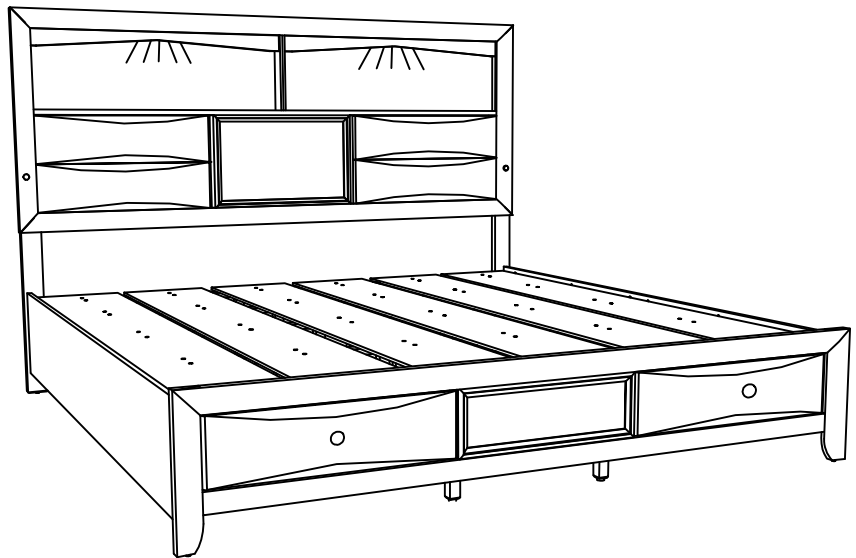

INSTALLATION AREA

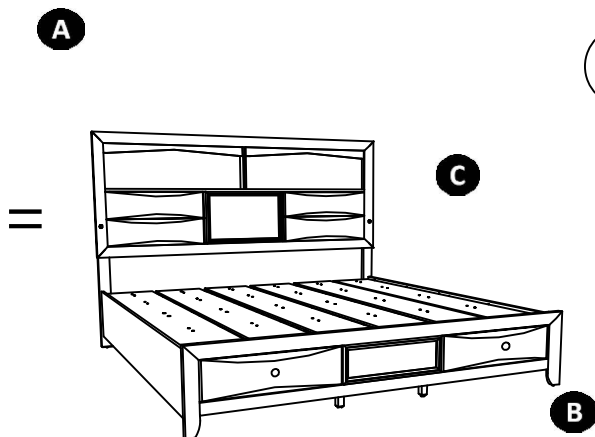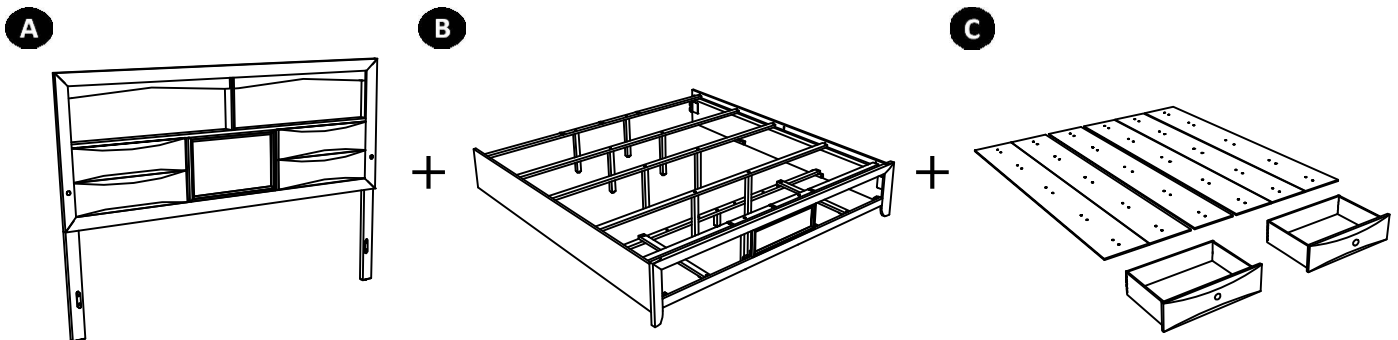


Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person ; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non - abrasive floor before assembly, and follow the assembly step to assemble your newly purchased product correctly and efficiently .

Drawer NQ & NR are identical & compatible, to each other regardless left or right.

During assembly, do not tighten any hardware until the complete unit has been assembled.




2 PERSON
installation recommended



20 - 25
minutes for installation


BOX 1

Box of Headboard & Footboard

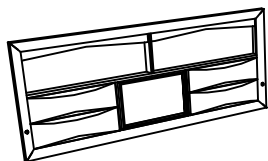

NO A

Headboard **x 1**
59 x 910 x 2012 mm

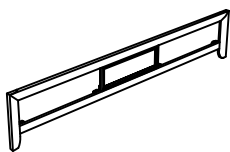

NO B

Footboard **x 1**
29 x 391 x 1996mm



NO C(L)

Headboard Leg(Left) **x 1**
34 x 70 x 725 mm



NO C(R)

Headboard Leg(Right) **x 1**
34 x 70 x 725 mm

Hardware List



NO 1

JCBC Bolt **x 6**
m6 x 30mm
BLK



NO 2

Spring Washer **x 6**
1/4" RBW



NO 3

Flat Washer **x 6**
1/4" ID x 13mm OD
BLK



NO 4

Allen Key **x 1**
m4 x 65mm BLK



NO 4(a)

12V12W1A Adaptor **x 1**
with UL Certificate(US)

BOX 2

Box of Side rail



NO D

Side Rail **x 2(L&R)**
35 x 295 x 2060mm




NO E

Bed Slat **x 3**
18 x 45 x 1951mm



NO F

Bed Slat With Marking **x 2**
18 x 45 x 1951mm



NO G

Concealed Panel **x 6**
9 x 295 x 2040mm



NO H

Drawer Support Rail **x 1**
20 x 40 x 1951mm



NO I

Footboard T runner support **x 2**
20 x 40 x 633mm



NO J

Support Leg 1 **x 10**
30 x 30 x 320mm



NO K

Support Leg 2 **x 1**
30 x 30 x 95mm

Hardware List



NO 5

Flat Head Chipboard
Screw **x 14**
m4 x 32mm RBW




NO 6

Pan Head Chipboard
Screw **x 30**
m3.5 x 20mm BLK



NO 7

JCBC Bolt **x 2**
m6 x 35mm
BLK



NO 8

JCBC Bolt **x 11**
m6 x 50mm
BLK



NO 9

Spring Washer **x 2**
1/4" RBW



NO 10

Flat Washer **x 2**
1/4" ID x 13mm OD
BLK



NO 11

Allen Key **x 1**
m4 x 65mm BLK




NO 12

Allen Key **x 1**
m5 x 65mm BLK

BOX 3

Box of Parts & Hardware

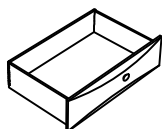

NO L

Drawer **x 2**



NO 13

Handle **x 2**
KN477(HD1247) Handle
D24mm Stainless Steel
(With Thread 10mm)



NO 14


Truss Head M.
Screw Handle **x 2**
m4 x 28mm BLK

A


STEP
01

Attach headboard leg (C) (L&R) to headboard (A) secure with JCBC bolt (1) , spring washer (2) , flat washer (3) and tighten them by Allen key (4) as shown.

Box 1 : N° A + N° C(L) + N° C(R) N° 1 + N° 2 + N° 3 + N° 4

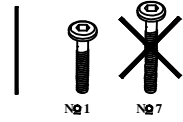


Headboard
Assembly
Installation

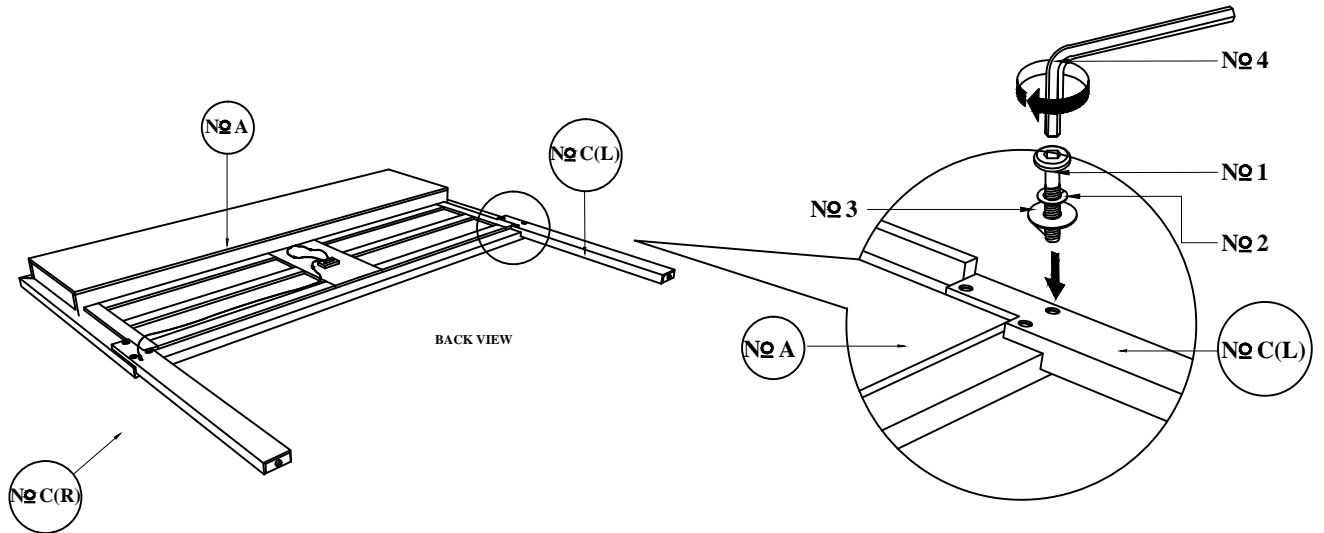

STEP
02

Loosen the JCBC bolt with Allen key (12) and hook the side rail (D) to headboard leg (C) (L&R) and footboard (B) by push down to fit. Repeat the same step for next assembly.

Box 2 : N° D + N° 12

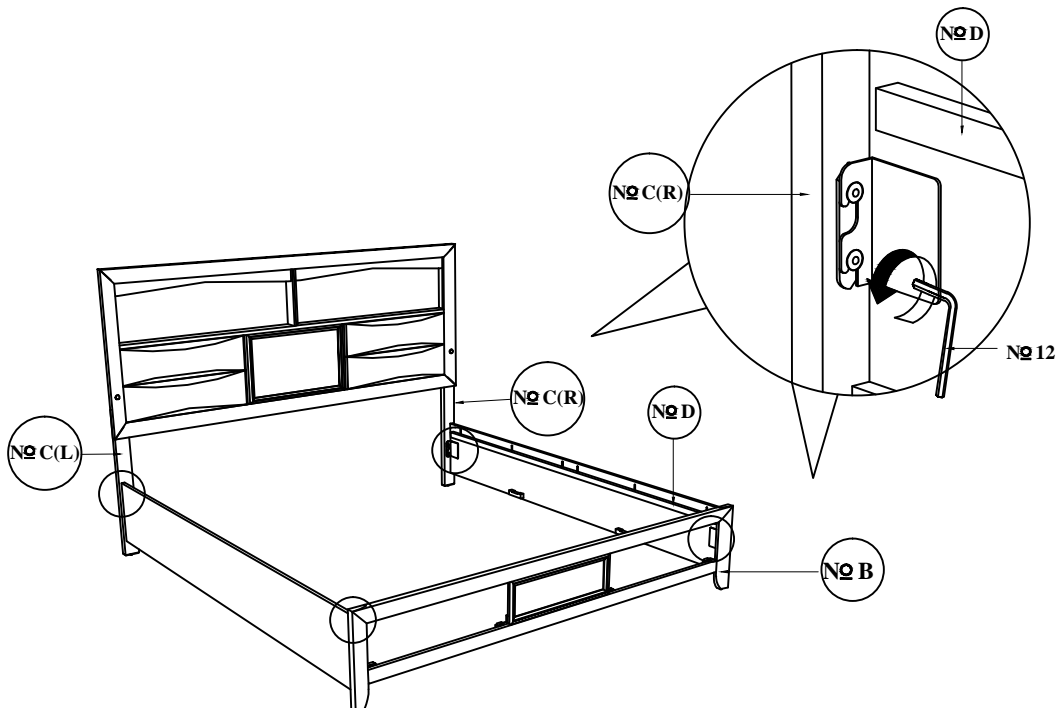

A





Footboard
Structure
Assembly
Installation

STEP
03

Attach Support Leg 2 (K) to the Drawer support Rail (H). Secure with JCBC Bolt (8) and tighten them by an Allen Key (11)



Box 2 : N° H + N° L + N° 8 + N° 11

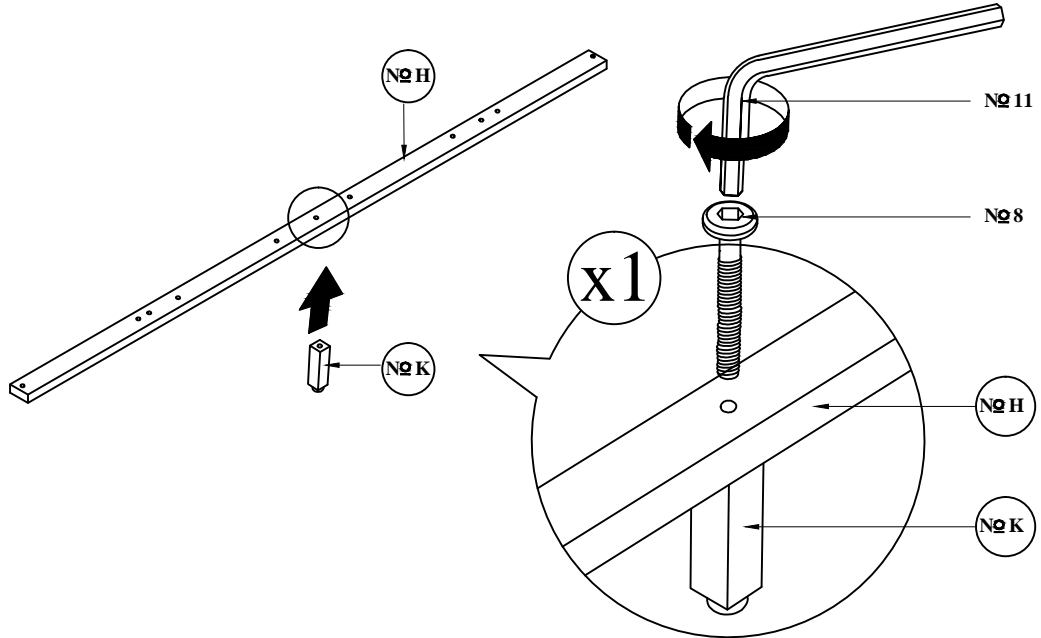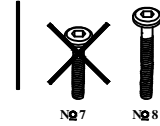

STEP
04

Attach drawer support rail (H) to side rail (D) Secure with CSK screw (5) and tighten them by screw driver .
(Not included)

Box 2 : N° H + N° 5

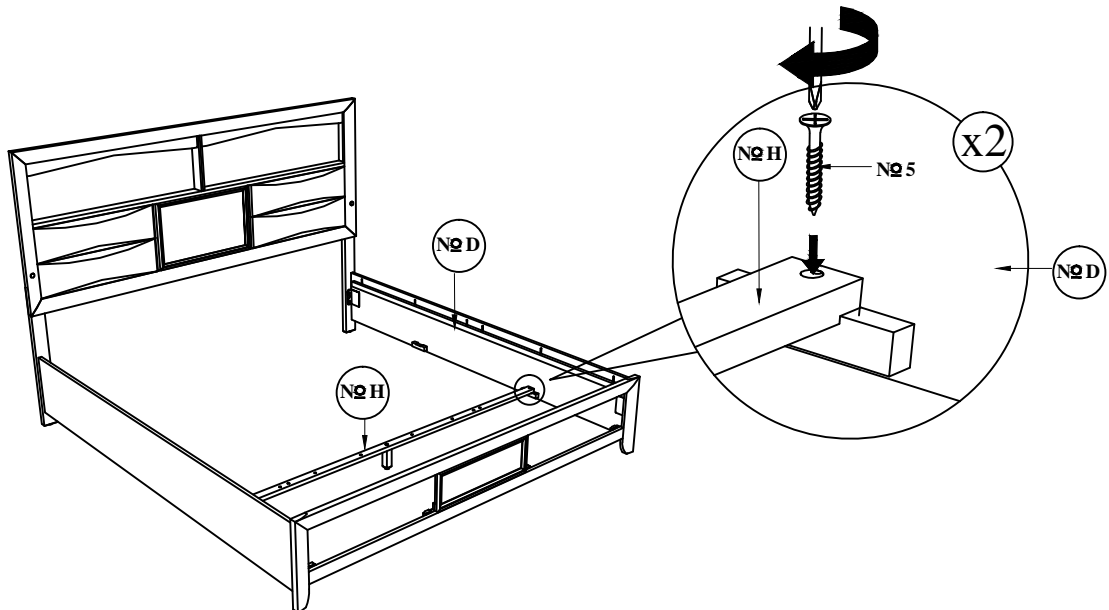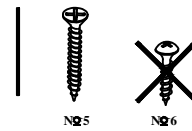


B

STEP
05

Attach footboard T runner support (I) to footboard (B)
Secure with CSK screw (5) and tighten them by screw
driver . (Not included)

Box 2 : N° I + N° 5


Footboard
Structure
Assembly
Installation

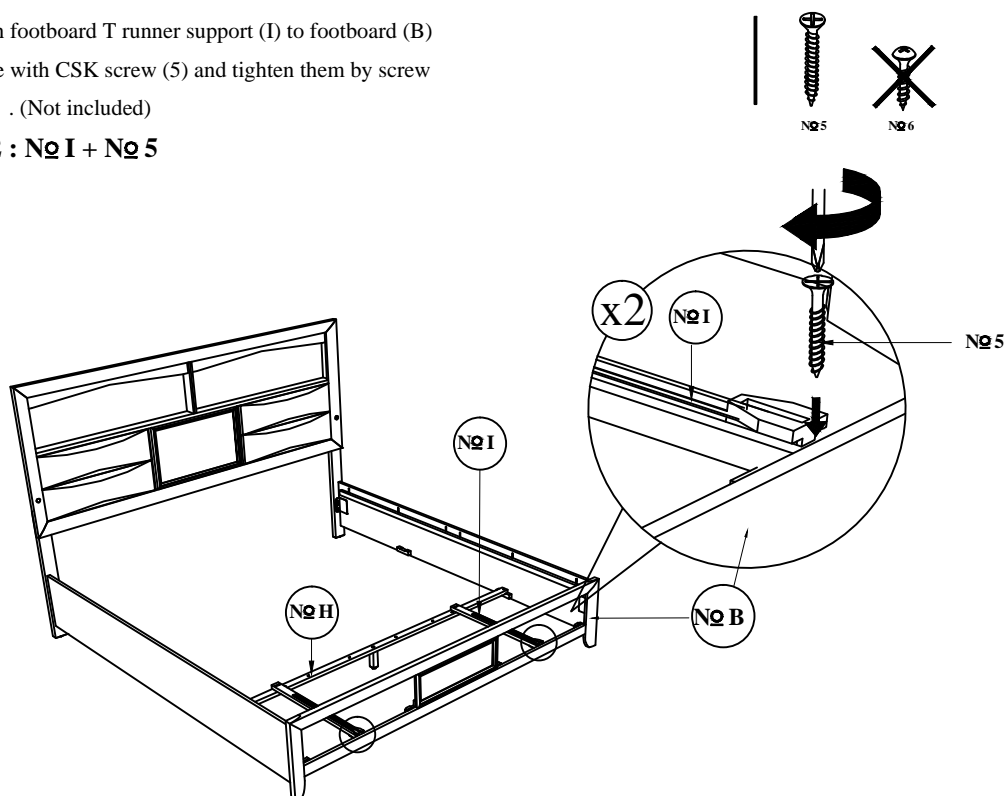

STEP
06

Attach the footboard T runner support (I) to the drawer support rail (H).
Secure with JCBC bolt (7) , Spring Washer (9) , Flat Washer (10) , and
tighten them by using an Allen Key (11).

Box 2 : N° I + N° 7 + N° 9 + N° 10 + N° 11

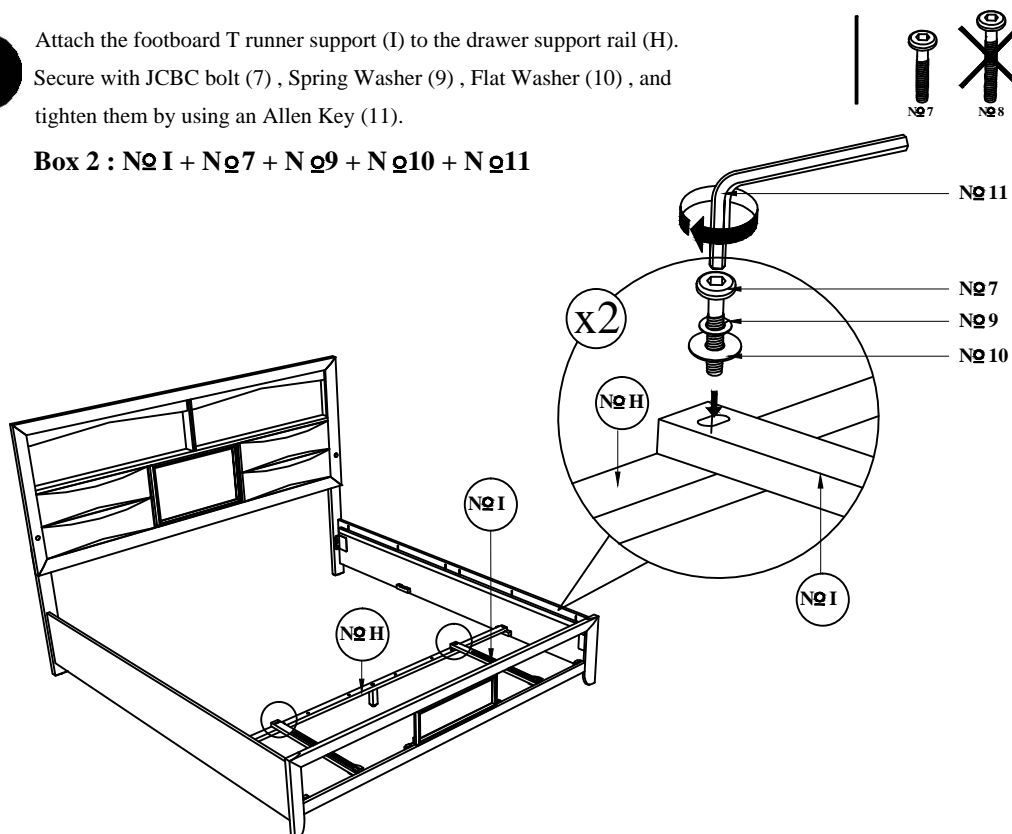

B




Footboard
Structure
Assembly
Installation

STEP
07

Attach Bed Slat (E) & (F) to the Bed Slat Support (J) . Secure with JCBC Bolt (8) and tighten them by using an Allen Key (11). (Loosen and tighten the Adjuster to stability of bed)


Box 2 : N^o E + N^o F + N^o J + N^o 8 + N^o 11

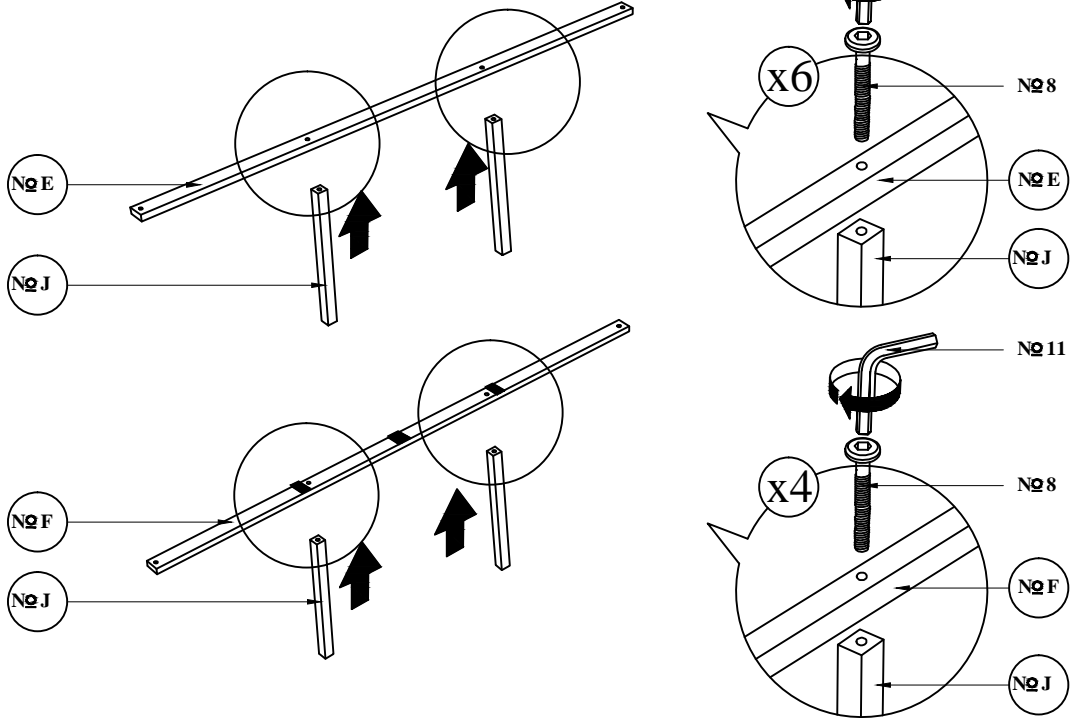

STEP
08

Attach the slat (E) & (F) to the Side Rail (D) by follow the marking line. Secure with CSK screw (5) and tighten them by using screw driver . (not included)

Box 2 : N^o E + N^o F + N^o 5

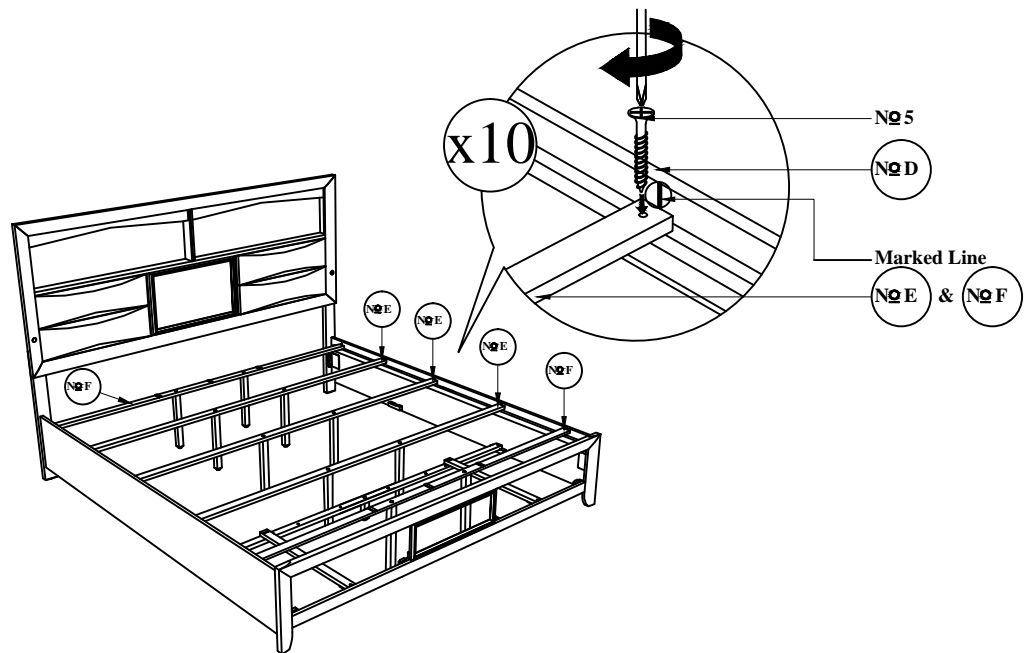

B


STEP
09

Insert Footboard drawer (L) onto position over T-runner support (I) as shown.

Box 3 : N° L




Footboard
Structure
Assembly
Installation

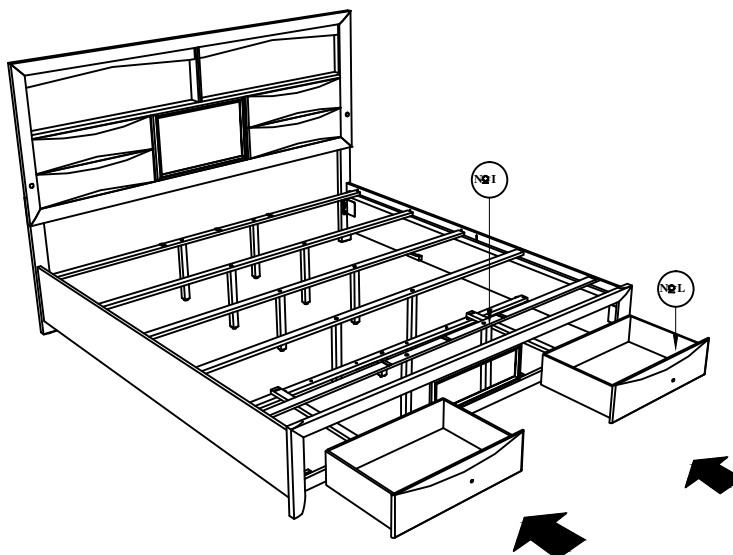

STEP
10

Install the handle (13) in the front of drawer (L). Secure with Trust Head Screw (14) and tighten them by using Screw Driver. (Not included)


Box 3 : N° 13 + N° 14

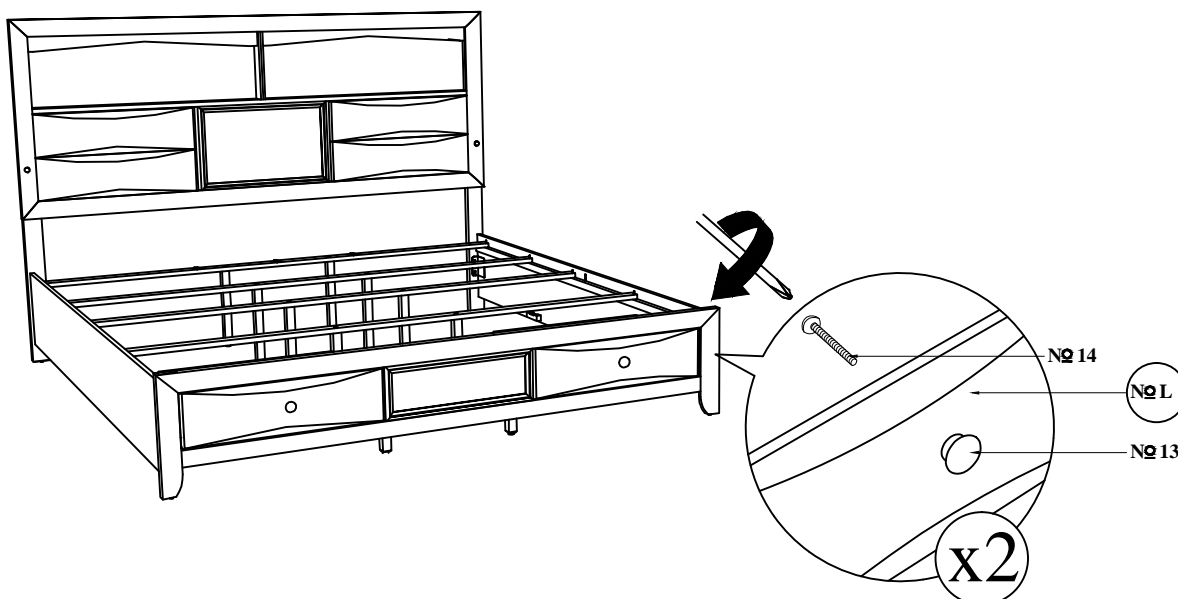


C

STEP
11

Attention! Screw on this markings on concealed panel slat (G).





Footboard
Structure
Assembly
Installation

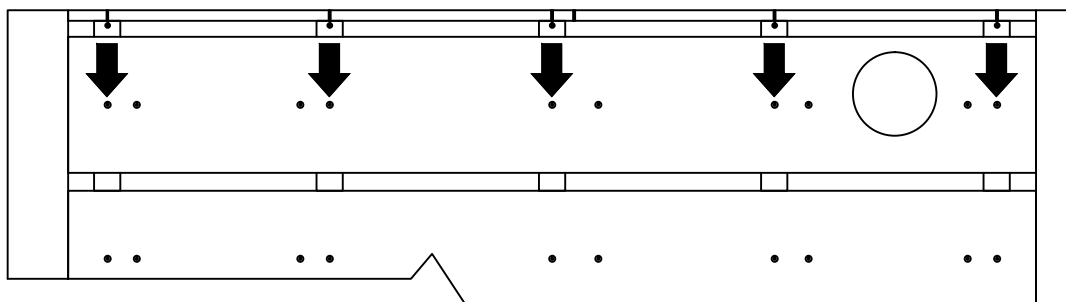

STEP
12

Realign the Concealed Panel Slat (G) as shown.


Box 2 : N^o G

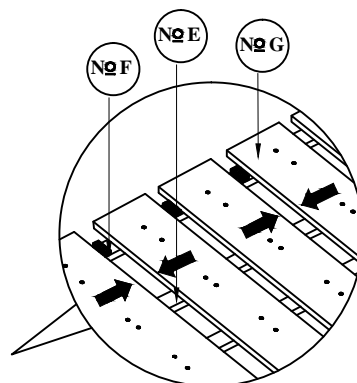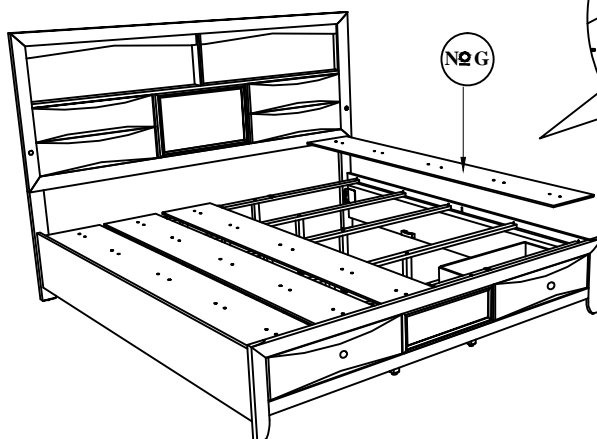


STEP
13

Attach Concealed Panel (G) over the Bed Slat (E) & (F) secure with Panhead Screw (6) and tighten them by using Screw Driver. (Not included)

Box 2 : N^o G + N^o 6

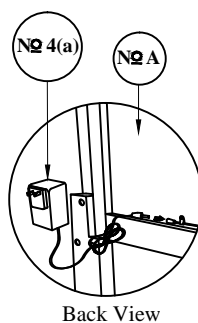

Back View

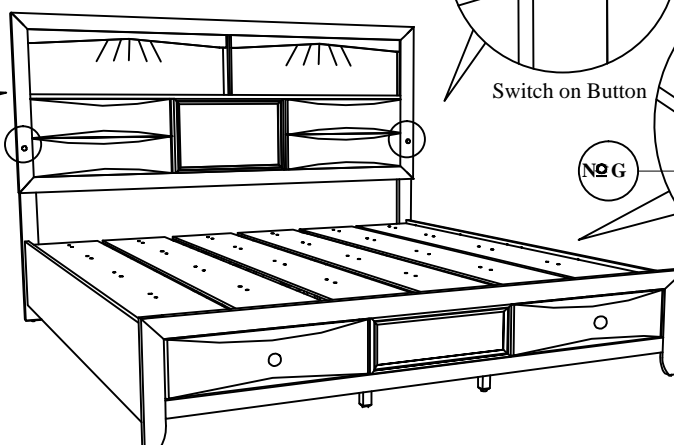

To Active

Switch on Button

