




ITEM NO: I34-412-SNA Queen Panel HB
 I34-402-SNA Queen Rails
 I34-403-SNA Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

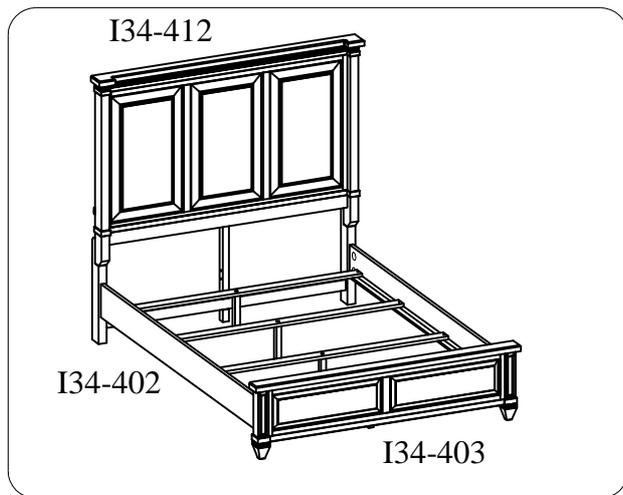

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I34-412			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-1/2"		4 PCS
C	Bolt Ø1/4"*1-1/4"		4 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" *3/4"		10 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" *3/4"		4 PCS
H	Allen Wrench 4mm		1 PC

COMPONENTS LIST: I34-412			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

HARDWARE LIST: I34-402			
No.	Description	Sketch	Quantity
I	Hanger Bolt Ø5/16"*3"		8 PCS
J	Half Moon Washer 5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Screw M4*1-1/4"		8 PCS

COMPONENTS LIST: I34-402			
No.	Description	Sketch	Quantity
1	Bed rails		2 PC
2	Slats		4 PC

COMPONENTS LIST: I34-403			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support leg (for slats)		4 PCS



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I34-412-SNA Queen Panel HB
 I34-402-SNA Queen Rails
 I34-403-SNA Queen Low Profile FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

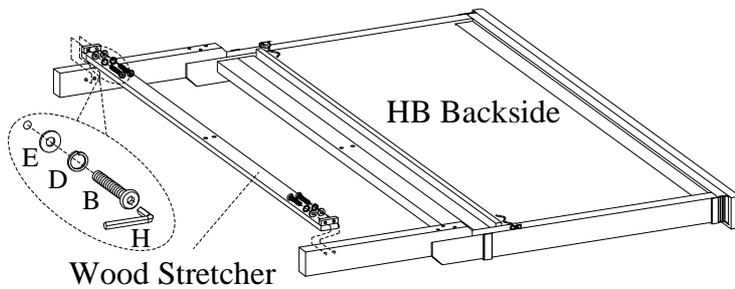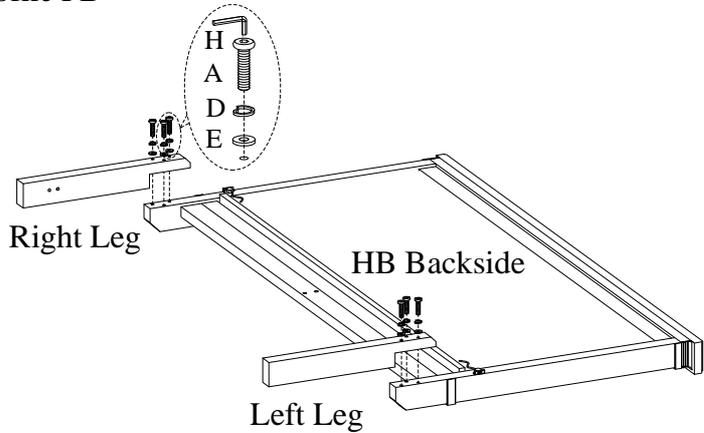


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(C), lock washers(F) and flat washers(G).

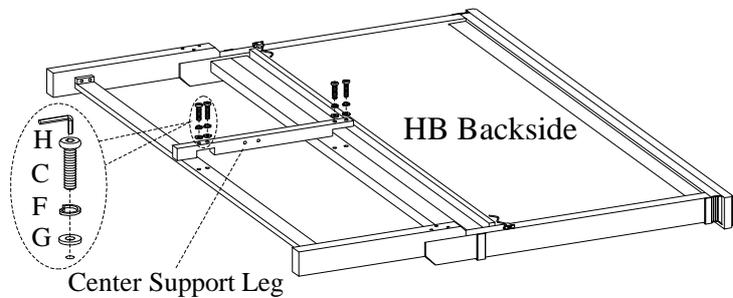


STEP 4: The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 5.

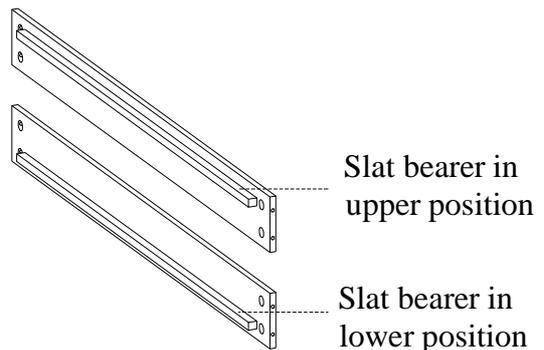





ITEM NO: I34-412-SNA Queen Panel HB
 I34-402-SNA Queen Rails
 I34-403-SNA Queen Low Profile FB

STEP 5: Screw the bolts(I) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (J) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

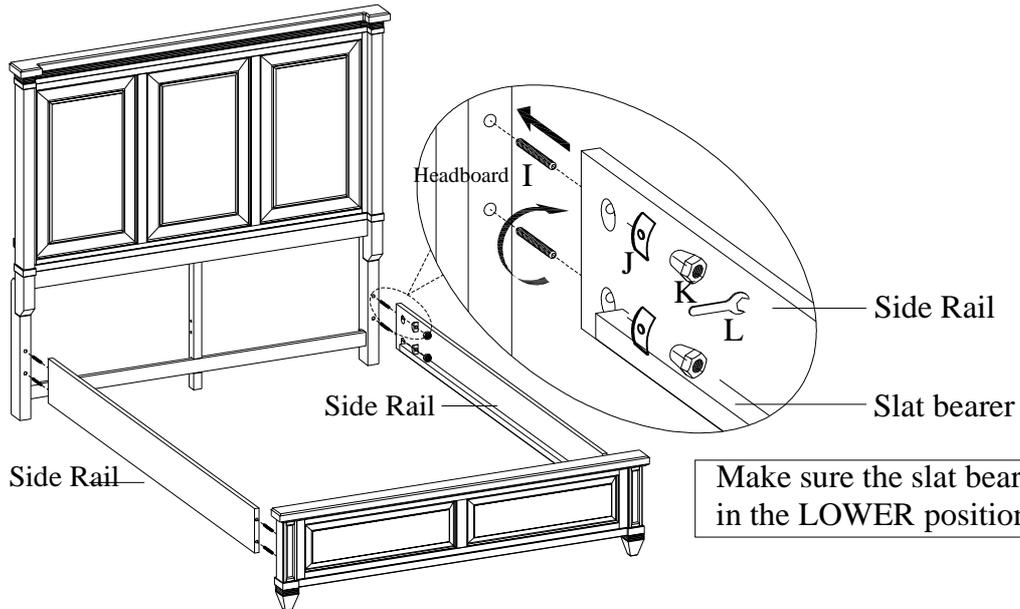

Make sure the slat bearer is in the LOWER position.

STEP 6: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

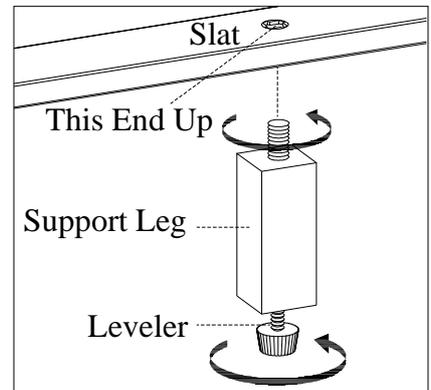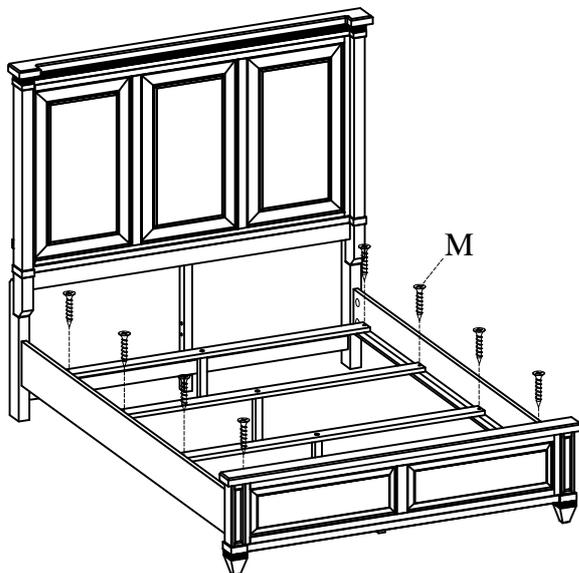


STEP 7: Arrange the slats on the slat bearer equally and attach to the slat bearer with wood screws (M).



ITEM NO: I34-412-SNA Queen Panel HB
I34-402-SNA Queen Rails
I34-403-SNA Queen Low Profile FB

FUNCTIONALITY INSTRUCTION

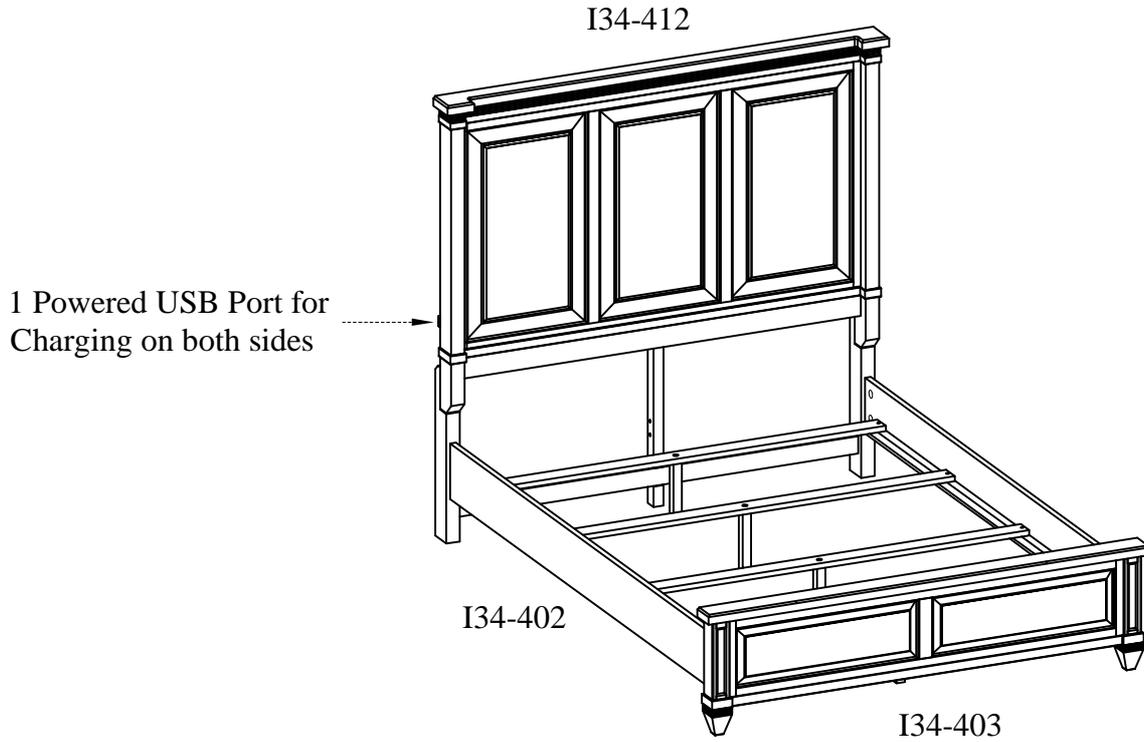




ITEM NO: I34-412-SNA Queen Panel HB
 I34-402-SNA Queen Rails
 I34-403D-SNA Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

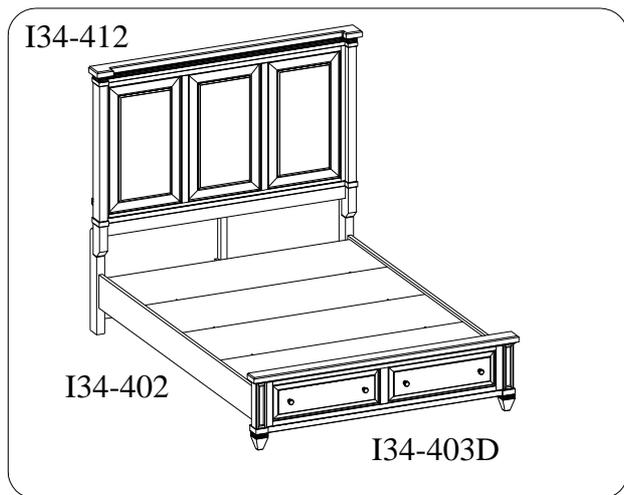

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I34-412			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-1/2"		4 PCS
C	Bolt Ø1/4"*1-1/4"		4 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" *3/4"		10 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" *3/4"		4 PCS
H	Allen Wrench 4mm		1 PC
HARDWARE LIST: I34-402			
No.	Description	Sketch	Quantity
I	Hanger Bolt Ø5/16"*3"		8 PCS
J	Half Moon Washer 5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Screw M4*1-1/4"		8 PCS
HARDWARE LIST: I34-403D			
No.	Description	Sketch	Quantity
N	Bolt Ø1/4"*1-1/4"		8 PCS
O	Lock Washer Ø5/16"		8 PCS
P	Flat washer Ø5/16 x 3/4"		8 PCS
Q	Allen Wrench 4mm		1 PC
R	Wood Screw M4*1		8 PCS

COMPONENTS LIST: I34-412			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC
COMPONENTS LIST: I34-402			
No.	Description	Sketch	Quantity
1	Bed rails		2 PC
2	Slats		4 PC
COMPONENTS LIST: I34-403D			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Decking		4 PCS
4	Center rail		1 PCS



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
 Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I34-412-SNA Queen Panel HB
 I34-402-SNA Queen Rails
 I34-403D-SNA Queen Storage FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

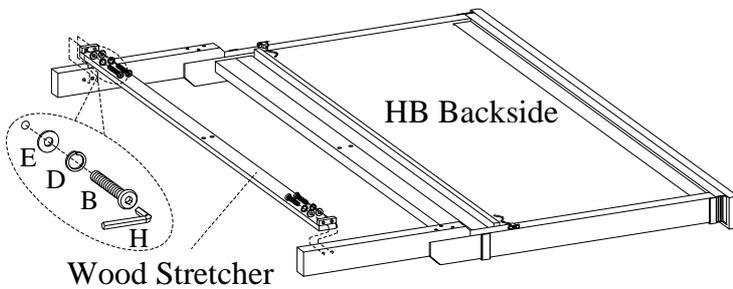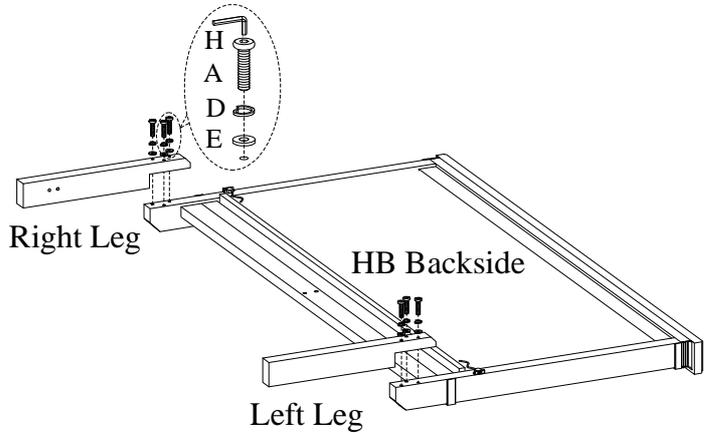


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(C), lock washers(F) and flat washers(G).

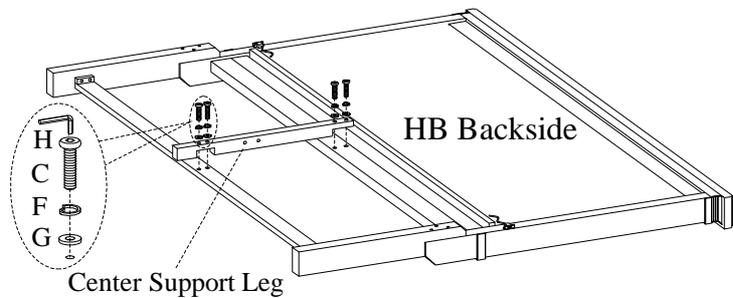


STEP 4: The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment in STEP 5.

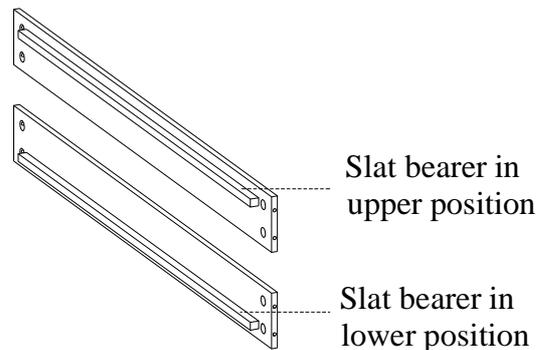




ITEM NO: I34-412-SNA Queen Panel HB
 I34-402-SNA Queen Rails
 I34-403D-SNA Queen Storage FB

STEP 5: Screw the bolts(I) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (J) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

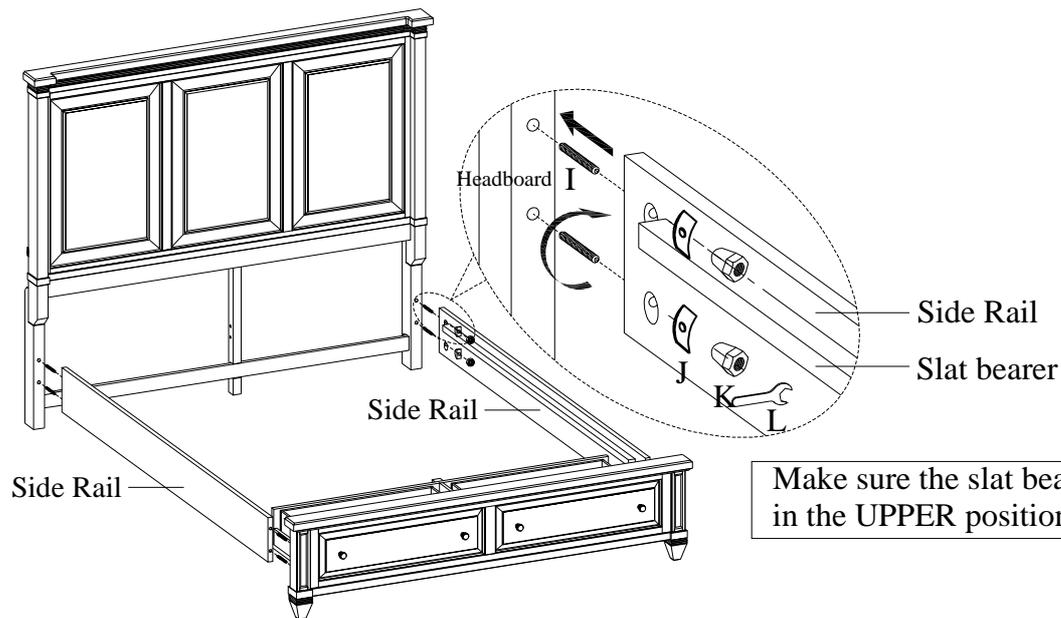



STEP 6: Attach center rail to the footboard and center support leg of headboard using 4 bolts(N), lock washers(O) and flat washers(P).

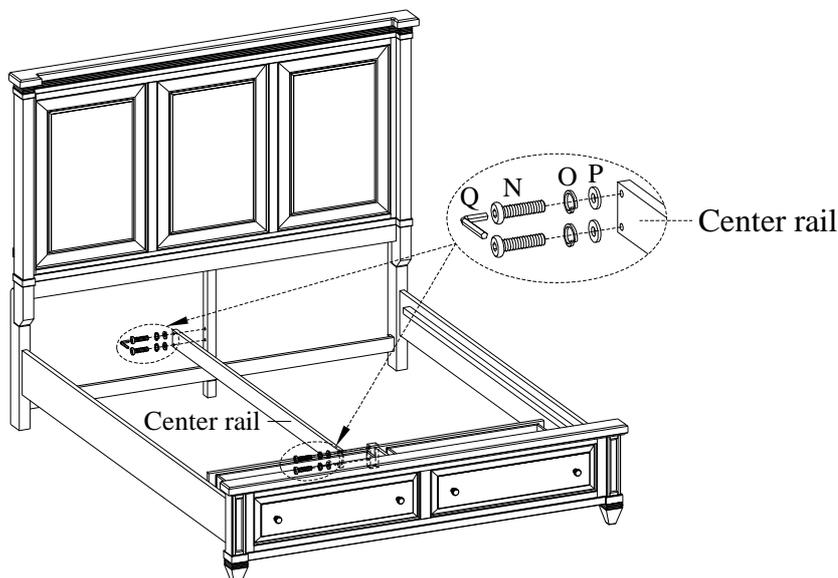




ITEM NO: I34-412-SNA Queen Panel HB
 I34-402-SNA Queen Rails
 I34-403D-SNA Queen Storage FB

STEP 7: Attach 2 support legs (for center rail) to the center rail using 4 bolts(L), lock washers(M) and flat washers(N). Use the Allen Wrench (O) to tighten all of the bolts.

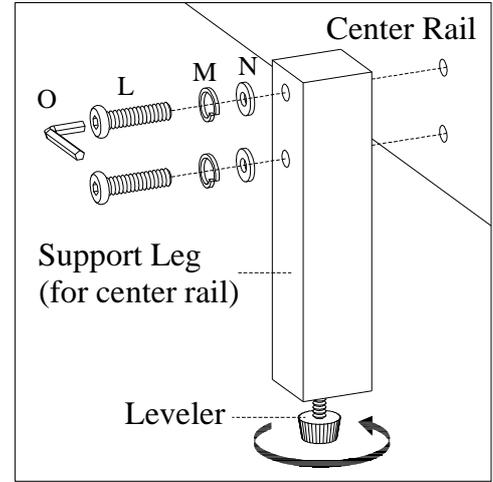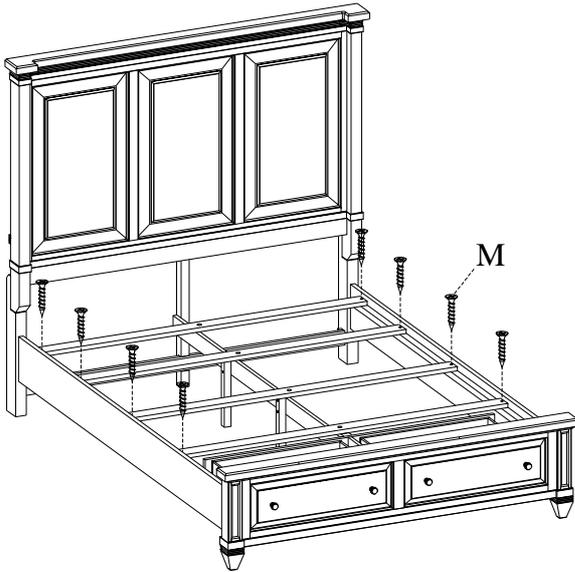

STEP 8: Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 10 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws (M).


STEP 9: Put the decking over the slats, secure decking to the slats with wood screws (P) through the pre-drilled holes in the decking as shown below.

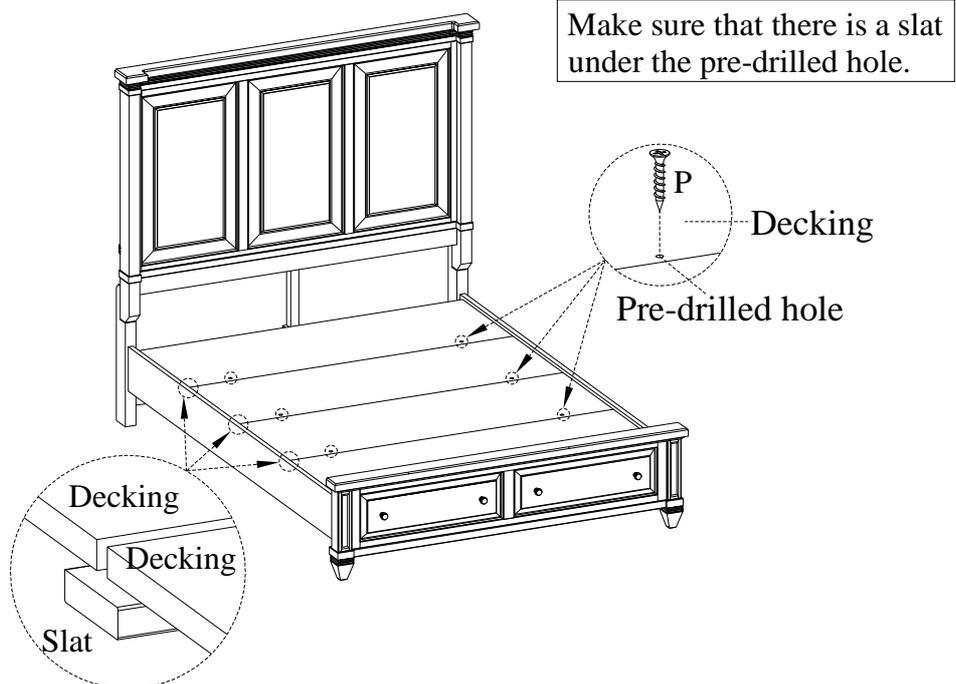



ITEM NO: I34-412-SNA Queen Panel HB
I34-402-SNA Queen Rails
I34-403D-SNA Queen Storage FB

FUNCTIONALITY INSTRUCTION

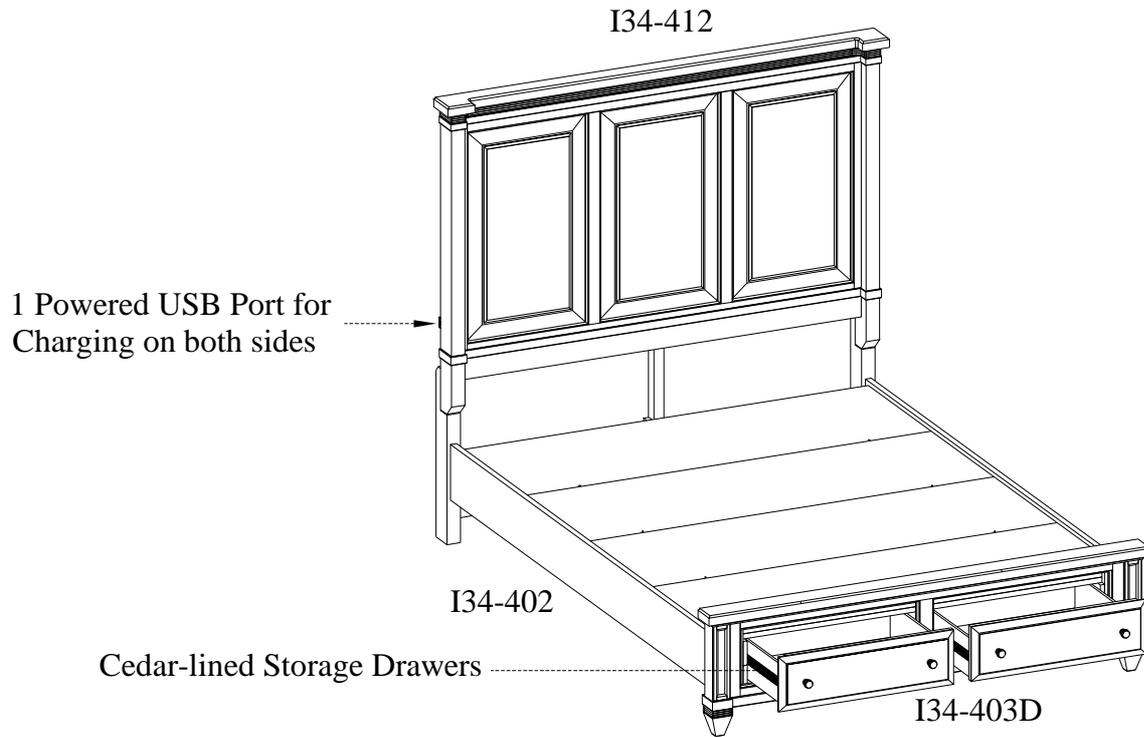




- ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407-SNA King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

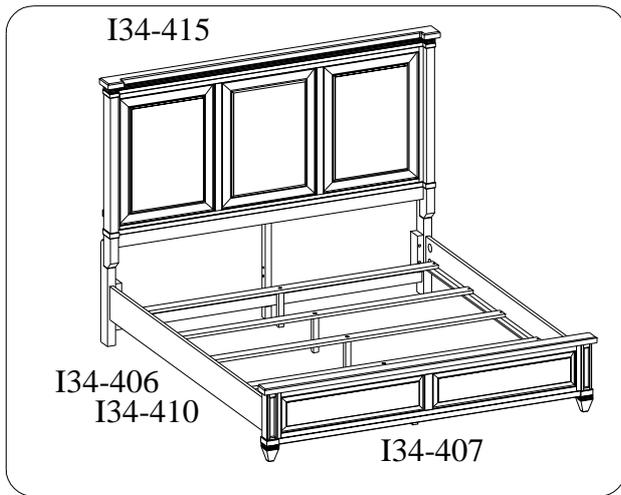

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER
UTILITY KNIFE (FOR CAL KING)

HARDWARE LIST: I34-415

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-1/2"		4 PCS
C	Bolt Ø1/4"*1-1/4"		4 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" *3/4"		10 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" *3/4"		4 PCS
H	Allen Wrench 4mm		1 PC

HARDWARE LIST: I34-406/410

No.	Description	Sketch	Quantity
I	Hanger Bolt Ø5/16"*3"		8 PCS
J	Half Moon Washer 5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Screw M4*1-1/4"		10 PCS
N	Wood Cap (Only for 410)		8 PCS

COMPONENTS LIST: I34-415

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I34-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PC
2	Slats		5 PC

COMPONENTS LIST: I34-410

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I34-407

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support leg (for slats)		5 PCS



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
 Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407-SNA King Low Profile FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

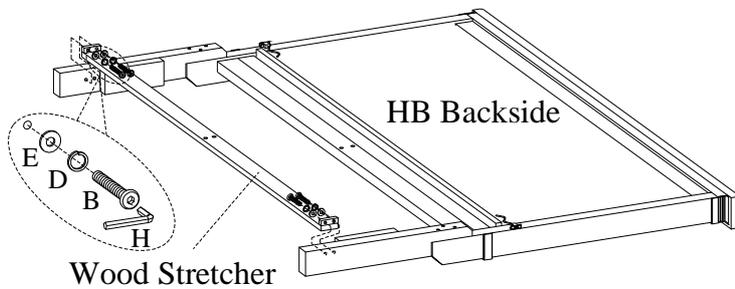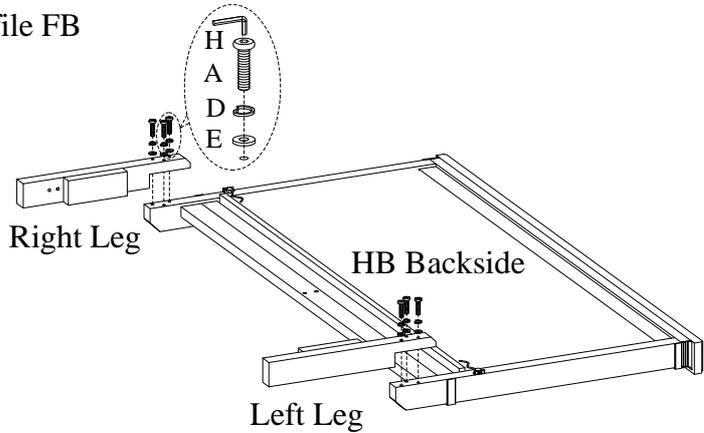


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(C), lock washers(F) and flat washers(G).

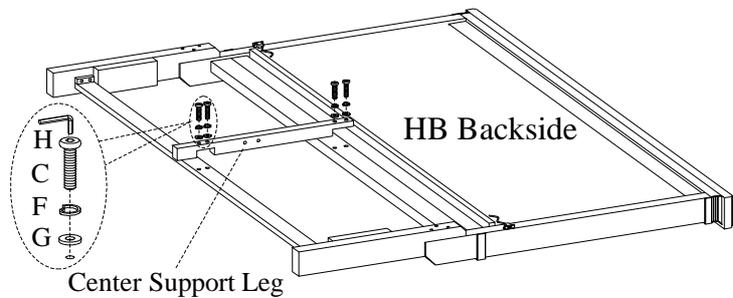


STEP 4: The side rails may be used on either side. Arrange the side rails so the slat bearers are in LOWER POSITION prior to attachment in STEP 5.

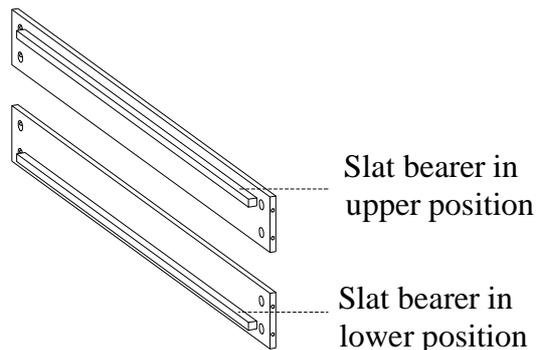





- ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407-SNA King Low Profile FB

STEP 5: Screw the bolts(I) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (J) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

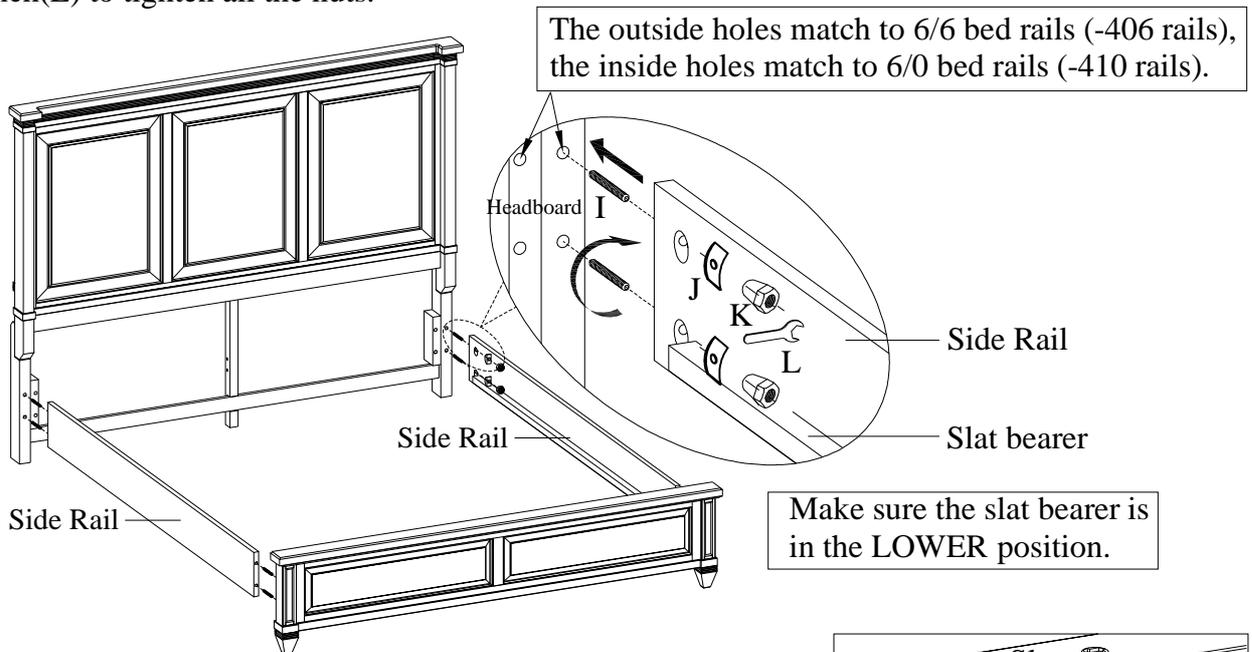


STEP 6: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

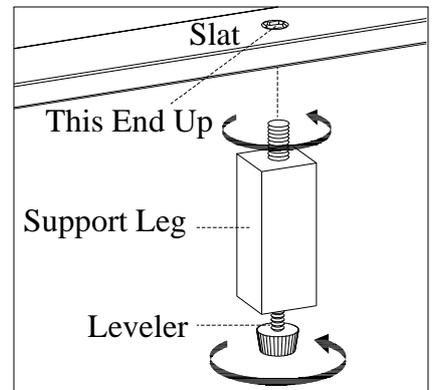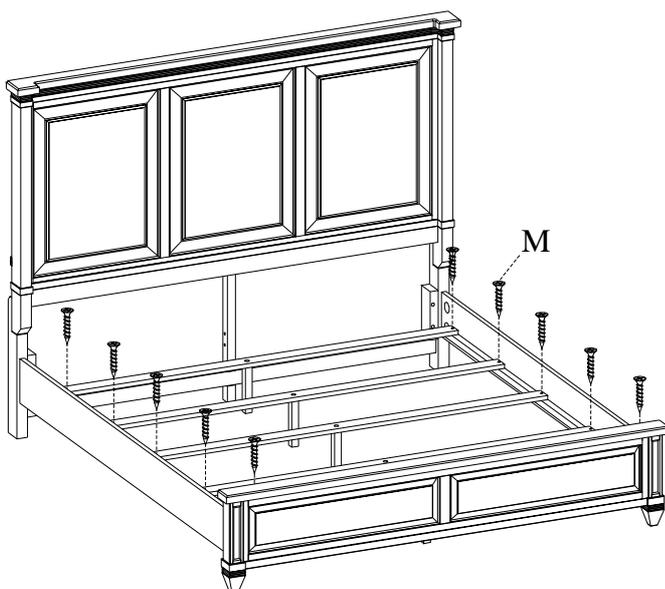

STEP 7: Arrange the slats on the slat bearer equally and attach to the slat bearer with wood screws (M).



STEP 8: For Cal King bed, insert wood caps(N) into the holes on headboard and footboard. For regular King bed, skip this step.

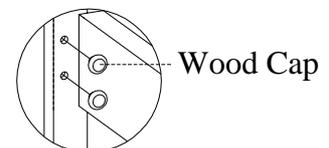



ITEM NO: I34-415-SNA King Panel HB
I34-406-SNA King Rails
I34-410-SNA Cal King Rails
I34-407-SNA King Low Profile FB

FUNCTIONALITY INSTRUCTION

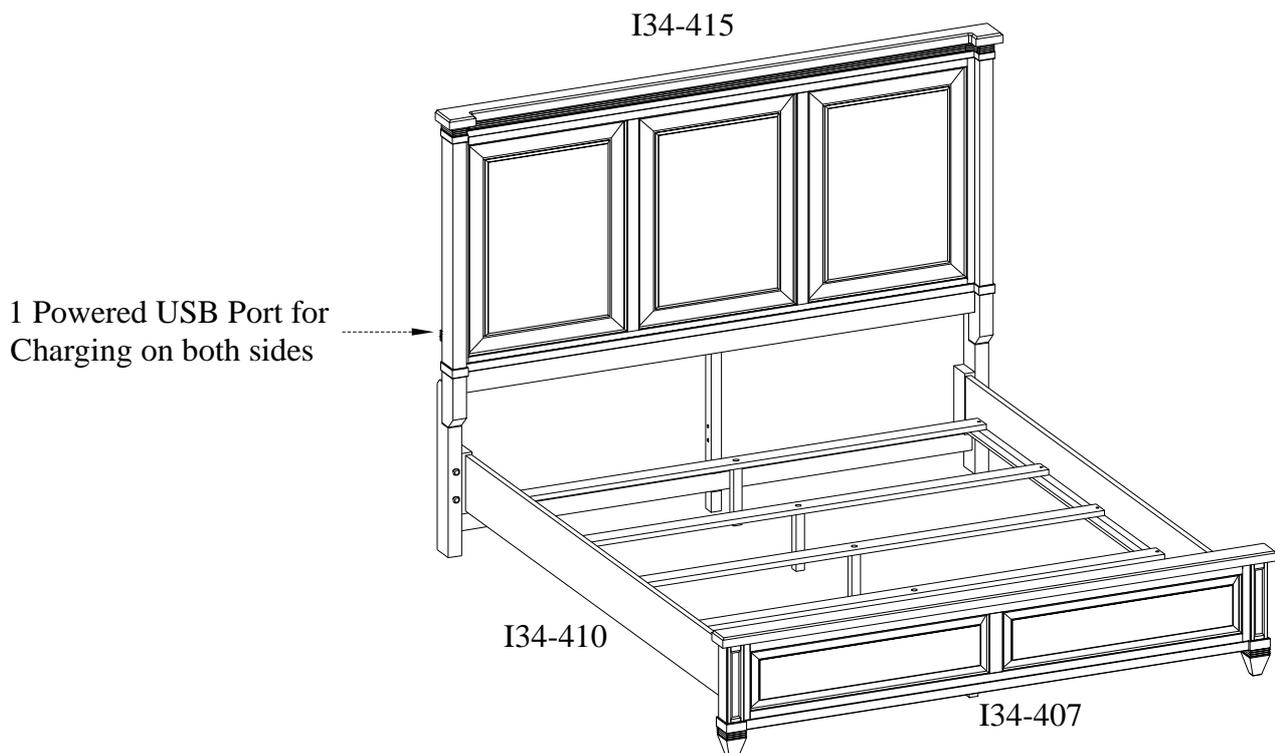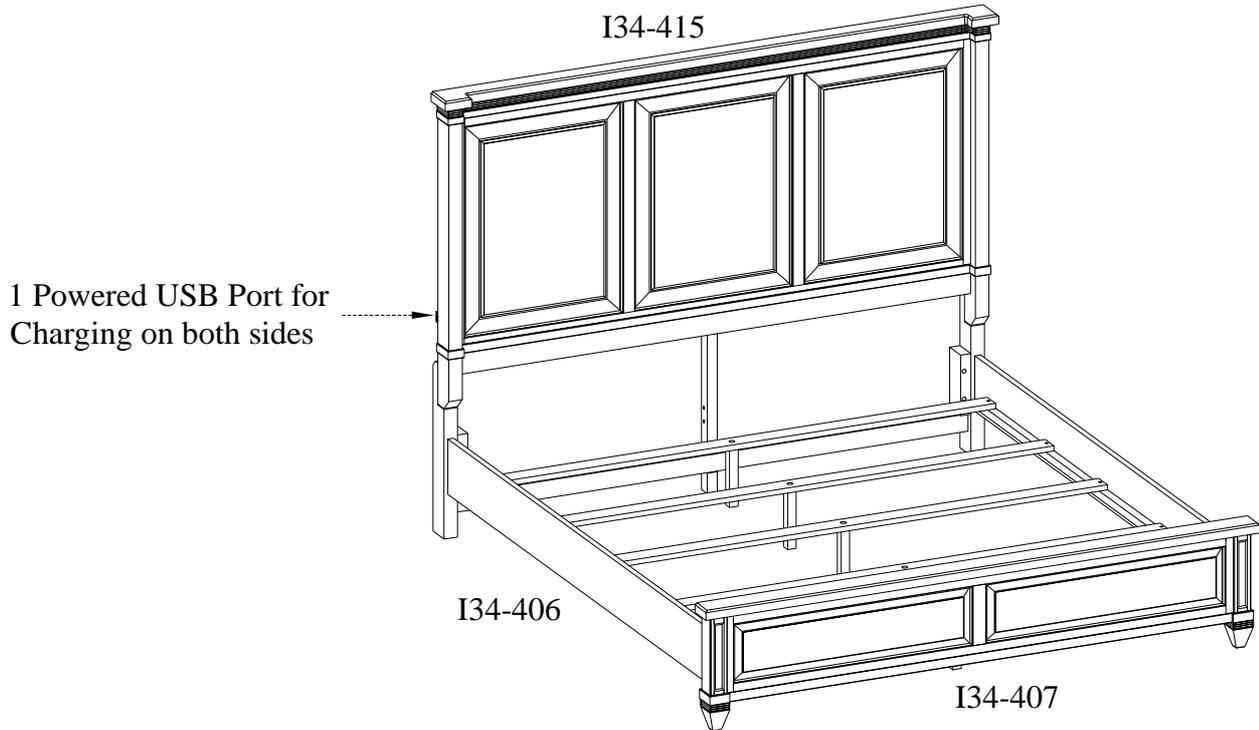




ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407D-SNA King Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

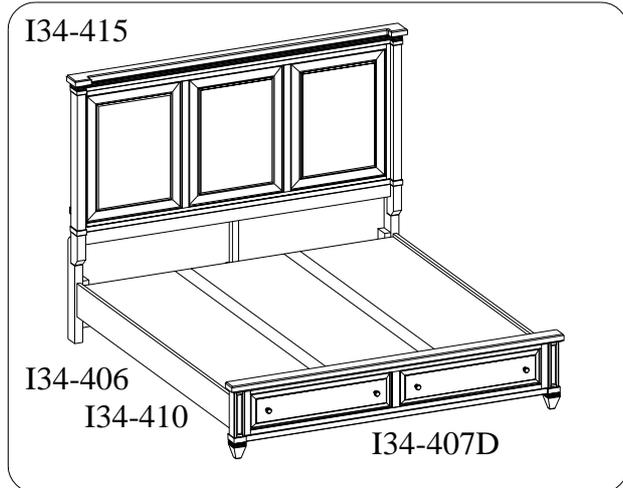

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER
UTILITY KNIFE (FOR CAL KING)

HARDWARE LIST: I34-415

No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*2"		6 PCS
B	Bolt Ø5/16"*1-1/2"		4 PCS
C	Bolt Ø1/4"*1-1/4"		4 PCS
D	Lock Washer Ø5/16"		10 PCS
E	Flat Washer Ø5/16" *3/4"		10 PCS
F	Lock Washer Ø1/4"		4 PCS
G	Flat Washer Ø1/4" *3/4"		4 PCS
H	Allen Wrench 4mm		1 PC

HARDWARE LIST: I34-406/410

No.	Description	Sketch	Quantity
I	Hanger Bolt Ø5/16"*3"		8 PCS
J	Half Moon Washer 5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 90*25*2mm		1 PC
M	Wood Screw M4*1-1/4"		10 PCS
N	Wood Cap (Only for 410)		8 PCS

HARDWARE LIST: I34-407D

No.	Description	Sketch	Quantity
O	Bolt Ø1/4"*1-1/4"		8 PCS
P	Lock Washer Ø5/16"		8 PCS
Q	Flat washer Ø5/16 x 3/4"		8 PCS
R	Allen Wrench 4mm		1 PC
S	Wood Screw M4*1		6 PCS

COMPONENTS LIST: I34-415

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I34-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PC
2	Slats		5 PC

COMPONENTS LIST: I34-410

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I34-407D

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Decking		3 PCS
4	Center rail (Short)		1 PCS
5	Filler		2 PCS

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.



Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407D-SNA King Storage FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(D) and flat washers(E).

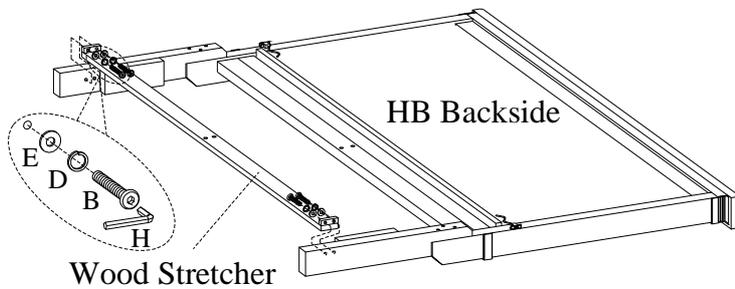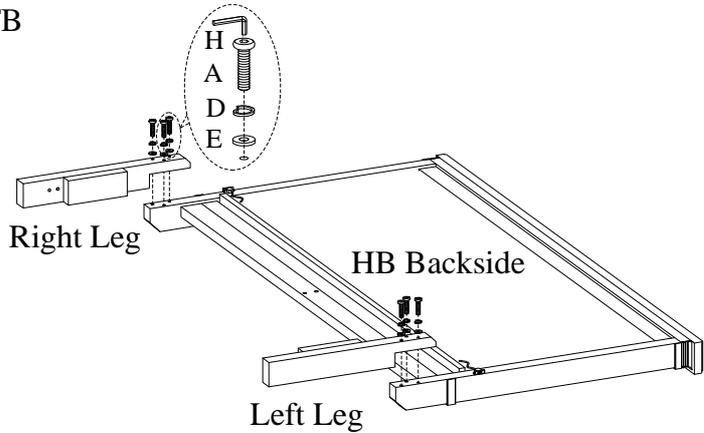


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(D) and flat washers(E).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(C), lock washers(F) and flat washers(G).

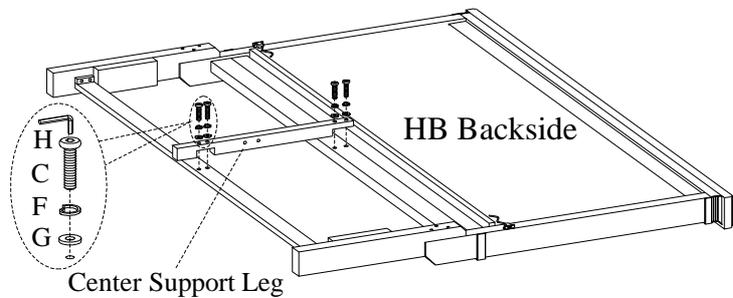


STEP 4: The side rails may be used on either side. Arrange the side rails so the slat bearers are in UPPER POSITION prior to attachment in STEP 5.

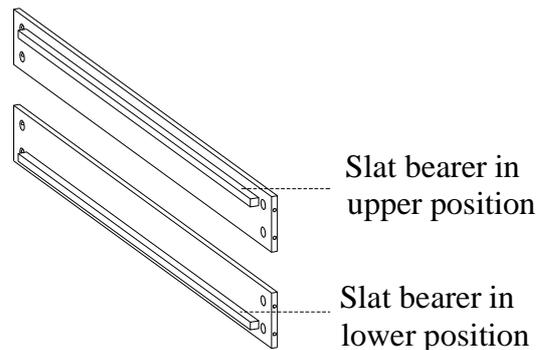




ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407D-SNA King Storage FB

STEP 5: Screw the bolts(I) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (J) and nuts (K). Then use a hex wrench(L) to tighten all the nuts.

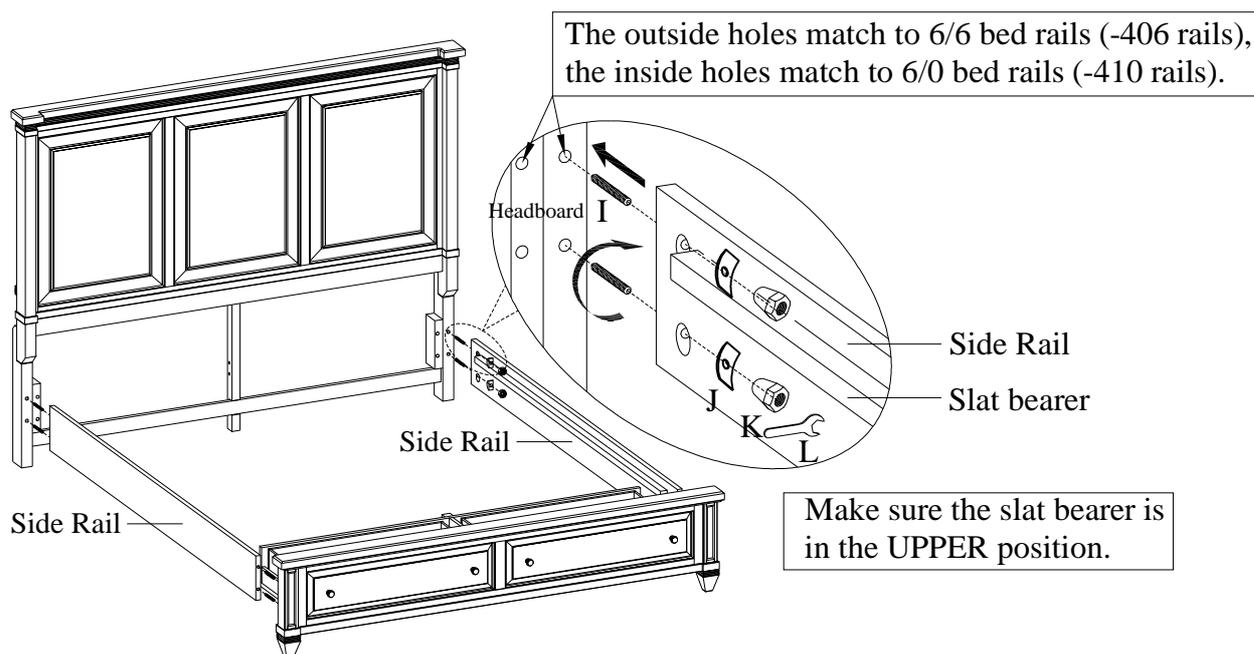



STEP 6: Attach center rail to the footboard and center support leg of headboard using 4 bolts(O), lock washers(P) and flat washers(Q).

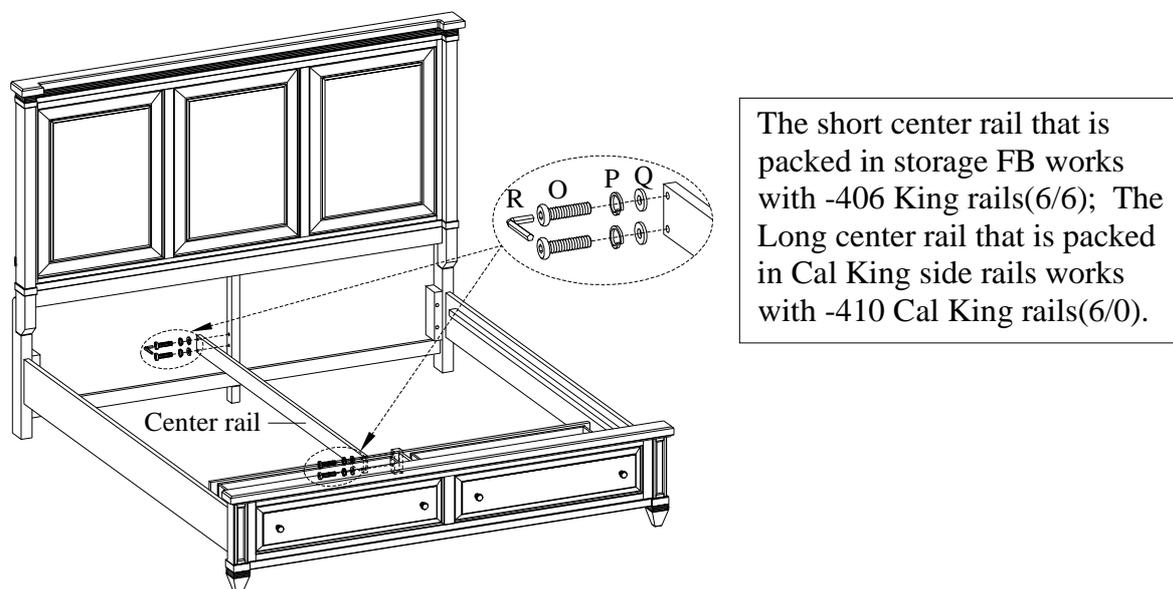




ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407D-SNA King Storage FB

STEP 7: Attach 2 support legs (for center rail) to the center rail using 4 bolts(O), lock washers(P) and flat washers(Q). Use the Allen Wrench (R) to tighten all of the bolts.

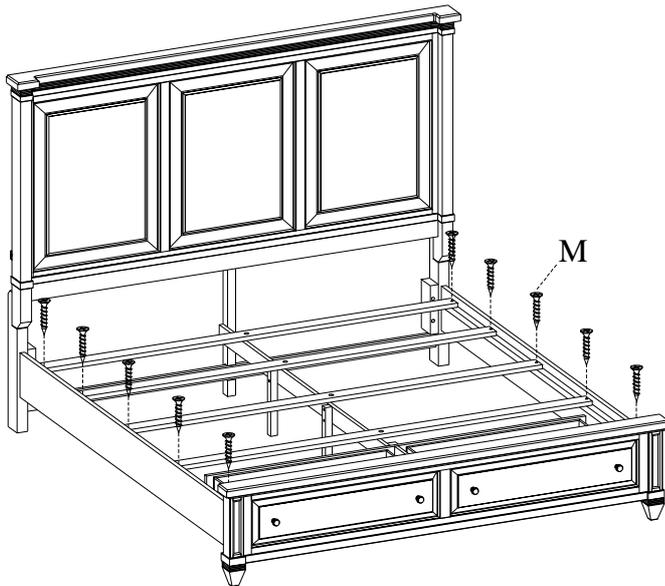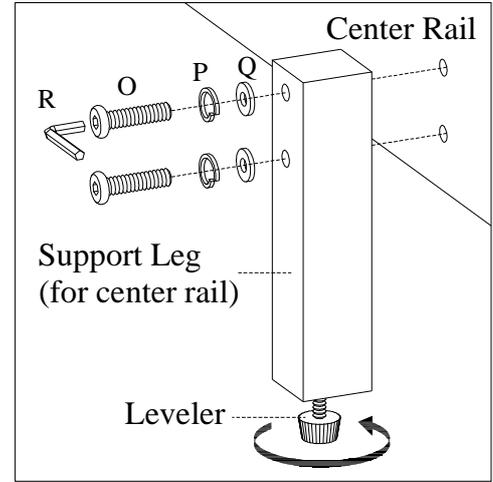


STEP 8: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 10. Remove the decking and attach slats to the slat bearers with wood screws (M).


STEP 9: For Cal King bed, use a utility knife to cut off the small piece at the notch and discard. For regular King bed, skip this step.

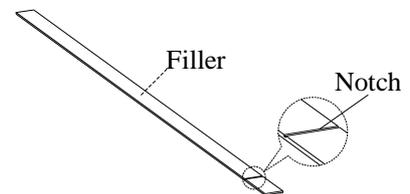

STEP 10: Put the decking over the slats, secure decking to the slats with wood screws (S) through the pre-drilled holes in the decking as shown below.

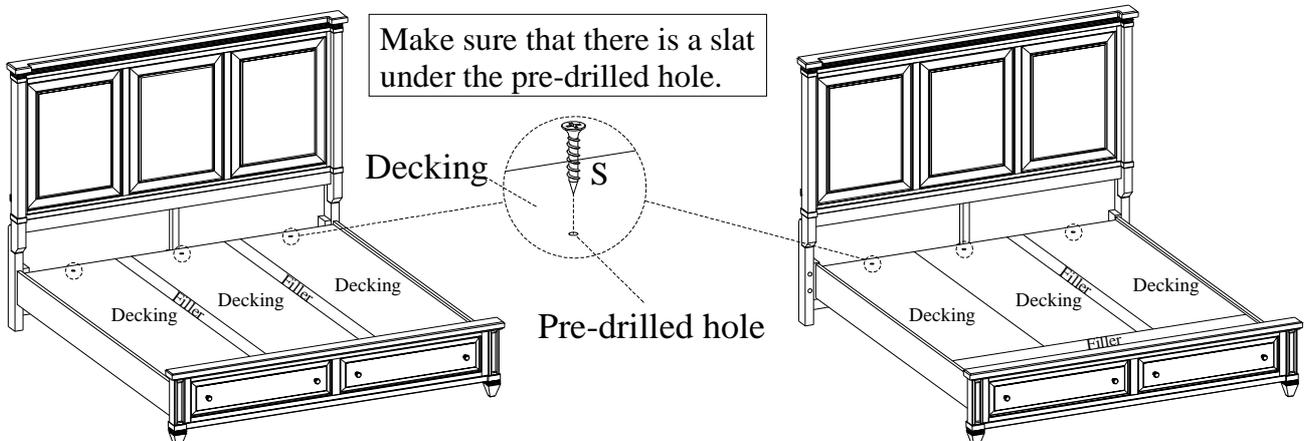

STEP 11: For Cal King bed, insert wood caps(N) into the holes on headboard and footboard. For regular King bed, skip this step.

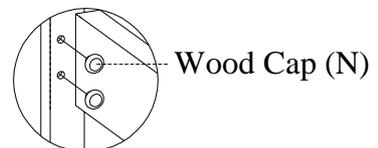



ITEM NO: I34-415-SNA King Panel HB
 I34-406-SNA King Rails
 I34-410-SNA Cal King Rails
 I34-407D-SNA King Storage FB

FUNCTIONALITY INSTRUCTION

