



ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#BD03791EK1


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.



Do not fully tighten screw until fully assembled

DESCRIPTION	COMPONENT PARTS	
	PART NAME	Q'TY (PCS)
Ⓐ	HEADBOARD 	1
Ⓑ	HEADBOARD POST - (L/R) 	2

HARDWARE REQUIRED

NO	NAME	PART	QTY
1	Allen key		1pc
2	JCBC 40mm		6pcs
3	M6 Spring washer		6pcs
4	M6 Flat washer		6pcs
5	AC/DC Adapter		1pc

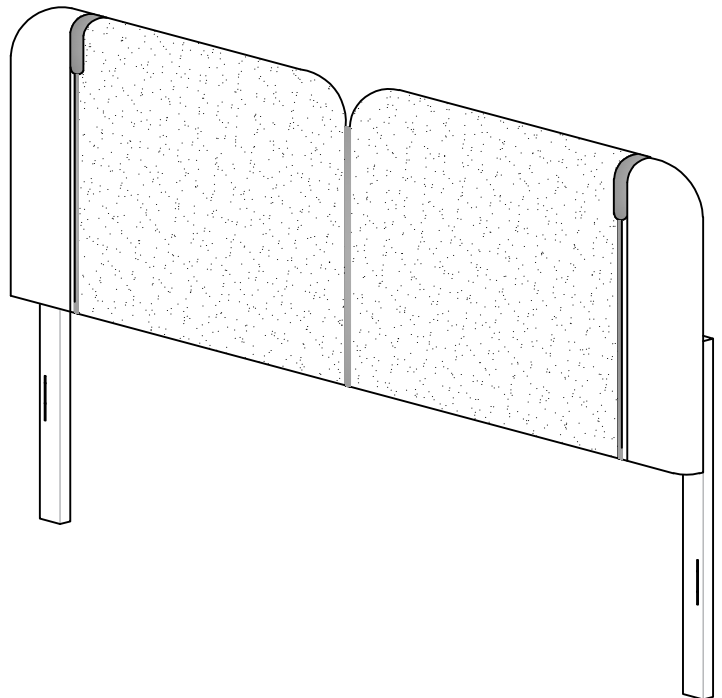


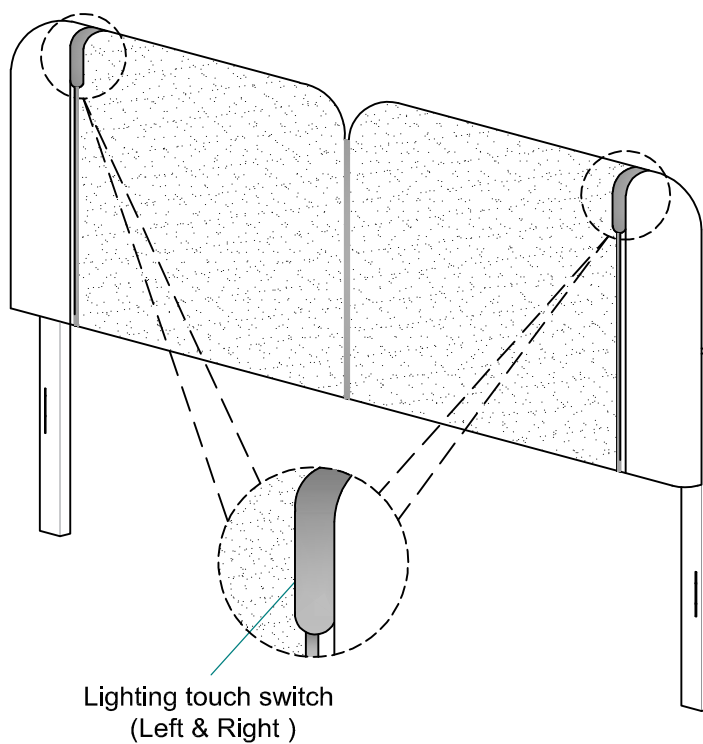
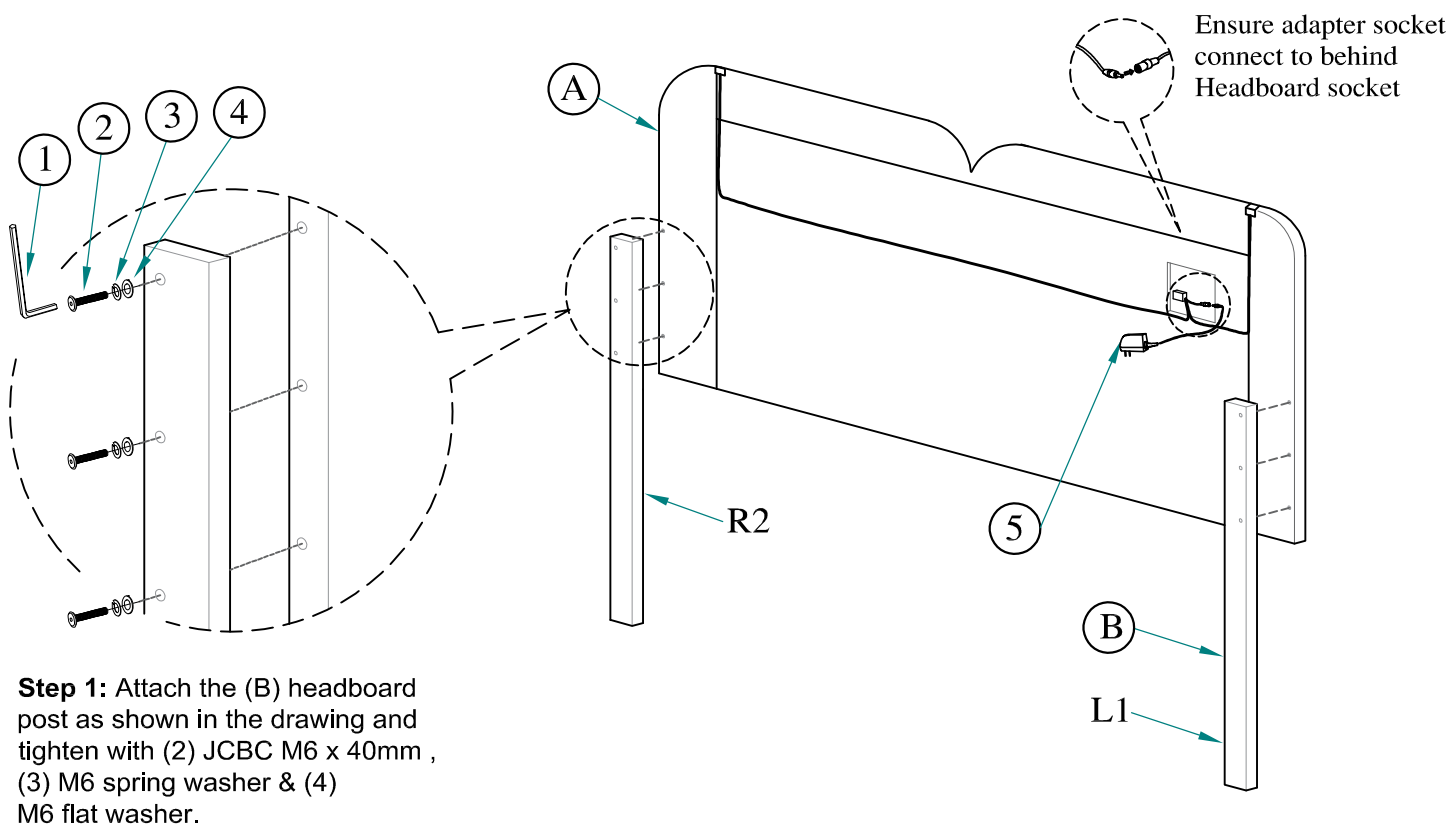


ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#BD03791EK1 / #BD03791EK2 / #BD03791EK3


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*****Do not fully tighten screw until fully assembled*****

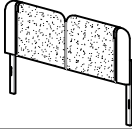	COMPONENT PARTS		
DESCRIPTION	PART NAME		Q'TY (PCS)
Ⓐ	HEADBOARD		1
Ⓑ	FOOTBOARD		1
Ⓒ	SIDE RAIL		2
Ⓓ	SLAT		4
Ⓔ	SLAT SUPPORT LEG		8
Ⓕ	BUN FOOT		2


HARDWARE REQUIRED

NO	NAME	PART	QTY
1	Allen key		1pc
2	JCBC 35mm		8pcs
3	M6 Spring washer		8pcs
4	Screw 32mm		8pcs
5	Adjustable Leveler		8pcs

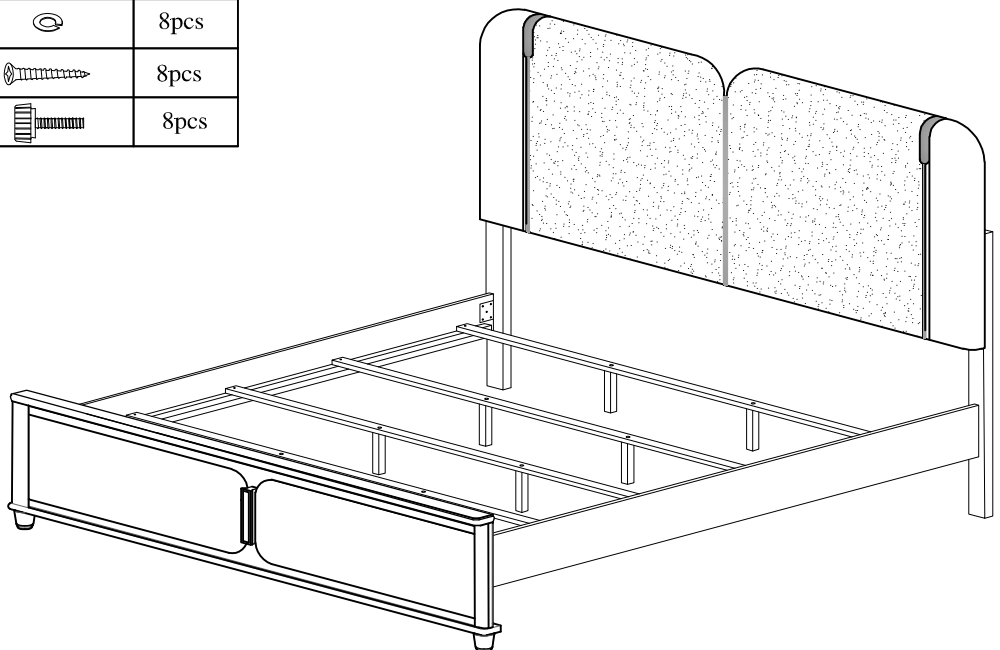


Step 1:



Secure the (F) Bun Foot to the bottom of (B) Footboard as a diagram shown.

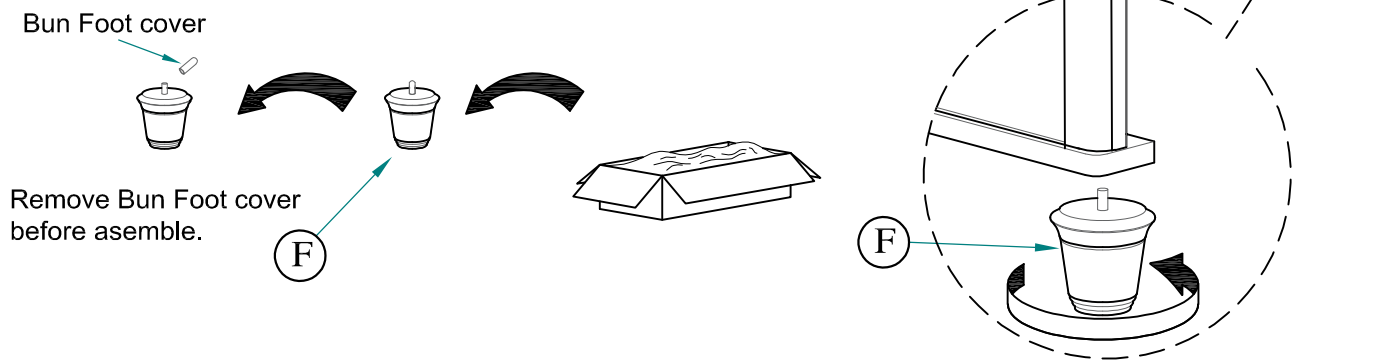**Step 2 :**

Attach the (C) Side Rail to the (A) Headboard & (B) Footboard.

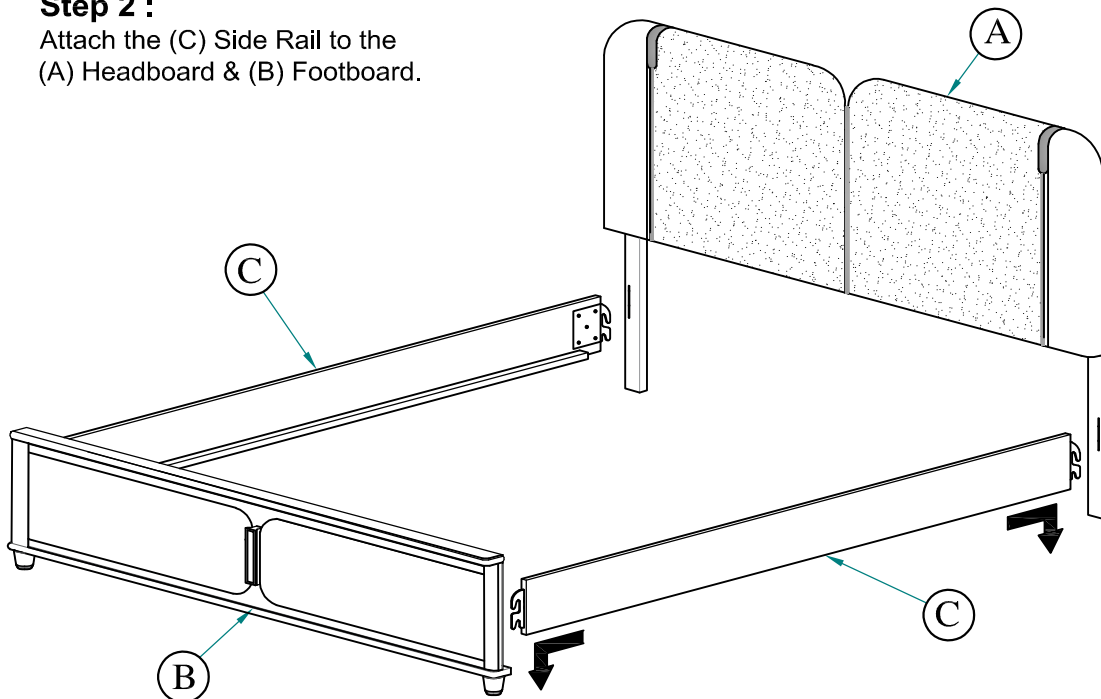

Step 3 :
Secure the (D) Slat using the
(4) Screw 32mm provided.

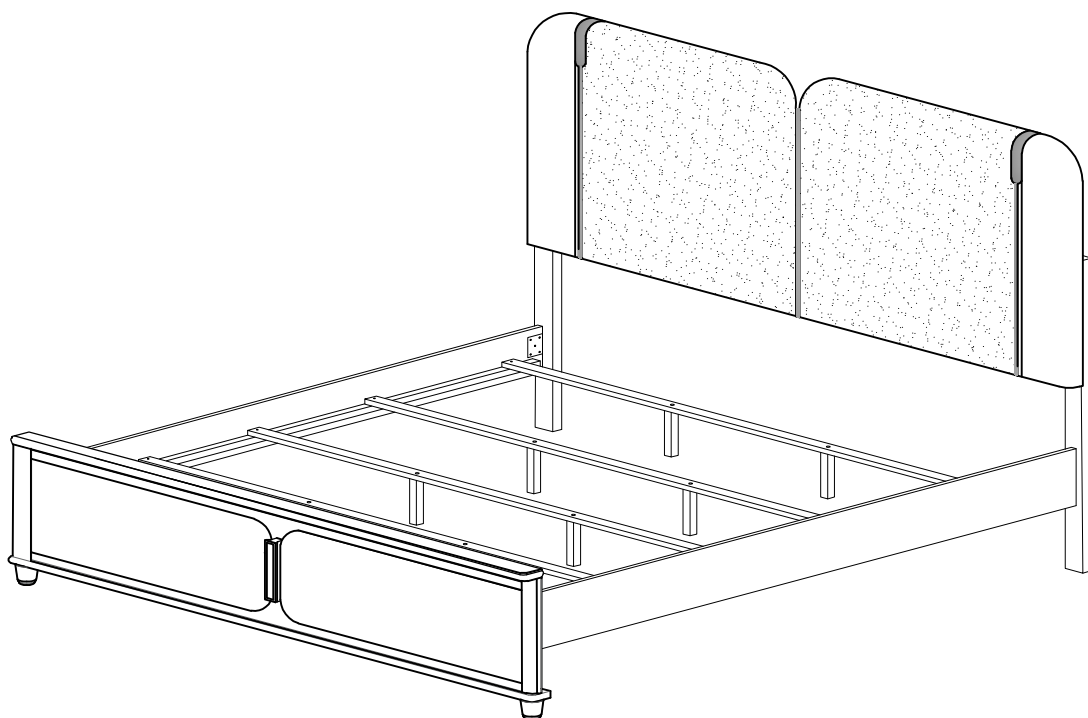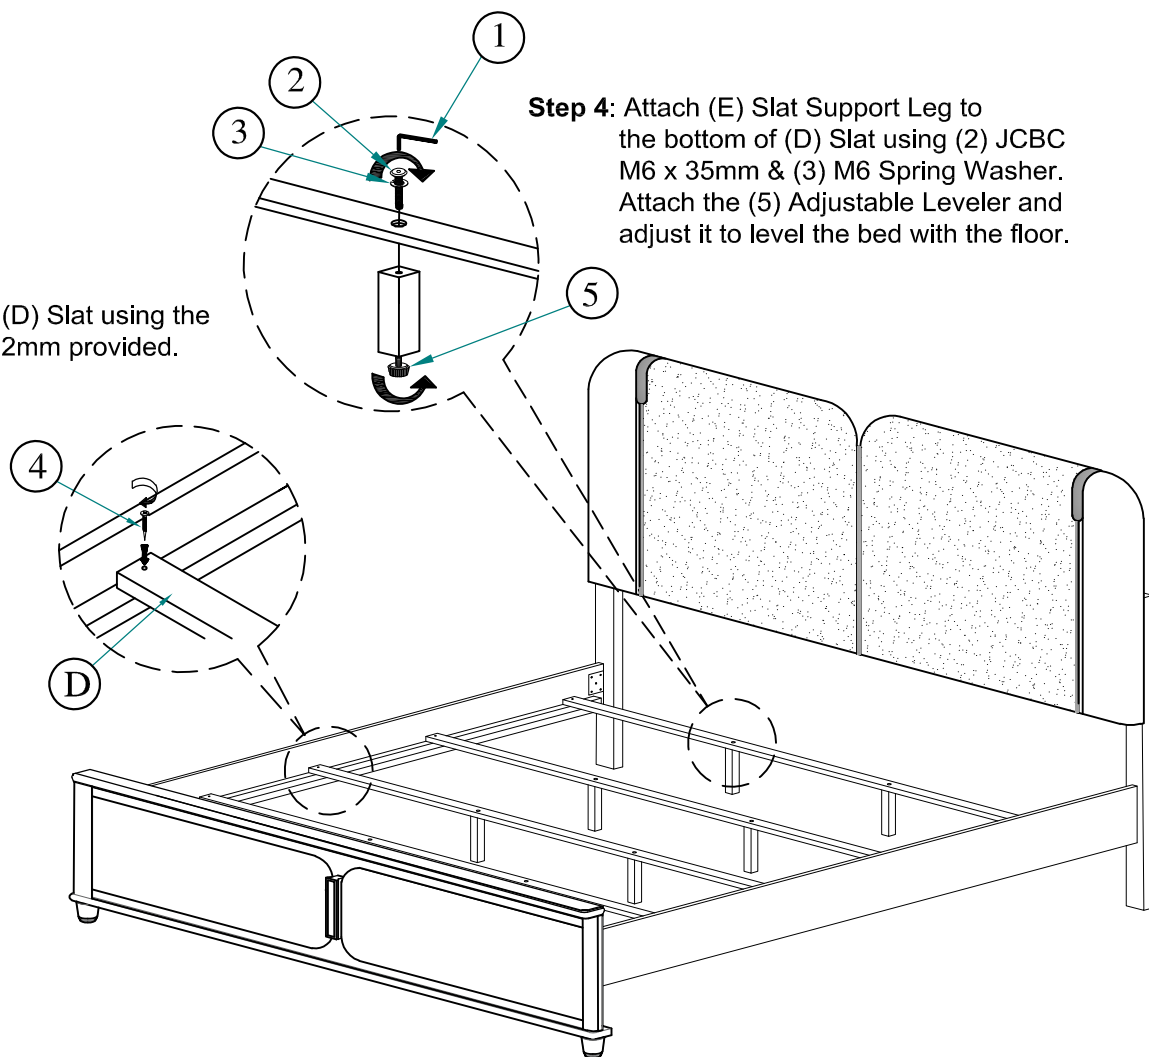

Assembly completed