


## **ASSEMBLY INSTRUCTIONS**

6/0 Panel Bed / Upholstered Bed & Storage Footboard 406167(136/146/166/167)

Thank you for purchasing this quality product from A.R.T. Furniture. Be sure to check all packing material for parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

Note: Some furniture is heavy, it is recommended that two people assemble this item to avoid

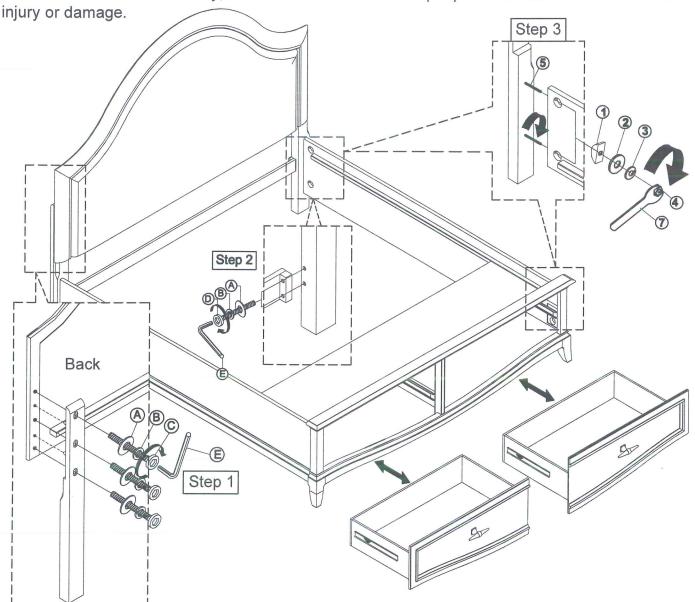

-			
NO	HEA	Q'ty	
Α	0	5/16" Flat Washer	10
В	0	5/16" Lock Washer	10
С	0	5/16" x 1½" Bolt	6
D	0	5/16" x 2" Bolt	4
Е		5mm Allen Wrench	1
NO	FILI	Q'ty	
Е	0	1/4" Flat Washer	8
F	9	<sup>1</sup> / <sub>4</sub> " Lock Washer	8
G	0	1/4" x 11/2" Bolt	8
Н		4mm Allen Wrench	1

Remove drawers to assemble the bed, after which, return the drawers to their original location.

NO	SIE	Q'ty	
1	<b>(</b>	5/16" Curved Washer	8
2	0	5/16" Flat Washer	8
3	0	5/16 Lock Washer	8
4		5/16" Nut	8
5	CHARLESTAND	$\frac{5}{16}$ " x $3\frac{1}{2}$ " Threaded Rod	8
6	<b>@</b>	#8 x 1 <sup>1</sup> / <sub>4</sub> " Wood Screw	12
7	<u></u>	12mm Wrench	1

Page 1/2

! KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE!

03/2017



## **ASSEMBLY INSTRUCTIONS**

6/0 Panel Bed / Upholstered Bed & Storage Footboard 406167(136/146/166/167)

Thank you for purchasing this quality product from A.R.T. Furniture. Be sure to check all packing material for parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

Note: Some furniture is heavy, it is recommended that two people assemble this item to avoid

