

ASSEMBLY INSTRUCTIONS




aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I35-307-1 66" Desk for a Return
I35-308 48" Return Desk

HARDWARE PACK FOR -307-1		COMPONENT LIST -307-1	
A	Bolt (Ø1/4"*2-1/2")	12 PCS	Legs 6 Pcs
B	Lock Washer (Ø1/4")	12 PCS	
C	Flat Washer (Ø1/4"*3/4")	12 PCS	
D	Allen Wrench (4mm)	1 PC	
HARDWARE PACK FOR -308		COMPONENT LIST -308	
A	Bolt (Ø1/4"*2-1/2")	10 PCS	Legs 5 Pcs
B	Lock Washer (Ø1/4")	16 PCS	
C	Flat Washer (Ø1/4"*3/4")	16 PCS	
D	Allen Wrench (4mm)	1 PC	
E	Bolt (Ø1/4"*1-1/2")	6 PCS	

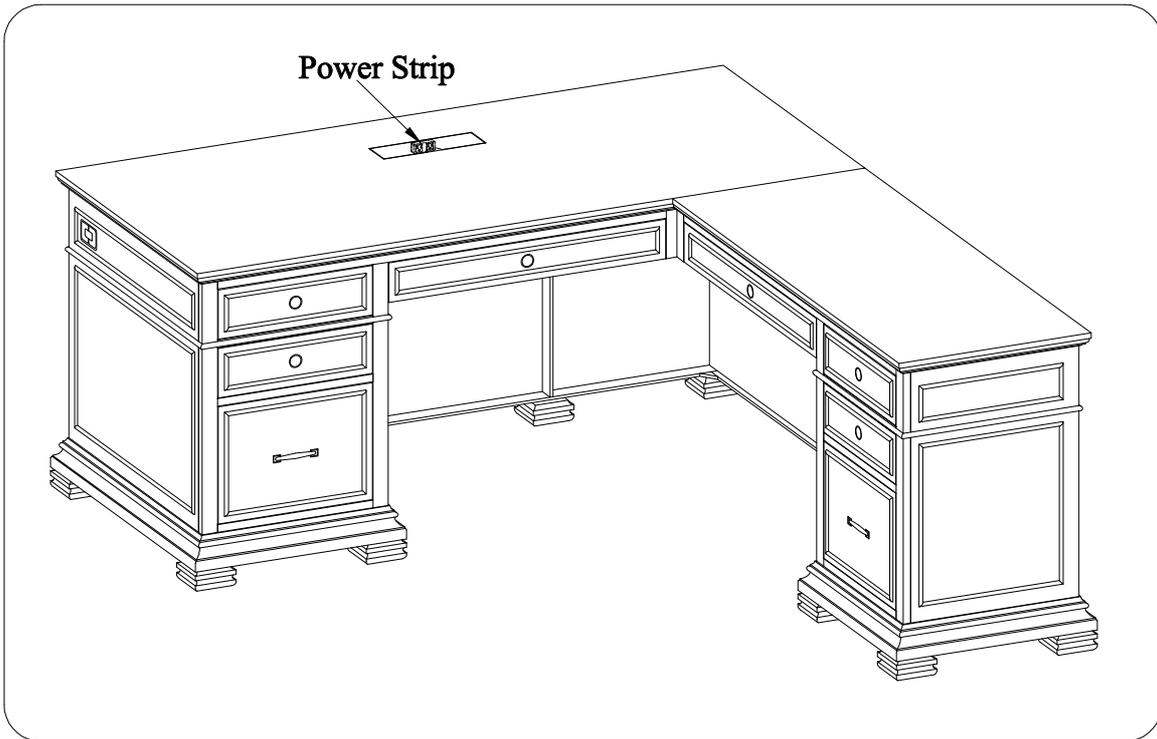

CAUTION:

1. Pick up the desk when moving the desk. Make sure do not slide the desk on carpet or tile. Otherwise, the base will be stressed and broken.
2. Take off the Inner-box, and make sure all the staples are removed before assembly. For preventing harm to consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.


ASSEMBLY INSTRUCTIONS

ah

aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I35-307-1 66" Desk for a Return

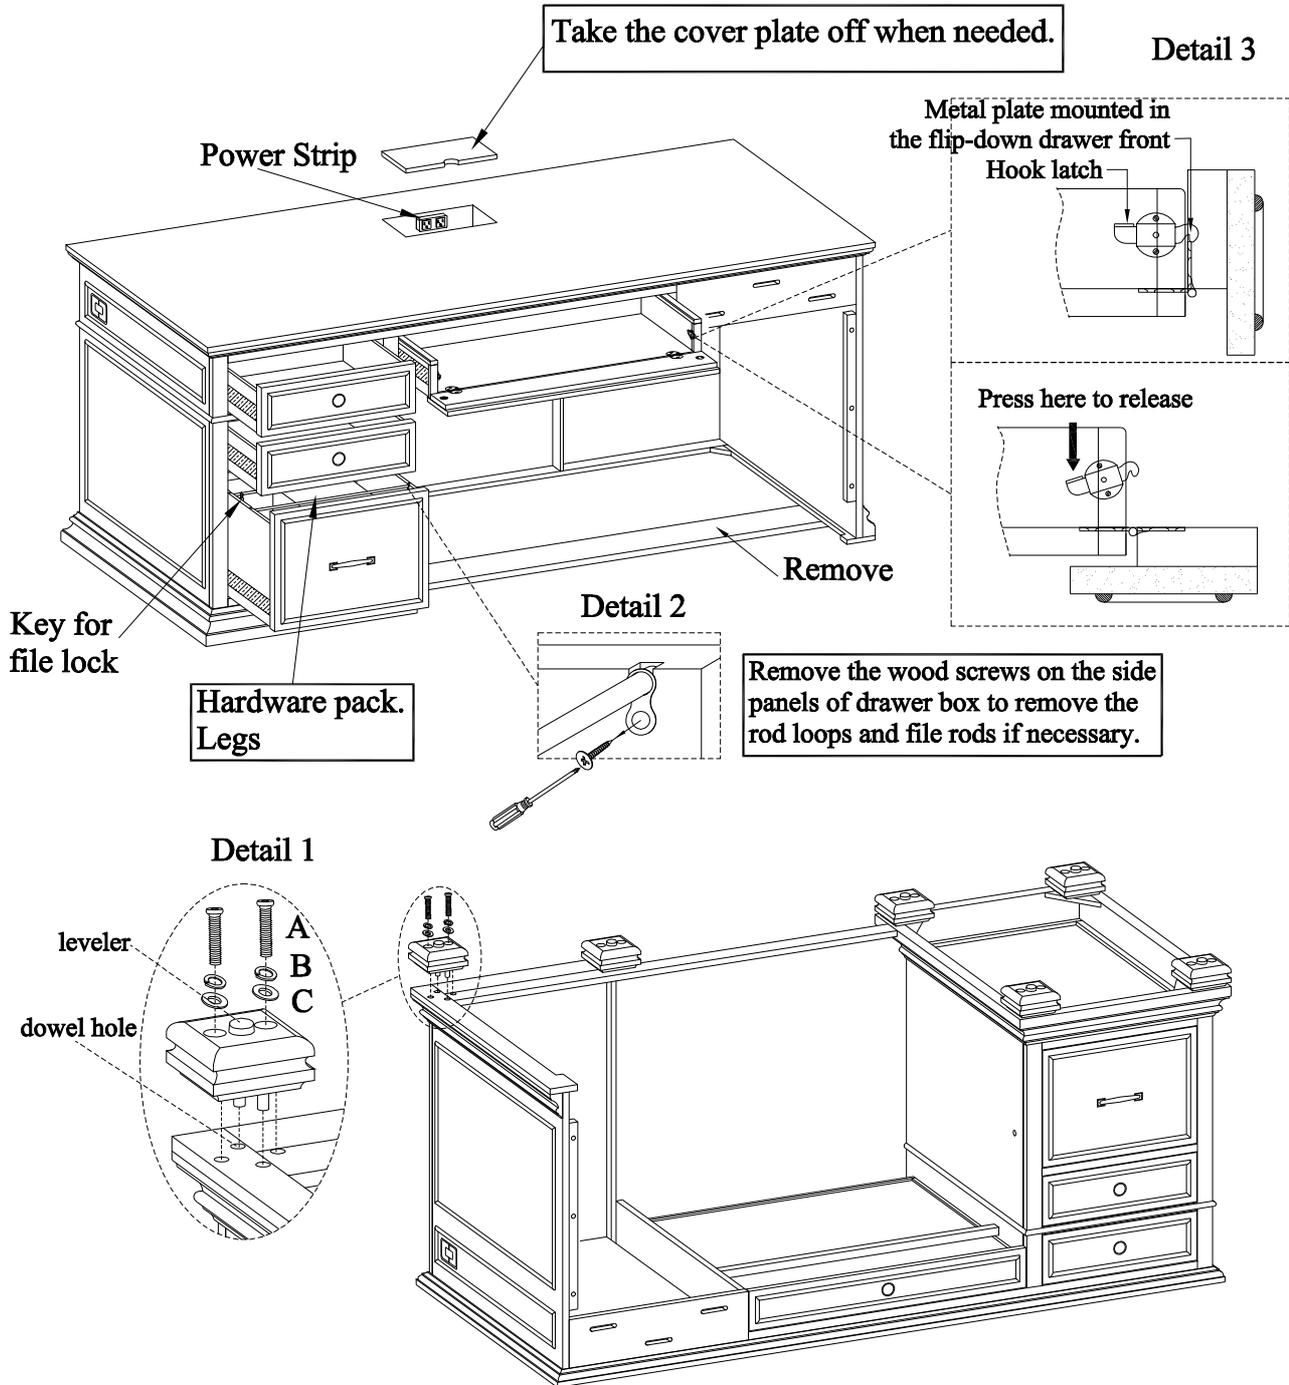

ASSEMBLY STEP:

1. Put the desk upside down on a soft, clean surface.
2. Attach legs to the bottom of desk using bolts (A), lock washer (B) and flat washer (C). See detail 1.
3. Turn the desk to the upright position.

MADE IN VIETNAM


ASSEMBLY INSTRUCTIONS

ah


aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I35-308 48" Return Desk


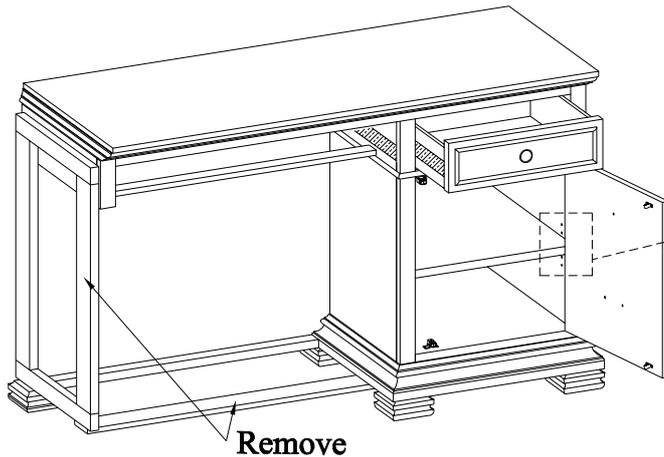


Detail 5


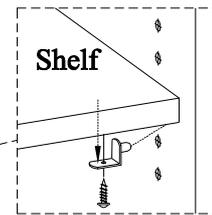


When you prefer to adjust the location of shelf, take off screws and reinsert the shelf brackets into the holes. Then place the shelf on and re-secure it.

Detail 4

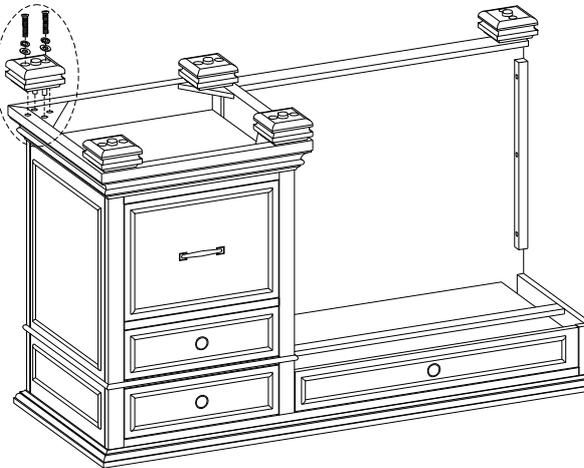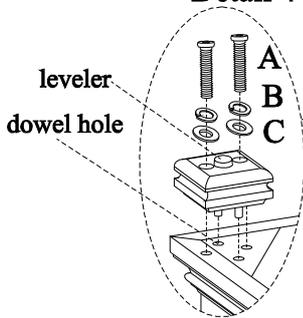

Detail 6

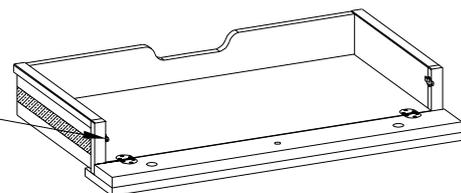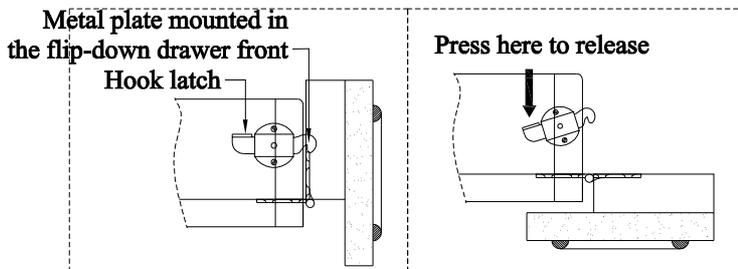

ASSEMBLY STEP:

1. Put the desk upside down on a soft, clean surface.
2. Attach legs to the bottom of desk using bolts (A), lock washer (B) and flat washer (C). See detail 4.
3. Turn the desk to the upright position.

MADE IN VIETNAM

ASSEMBLY INSTRUCTIONS


Page 4/4

ah

aspenhome®

Distributed by Furniture Values International, LLC

ITEM NO: I35-307-1 66" Desk for a Return
I35-308 48" Return Desk

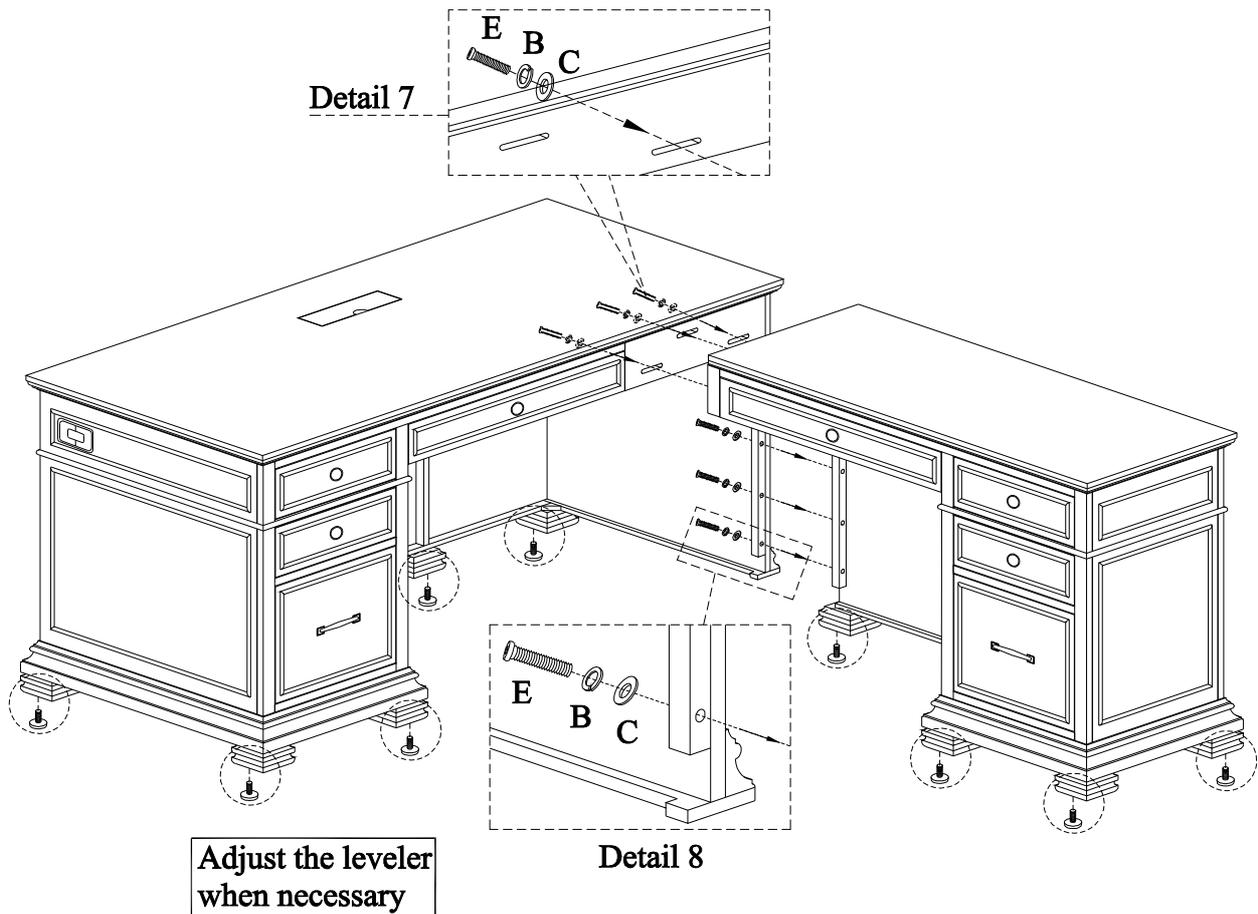

ASSEMBLY STEP:

1. Align the holes in the desk end connector with the holes in the return.
2. Use bolts (E), lock washers (B) and flat washers (C) to connect desk and return. See detail 7 and detail 8.
3. Use an Allen wrench tighten all the bolts.

MADE IN VIETNAM

DATE: 2016-11-29