

ASSEMBLY INSTRUCTION


MADE IN MALAYSIA

U3043 ACCENT CHAIR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


Before you start assembly: Please read all instructions carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.

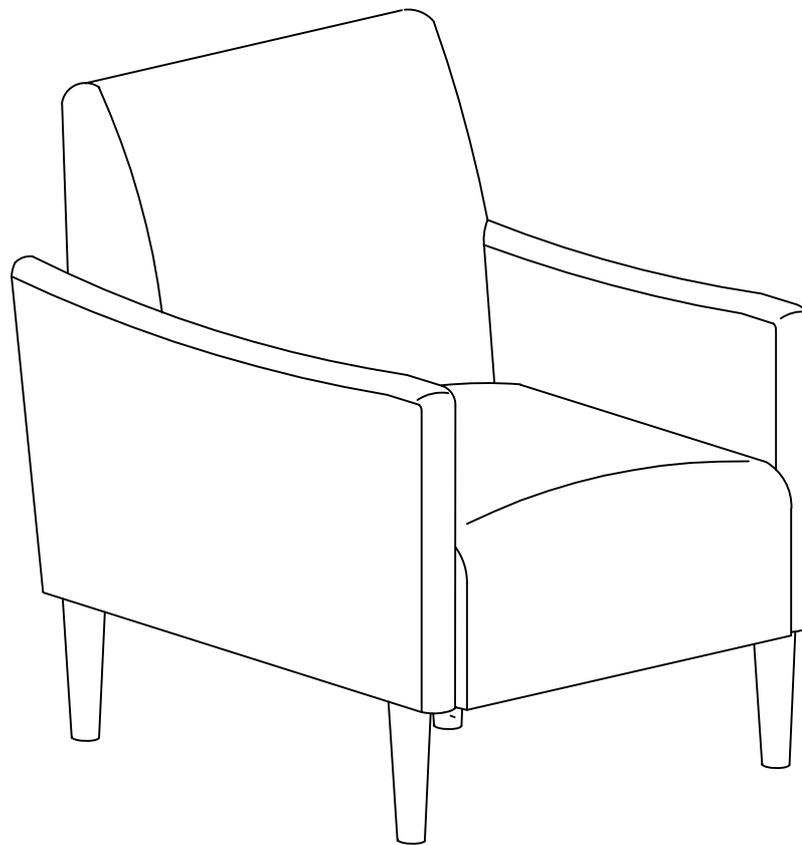


15 minute

APPROXIMATE ASSEMBLY TIME

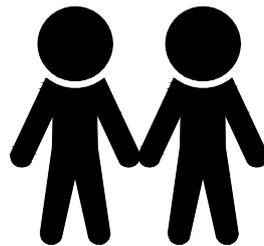


2 PERSON

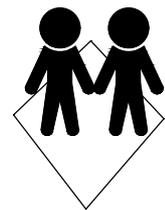

REQUIRED ASSEMBLY SPACE

PART LIST


NO	PARTLIST	QTY
A	BACKREST	1 PC
B	SEAT	1 PC
C	LEG	4 PCS

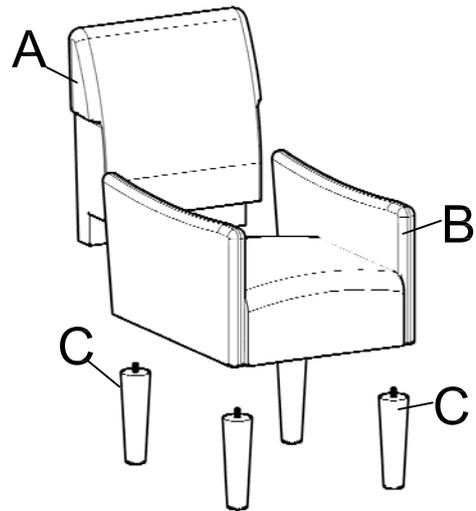



HARDWARE LIST

- 1)  M6 X 60mm FLAT HEAD HEX BOLT x4
- 2)  2mm FLAT WASHER x4
- 3)  5/16" SPRING WASHER x4
- 4)  M4 ALLEN KEY x1
- 5)  47MM X 3MM LEG POST PLASTIC STOPPER x4

STEP1

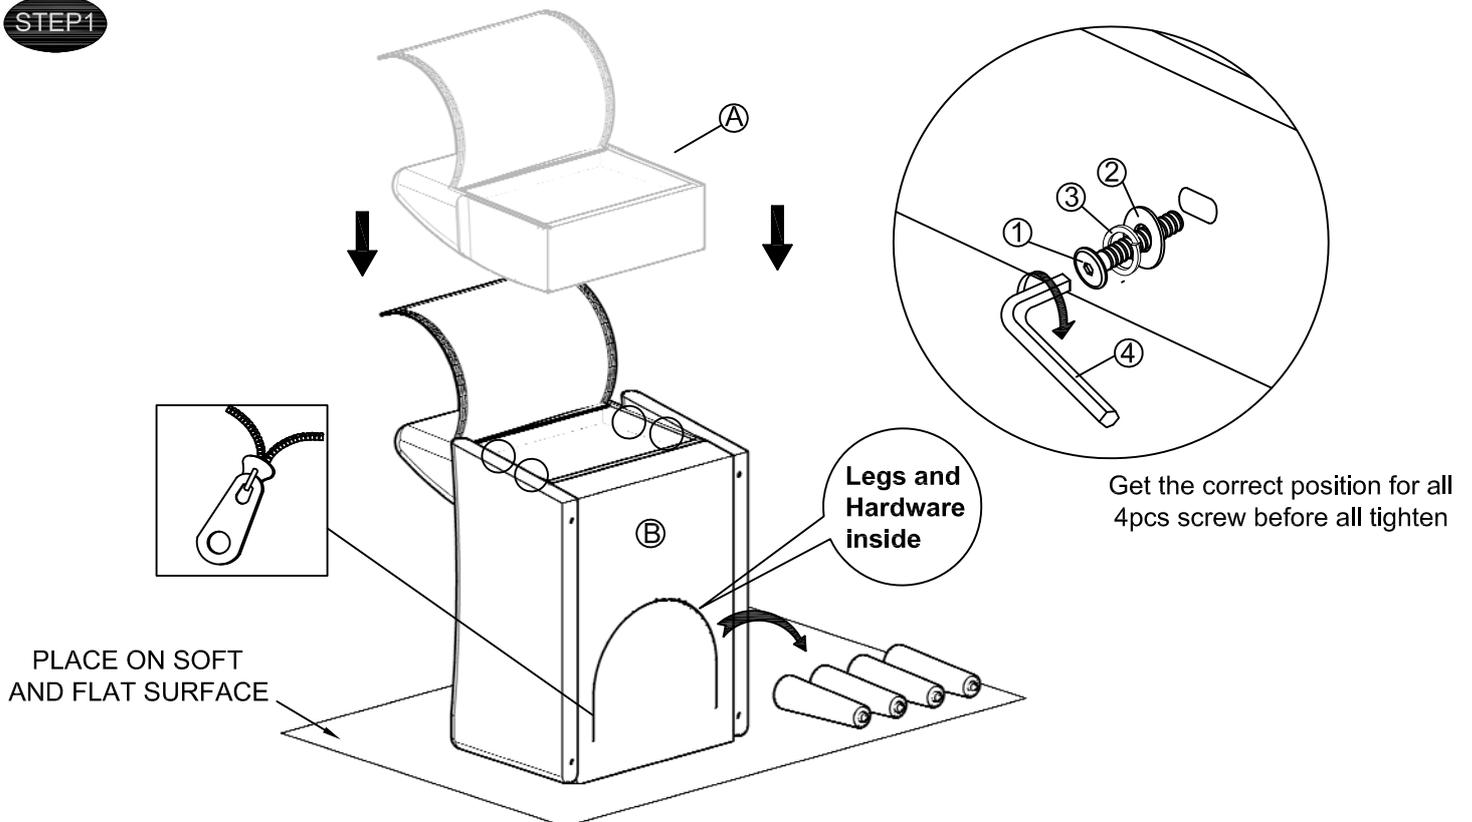

STEP 2

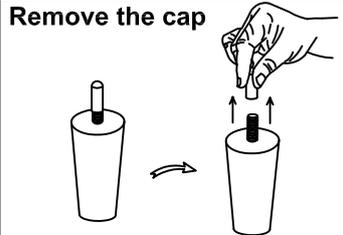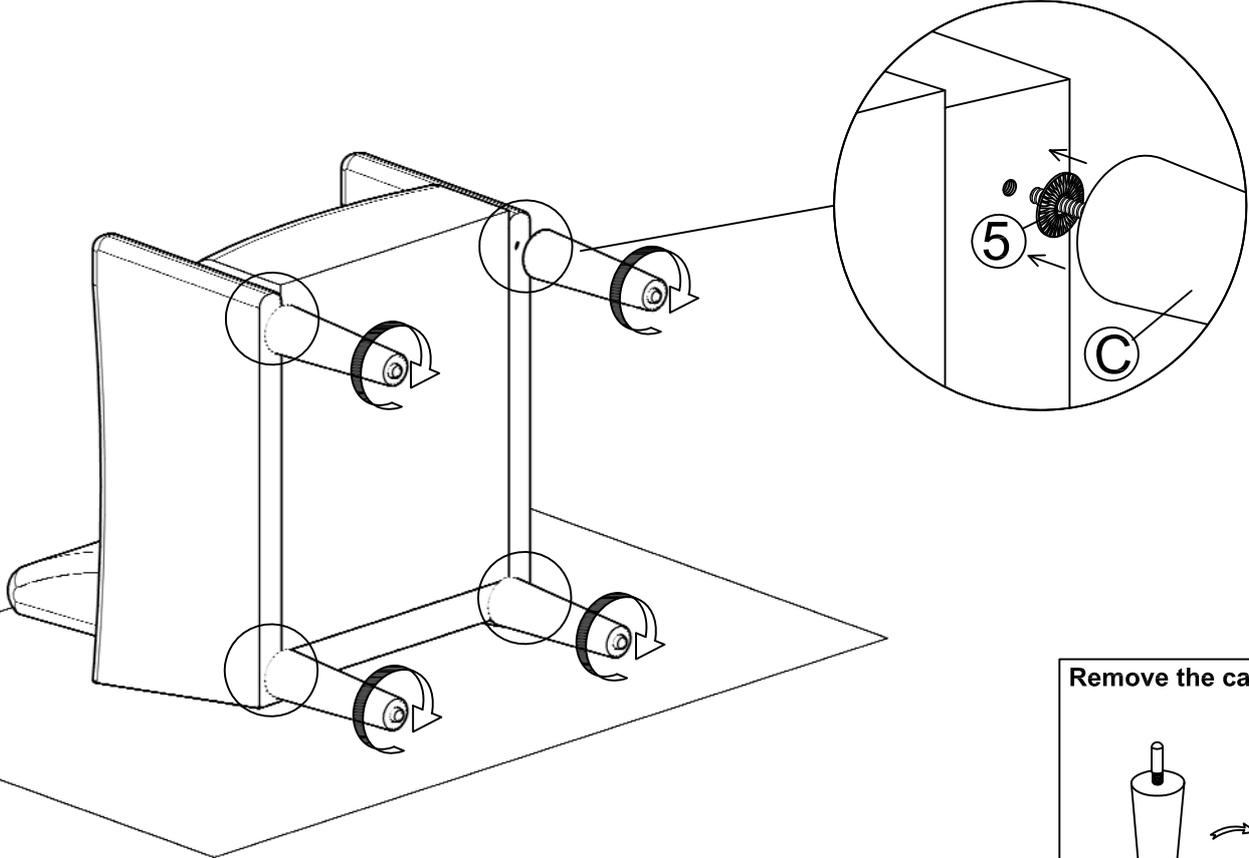

STEP 2

