


Assembly Instruction

Tatiana Coffee Table in Grey

Item # T-6610-3-CT

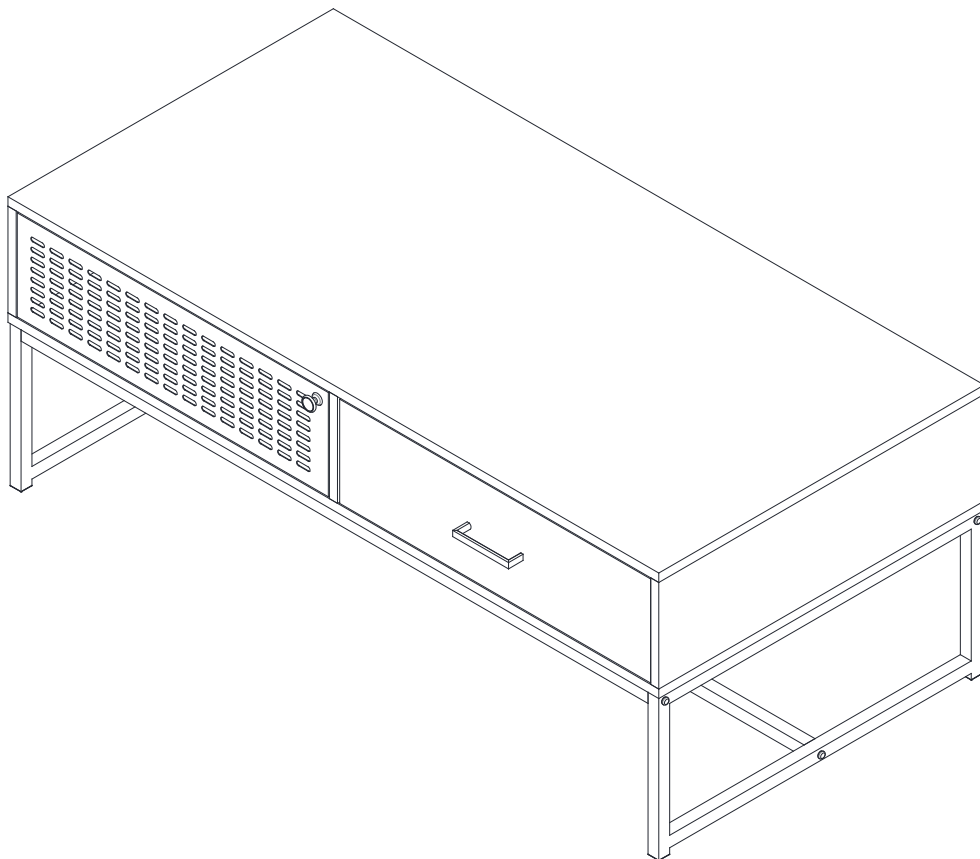






Assembly Instruction for

Item: T-6610-3-CT

CAUTION: Please read instructions thoroughly before unpacking assembly parts.

1. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
2. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.
3. Please do not tighten screws or bolts until each step is completed or instructed.
4. Please do not over tighten screws or bolts.

PART LIST


No.	SKETCH	PART DESC	CODE	Q'TY
1		Top Box	PT-6610-3-CTTOP	1
2		Side Frame	PT-6610-3-CTFRM	2
3		Top Crossbar (With bolt hole in the middle)	PT-6610-3-CTBAR1	2
4		Bottom Crossbar	PT-6610-3-CTBAR2	1
5		Drawer Handle	PT-6610-HDS	1
6		Door Knob	PT-6610-KBS	1

HARDWARE LIST

No.	SKETCH	PART DESC	CODE	Q'TY
7		Long Bolt	PT-6610-CTHW	6
8		Short Bolt		6
9		Handle Bolt		2
10		Bolt (for Knob)		1
11		Bolt Cover		6
12		Cap		4
13		Allen Key		1

Step 1:


Attach Top Corssbar (3) and Bottom Crossbar (4) to Side Frame (2) with Long Bolt (7).

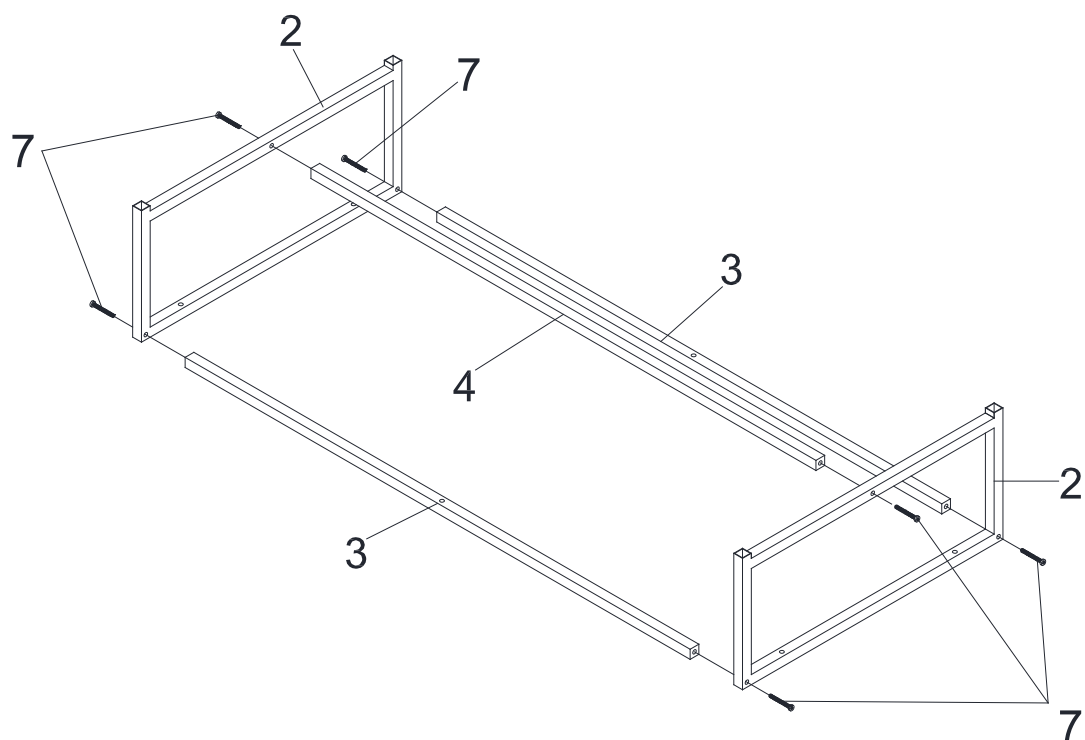


Step 2:

1. Insert Cap (11) onto Side Frame (2).


2. Attach the assembled leg frame to Top Box (1) with Short Bolt (8).

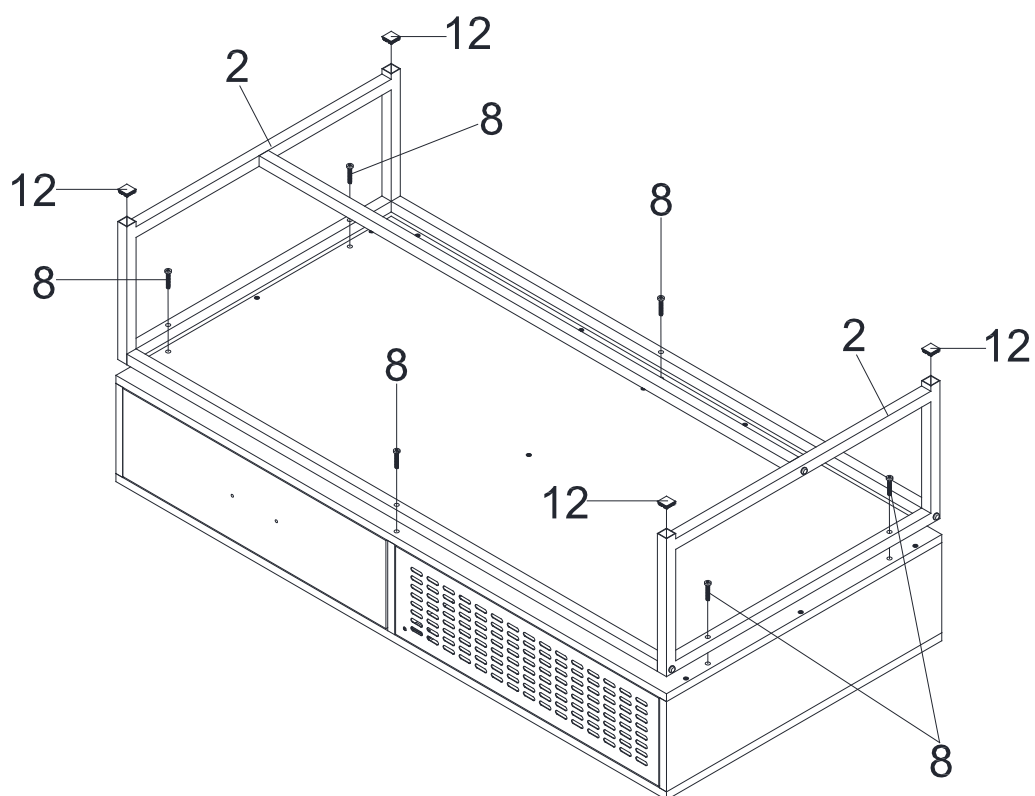



Step 3:
Install Drawer Handle (5) with Handle Bolt (9).

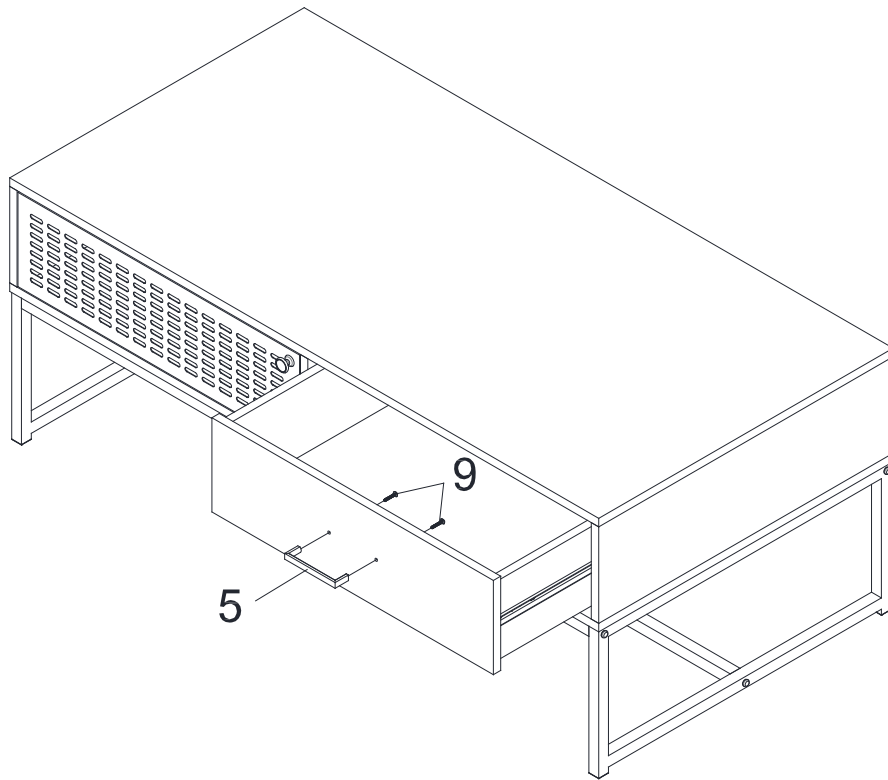

Step 4:
Install Door Knob (6) with Bolt (10).

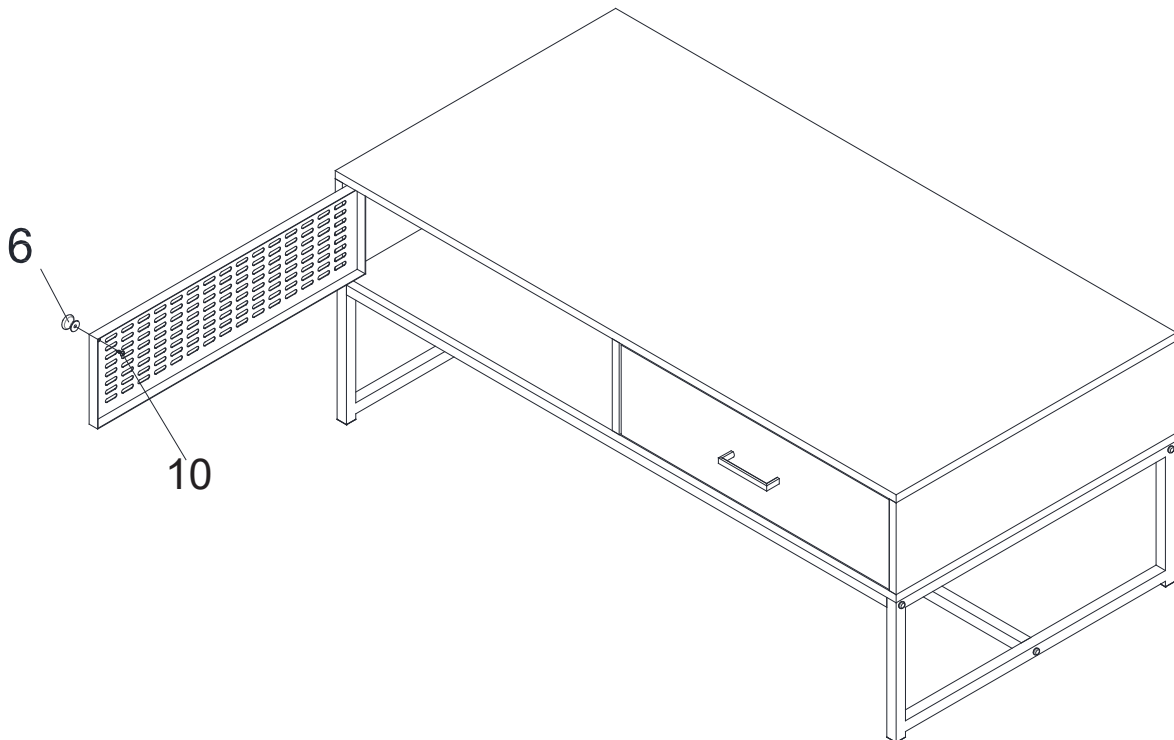

Step 5:
Install Bolt Cover (11) on Long Bolt (7) as shown.

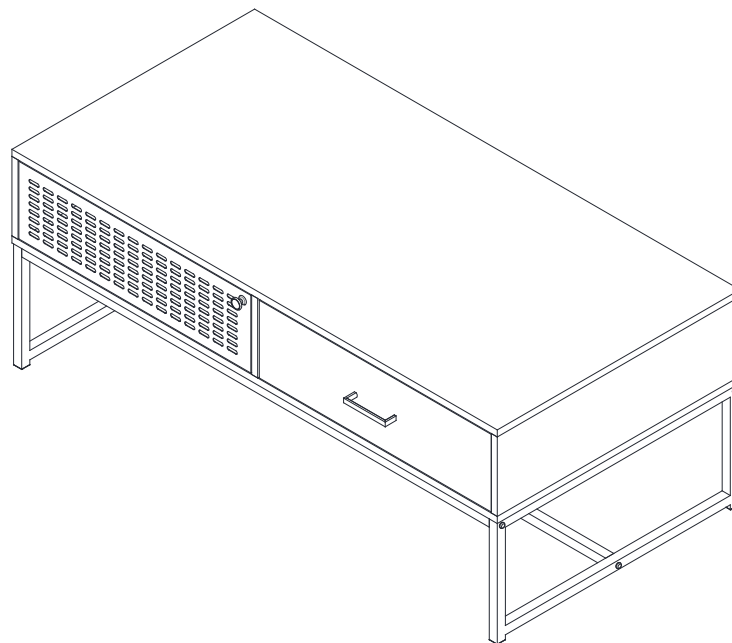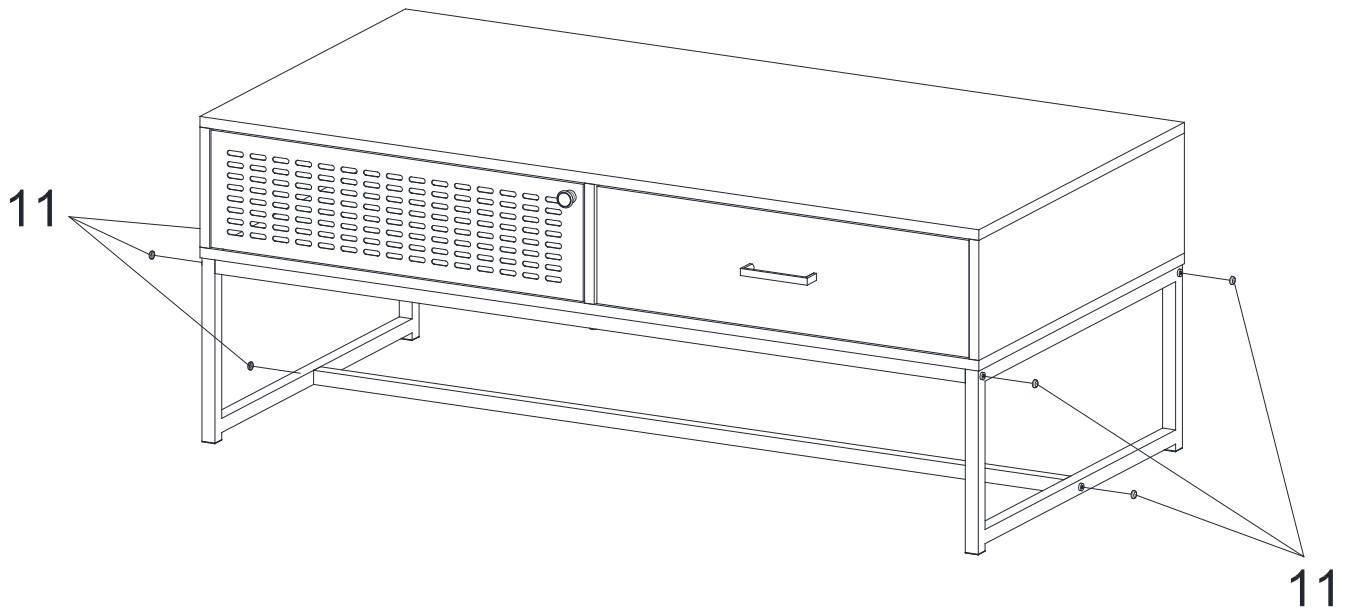

Assembly Completed

MADE IN TAIWAN

Page 5 of 5