



ASSEMBLY INSTRUCTION

LODGE ARM BED QUEEN


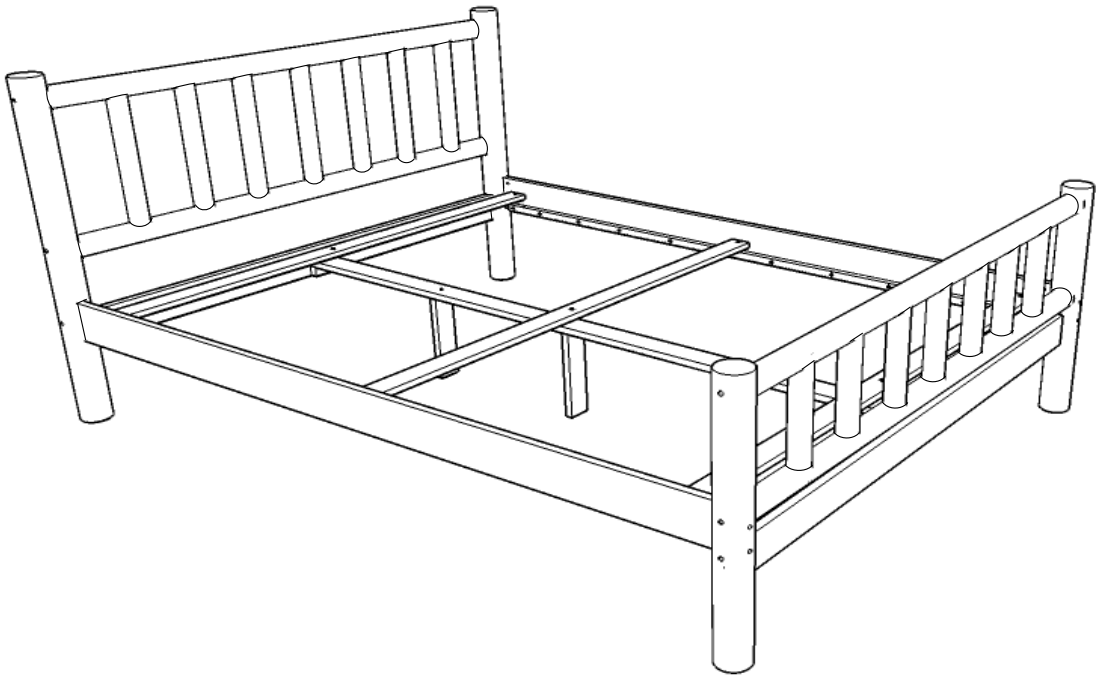


- * Vertical Assembly Only
- * Please cover floor with corrugated board / paper to avoid to avoid scratches/ damages to floor



ASSEMBLY INSTRUCTION

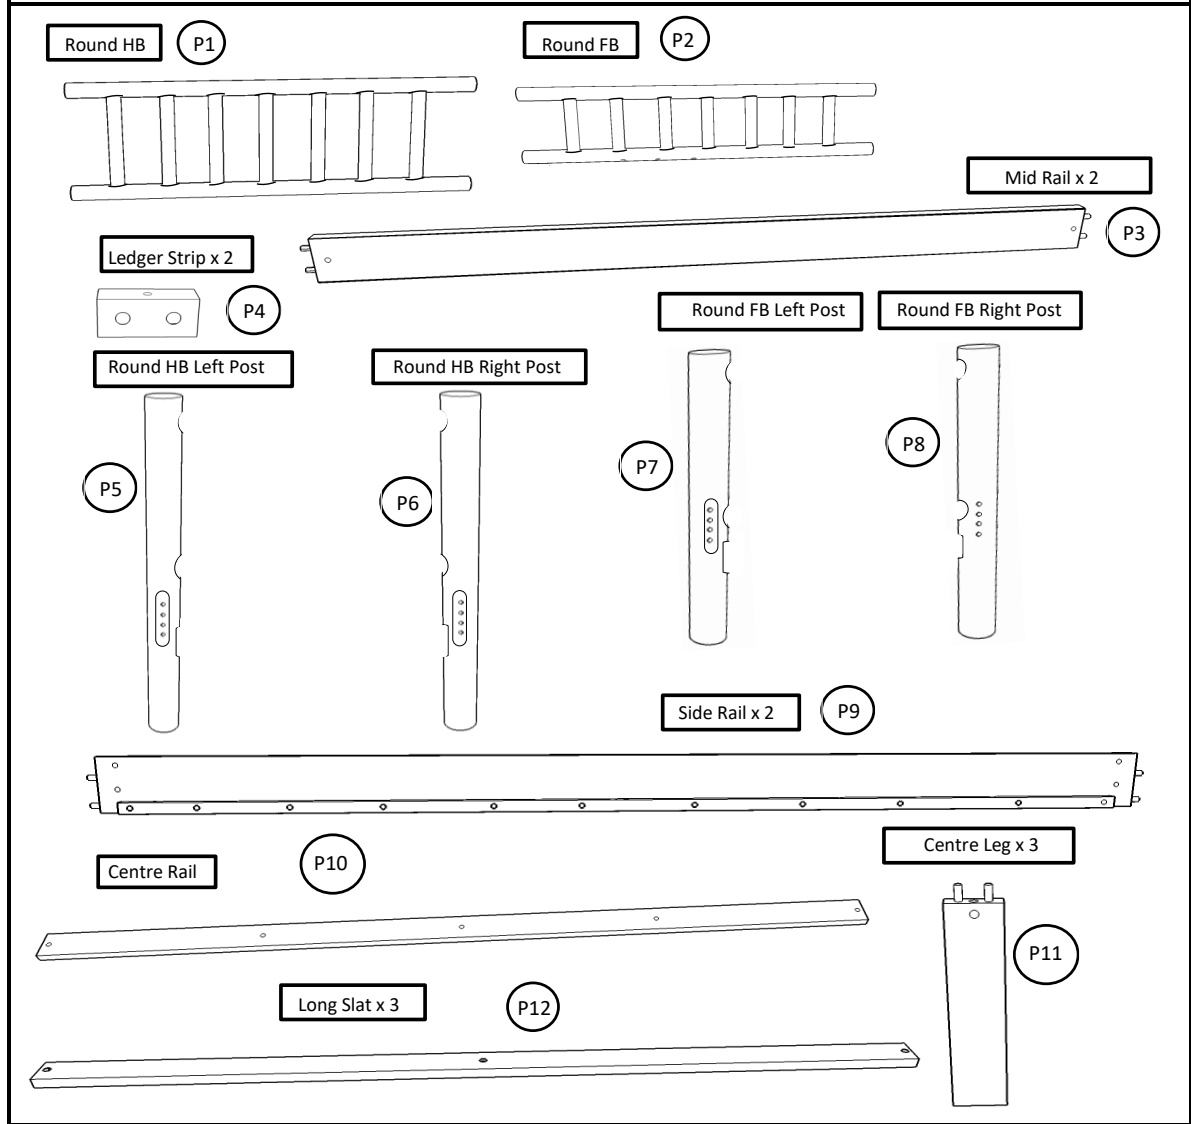



HARDWARE

NO.	NAME HARDWARE	Size	Installed	Uses	NO.	NAME HARDWARE	Size	Installed	Uses
A	 Hexagon bolts	ø6 X 100 mm	12	For Side Rail & Mid Rail	F	 Screws	ø8 X 1 1/4"	2	Centre Rail to Ledger Strip
B	 Hexagon bolts	ø6 X 70 mm	8	For Round Panel	G	 Screws	ø8 X 1 "	9	For Slat
C	 Hexagon bolts	ø6 X 60 mm	3	For Centre Leg	H	 Allen Key	4 mm	1	For Bolt Lock
D	 Hexagon bolts	ø6 X 30 mm	4	Ledger Strip to Mid Rail	I	 Wood Button	13,50 mm	20	For The Bolt Head Hole
E	 Barrel Nuts	ø6 X 13 mm	15	For 6 x 100 Bolts For 6 x 60 Bolts					

Step 1

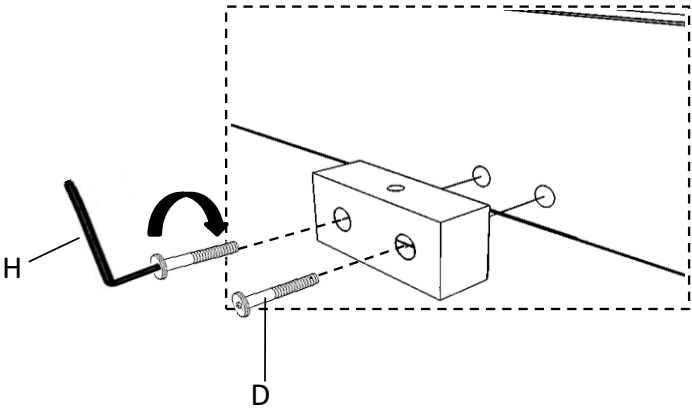


HARDWARE		
D		4




P3x2






P4x2

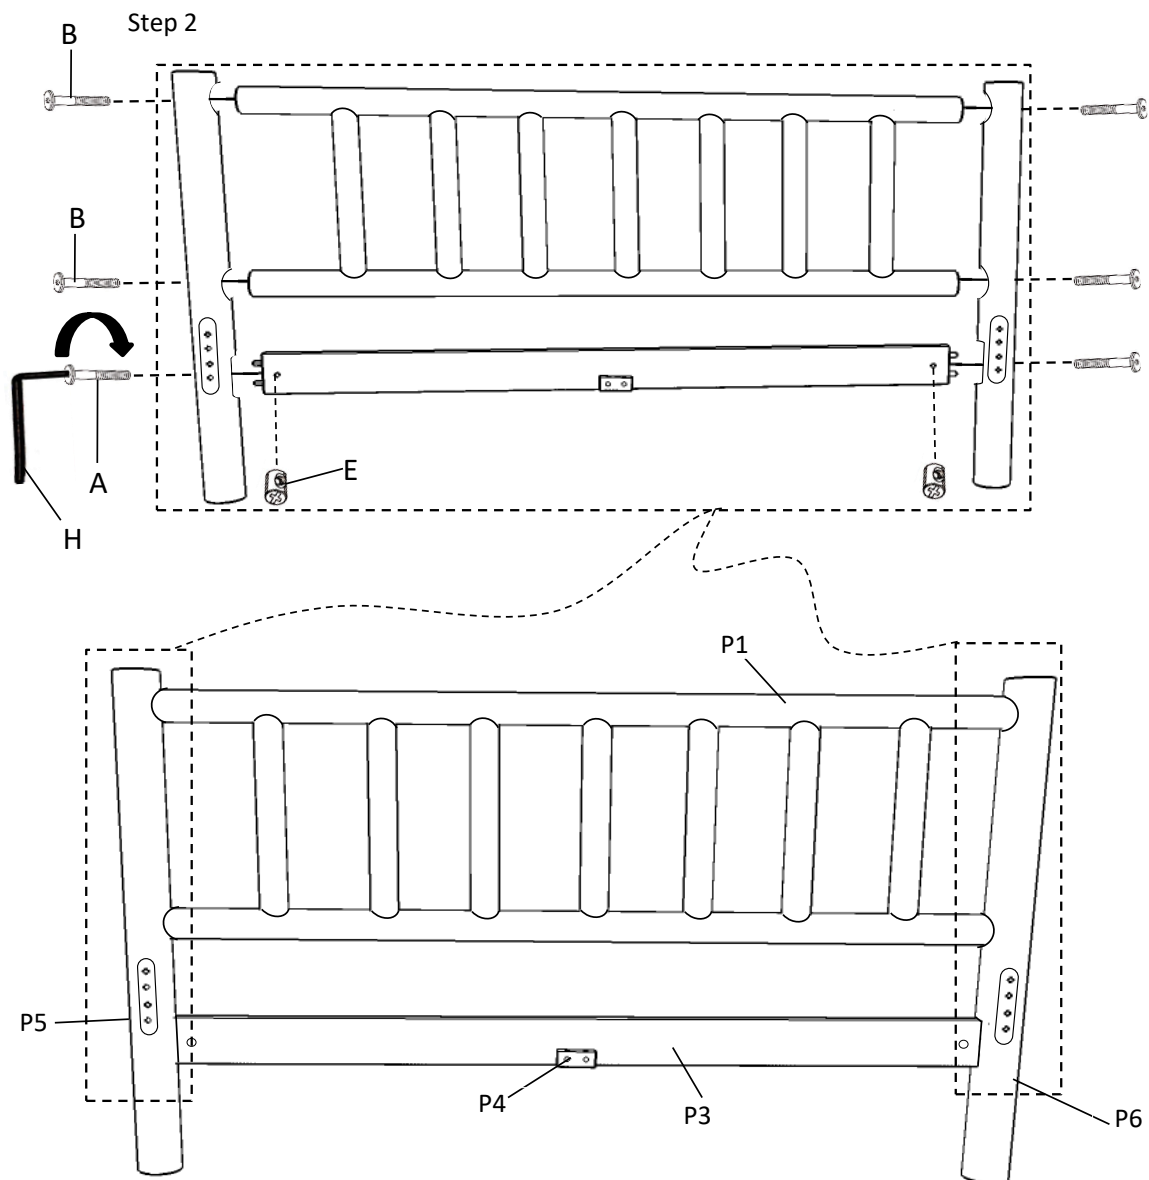


HARDWARE		
A		2
B		4
E		2

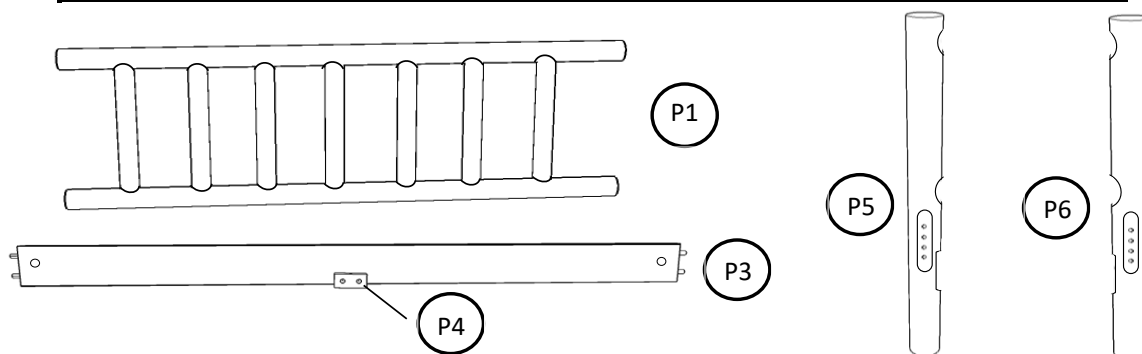


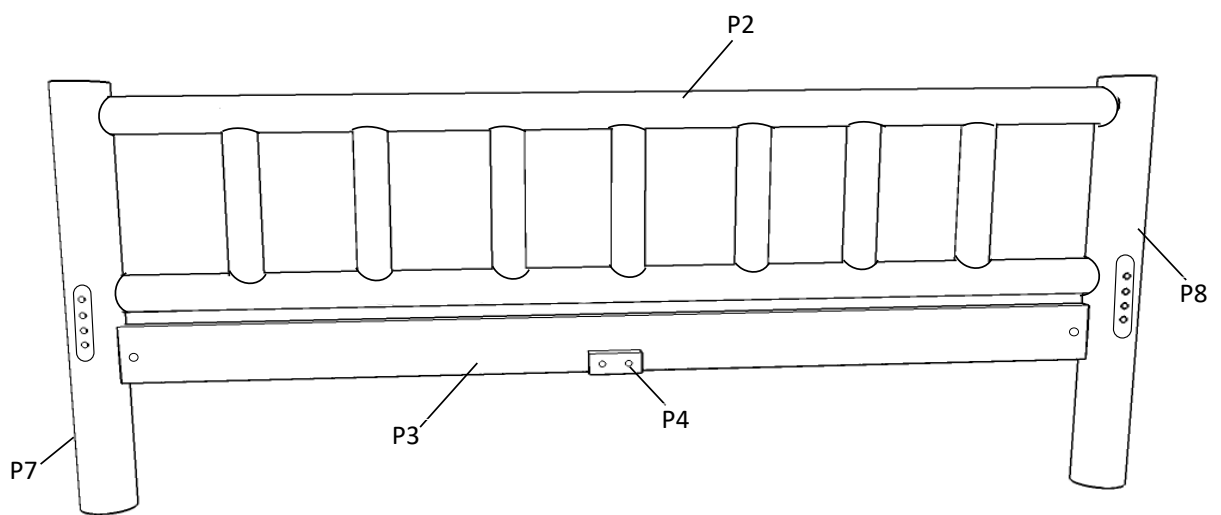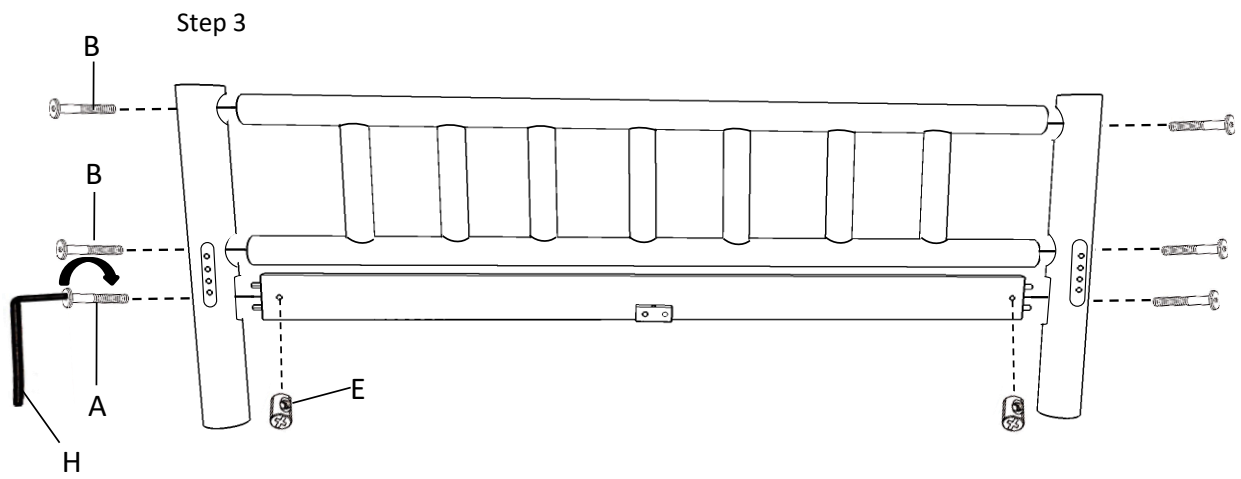




HARDWARE		
A		2
B		4
E		2

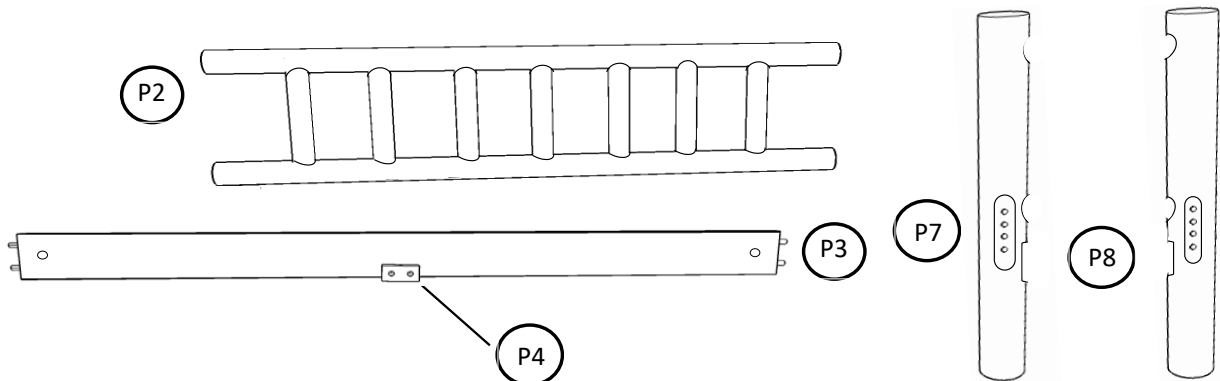


Step 4

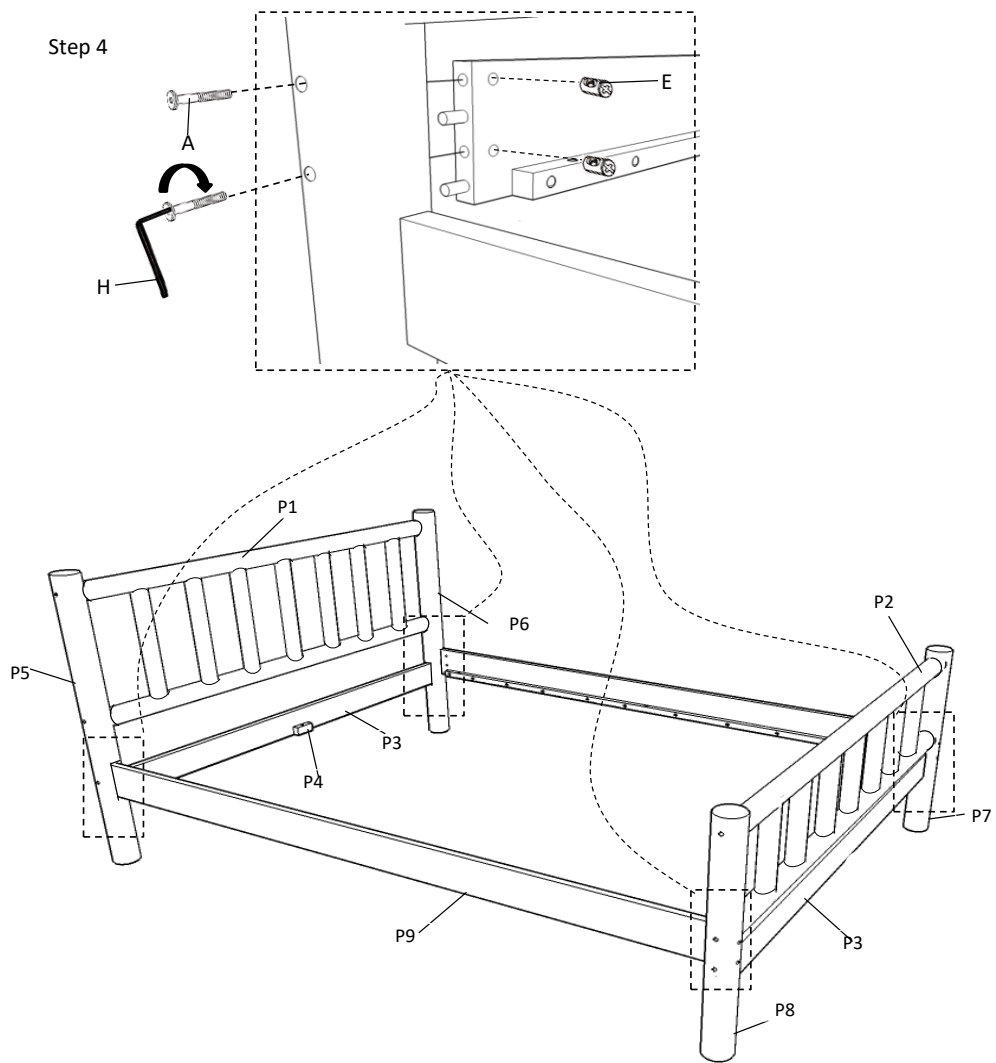

HARDWARE		
A		8
E		8

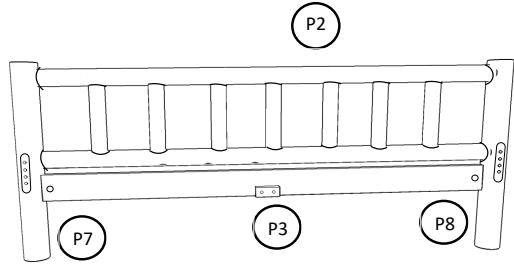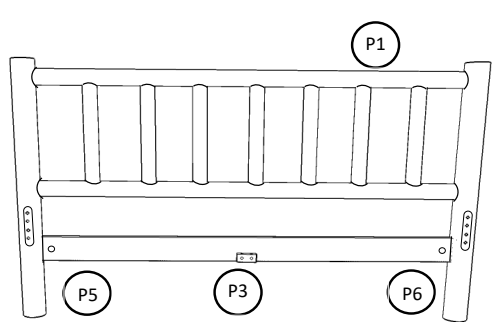



Step 5

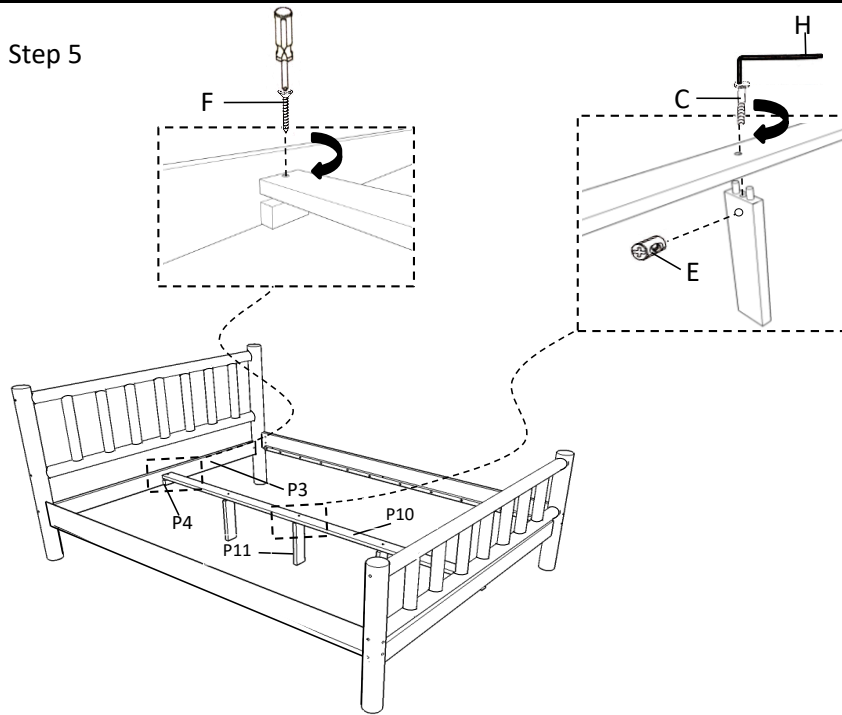


HARDWARE		
C		3
E		3
F		2
 (P10)  (P11)		

Step 6

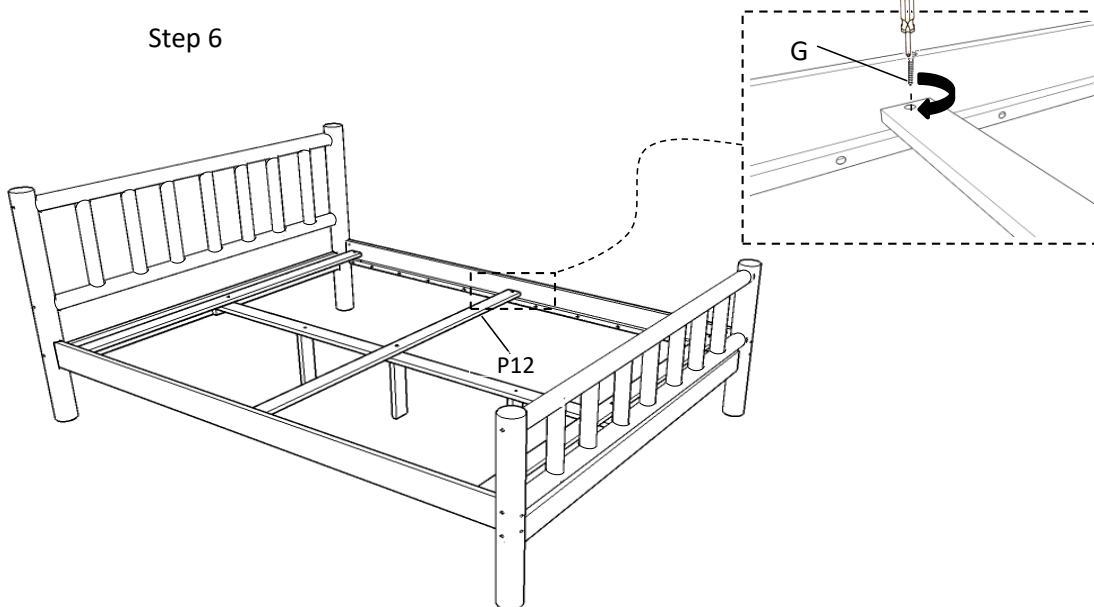

HARDWARE		
G		9
 (P12)		

Step 7

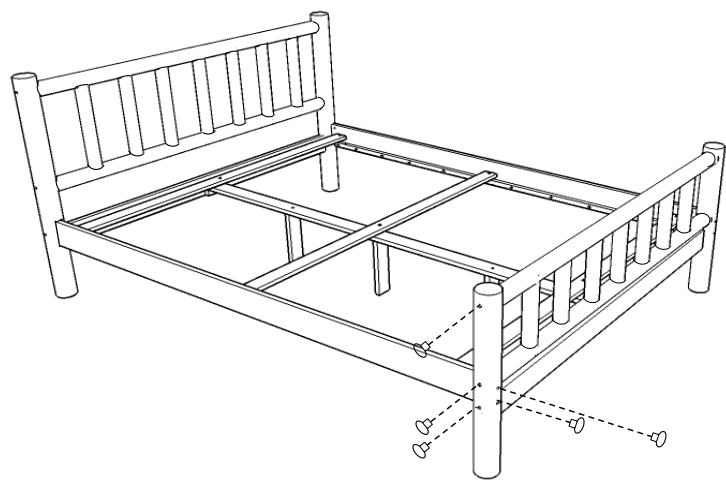

HARDWARE		
1		20

COMPLETE

