

ASSEMBLY INSTRUCTIONS






CHADWICK COLLECTION




B2053-110 6/6-6/0 EK/WK Headboard
B2053-130 6/6 EK Footboard And Rails

Thank you for being our valued customer. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all items and compare them with the parts list and hardware list below.

CAUTION: Read the instructions carefully before assembly.


1. We recommend that you assemble this product with the assistance of another person to eliminate damage to the product during assembly.
2. Do not over-tighten the screws and bolts as they may damage the threads.
3. Keep all hardware parts out of reach of children.
4. When you want to reposition the product, please always "LIFT & MOVE".

PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY
A	Headboard		1PC
B	Headboard Leg		2PCS
C	Footboard		1PC
D	Bed Rail		2PCS
E	Slat		4PCS
F	Support Leg		4PCS

HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	QTY
1	Bolt 1/4" x 1 1/2"		10PCS
2	Bolt 1/4" x 3 1/4"		4PCS
3	Bolt 1/4" x 4 3/4"		4PCS
4	Chipboard Screw		8PCS
5	Allen Wrench		2PCS


Step 1

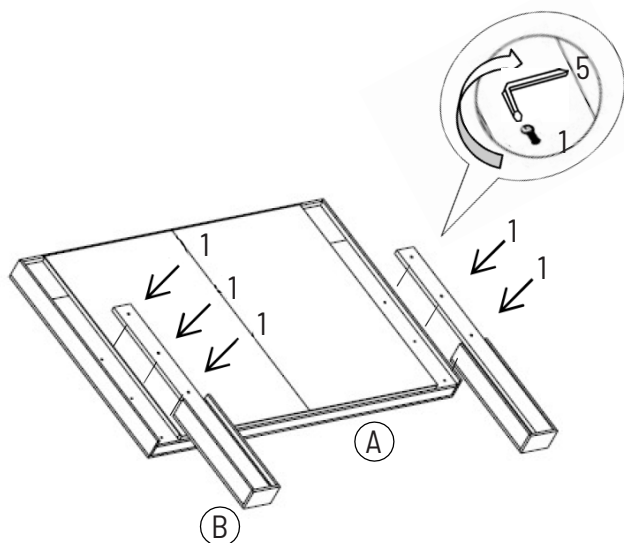Attach Headboard Leg (B) to Headboard (A) by using Bolt (1).



Step 2

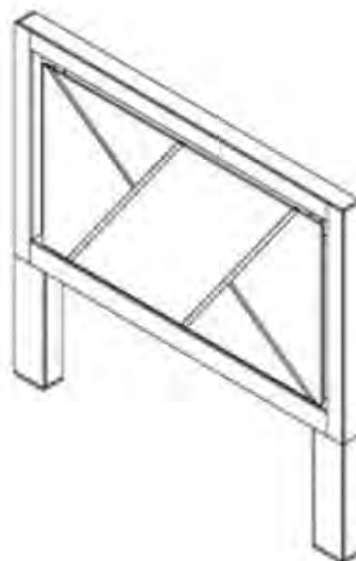Turn the finished headboard around.




ASSEMBLY INSTRUCTIONS

CHADWICK COLLECTION

B2053-110 6/6-6/0 EK/WK Headboard
B2053-130 6/6 EK Footboard And Rails


Step 3

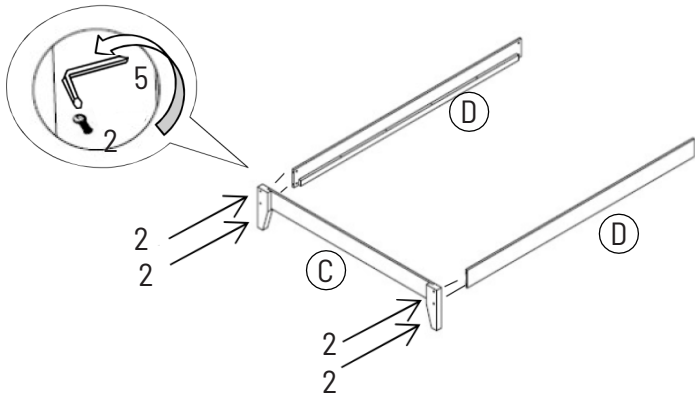Attach Bed Rail (D) to Footboard (C) by using Bolt (2).




Step 4

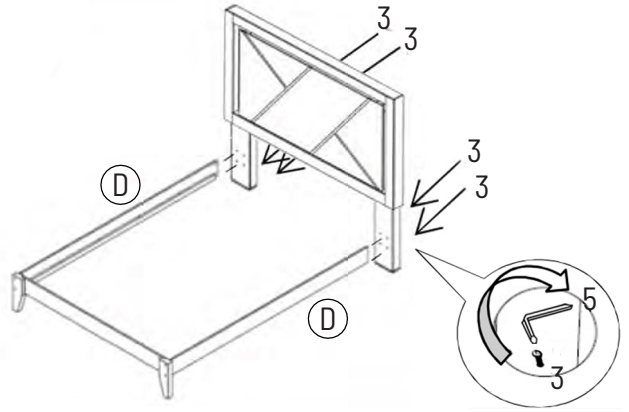Attach finished headboard to Bed Rails (D) by using Bolt (3).




Step 5

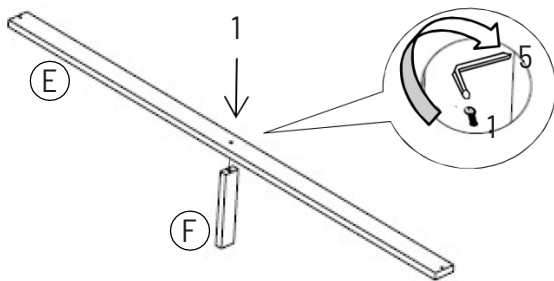Attach Support Leg (F) to Slat (E) by using Bolt (1).



Step 6

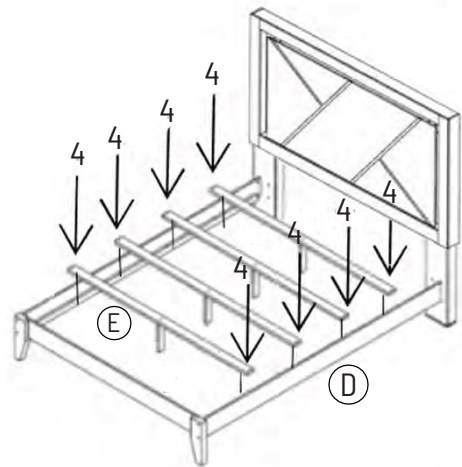Attach Slats (E) to Bed Rails (D) by using Bolt (4).



Congratulations!

Now your product is ready for you to enjoy.

