
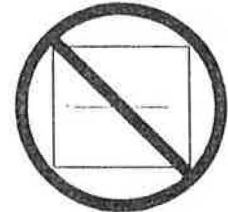
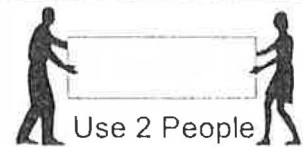


# T2100 Bed


Assembly Instruction

## Assembled View

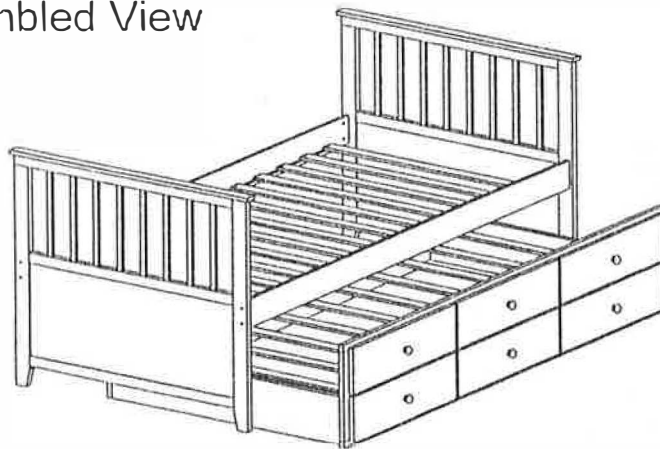


Note: Do not assemble using power tools.  
This can cause the bolts to be overtightened


## 1 Parts List

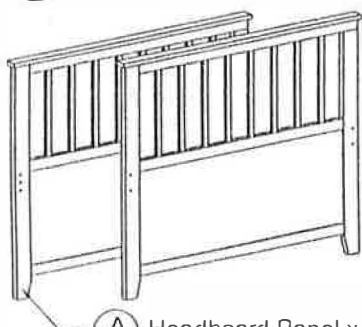


(A) Headboard Panel x 2

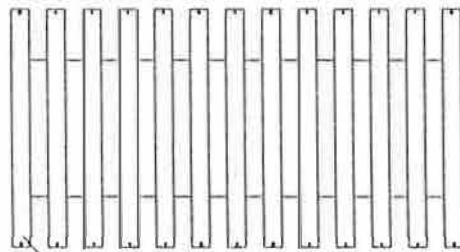


(B) Bed Slats x 1

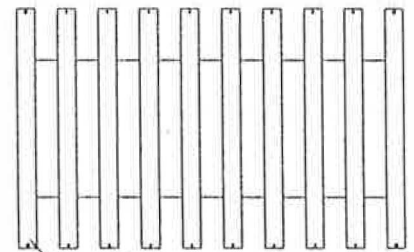


(E) Trundle Slats x 1



(C) Side Rail x 2




(D) Support Rail x 1

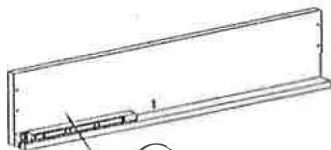


(H) Trundle Side Panel (Left Hand) x 1




(J) Support (Middle) x 2

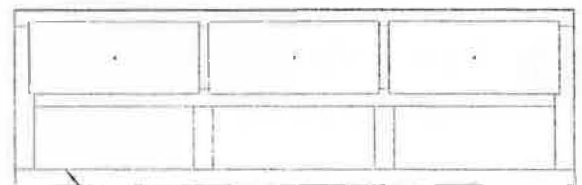


(F) Trundle Front Panel x 1




(G) Trundle Rear Panel x 1

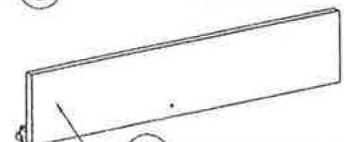


(K) Trundle Side Panel (Right Hand) x 1




(L) Drawer Face x 3



(M) Drawer Back x 3

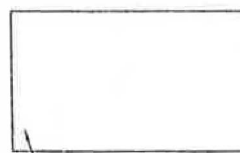

(N) Drawer Bottom x 3



(O) Drawer Side x 6

# T2100 Bed

## Assembly Instruction


### 2 Hardware List



① M6 x 60mm JCBC  
x 2



② M6 x 40mm JCBC  
x 14



③ M6 x 70mm JCBC  
x 8



④ M6 x 15mm JCBC  
x 16



⑤ Wood Dowel  
(8 x 30mm) x 10



⑥ Wood Screw  
(M4 x 32mm)  
x 36



⑦ Wood Screw  
(M4 x 25mm)  
x 24



⑧ Wood Screw  
(M4 x 16mm) x 32




⑨ Wood Dowel  
(10 x 40mm) x 4



⑩ Barrel Nut  
x 8



⑪ Wheels  
x 4

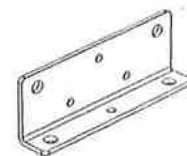

⑫ Metal Bracket  
x 4



⑬ M4 x 25mm  
Bolt x 6




⑭ Allen Key x 1



⑮ Wooden  
Knobs x 6

### 3 Fit the Wheels (11) to the bottom of the Left & Right hand Trundle Side Panel (H & K) using Wood Screw 16mm JCBs (8).

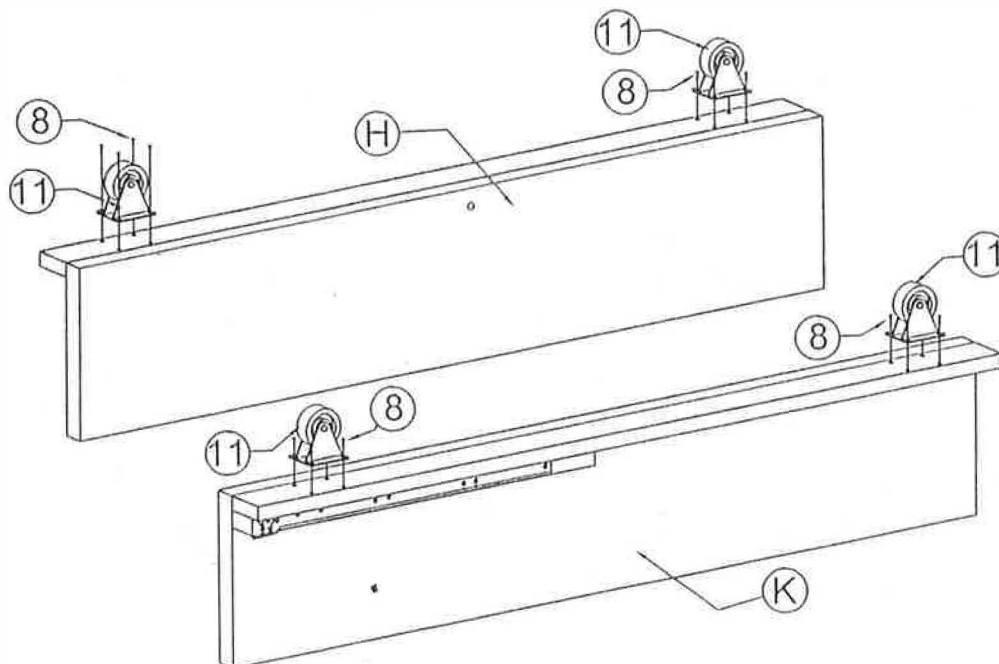


# T2100 Bed


## Assembly Instructions

GPM-1217


- 4** Assemble the Drawer Sides (O) to the Drawer Back (M), making sure the small wheels on the sides are next to the Drawer Back (M).

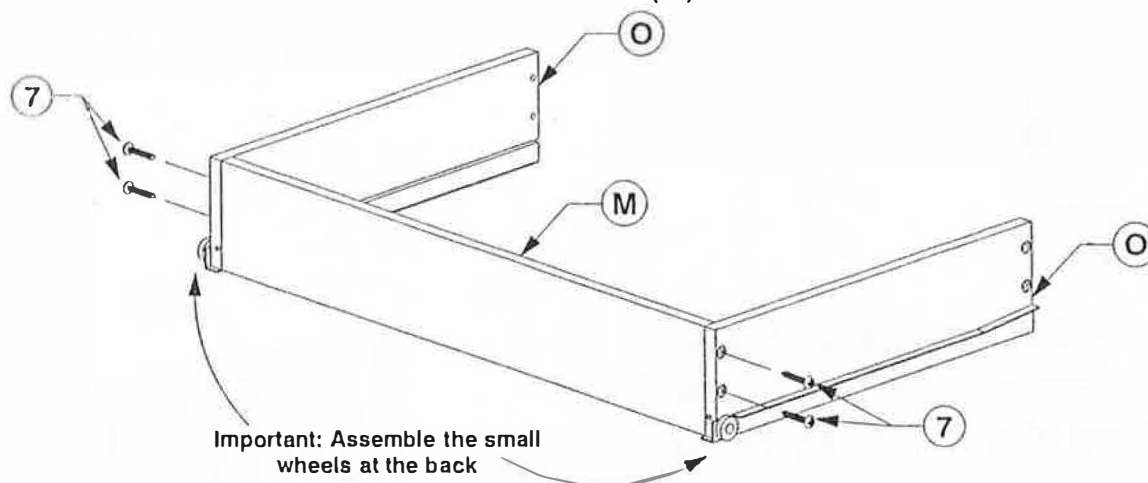

- 5** Slide the Drawer Bottom (N) into the groove on the Drawer Sides (O).

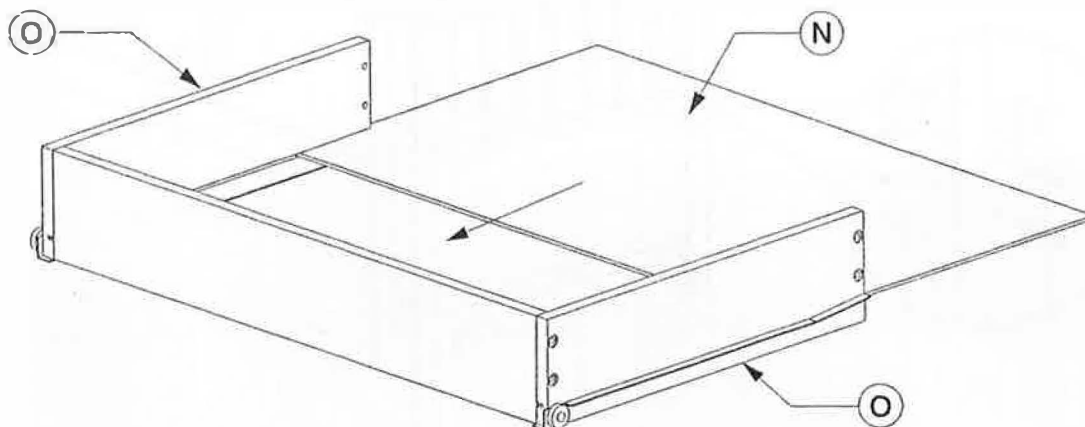


- 6** Assemble the Drawer Face (L) to the Drawer Sides (O).  
Use screwdriver to fit the Wooden Knobs (15) to the Drawer faces (L).

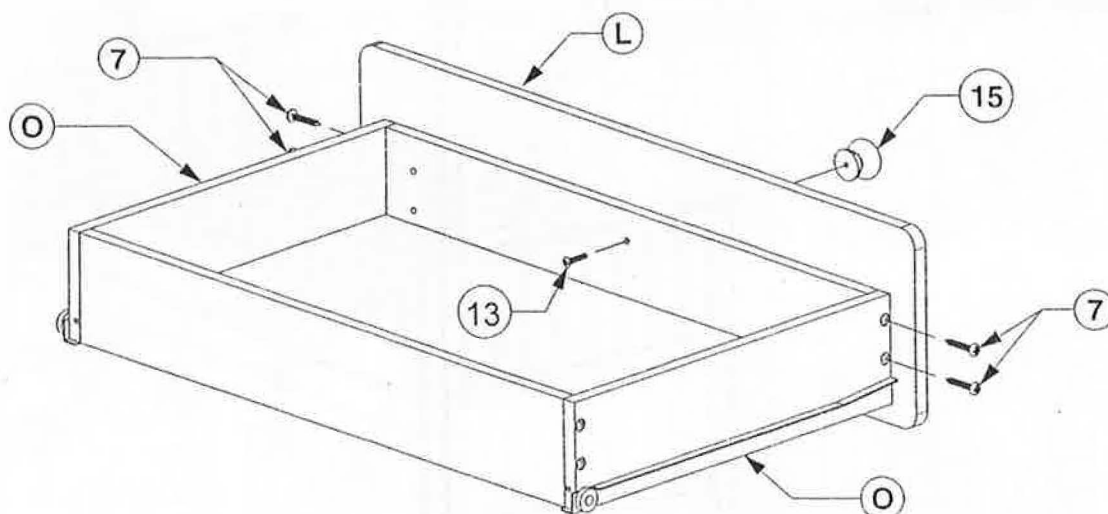


# T2100 Bed

Assembly Instruction


- 7** Assembly the Side Rail (C) between the Headboard Panel (A).

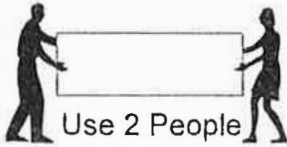

- 8** Loosely fit the hardware (3) and Dowel (9) with Barrel Nut (10) and using Alley Key (16) to tighten it.

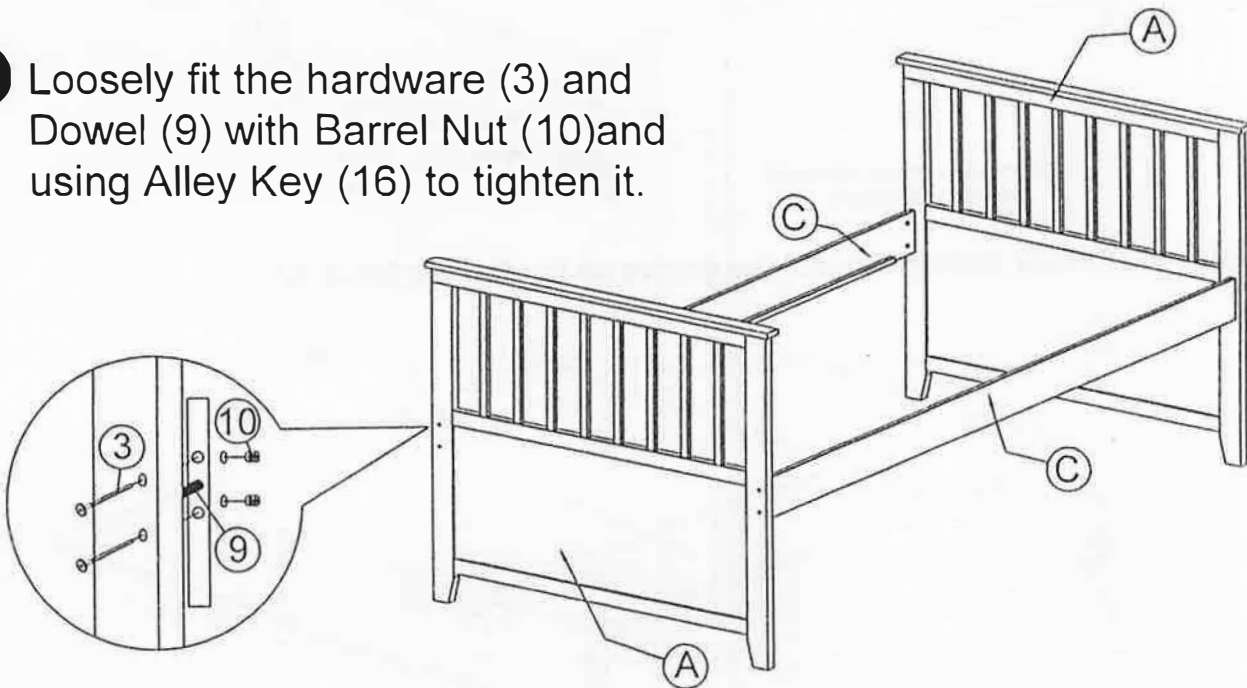

- 9** Screw the Bed Slats (B) between the Side Rail (C).

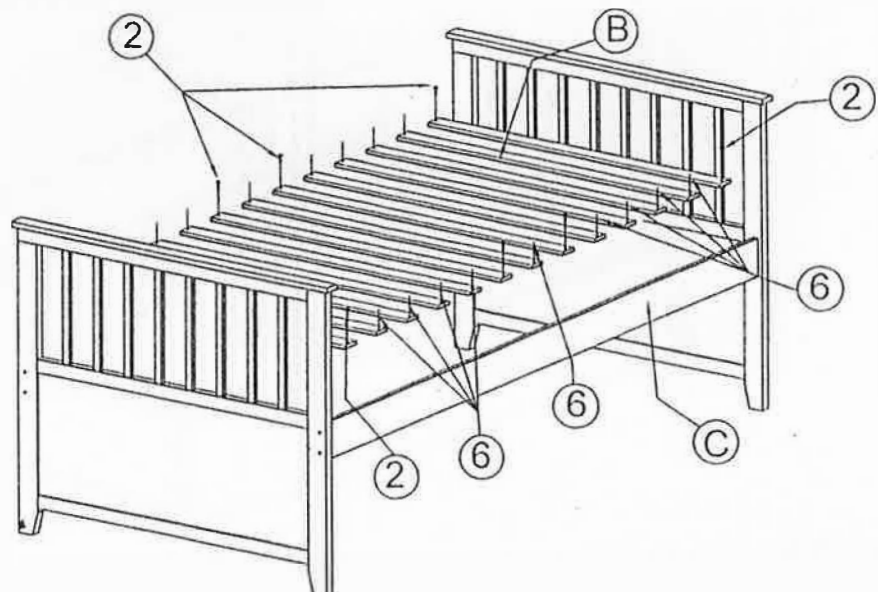


# T2100 Bed


## Assembly Instructions

GRM-1217

- 10** Assemble the Metal Bracket (12) & Wood Dowels (5) to the Left & Right hand Trundle Side Panel (H & K).

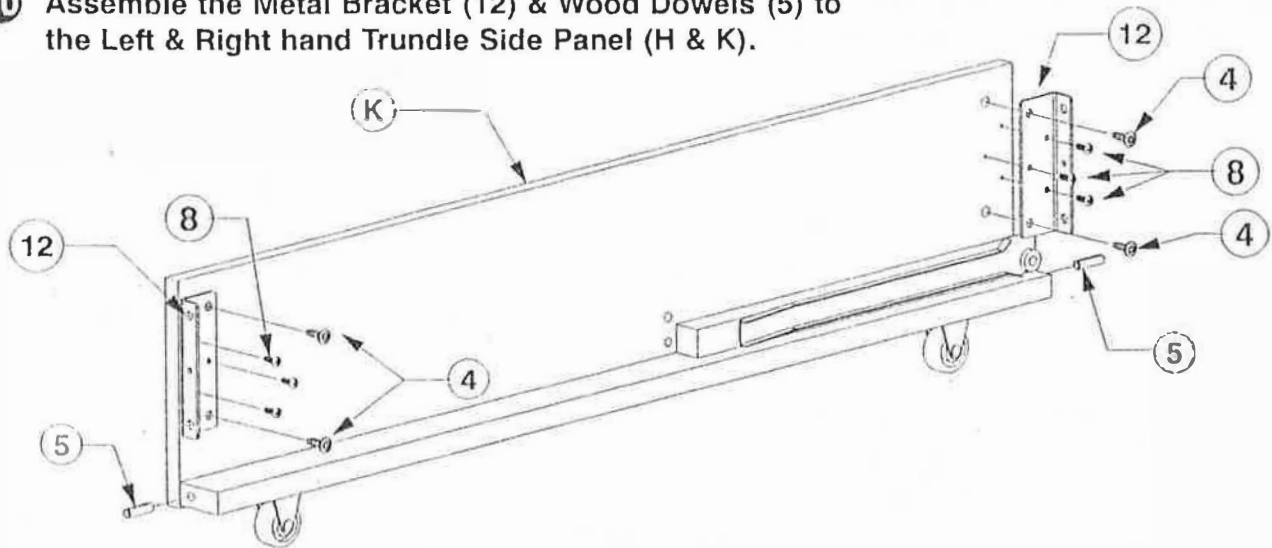

- 11** Attach the Supports (J) to the Support Rail (D) using 40mm JCBs (2). Fit the Support Rail (D) to the Left & Right hand Trundle Side Panel (H & K) using Wood Dowels (5) and 60mm JCBs (1).

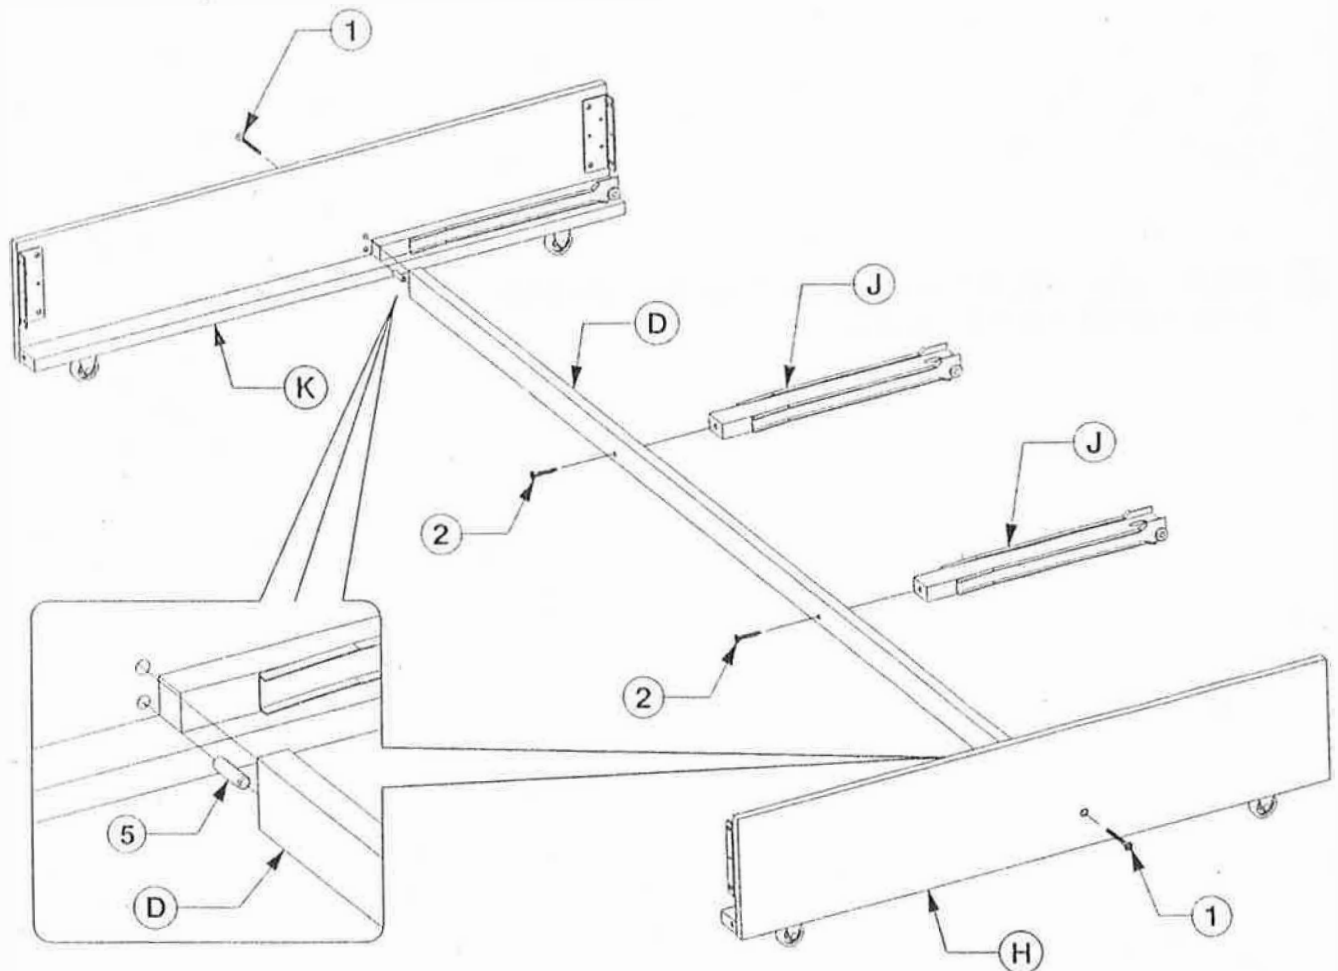


# T2100


## Assembly Instructions

010.1-12.17

- 12** Assemble the Left & Right hand Trundle Side Panel (H & K) & Support (J) to the Trundle Front Panel (F).

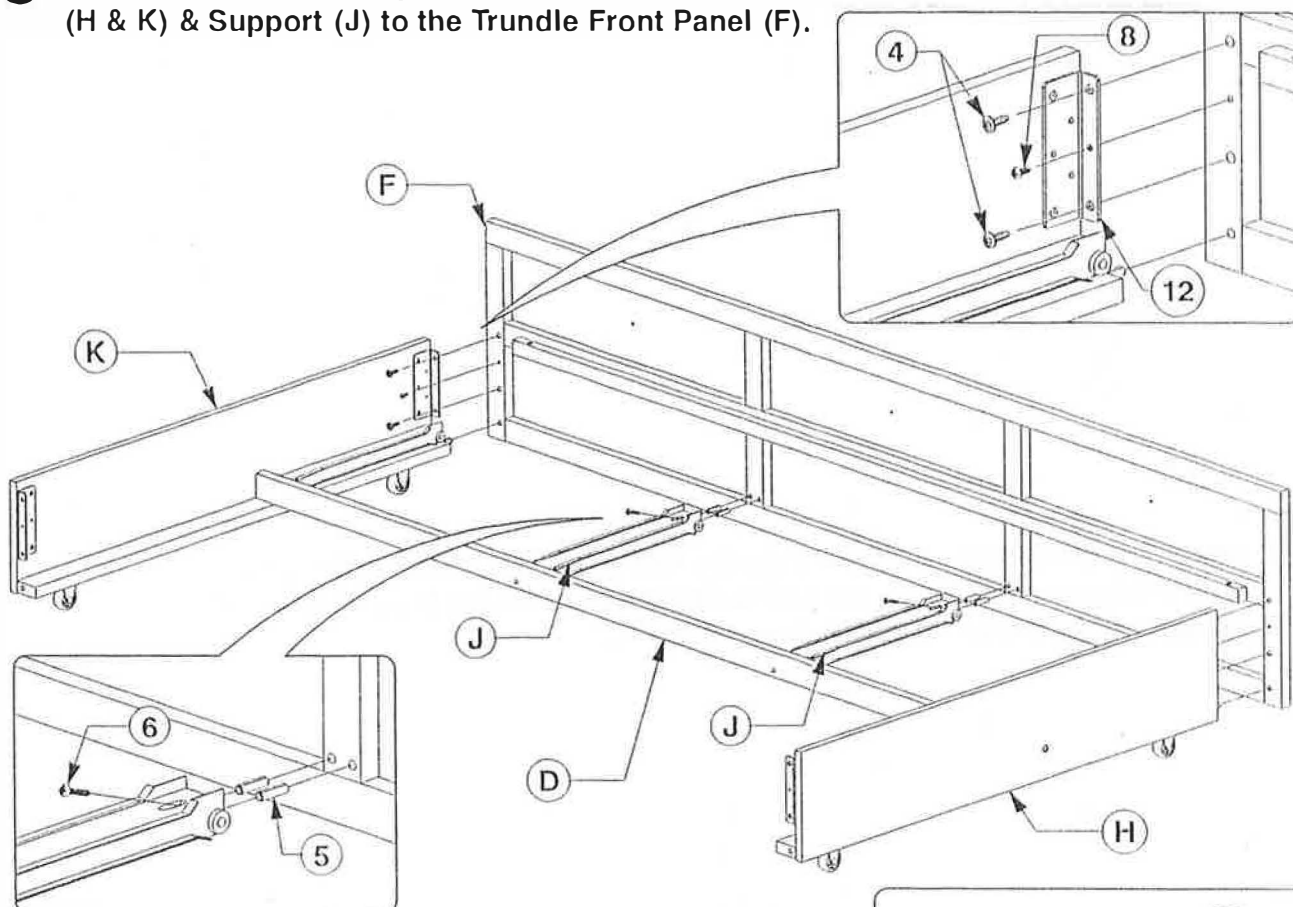

- 13** Bolt the Left & Right hand Trundle Side Panel (H & K) to the Trundle Rear Panel (G).

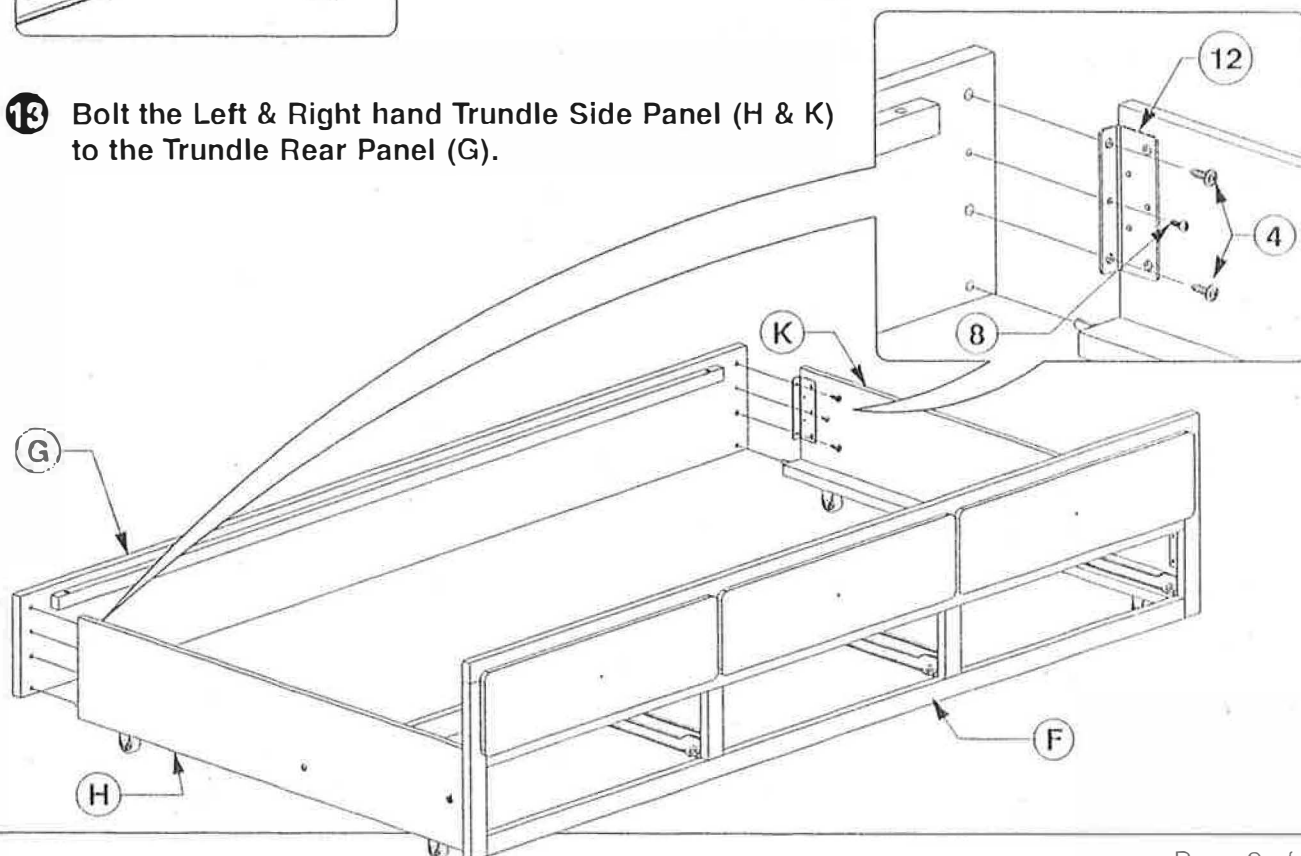


# T2100 Bed


## Assembly Instructions

0304.1217

- 14** Assemble the Trundle Slats (E) to the Trundle Front Panel (F) & Trundle Rear Panel (G). Finally, fit the assembled Drawers.

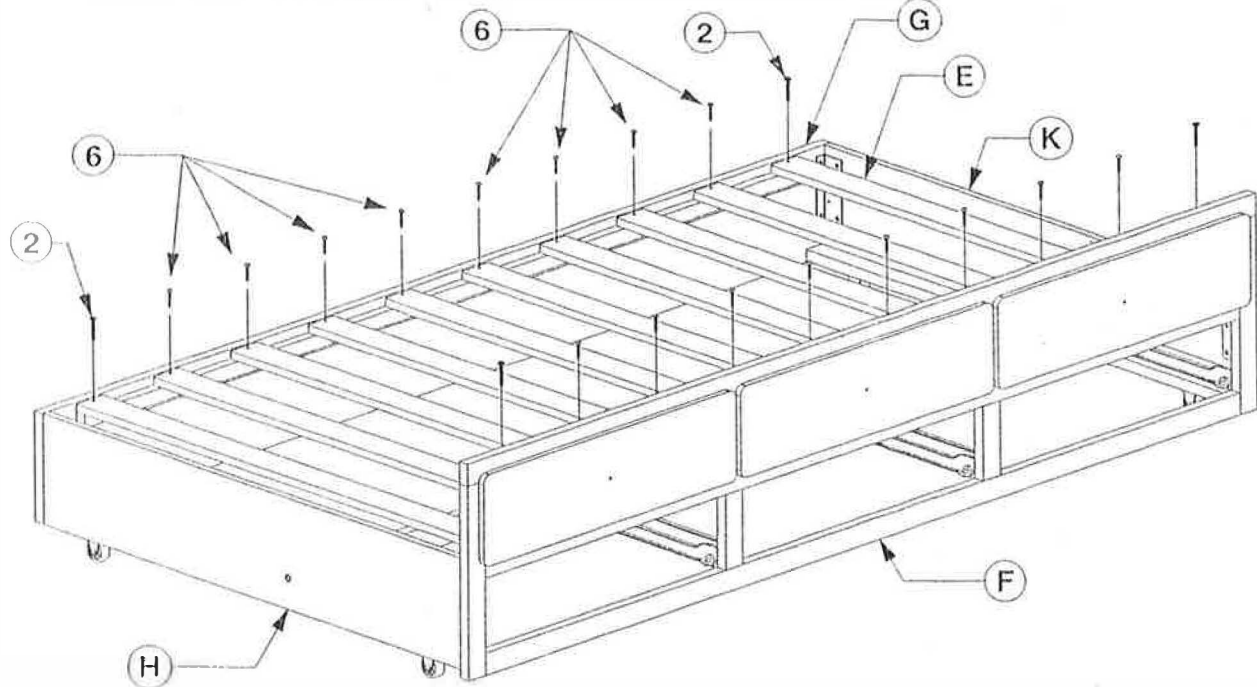

- 15** Fit the Wooden Knobs (15) onto Trundle Front Panel (F). Finally, fit the assembled Drawers.

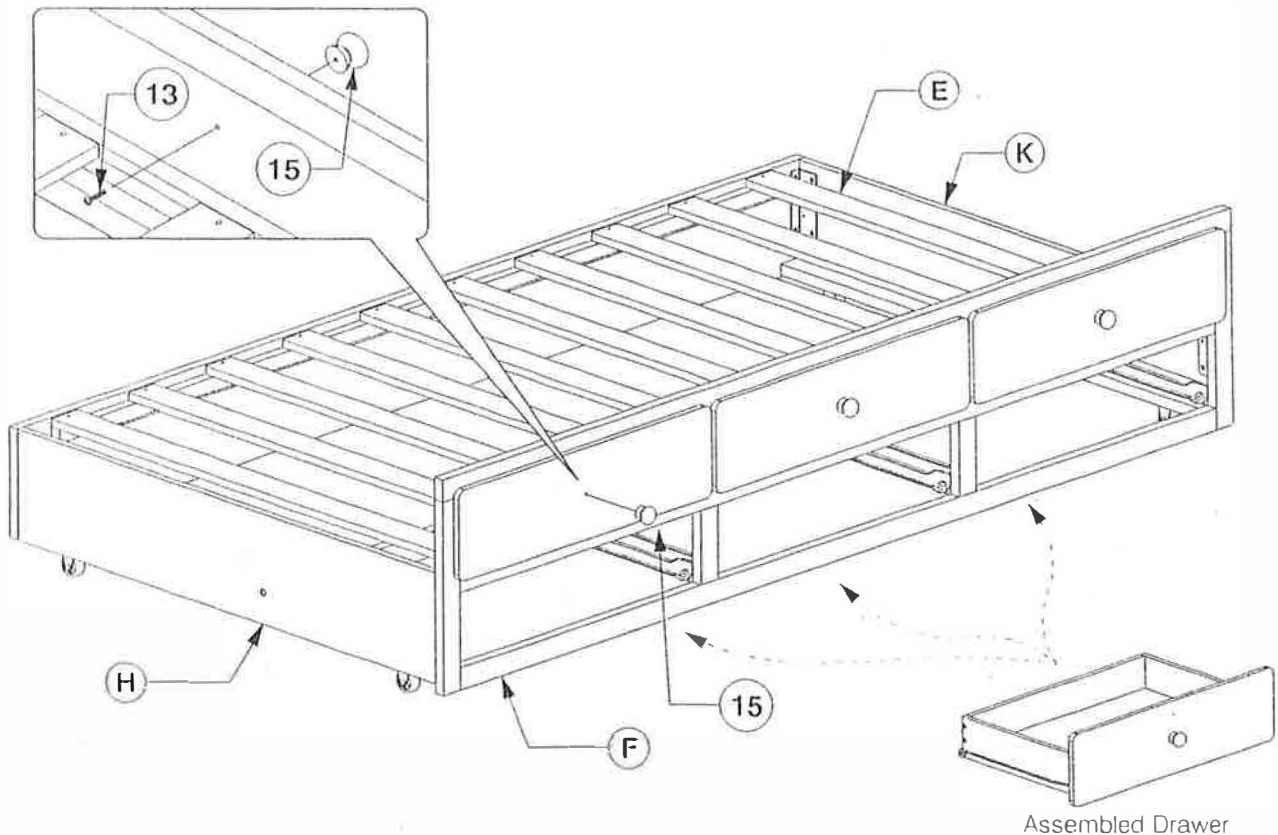

Assembled Drawer