


STEP 1


THE IMAGES ARE FOR REFERENCE ONLY

HAVING THE PARTS SHOWN IN FIGURE A,
PLACE THE RAILS IN FIGURE A, PLACE
THE RAILS MATCHING THE DRILL HOLES

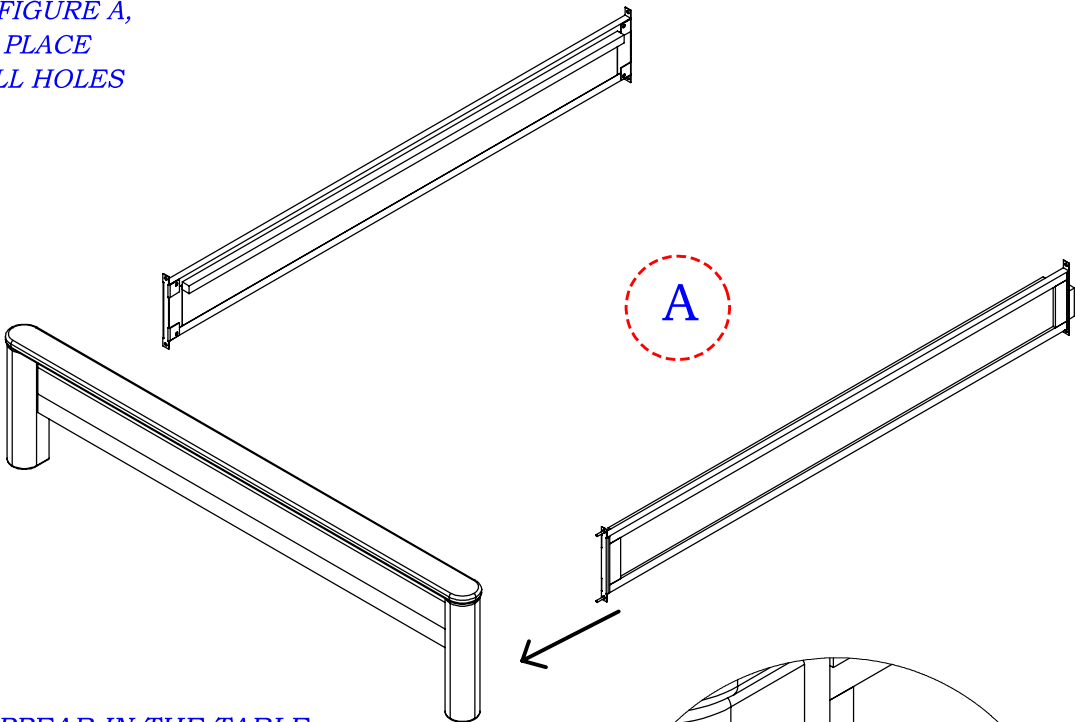


STEP 2

PLACE THE SCREWS THAT APPEAR IN THE TABLE
IN THE LOWER RIGHT TABLE AND AS SHOWN IN
FIGURE B, MATCHING IN FIGURE B, MATCHING
DRILL HOLE TO DRILL.

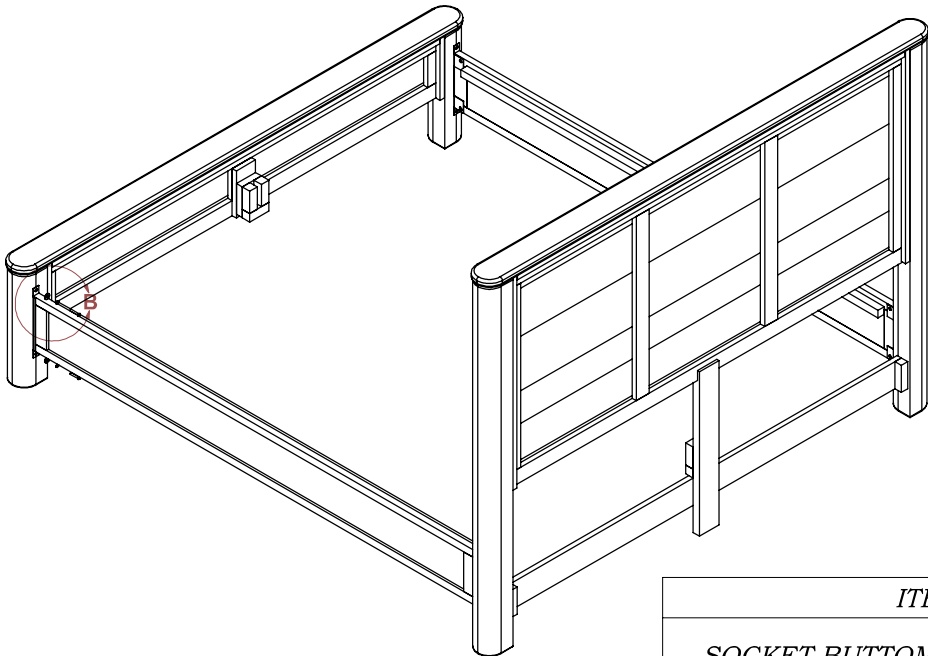

FLAT WASHER 5/16 X 1"

LOCK WASHER 5/16"

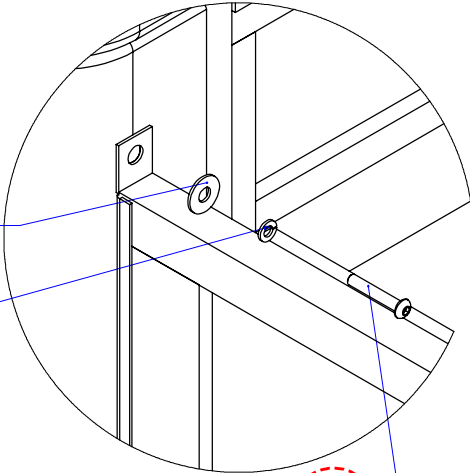

B

SOCKET BOTTOM HEAD 5/16 X 1"



ASSEMBLING
INSTRUCTIONS


I-PLT-E016

ITEM	#
SOCKET BUTTOM HEAD 5/16 X 1"	8
LOCK WASHER 5/16"	8
FLAT WASHER 5/16 X 1"	8
ALLEN KEY 3/16 1	1

STEP 3


THE IMAGES ARE FOR REFERENCE ONLY

ONCE ALL THE HARDWARE IS ASSEMBLED,
FIRST PLACE THE CROSSBAR WITH THE
HEELS THE CROSSBEAM WITH THE HEELS,
THEN PLACE THE DECKING AS SHOWN IN
THE FIGURE. C

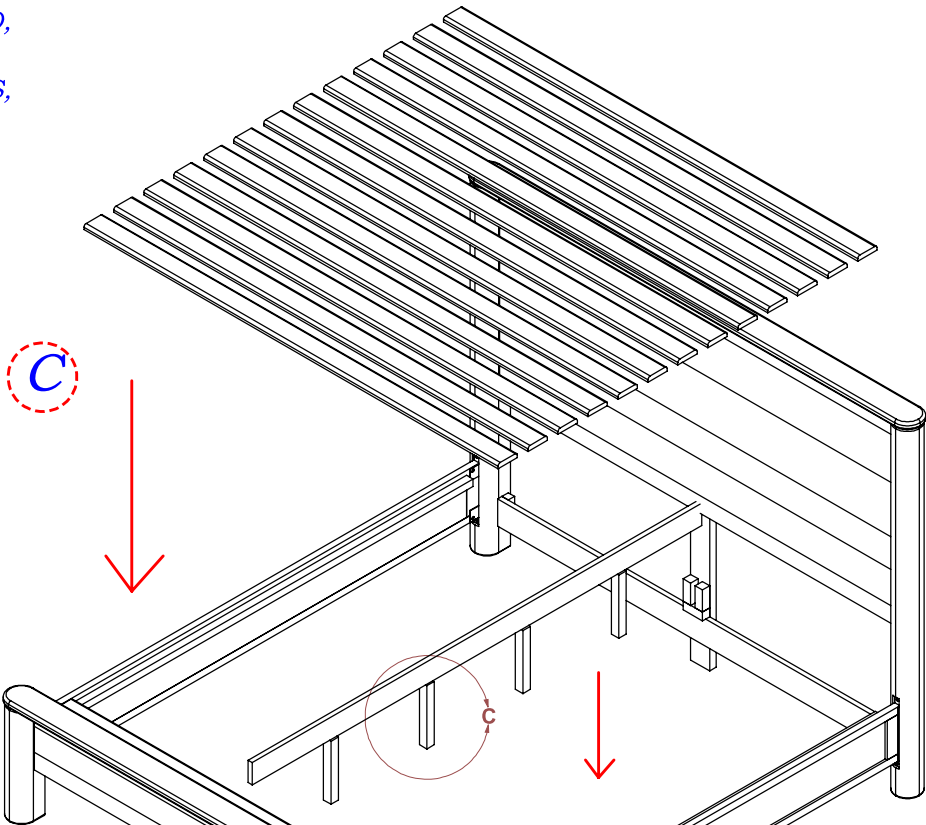


STEP 4

FINALLY, PLACE THE DESIRED
DESIRED MATTRESS

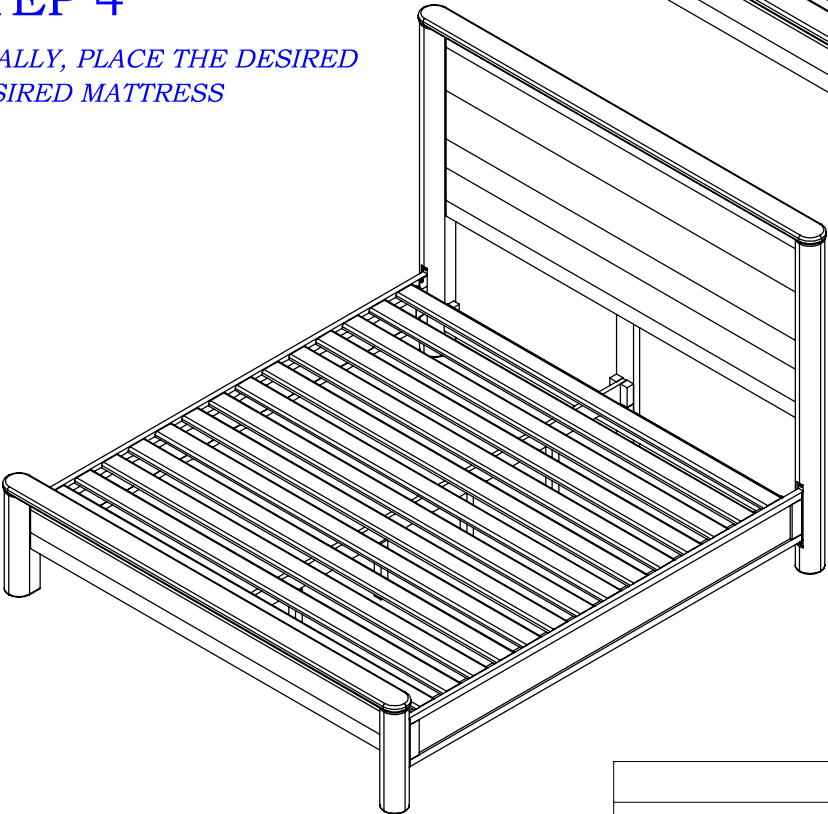

DETAIL C
SCALE 2 : 25

TO SCREW

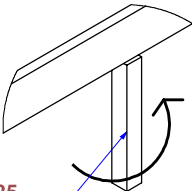

ASSEMBLING
INSTRUCTIONS

I-PLT-E016

ITEM	#
SOCKET BUTTOM HEAD 5/16 X 1"	8
LOCK WASHER 5/16"	8
FLAT WASHER 5/16 X 1"	8
ALLEN KEY 3/16 1	1

ITEM	DESCRIPTION	#
1TOR008	TORNILLO CAB. ALLEN 5/16 X 1"	8
1RON011	RONDANA DE PRESION 5/16"	8
1RON003	RONDANA PLANA 5/16 X 1"	8
1HER251	LLAVE ALLEN 3/16	1
RECUERDA QUE LOS GANCHOS NO LLEVAN PIJAS		



ASSEMBLING
INSTRUCTIONS

I-PLT-E016