
Item: LEEB3B-T

Assembly Instructions

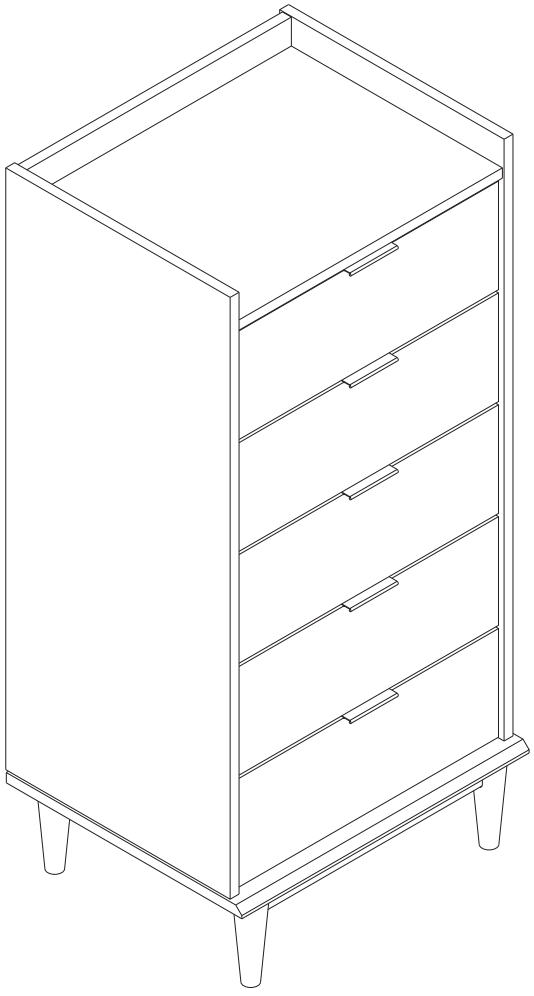

Please visit our website for the most current instructions, assembly tips, to report damage or request parts. ***www.walkeredison.com***

Revised 01/2024 - V1

Copyright © 2018, by Walker Edison Furniture Co., LLC, All rights reserved.

General Assembly Guidelines


I. Ensure that all parts and hardware are available before beginning assembly.


II. Follow each step carefully to ensure the proper assembly of this product.


III. Two people are recommended for ease in the assembly of this product.

IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.

V. A hammer, Phillips head screwdriver and tape measure is required for the assembly of this product.

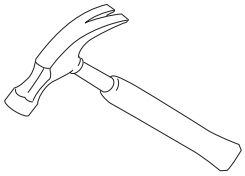


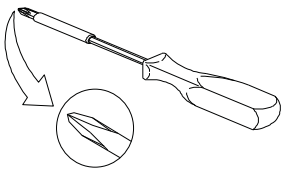

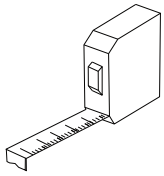

Tape measure


VI. Power tools should not be used to assemble this product.

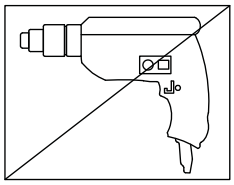

VII. Maintenance Guide

To maintain long term performance and easy gliding of your solid wood drawers, we recommend applying wax to the wooden guide rails.
1. Bee's wax is recommended or Paraffin wax from a standard candle can be used.
2. Apply the wax by rubbing it on the wooden guide rails where there is wood-on-wood contact when opening and closing the drawer. (Wax should be room temperature, do not melt the wax onto the wood)
3. Wax should be applied every few months for the first year and then only when needed after that to keep the drawers sliding smoothly.

Parts List









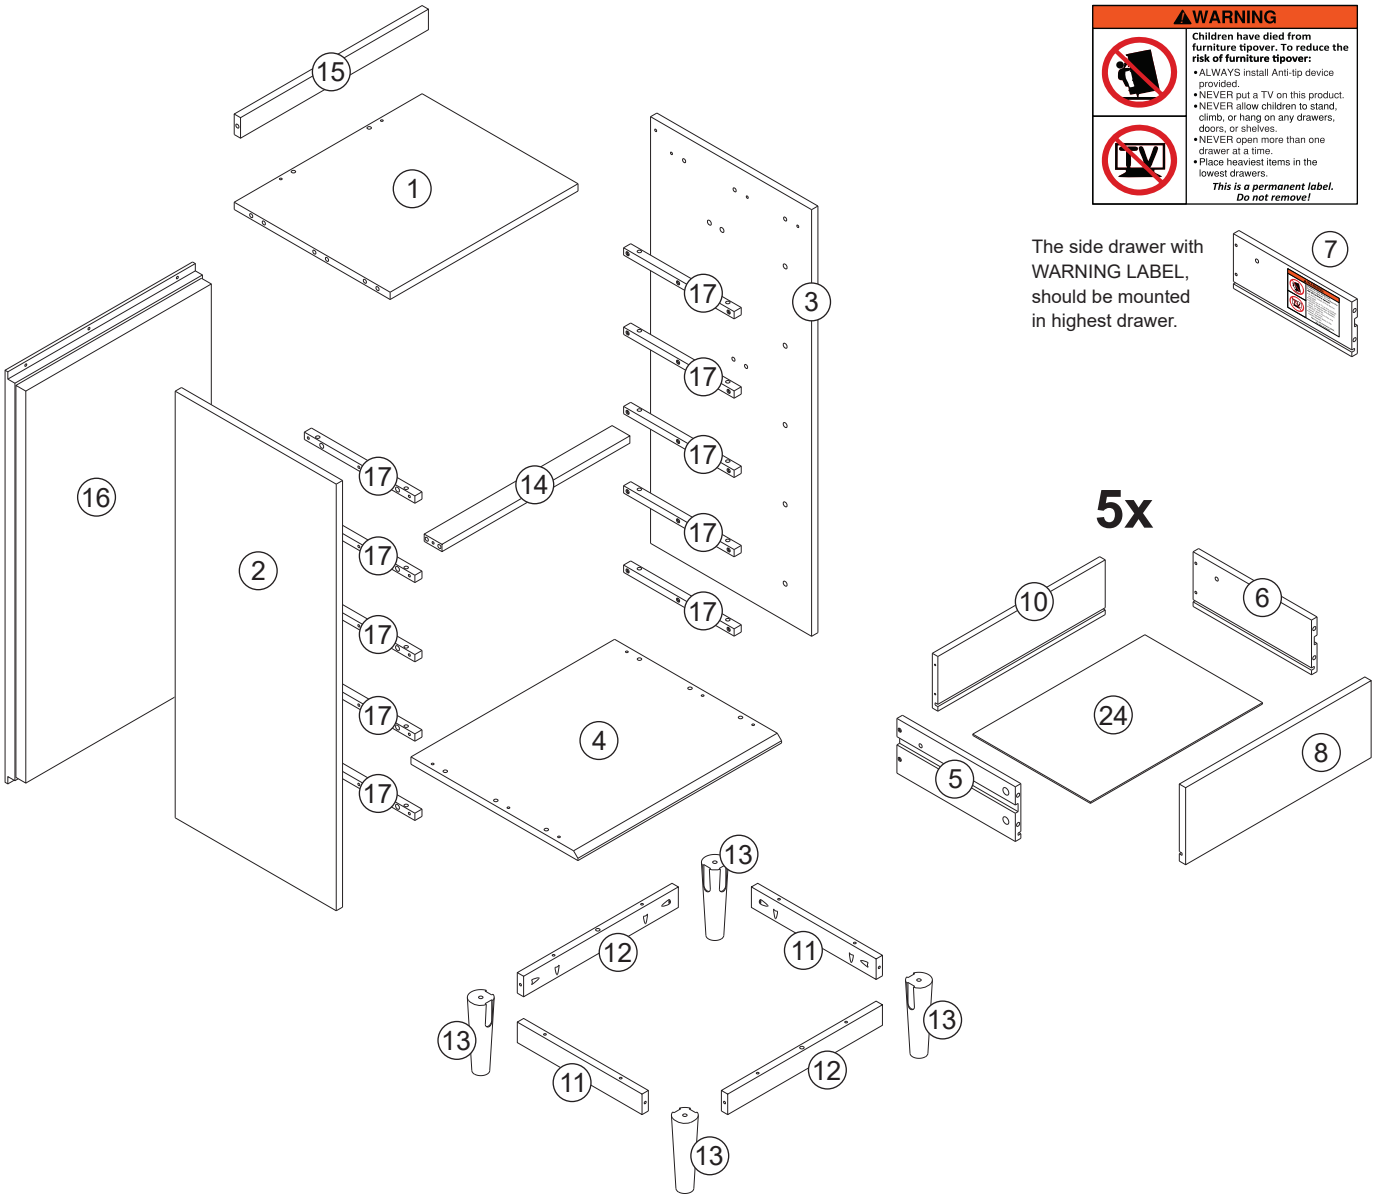



The side drawer with WARNING LABEL, should be mounted in highest drawer.

Part #	Description	Qty
1	Top panel	01 pc
2	Left side panel	01 pc
3	Right side panel	01 pc
4	Base	01 pc
5	Left drawer side	05 pcs
6	Right drawer side	04 pcs
7	Right drawer side (warning)	01 pc
8	Drawer front	05 pcs
10	Drawer back	05 pcs


Part #	Description	Qty
11	Bottom side rail	02 pcs
12	Bottom front rail	02 pcs
13	Foot	04 pcs
14	Center rail	01 pc
15	Top rail	01 pc
16	Back panel	01 pc
17	Wood slider	10 pcs
24	Drawer bottom	05 pcs

Hardware List


A		Ø8*30mm	Wood dowel	34 pcs
B		Ø8*40mm	Wood dowel	10 pcs
C		Ø10*20mm	Wood dowel	30 pcs
D		Ø3,0*12mm	Screw	18 pcs
E		Ø3,5*20mm	Screw	07 pcs
F		Ø4,0*25mm	Screw	30 pcs
G		Ø4,0*30mm	Screw	33 pcs
H		Ø4,0*40mm	Screw	06 pcs
I		Ø4,5*50mm	Screw	08 pcs
J		-	Handle	05 pcs
K		Ø8,0*31mm	Cam bolt	28 pcs
L		Ø15*11mm	Cam lock	28 pcs
M		-	Ø6mm	01 pc
N		-	Washer	02 pcs
O		-	Wall anchor	01 pc
P		-	Corner	04 pcs

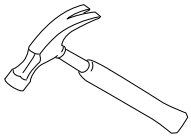

Hammer recommended for assembly (not included)

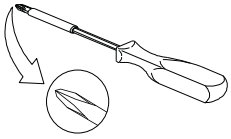


Phillips head screwdriver required for assembly (not included)

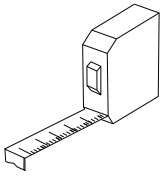


Tape measure required for assembly (not included)


The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.

Step 1

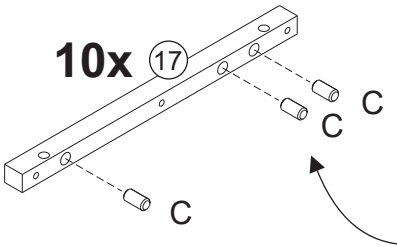

Attention to the dowel size: Ø10*20mm

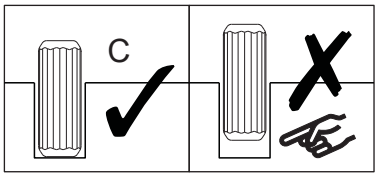

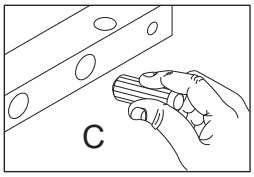


C	Ø10*20mm	30


Insert wood dowel (C) into part 17.


Step 2







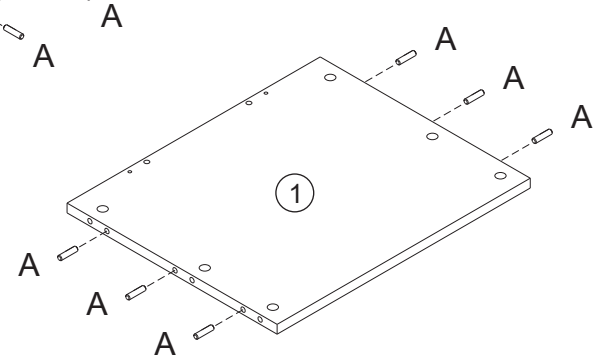


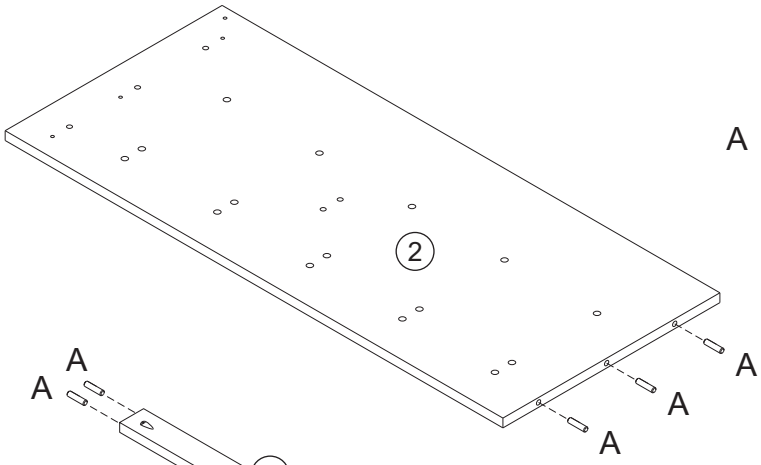

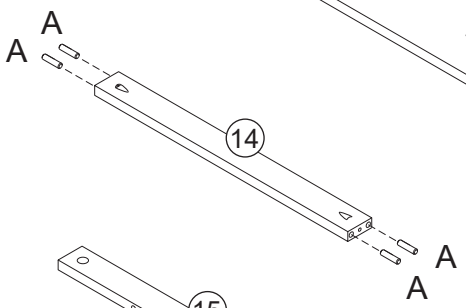

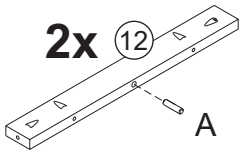

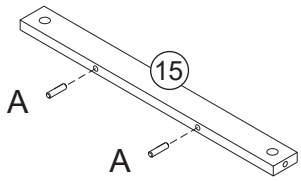

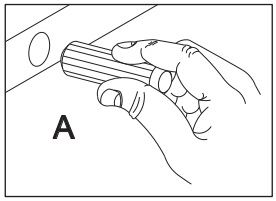



A	Ø8*30mm	24

Insert wood dowel (A) into parts 1, 2, 3, 12, 13, 14 and 15.

Step 3

1 - Ensure cam bolt is installed straight and not at an angle.
2 - Tighten cam bolt until shoulder on cam bolt is flush. Do not over-tighten.

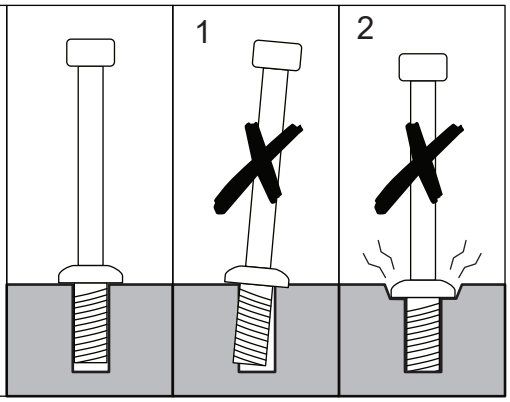


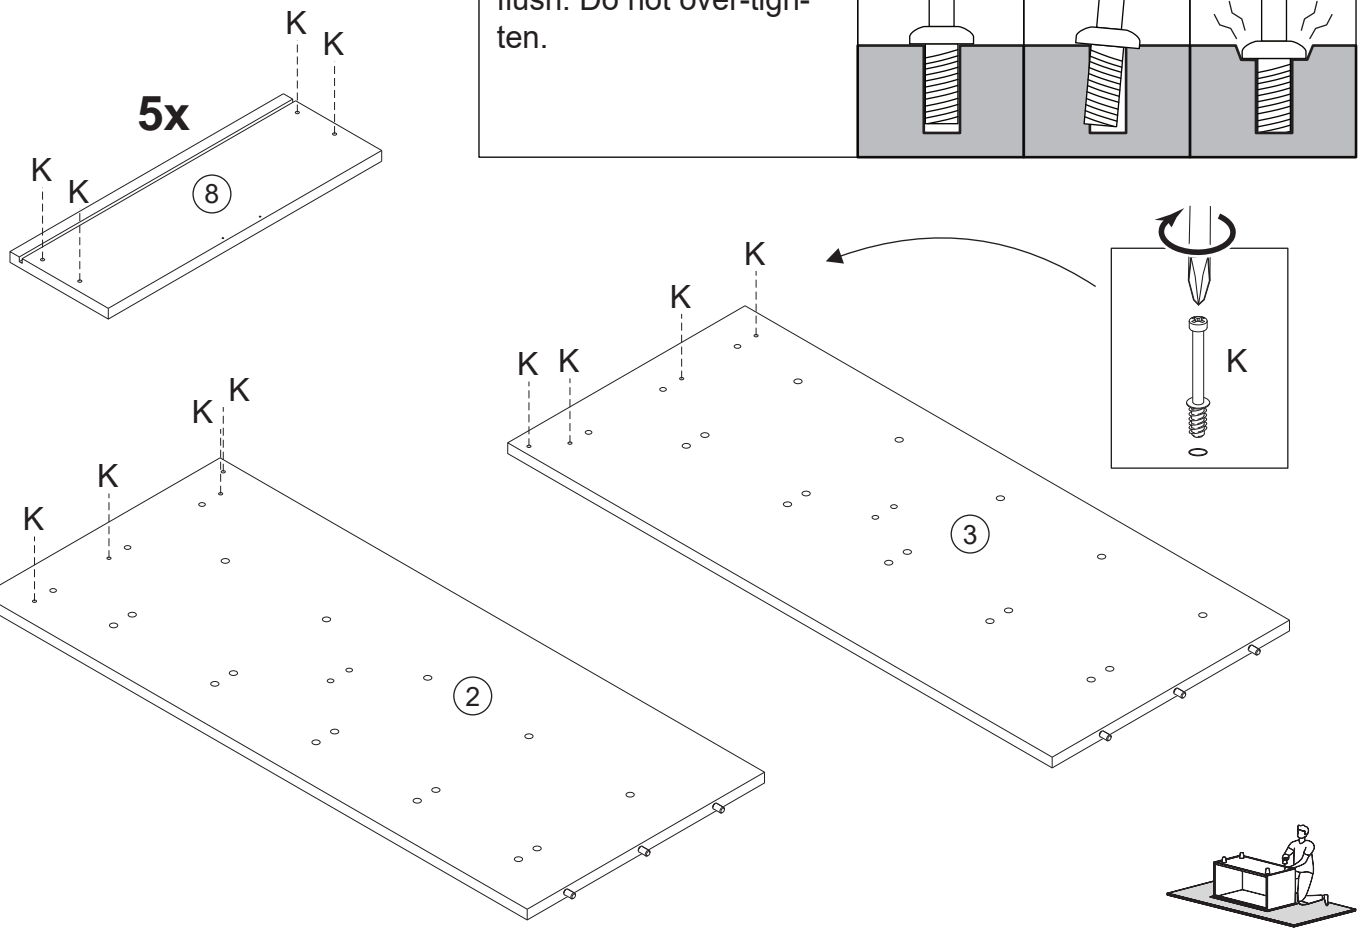

Screw cam bolts (K) into parts 2, 3 and 8 with a phillips screwdriver.

K	Ø8,0*31mm	28


Step 4

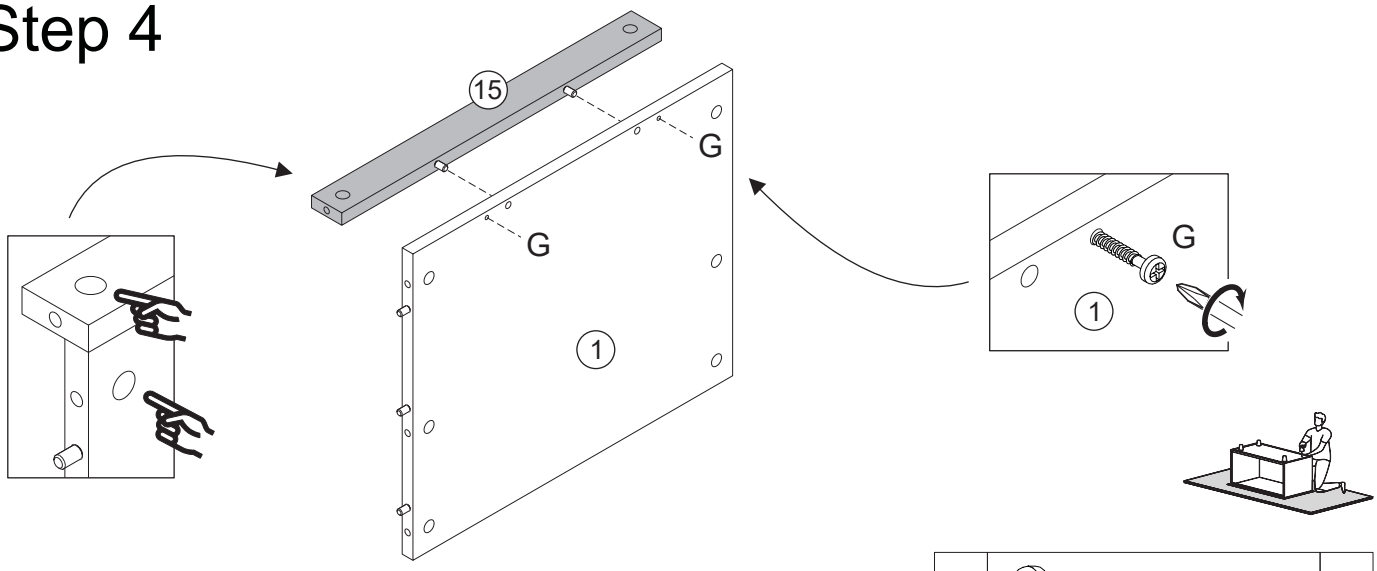

Secure part 15 to part 1 with screw (G) and phillips screwdriver.

G	Ø4,0*30mm	02


Step 5

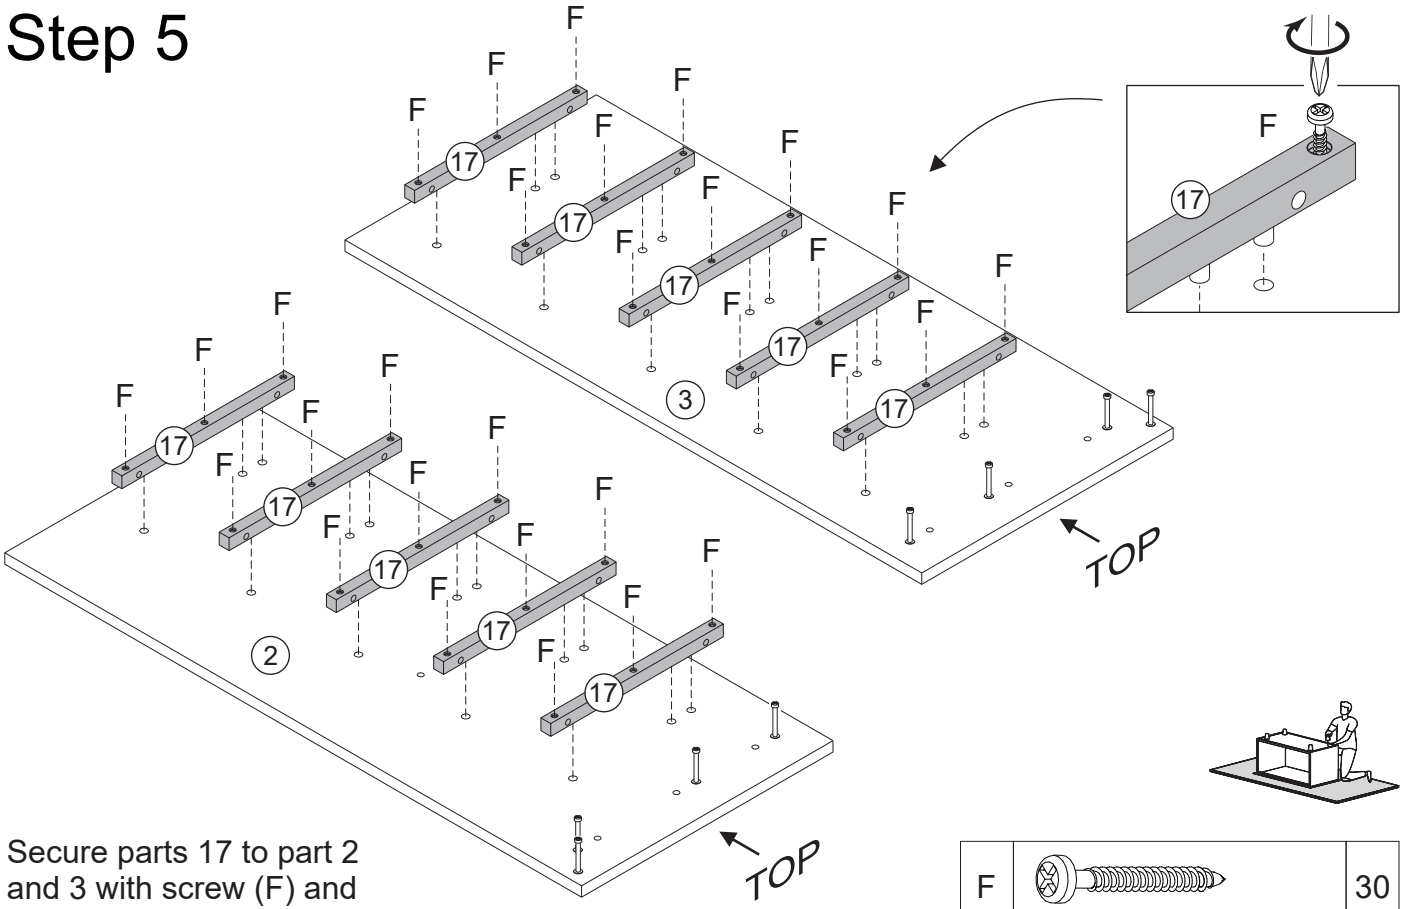


Secure parts 17 to part 2 and 3 with screw (F) and phillips screwdriver.


F	Ø4,0*25mm	30

Step 6

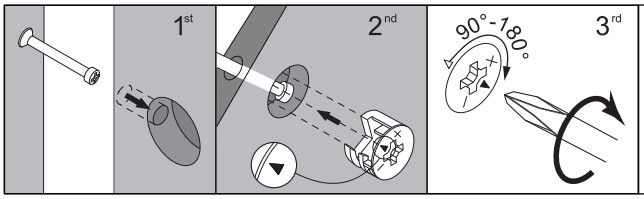

Align the opening in cam lock to the cam bolt and press into opening. Using a screwdriver, rotate the cam lock until it engages with the cam bolt and locks in place (anywhere between 90-180 degrees). Do not over-tighten the cam lock. Doing so may result in damaged or broken parts.

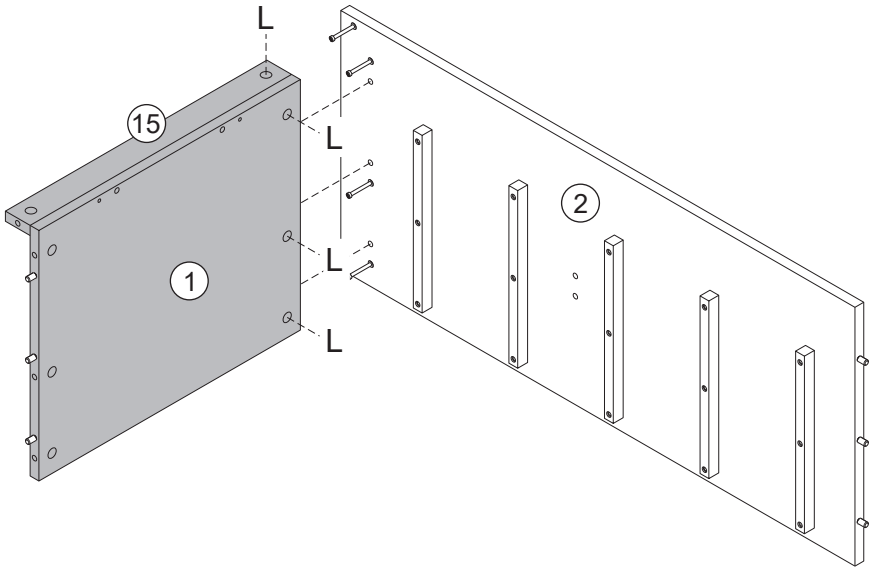




Secure parts 1 and 15 to part 2. Insert cam locks (L) into parts 1, 15, and tighten with a phillips screwdriver.

L	 Ø15*11mm	04

Step 7

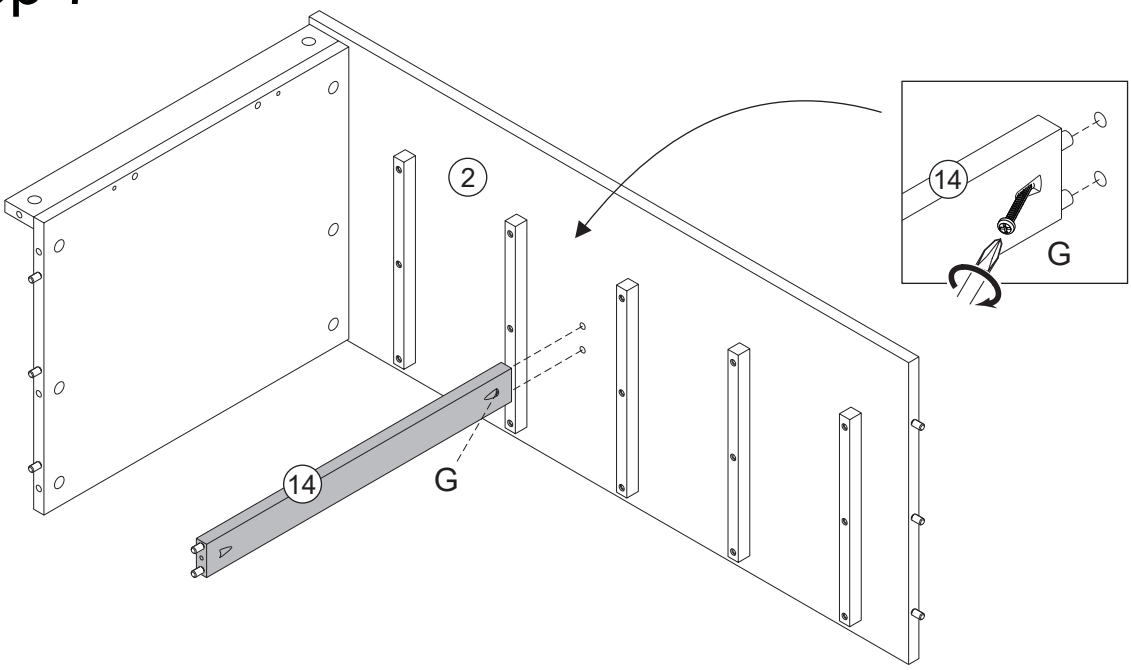





G	 Ø4,0*30mm	01

Secure part 14 to part 2 with screw (G) and phillips screwdriver.

Step 8

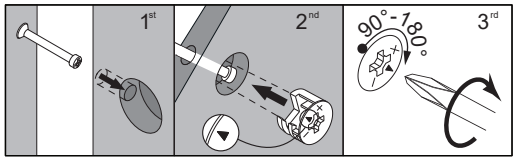

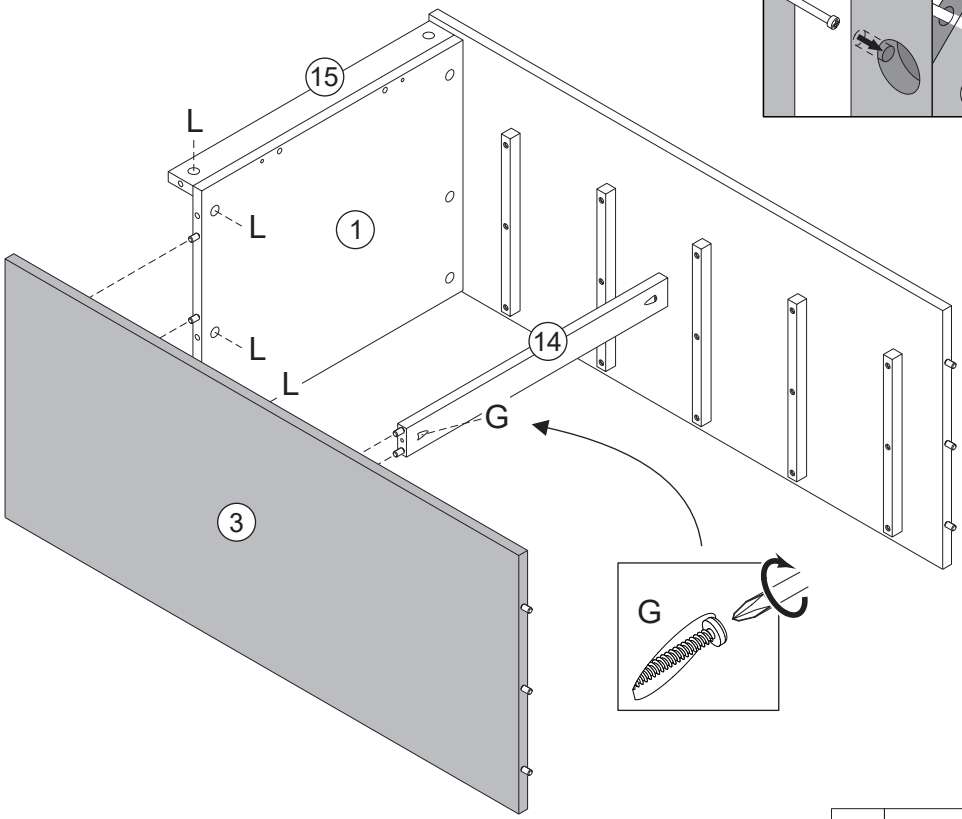





G	 Ø4,0*30mm	01
L	 Ø15*11mm	04

Secure parts 1 and 15 to part 3. Insert cam locks (L) into parts 1, 15, and tighten with a phillips screwdriver. Secure part 14 to part 3 with screw (G) and phillips screwdriver.

Step 9

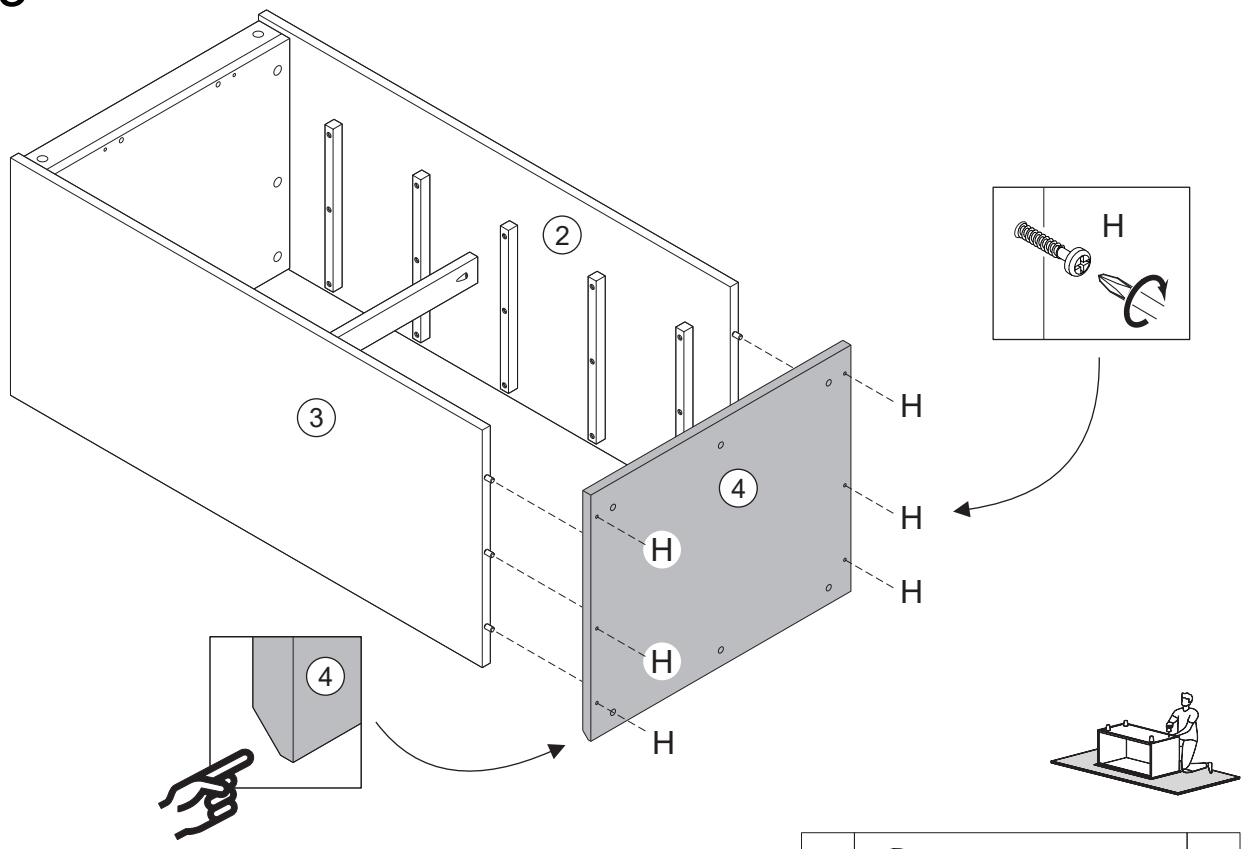



Secure part 4 to parts 2 and 3 with screw (H) and phillips screwdriver.



H	Ø4,0*40mm	06

Step 10

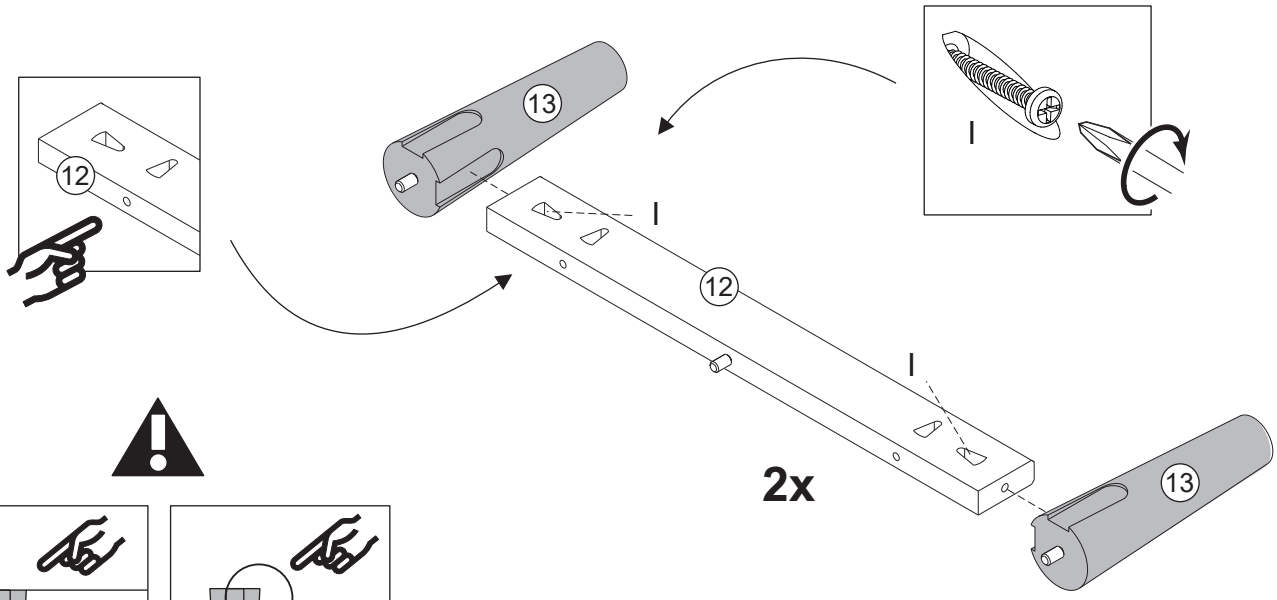

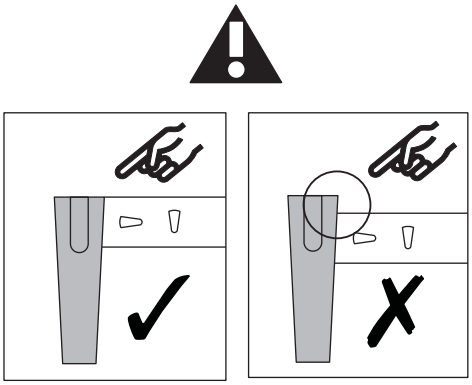




Secure part 12 to parts 13, with screw (I) and phillips screwdriver.

I	Ø4,5*50mm	04


Step 11

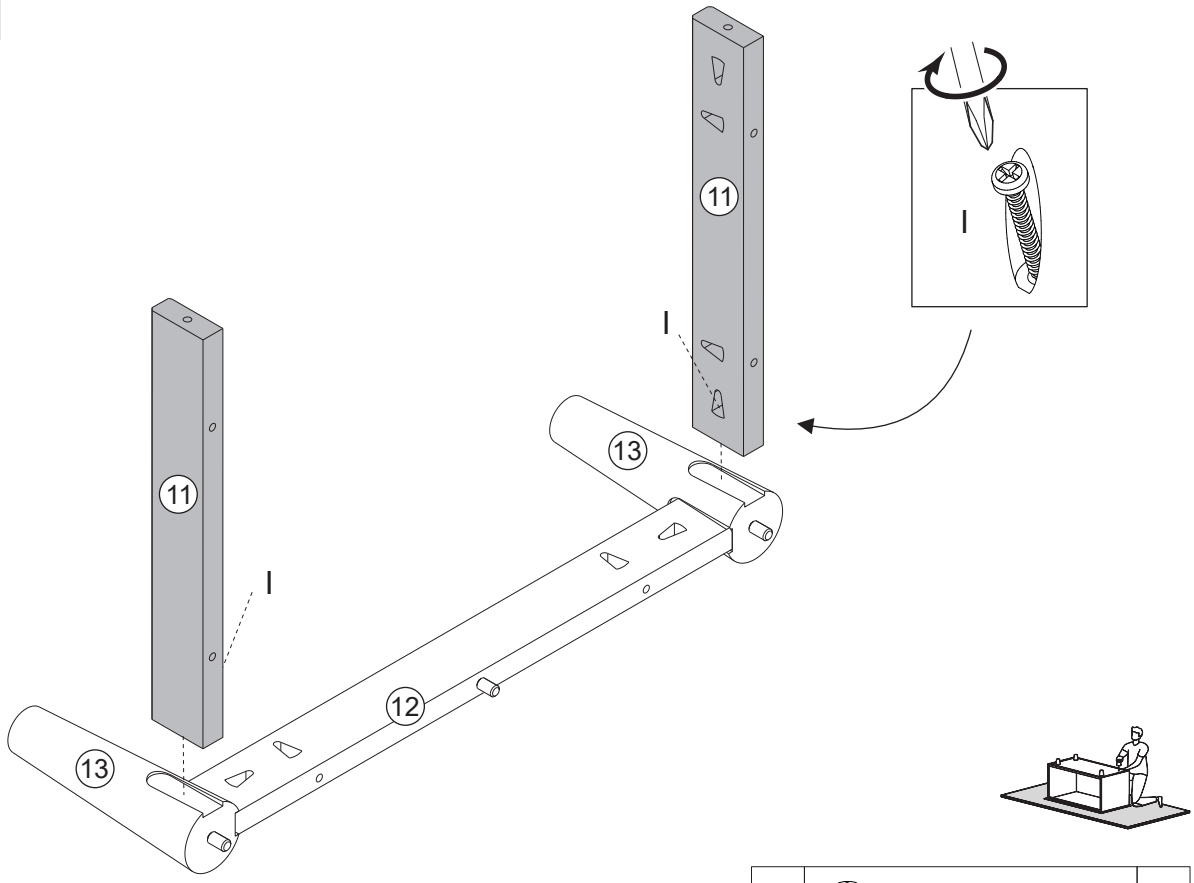


I	 Ø4,5*50mm	02

Secure part 11 to parts 13, with screw (I) and phillips screwdriver.


Step 12

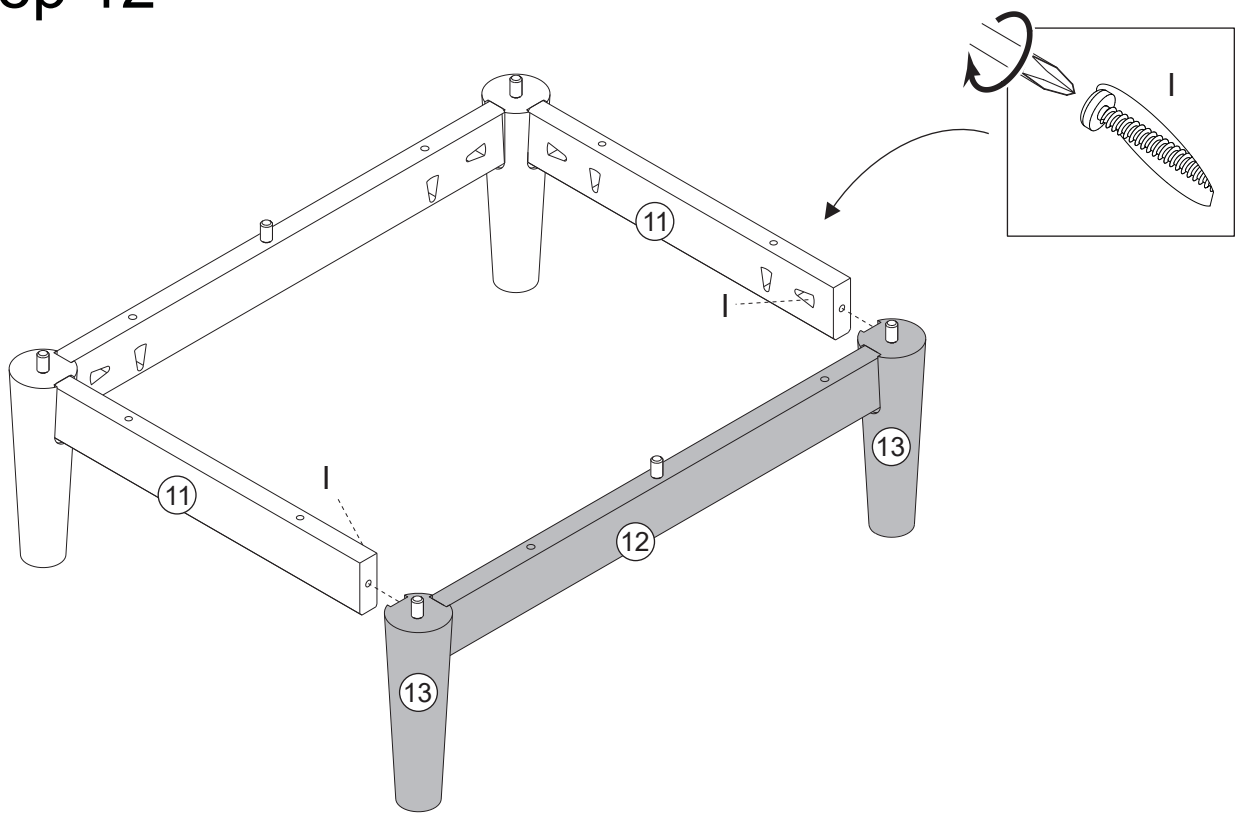


I	 Ø4,5*50mm	02

Secure part 11 to parts 13, with screw (I) and phillips screwdriver.

Step 13

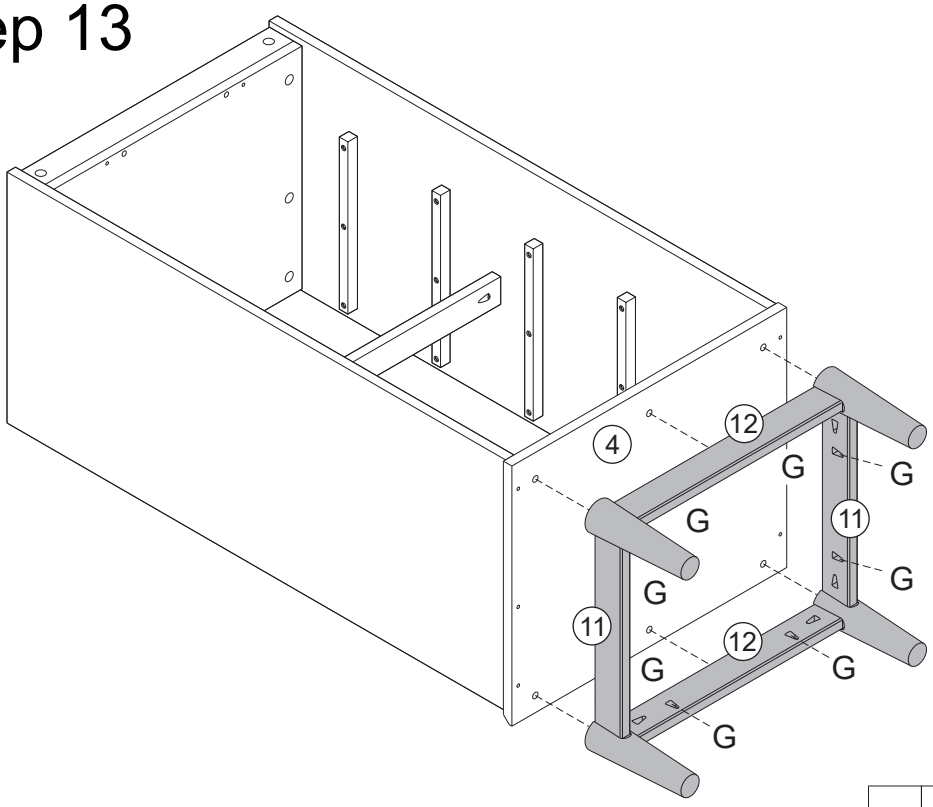

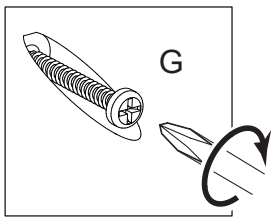





G	 Ø4,0*30mm	08


Secure parts 11 and 12 to part 4 with screw (G) and phillips screwdriver.


Step 14

Name and address of the supplier and date of production.

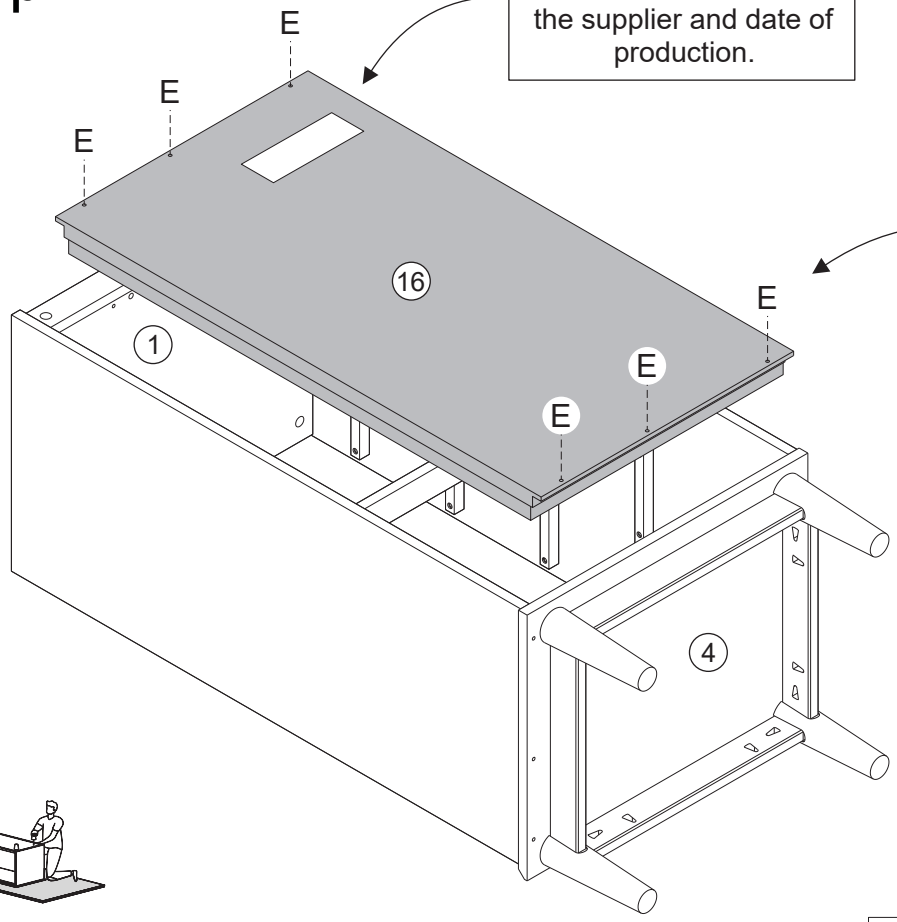

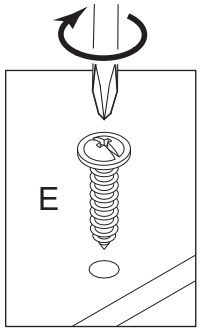


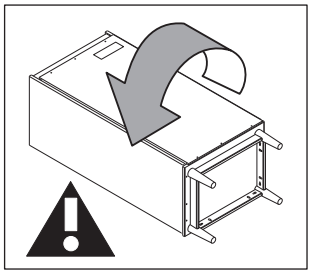

E	 Ø3,5*20mm	06

Secure back panel 16 to parts 1 and 4 as shown above with screw (E) and phillips screwdriver.


Step 15

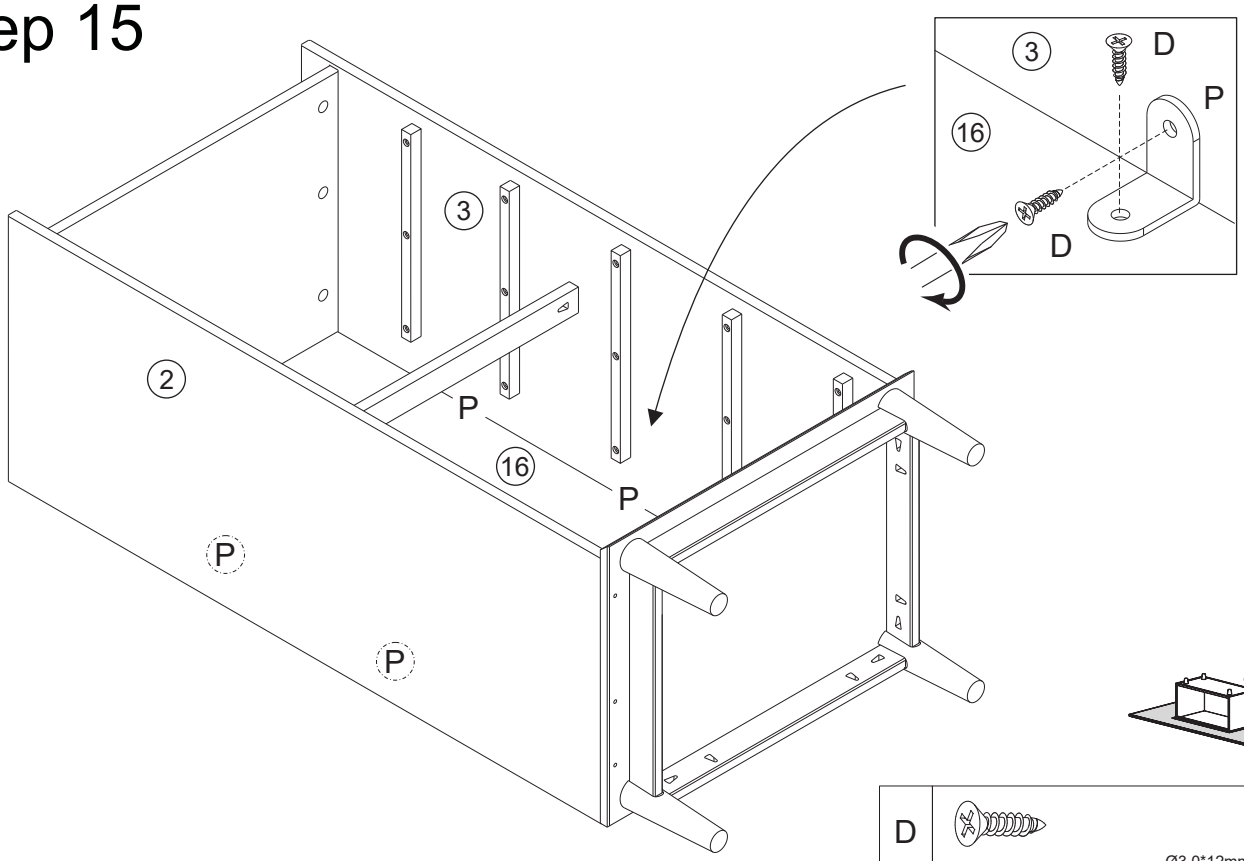



D	Ø3,0*12mm	08
P		04


Joint parts 2, 3 and 16 using metal corner (P) and screw (D) and phillips screwdriver.

Step 16

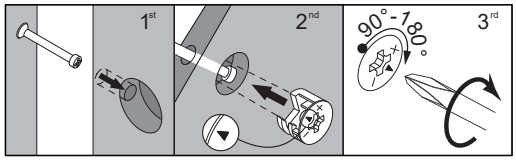

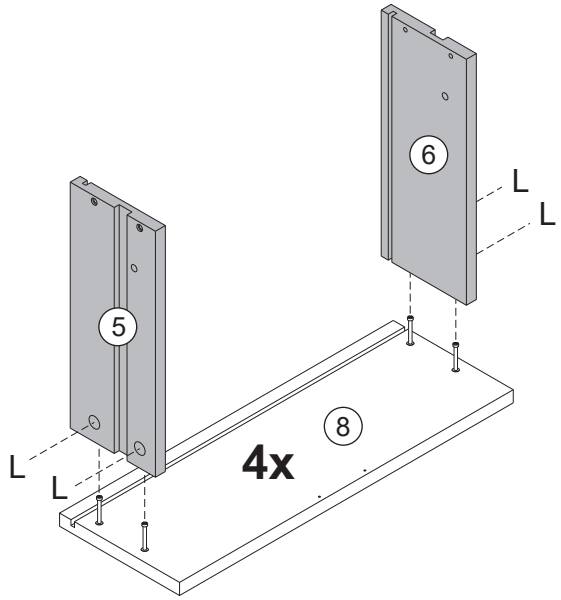

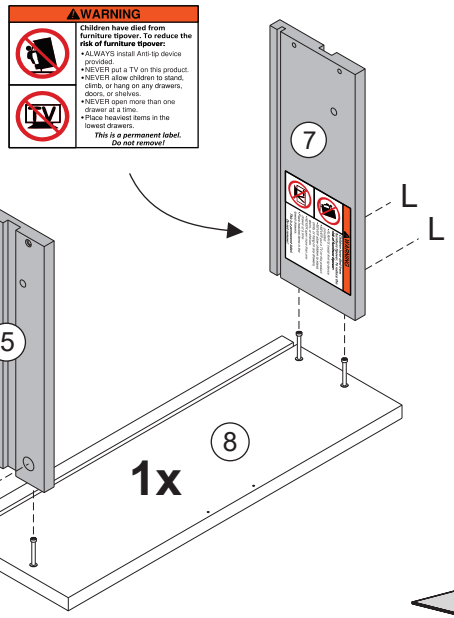




Secure part 5 and 6 to part 8.
Secure part 5 and 7 to part 8.
Insert cam locks (L) into parts 5, 6, 7, and tighten with a phillips screwdriver.

L	Ø15*11mm	20


Step 17

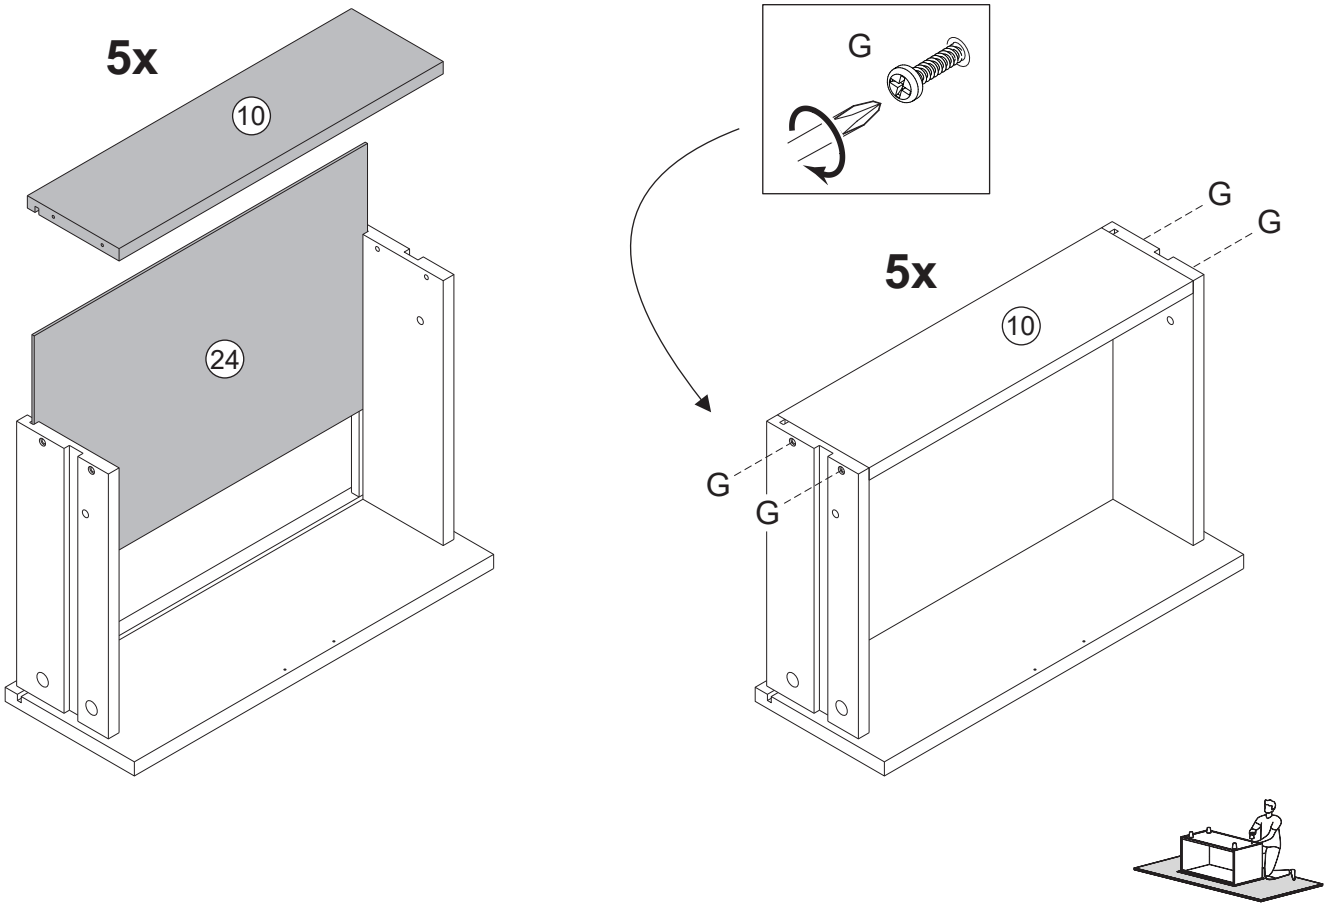

Insert parts 24 and 10 between parts 5, 6 and 7.
Secure part 10 with screw (G) and phillips screwdriver.

G	Ø4,0*30mm	20


Step 18

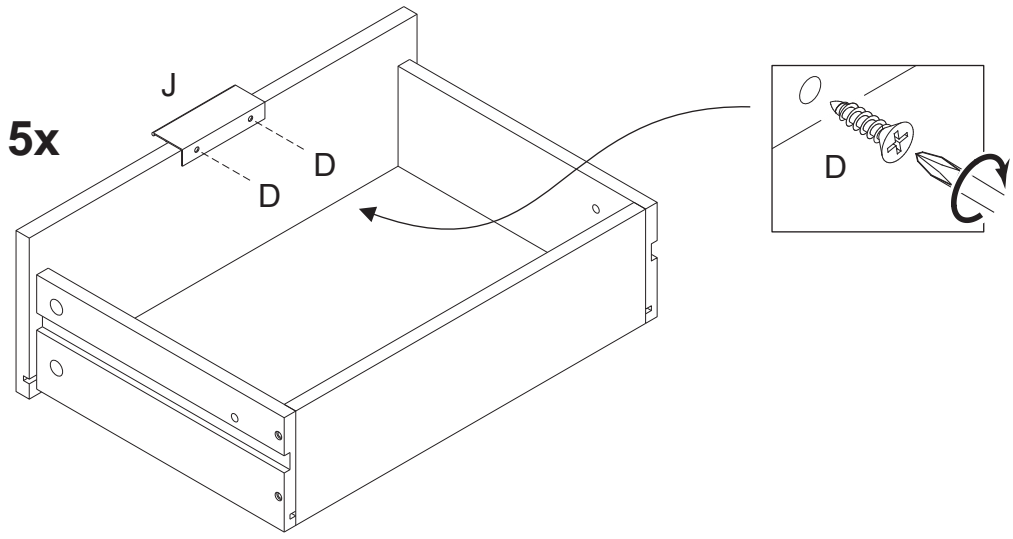


Secure handle (J) with screw (D) and phillips screwdriver,
in the pre-drilled holes on the drawer front.


D	Ø3,0*12mm	10
J		05

Step 19

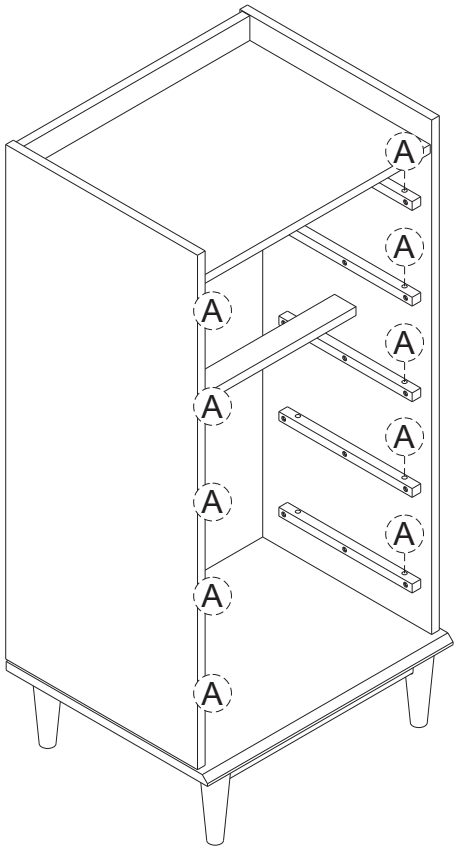


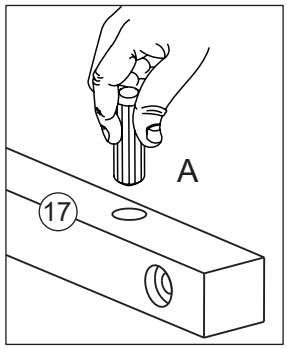



Insert wood dowel (A) into part 17 to be the stop of the drawer.




Step 20

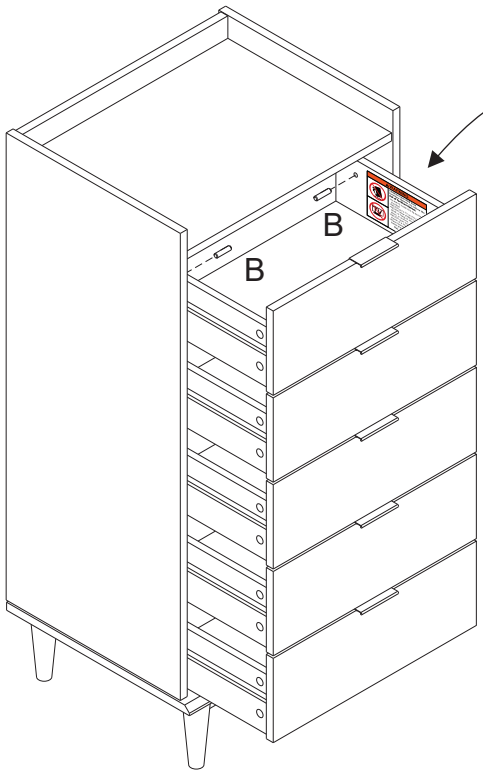

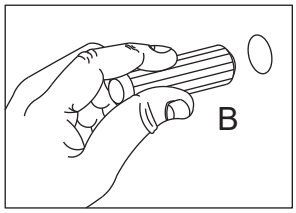


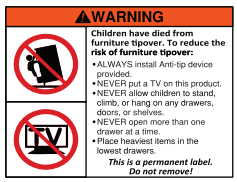

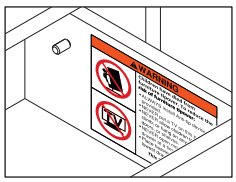

The assembled drawer with this warning must be placed on top of the unit.

Insert wood dowel (B) on the inside of all drawers, with the drawer inside the unit, after having passed the wood dowel that is in the drawer slide.
The dowel is not flush with the panel, it is a little inside the drawer to help when you need to remove the lock dowel to remove the drawer.




Step 21

WARNING


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.


Wall anchor and hardware are included with this product.
Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

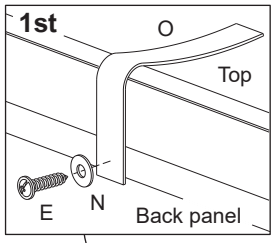


1st

Attach part (O) with Screw (E) and Washer (N), in the frame of top panel unit.

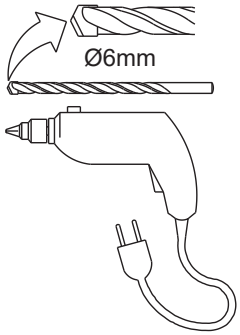



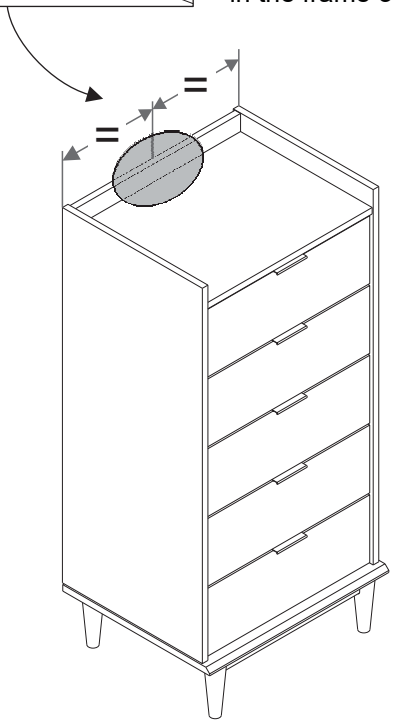


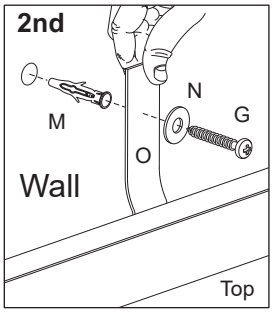

2nd


With drilling machine make one hole in the wall, Insert part (M) in the hole.
Secure part (O) with Screw (G), and Washer (N), in the wall.

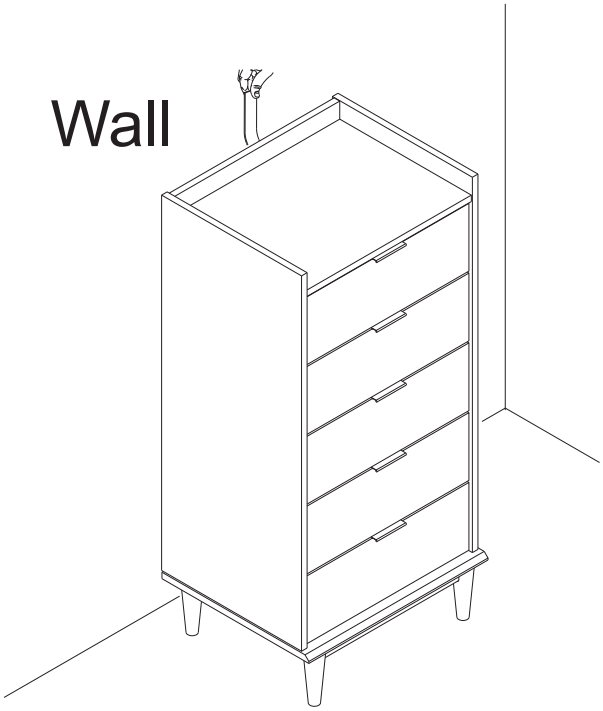

E	 Ø3,5*20mm	01
G	 Ø4,0*30mm	01
M		01
N		02
O		01

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.

Step 22

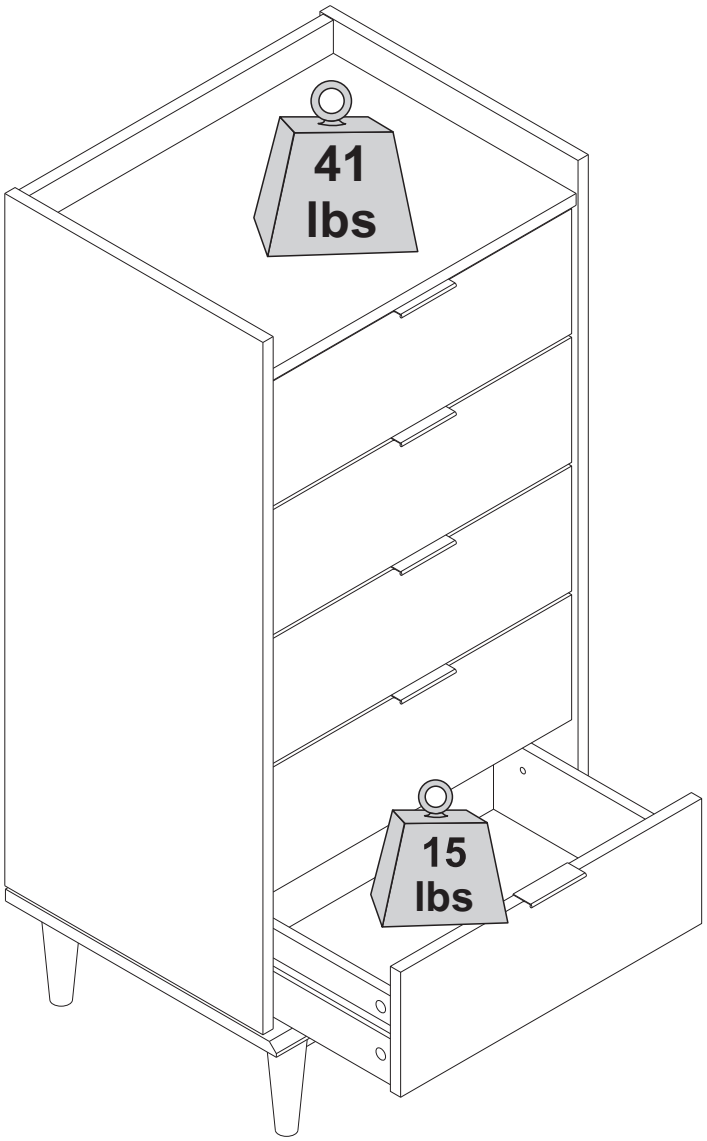

Assembly Complete!

Walker Edison®