

ASSEMBLY INSTRUCTIONS

THE IMAGES ARE FOR REFERENCE ONLY.

STEP 1 - HEADBOARD PREPARATION

WITH THE ASSISTANCE OF ANOTHER PERSON, ALIGN THE RAIL HOLES WITH THE HEADBOARD HOLES AS SHOWN IN FIGURE A.

STEP 2 - SECURE THE RAILS TO THE HEADBOARD

ONCE THE PARTS ARE ALIGNED, INSERT THE SCREWS TOGETHER WITH THE FLAT WASHER AND LOCK WASHER AS SHOWN IN FIGURE A. BE SURE TO USE THE HARDWARE DESIGNATED FOR THE HEADBOARD, AS IT DIFFERS FROM THE HARDWARE USED FOR THE FOOTBOARD.


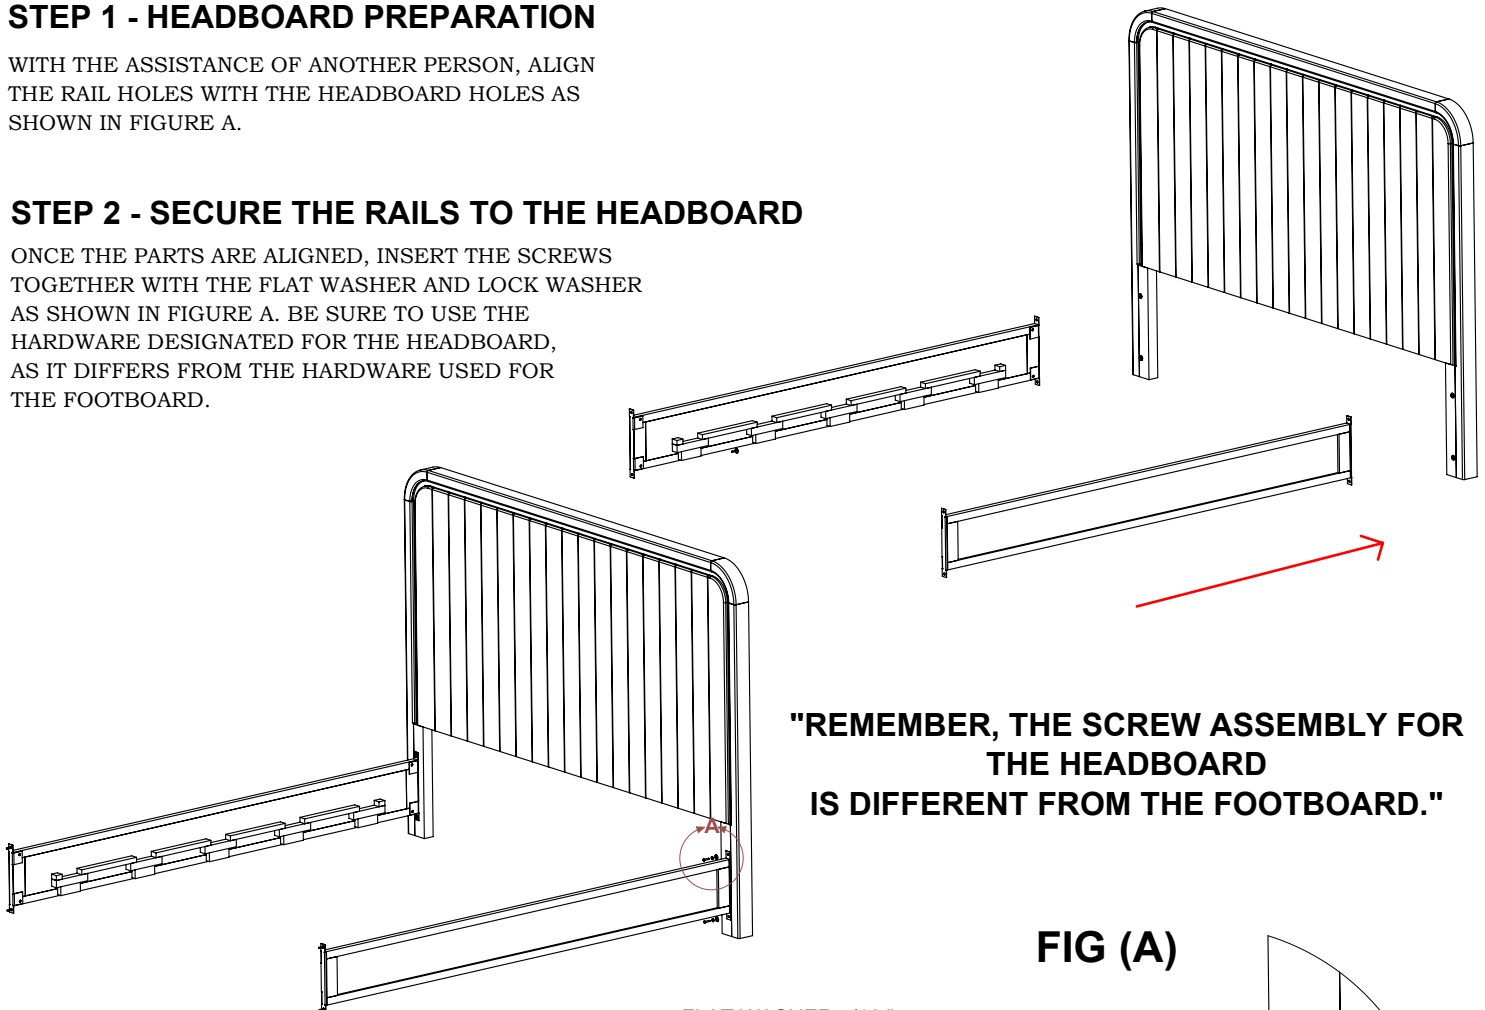


FIG (A)

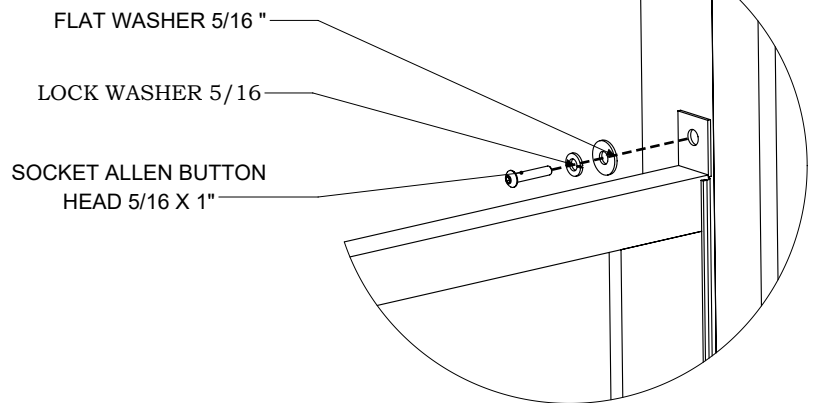



DESCRIPTION	#
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 1"	8
LOCK WASHER 5/16 "	8
FLAT WASHER 5/16 X 1"	8
HEX KEY 3/16	1

ASSEMBLY INSTRUCTIONS

THE IMAGES ARE FOR REFERENCE ONLY.

STEP 3 - FOOTBOARD ASSEMBLY


WITH THE ASSISTANCE OF ANOTHER PERSON, ALIGN THE RAIL HOLES WITH THE FOOTBOARD HOLES. INSERT THE SCREWS TOGETHER WITH THE FLAT WASHER AND LOCK WASHER AS SHOWN IN FIGURE B.

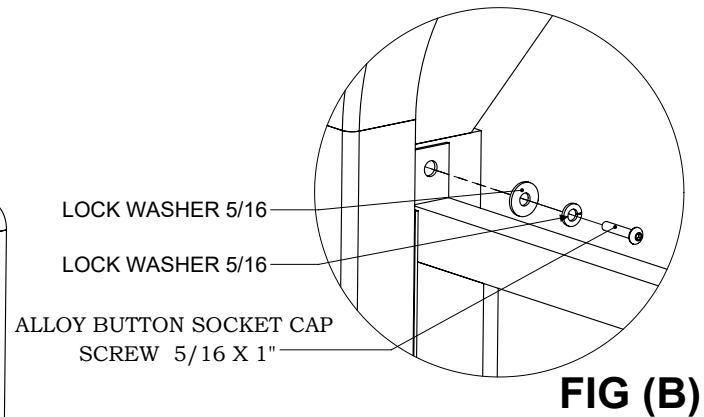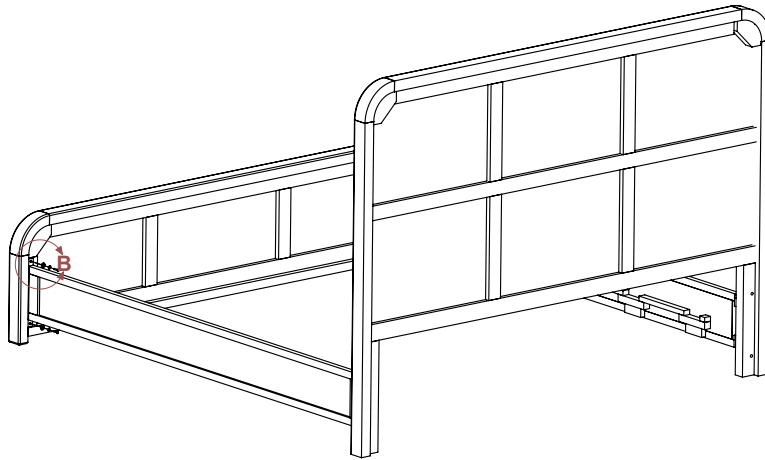

"REMEMBER, THE SCREW ASSEMBLY FOR THE HEADBOARD IS DIFFERENT FROM THE FOOTBOARD."

STEP 4 - SLAT INSTALLATION

FINALLY, PLACE THE SLATS WITH THE SUPPORT LEGS INTO THE RAIL BRACKETS AS SHOWN IN FIGURE C. VERIFY THAT ALL SLATS ARE PROPERLY SEATED BEFORE USING THE BED.

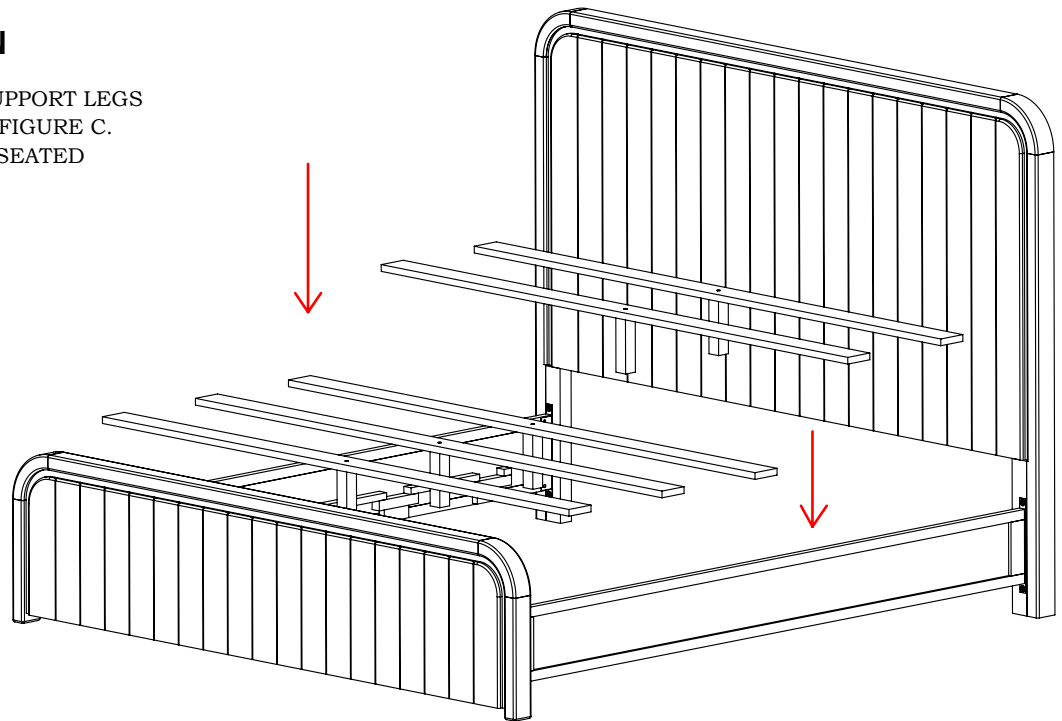

DESCRIPTION	#
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 1"	8
LOCK WASHER 5/16 "	8
FLAT WASHER 5/16 X 1"	8
HEX KEY 3/16	1