

Fashion Bed Group

A Division of Leggett & Platt Incorporated
5950 West 51st Street - Chicago, IL 60638

Parts List For Fenton Twin HB/FT/Duo


HB/FT/DUO CARTON

PART #321902 HARDWARE BAG FOR
HB/FT/DUO FRAME ATTACHMENT


- (1) 1/4-20 2 COUNTERSUNK ALLEN HEAD SCREW-4
- (2) 1/4-20 1 FLAT ALLEN HEAD SCREW-4
- (3) 1/4 ID METAL WASHER-4
- (4) 1/4-20 HEX NUTS-4
- (5) ALLEN WRENCH
- (6) PLASTIC GLIDE-2 (#150940000)

- (7) LEG EXTENSION-2 (#324103158 BUTTER PECAN
OR #324103161 BLACK WALNUT
OR #324104 GOLDEN FROST
OR #324105 TURNISH COPPER
OR #324106 PUMICE / GOLD B.)

(8) HB/FT/DUO PANEL-1

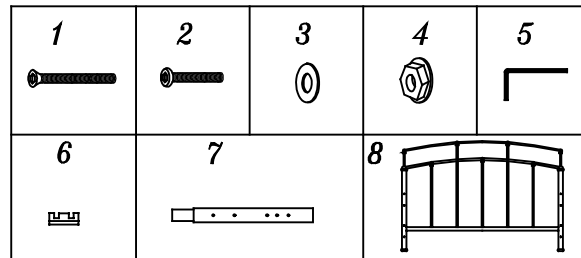


PRODUCT FULLY ASSEMBLED

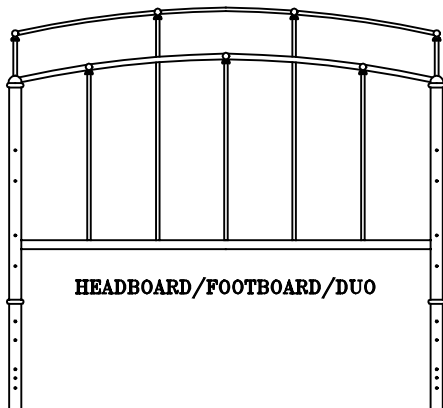

HEADBOARD/FOOTBOARD/DUO

FRAMES FULLY ASSEMBLED

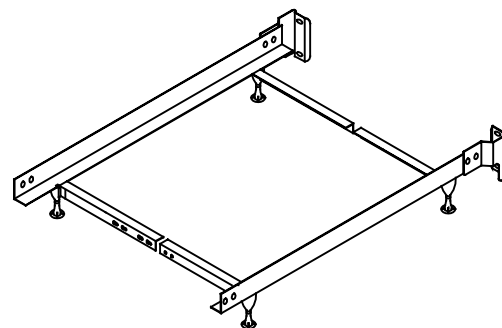


TWIN - FULL HEADBOARD ONLY FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
FOR FRAME ASSEMBLY

Twin Size Options


WHEN YOU BUY TWO TWIN PANELS

- 1st. USE LINK SPRING (UPPER CONNECTION) FOR TRUNDLE APPLICATION (ONLY A MATTRESS).
- 2nd. USE FRAME (LOWER CONNECTION) W/BOX SPRING AND MATTRESS.

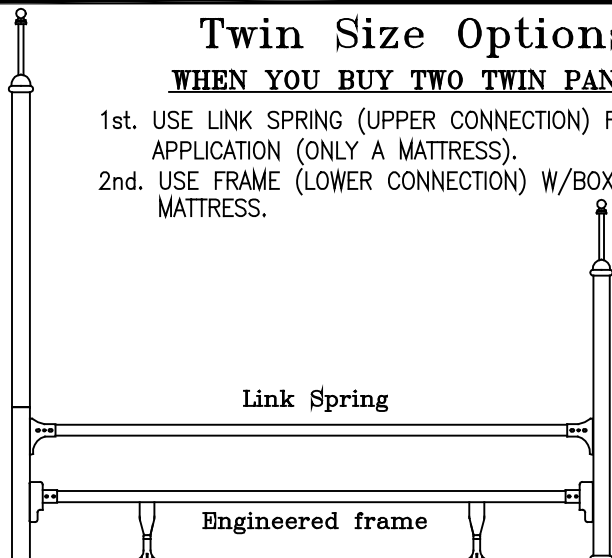

Link Spring


Engineered frame

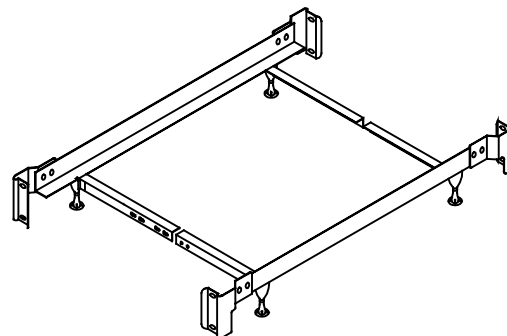

TWIN - FULL FRAME FULLY ASSEMBLED


NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
FOR FRAME ASSEMBLY

OPTIONAL



MATTRESS LINK SPRING FULLY ASSEMBLED

OPTIONAL

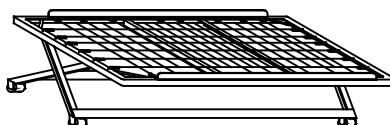

POP-UP TRUNDLE

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK AT 1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM CENTRAL TIME MONDAY THRU FRIDAY. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1


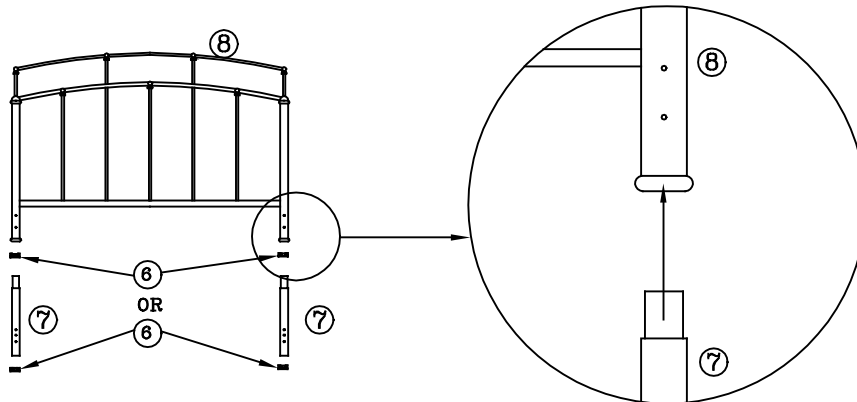


FIGURE 2

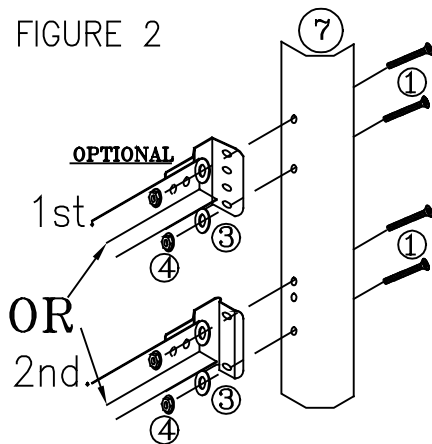

NOTE 1: This product can be used as Headboard only or as Headboard/Footboard bed. Insert plastic glide (6) into leg extension (7) for headboard assembly.

For footboard assembly insert plastic glide (6) into bottom of panel (8) posts. See Figure 1

Note 2: YOU HAVE TWO ASSEMBLY OPTIONS WHEN YOU BUY TWO TWIN PANELS:

1st. USE UPPER ASSEMBLY IF USING AS A TRUNDLE UNIT WITH MATTRESS ONLY.

2nd. USE LOWER FRAME ASSEMBLY IF USING BOX SPRING & MATTRESS.

Step 1 Headboard assembly

- Insert plastic glide (6) into bottom of leg extensions (7). (See Figure 1)
- Align top reduction of extension legs (7) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (7) into bottom of headboard (8) posts.

Step 2 Headboard Attachment to frame

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in extension leg (7). (See Figure 2)
- Align bed frame bracket over screws.
- Place a washer (3) first and then a nut (4) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench.

Step 3 Footboard Assembly

- Discard Leg extension (7) for footboard attachment to frame.
- Position footboard panel and align holes in the panel (8) post with holes in the frame bracket. See figure 3
- Place flat washer (3) on each screw (2). Insert through bracket and into post. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard panel.
- Tighten all screws securely using the Allen wrench.

FIGURE 3

