
HOME FURNITURE COLLECTIONS

ASSEMBLY INSTRUCTION FOR VENICE WALL BACK

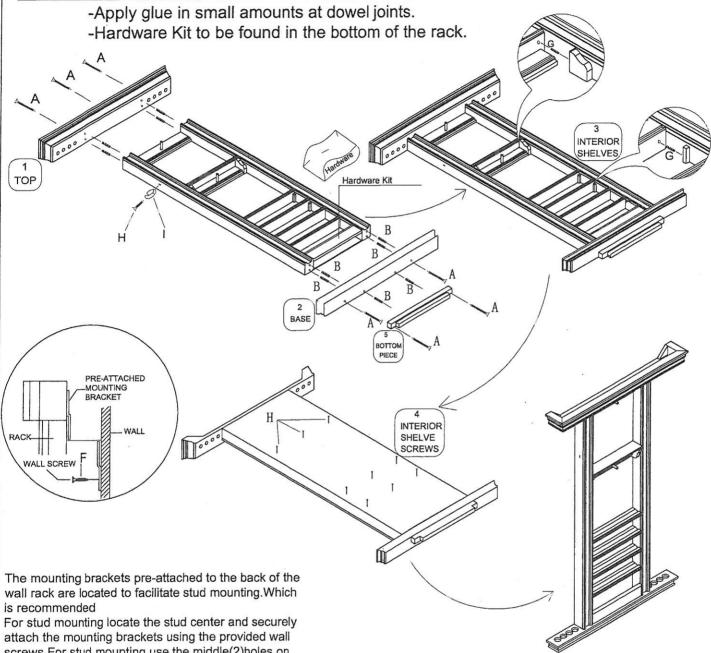

screws. For stud mounting use the middle(2)holes on the bracket.

If you are unable to rnount the wall rack using the studs, drywall anchors must be used to safely support the weight of the wall rack.

For drywall anchor mounting please use the outside(2)holes in the bracket.

Hang the wall rack on the wall as shown. Make sure wall rack is secure.

ASSEMBLY STEPS

- 1.Attach Top
- 2.Attach Base
- 3. Attach Interior Shelves
- 4. Attach interior Shelf Screws on Back Board
- 5 Attach Bottom Piece

200000000000000000000000000000000000000	Α	Same	Wood screw-L	Ø4*45mm	7PCS
	В	alle	Large Wood Dowel	Ø8*30mm	10PCS
	С	0	Glue		1PC
	D		Dry Wall Anchor		4PCS
-	Е		Mounting Bracket		2PCS
-	F	-	Wall Screw	Ø4*40mm	8PCS
	G	0	Small Wood Dowel	Ø6*20mm	6PCS
-	Н	;	Wood Screw-S	Ø3*15mm	11PCS
	Т	1	PI ASTIC RING		100