

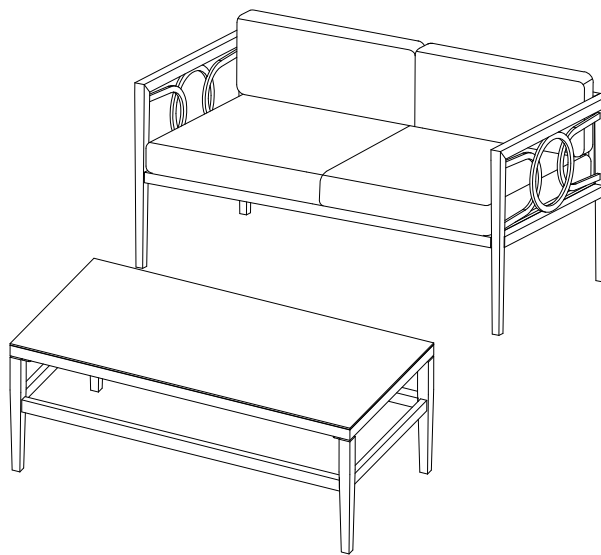
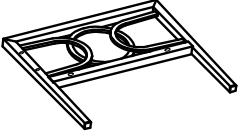
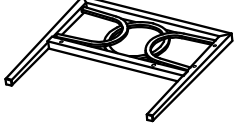

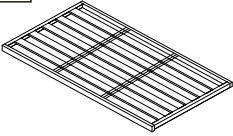

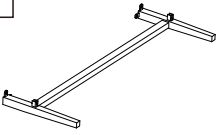








Loveseat and Coffee Table CO7350



PART LIST


A 	B 	C 	D 	E 
Right Arm Panel 1 PC	Left Arm Panel 1 PC	Back Panel 1 PC	Seat Panel 1 PC	Top Panel 1 PC
F 	G 	H 	I 	J 
Leg 2 PCS	Bar 2 PCS	Glass Top 1 PC	Seat Cushion 2 PCS	Back Cushion 2 PCS

HARDWARE LIST

#1 	#2 	#3 	#4 	#5 
M6*12mm Short Bolt 4 PCS (Extra 1)	M6*20mm Medium Bolt 8 PCS (Extra 1)	M6*35mm Long Bolt 11 PCS (Extra 1)	M6mm Flat Washer 23 PCS (Extra 1)	M6mm Allen Wrench 1 PC
#6 				
Suction cup Extra 2 PCS				


Step 1. Lay left arm panel (part B) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part D) to left arm panel (part B) using long bolts (part #3), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

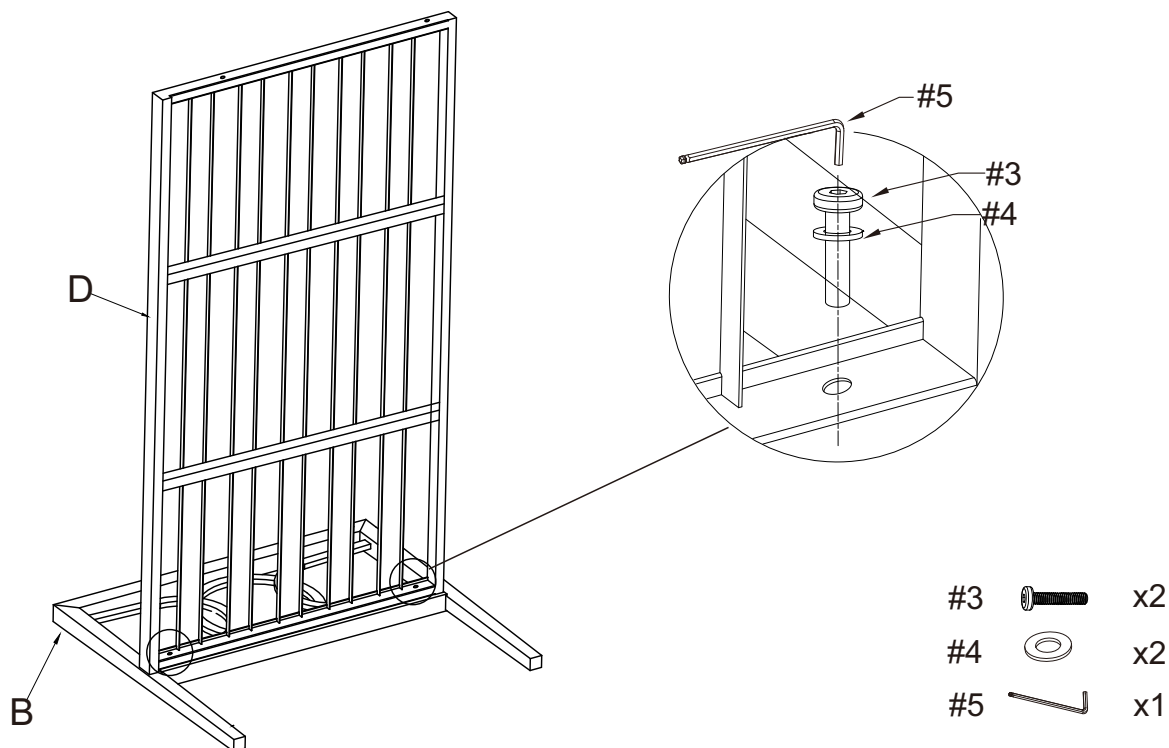


Step 2. Attach back panel (part C) to seat panel (part D) and left arm panel (part B) using long bolts (part #3), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

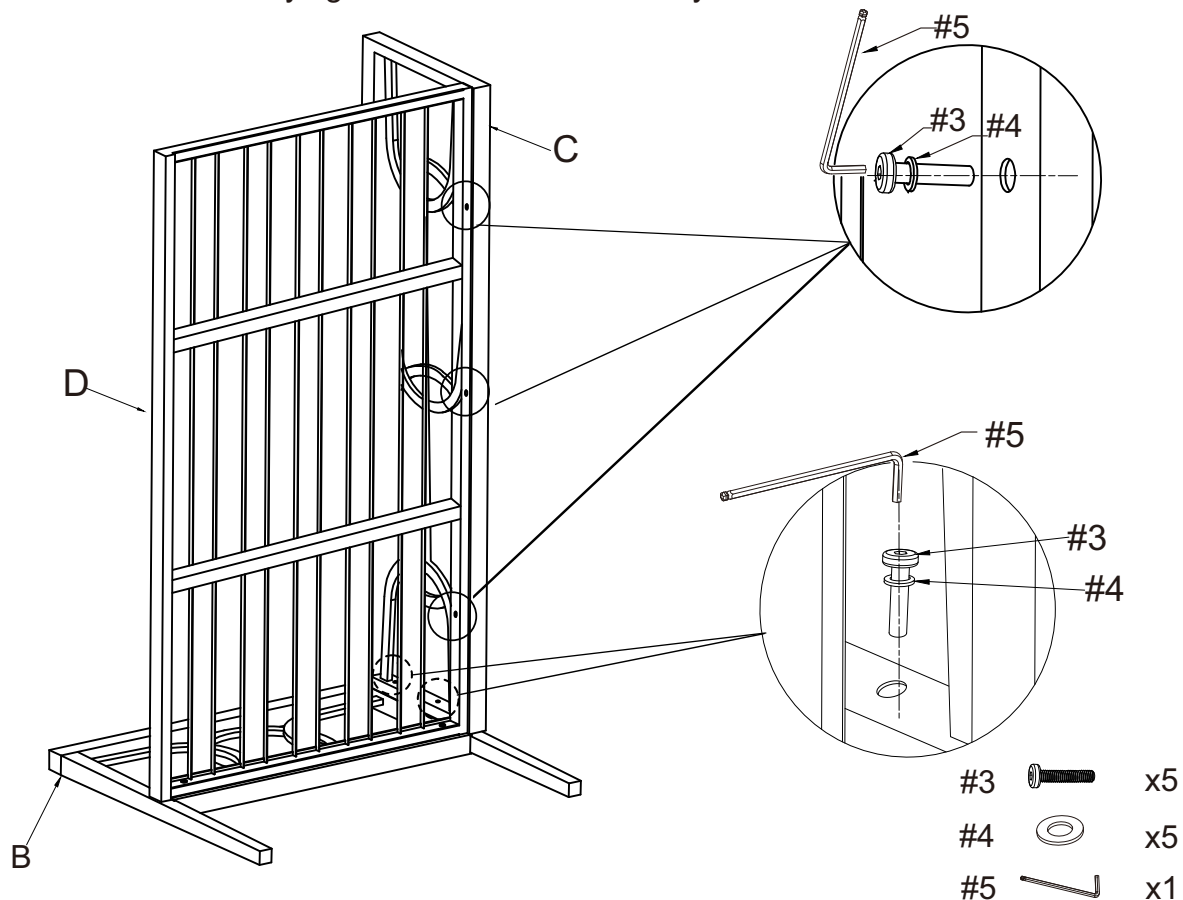


Step 3. Attach right arm panel (part A) to seat panel (part D) and back panel (part C) using long bolts (part #3), flat washers (part #4) and allen wrench (part #5).

NOTE: Please fully tighten all bolts at this time.

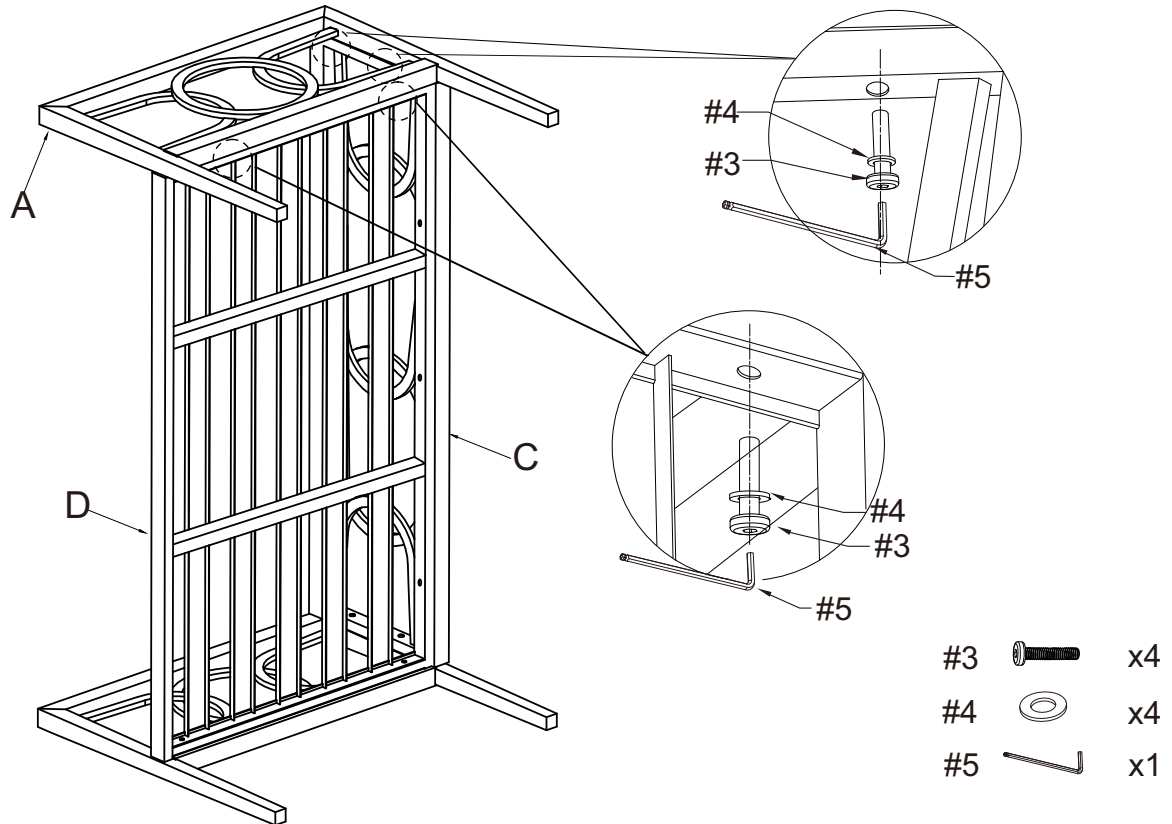


Step 4. Carefully turn unit upright. Place seat cushions (part I) and back cushions (part J) as shown below.

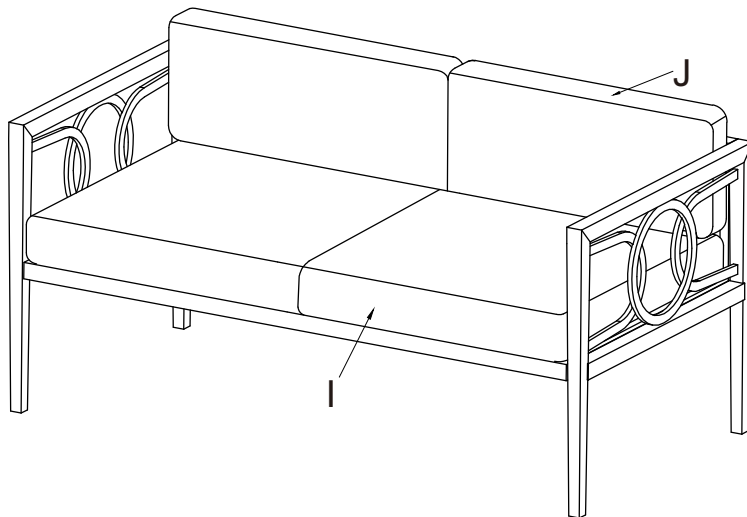

Step 5. Attach bars (part G) to legs (part F) using short bolts (part #1), flat washers (part #4) and allen wrench (part #5).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

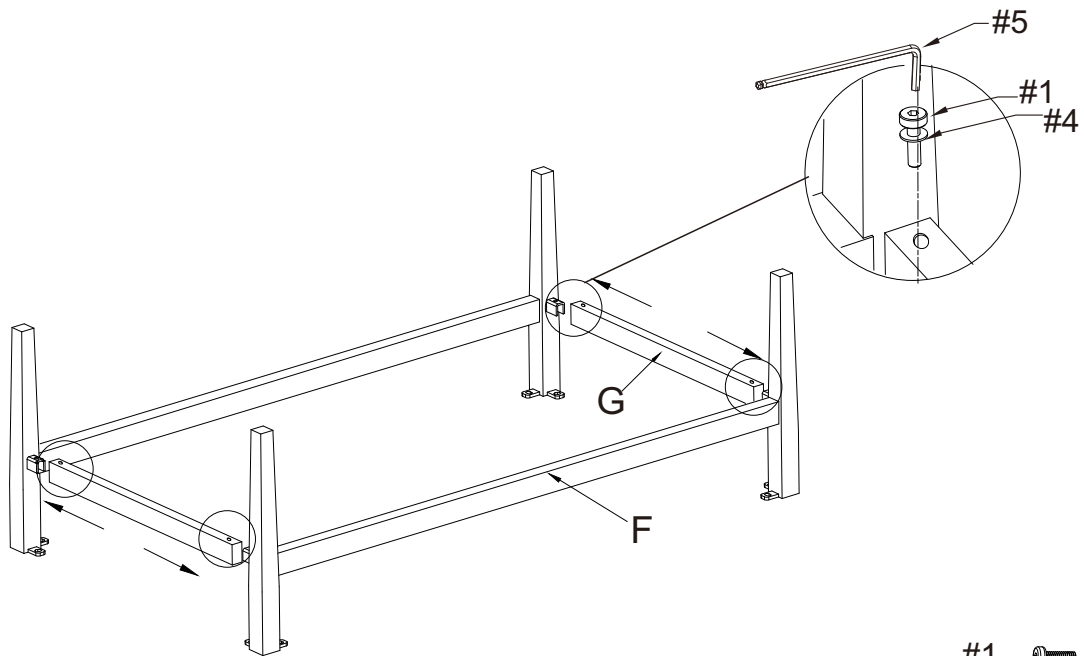

#1		x4
#4		x4
#5		x1

Step 6. Lay top panel (part E) upside down on a soft flat surface, such as carpet, as shown below. Attach assembled unit (parts F & G) to top panel (part E) using medium bolts (part #2), flat washers (part #4) and allen wrench (part #5).

NOTE: Please fully tighten all bolts at this time.

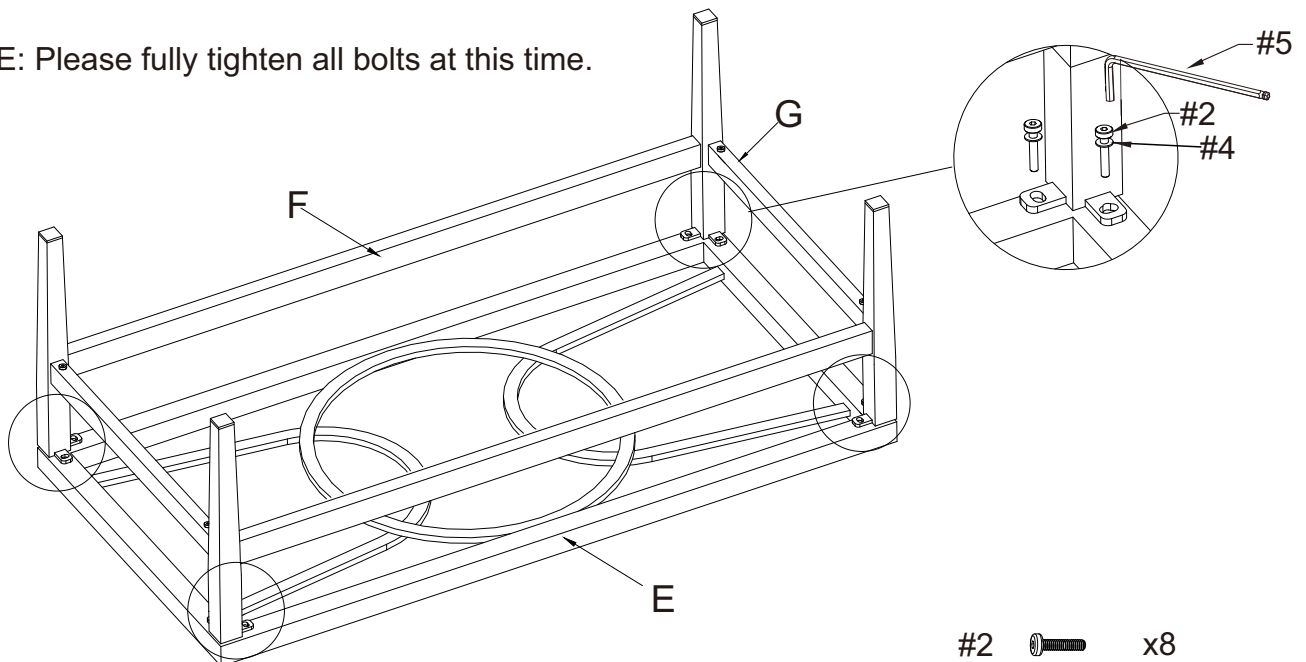

#2		x8
#4		x8
#5		x1

Step 7. Carefully turn assembled unit upright. Place glass top (part H) on the top panel (part E).

