
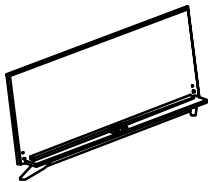
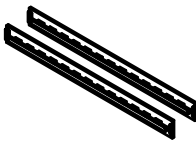



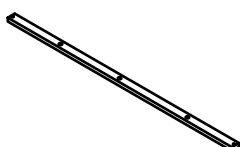


Product Assembly Instructions


LOFT-KB200

 A: Headboard x1	 B: Footboard x1	 C: Side Rail (L+R) x2	 G: Bolt M8*40mm x4  H: Washer x4  I: Screw nut M8 x4  J: Bolt M6*10mm x4  K: BoltM6*60mm x3  L: ScrewM4*30mmx30  M: Allen keyM4 x1  N: Wrench x1  O: Allen keyM5 x1
 D: Middle Rail x1	 E: Center Leg x3	 F: Slat Frame x 14	


STEP 1

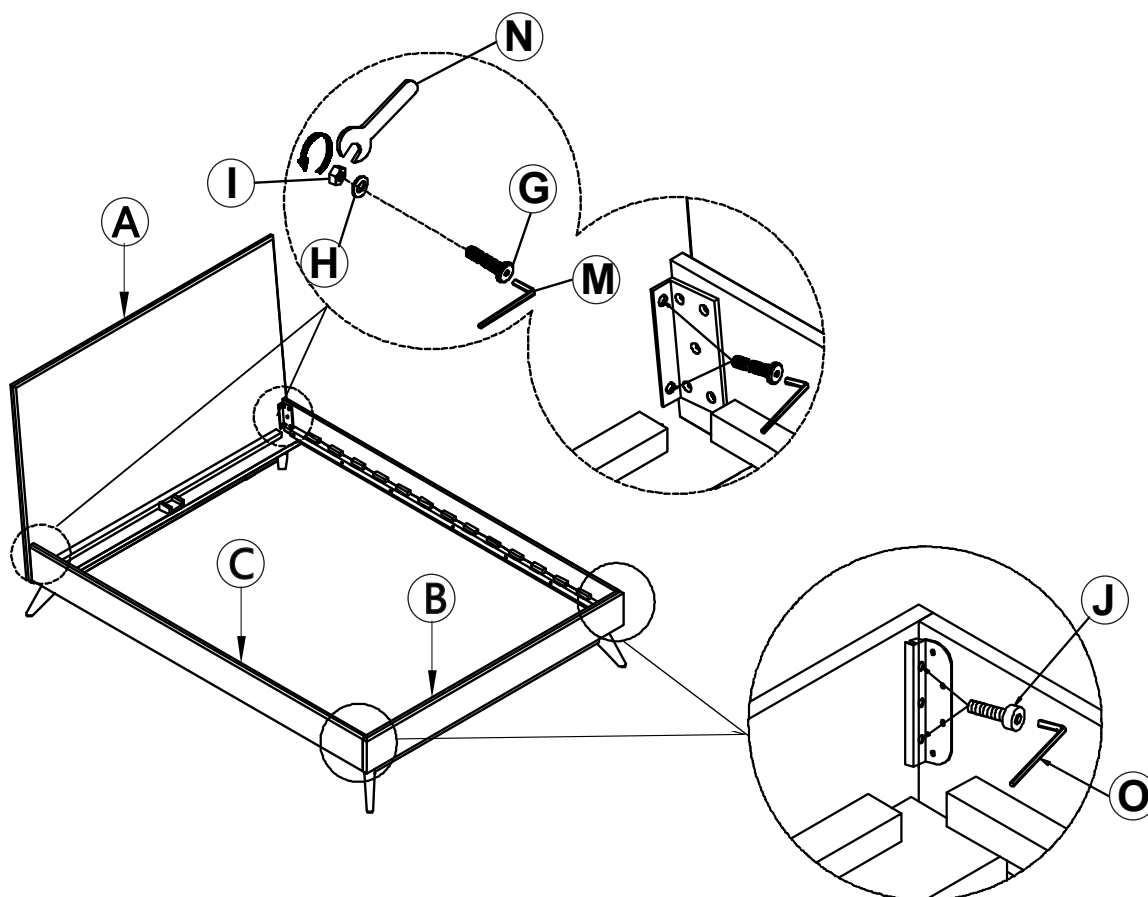

STEP 2

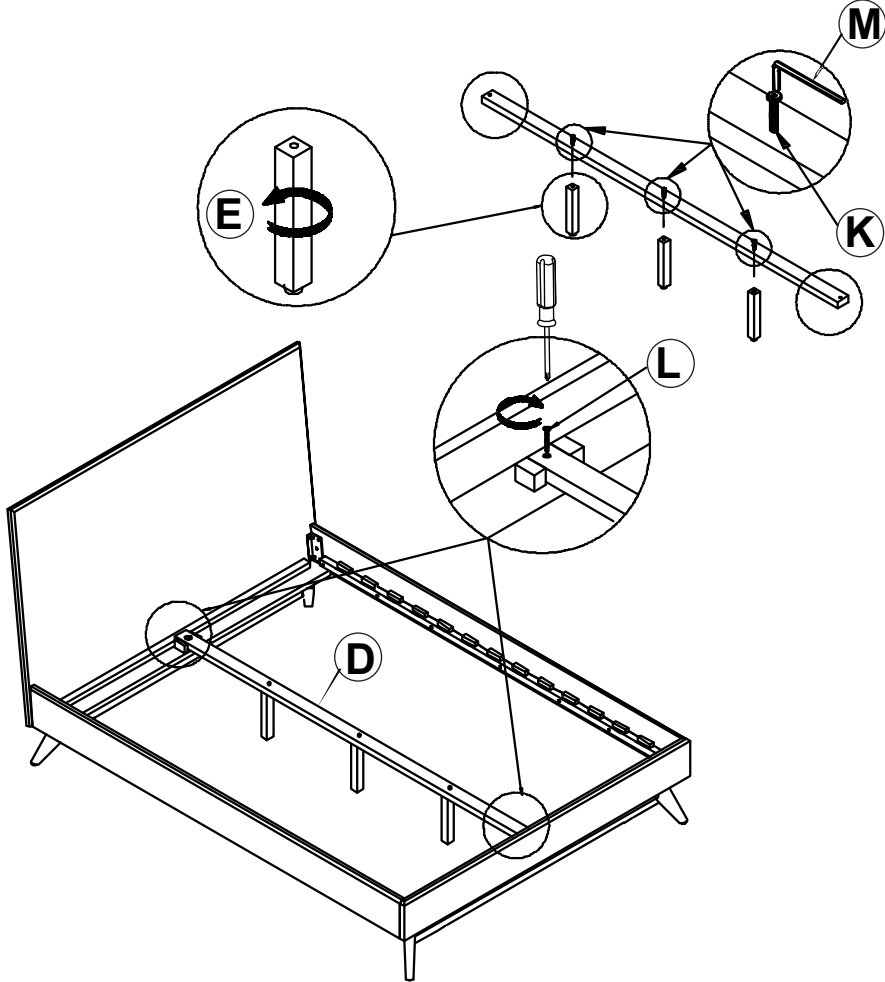


STEP 3

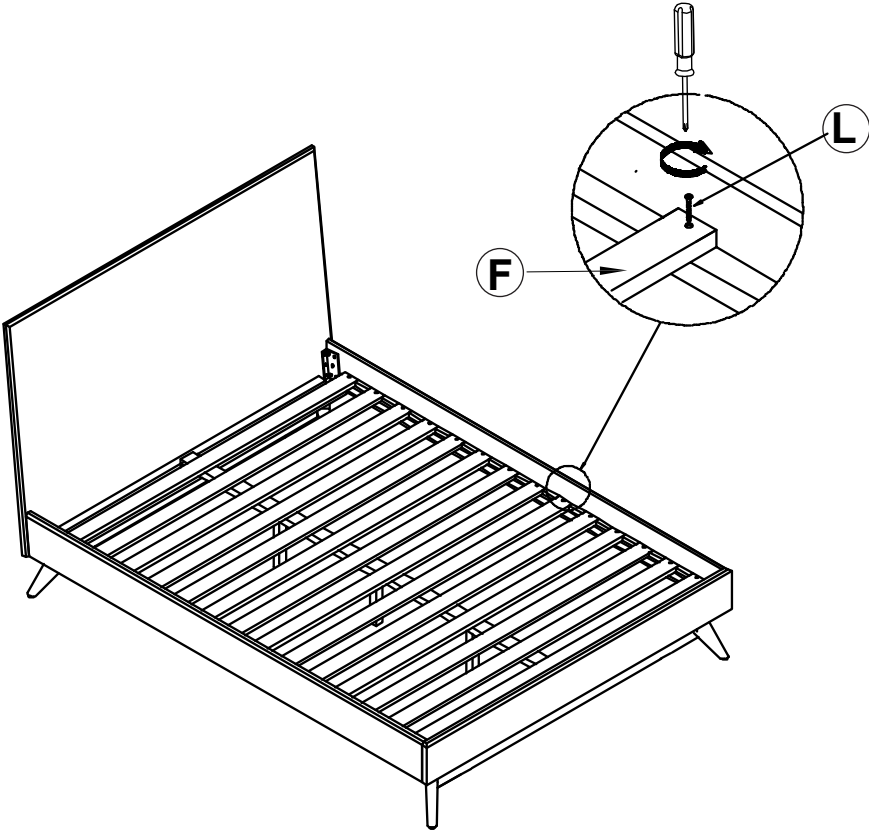


Product Assembly Instructions


LOFT-CH 160

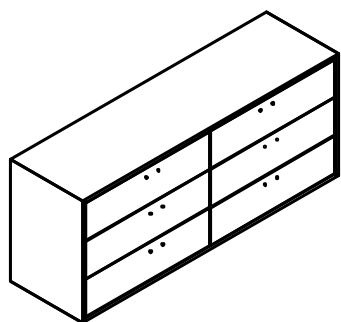

A: Chest x1

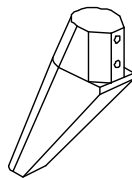

B: Leg x4



C: Bolt M6*60mm x8



D: Washer x8



E: Allen key x1





F: Handle x6




G: Screw M4*15mmx12


STEP 1

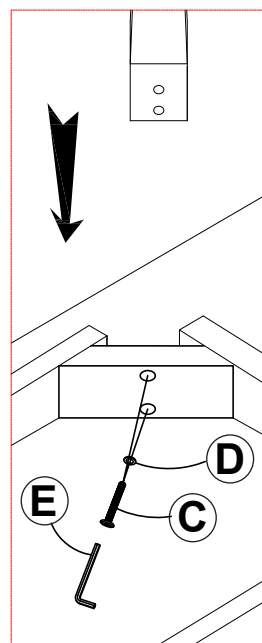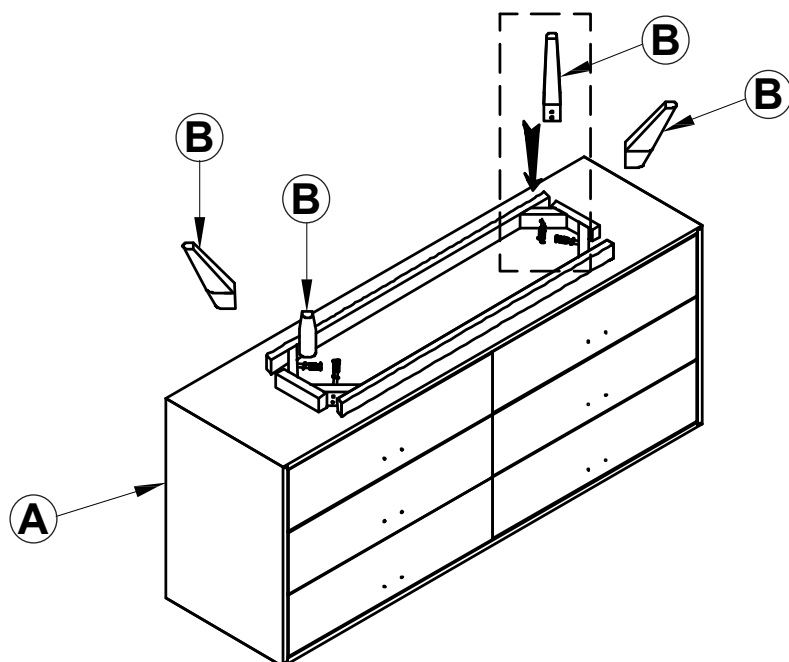

STEP 2

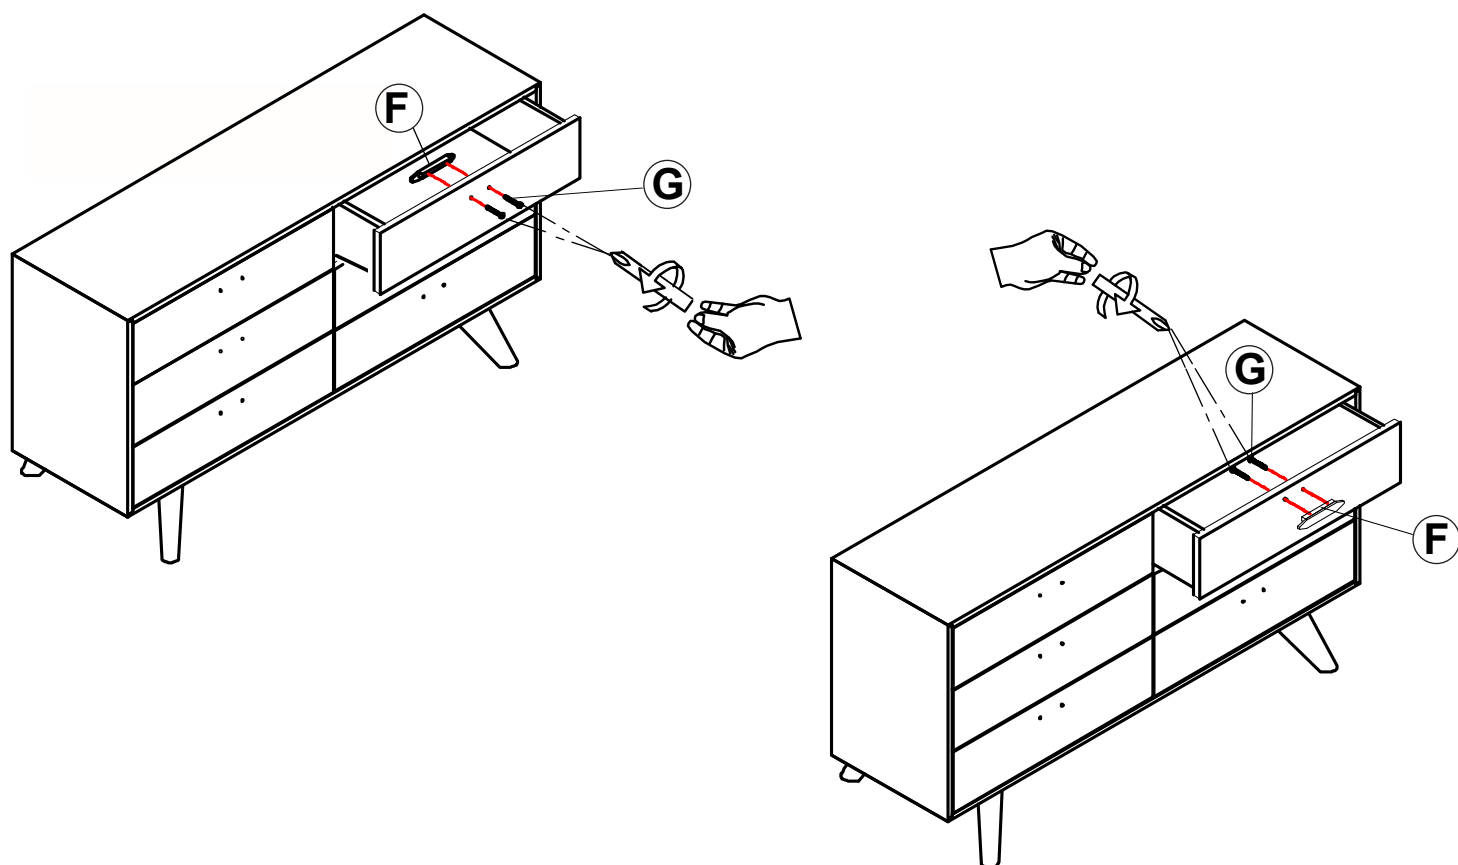


STEP 3

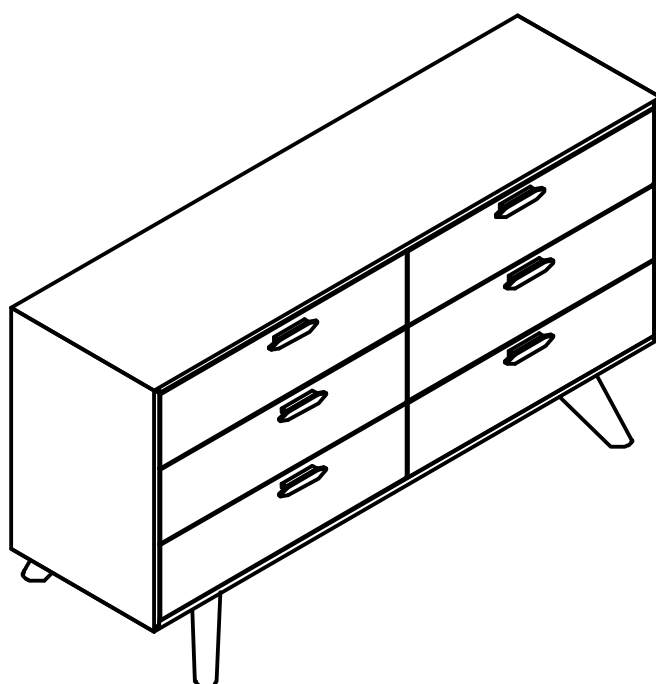


Product Assembly Instructions


LOFT-NS60

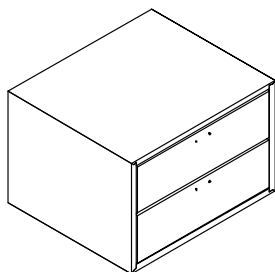

A: Chest x1

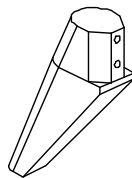

B: Leg x4



C: Bolt M6*60mm x8



D: Washer x8



E: Allen key x1





F: Handle x2




G: Screw M4*15mm x4


STEP 1

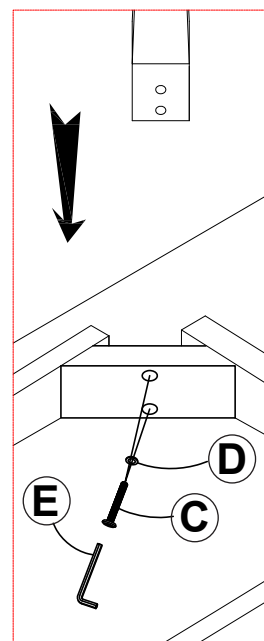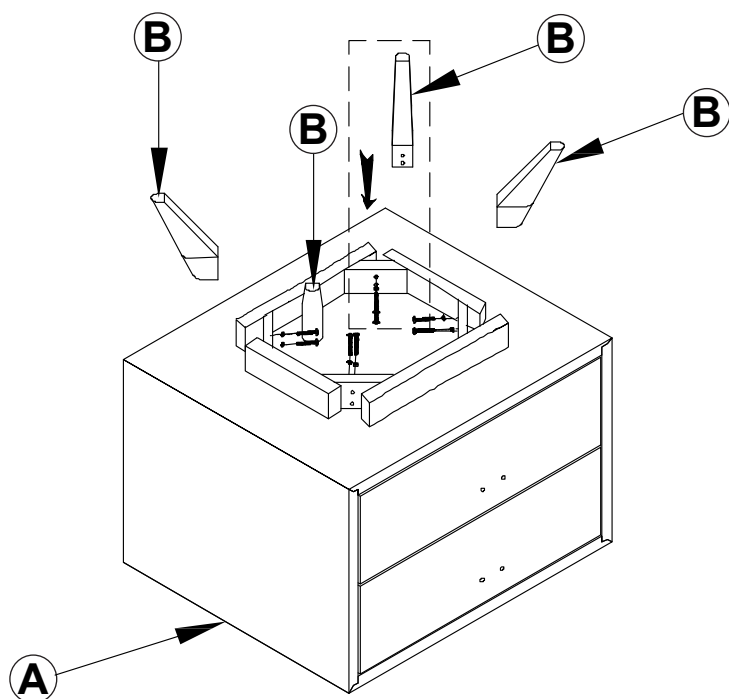

STEP 2






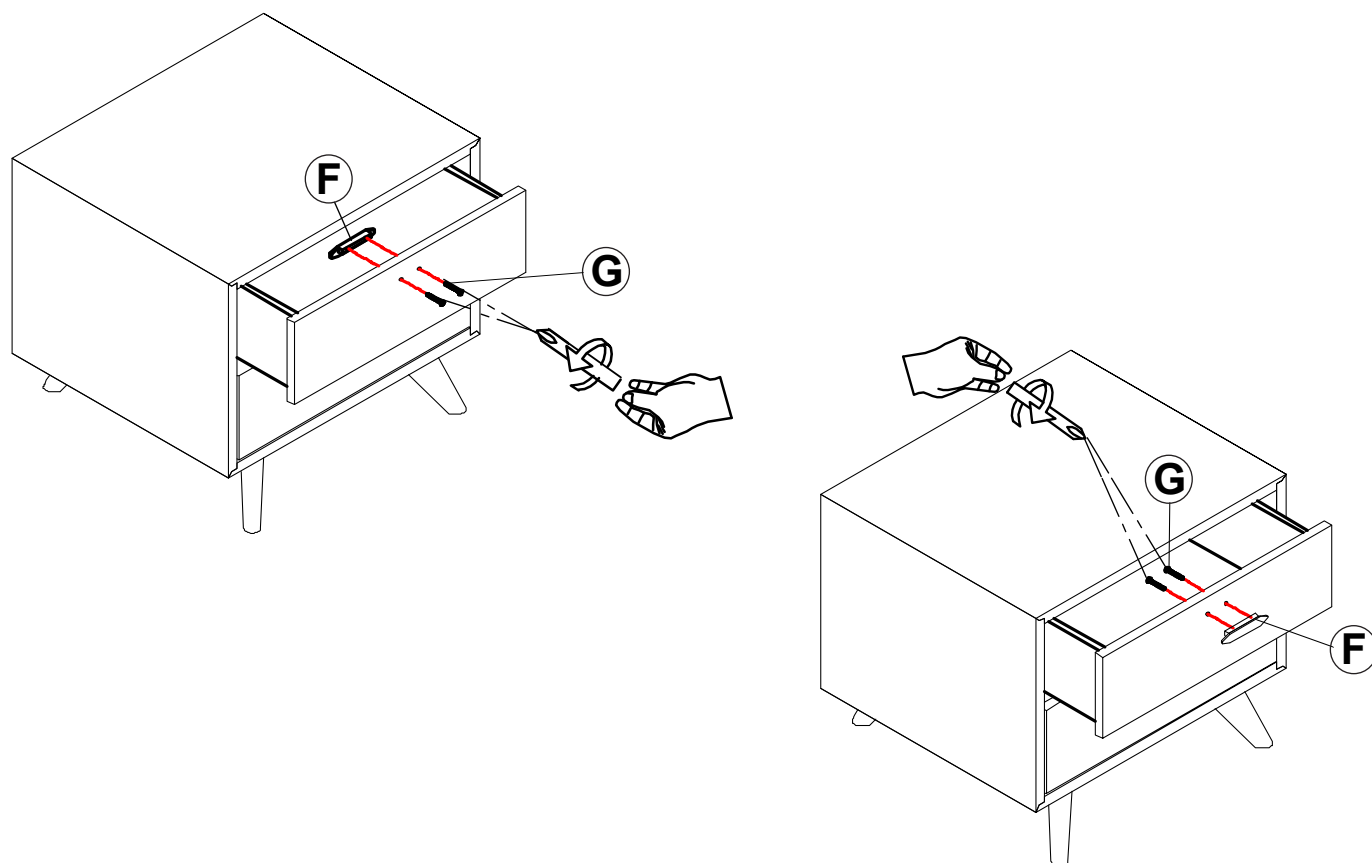


STEP 3

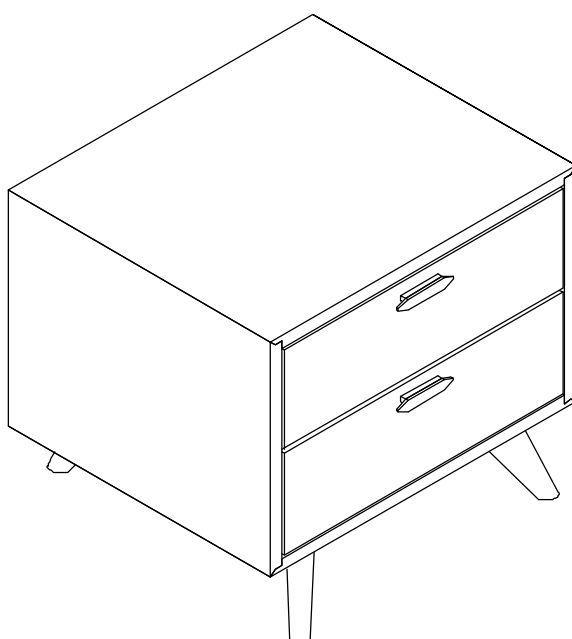


Product Assembly Instructions


LOFT-QB161

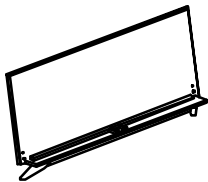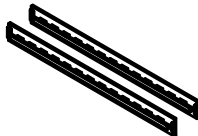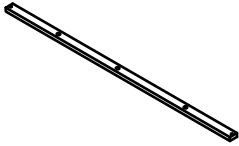 A: Headboard x1	 B: Footboard x1	 C: Side Rail (L+R) x2	 G: Bolt M8*40mm x4
			 H: Washer x4
			 I: Screw nut M8 x4
			 J: Bolt M6*10mm x4
			 K: BoltM6*60mm x3
			 L: ScrewM4*30mmx30
 D: Middle Rail x1	 E: Center Leg x3	 F: Slat Frame x 14	 M:Allen keyM4 x1
			 N: Wrench x1
			 O: Allen keyM5 x1


STEP 1

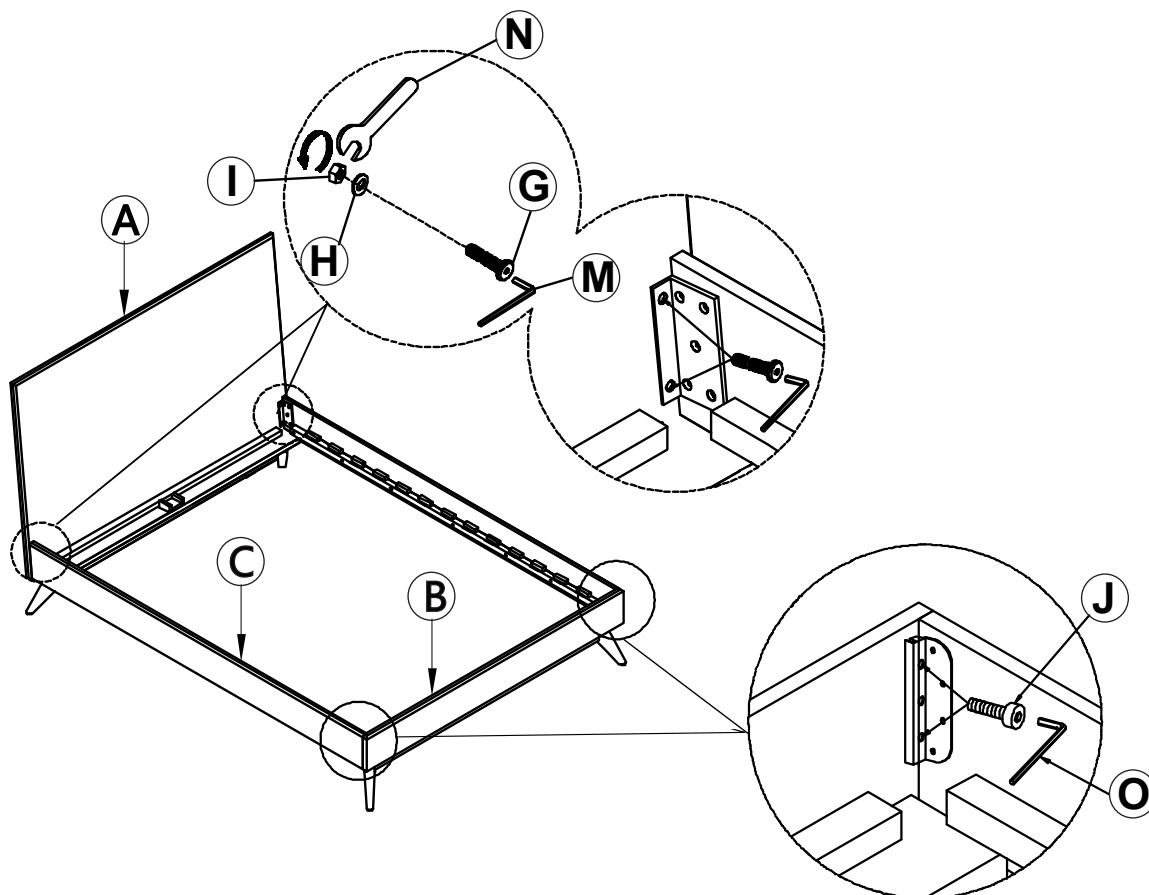

STEP 2

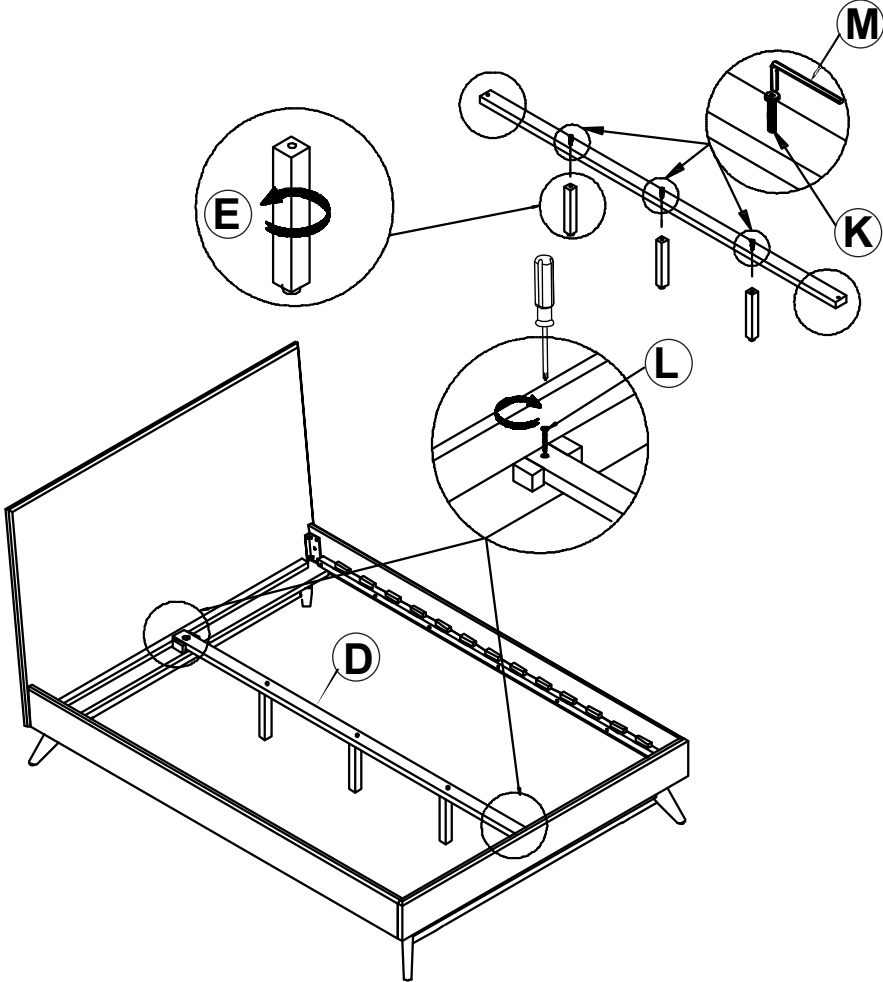


STEP 3

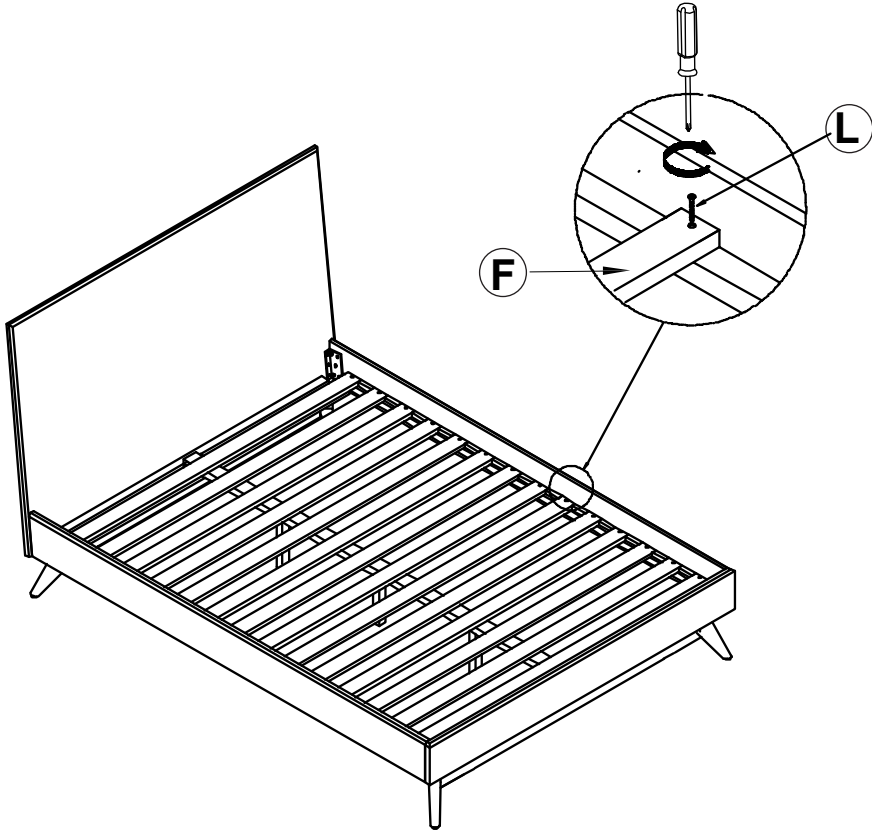


Product Assembly Instructions


LOFT-NS60

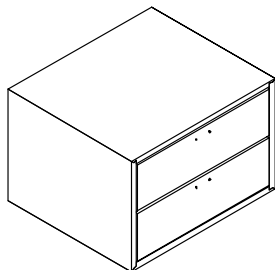

A: Chest x1

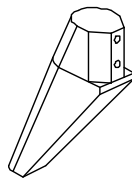

B: Leg x4



C: Bolt M6*60mm x8



D: Washer x8



E: Allen key x1





F: Handle x2




G: Screw M4*15mm x4

STEP 1

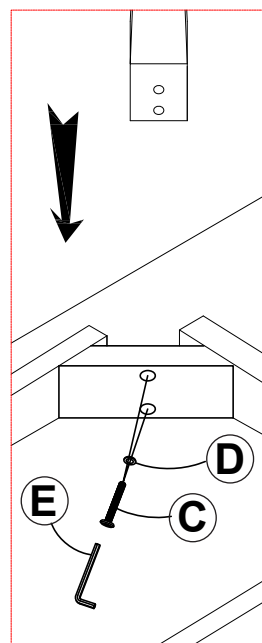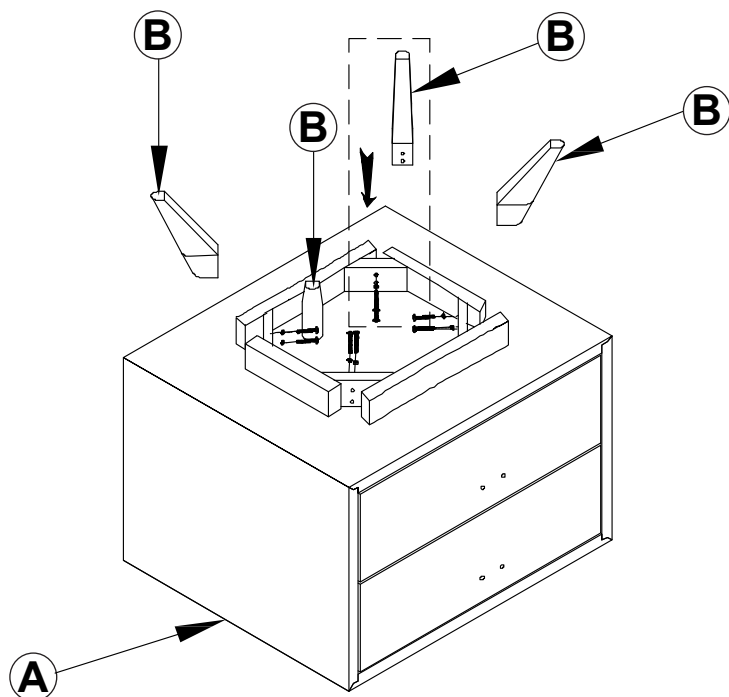

STEP 2

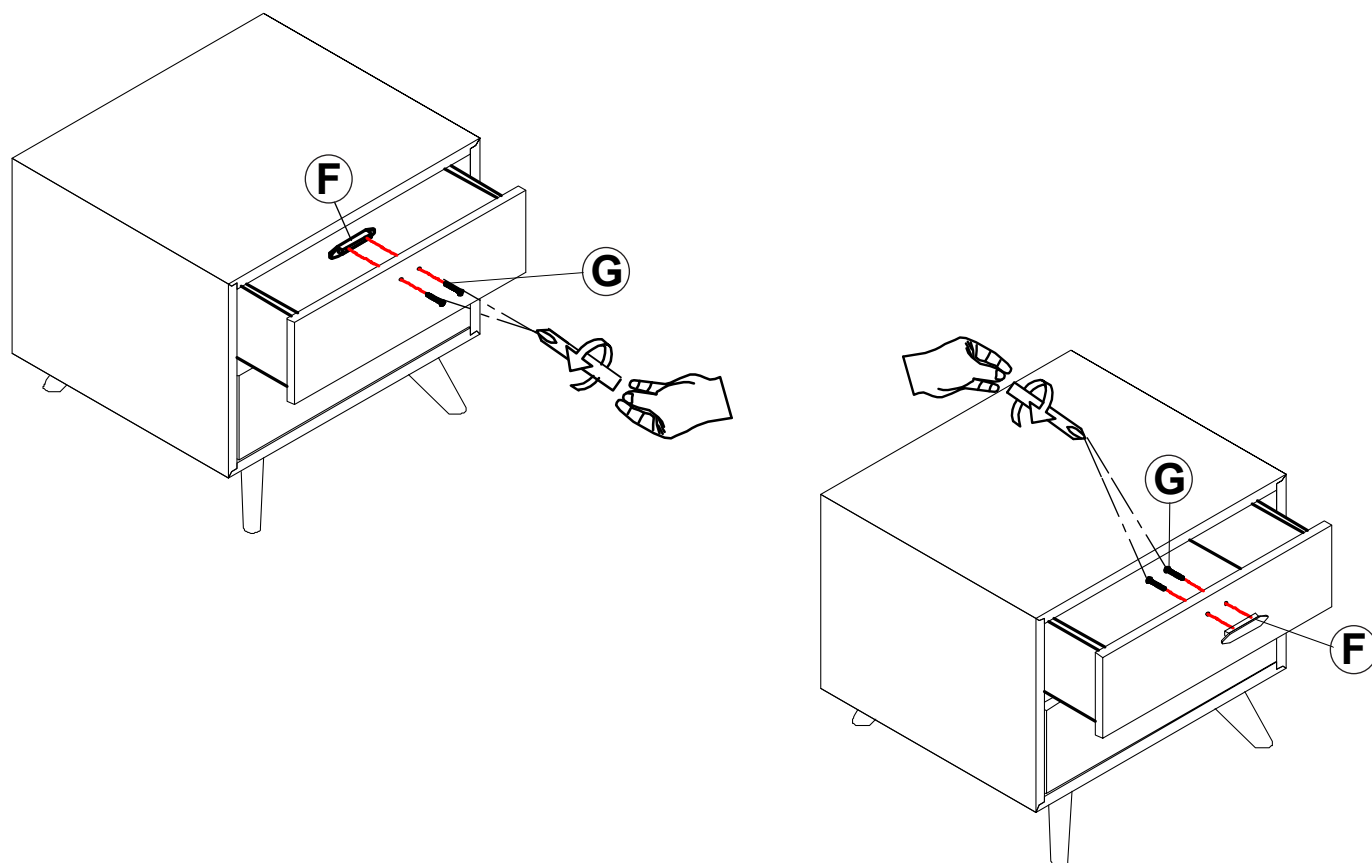


STEP 3




Product Assembly Instructions


LOFT-CH 160

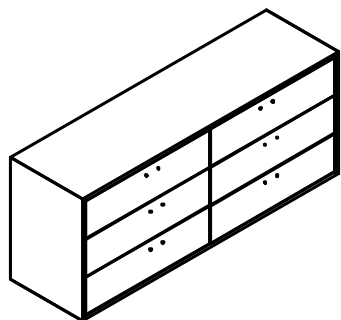

A: Chest x1

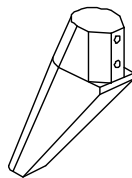

B: Leg x4



C: Bolt M6*60mm x8



D: Washer x8



E: Allen key x1





F: Handle x6




G: Screw M4*15mmx12


STEP 1

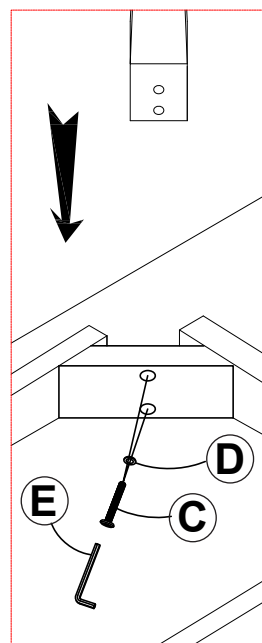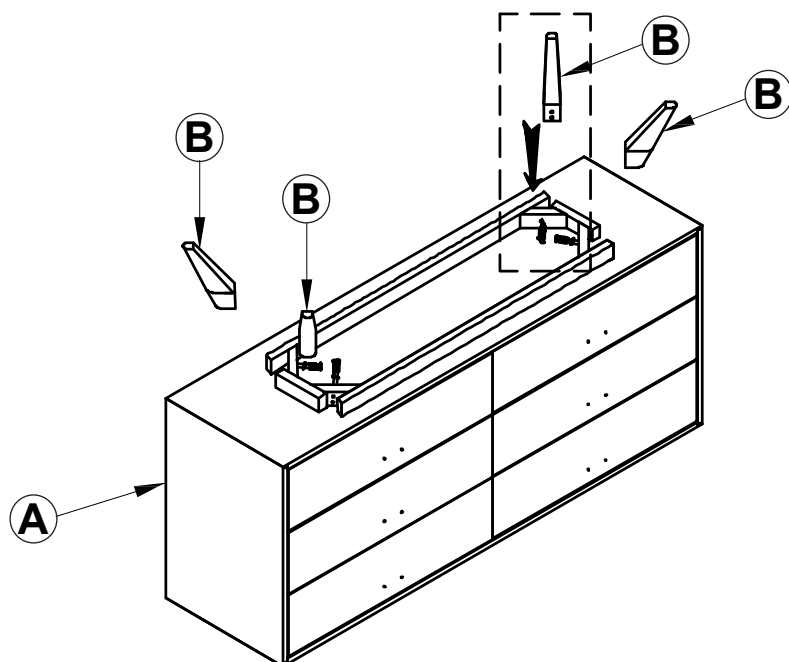

STEP 2






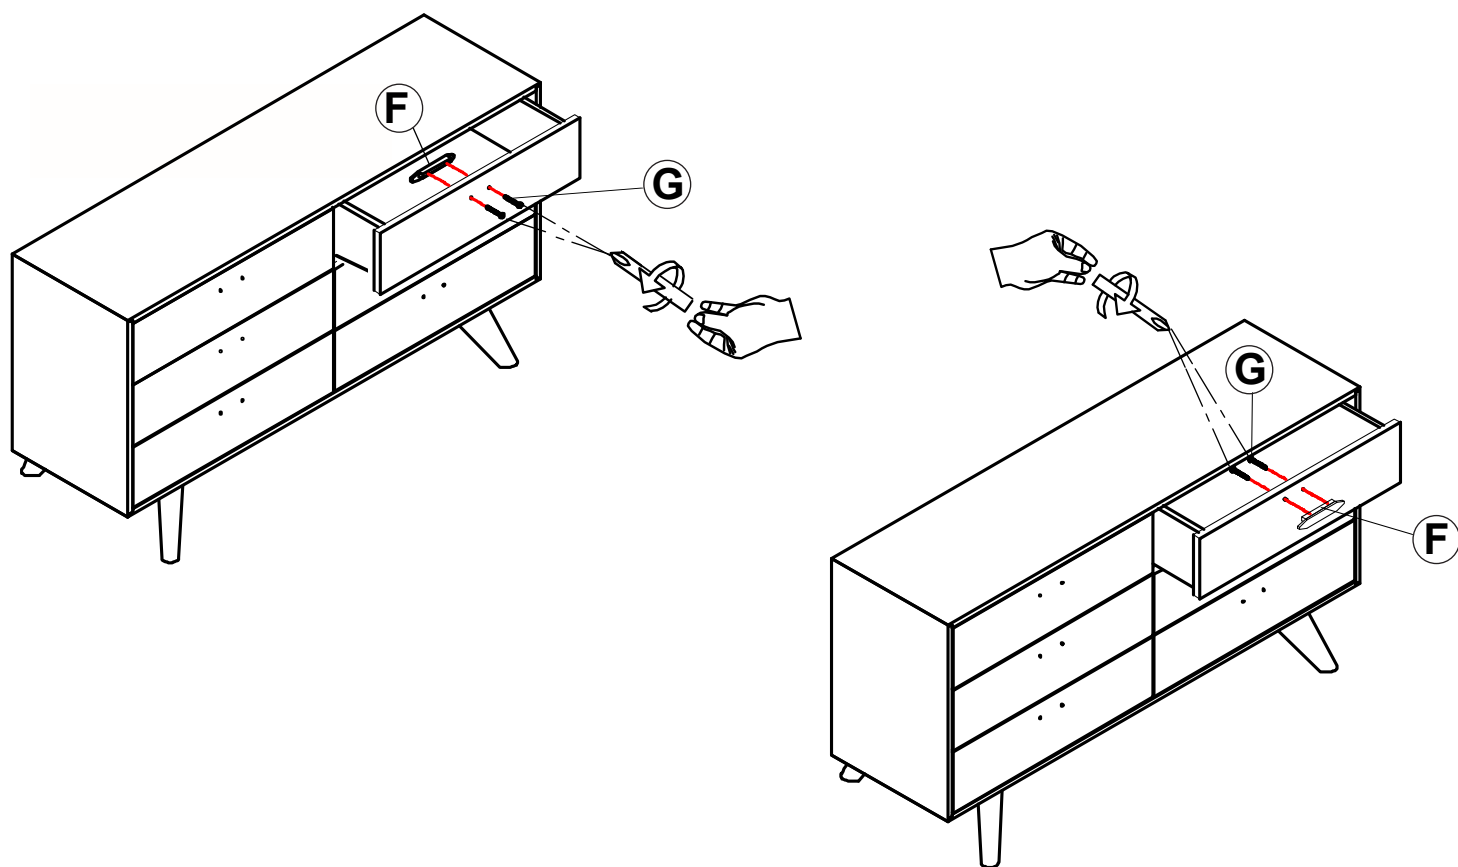


STEP 3

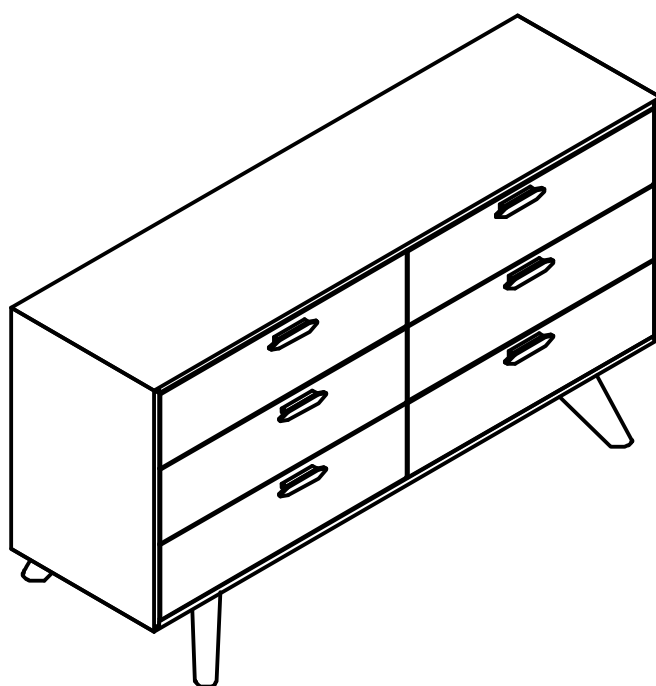


Product Assembly Instructions


LOFT-KB200

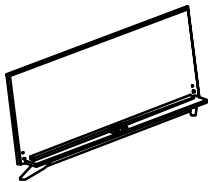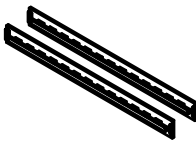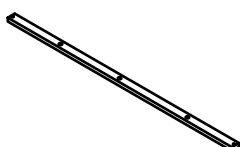 A: Headboard x1	 B: Footboard x1	 C: Side Rail (L+R) x2	 G: Bolt M8*40mm x4  H: Washer x4  I: Screw nut M8 x4  J: Bolt M6*10mm x4  K: BoltM6*60mm x3  L: ScrewM4*30mmx30  M: Allen keyM4 x1  N: Wrench x1  O: Allen keyM5 x1
 D: Middle Rail x1	 E: Center Leg x3	 F: Slat Frame x 14	

STEP 1

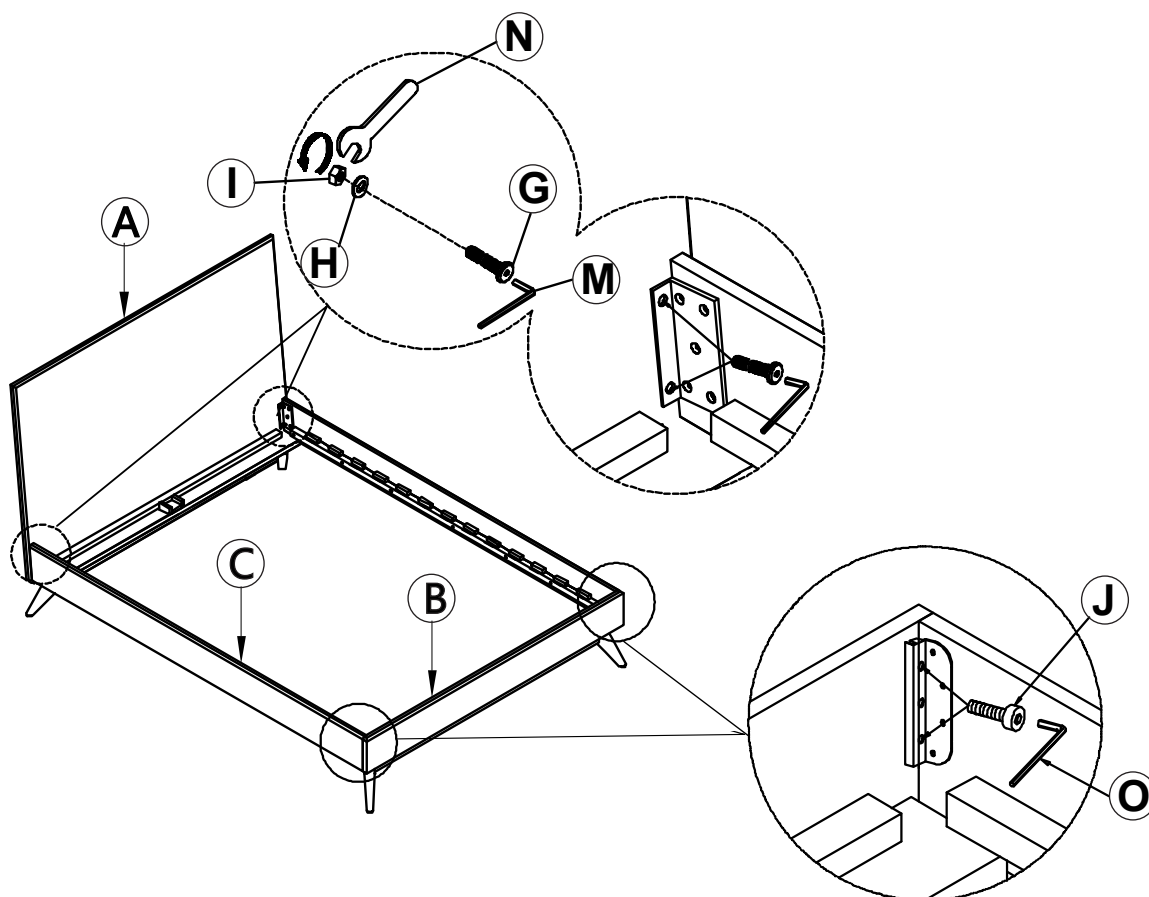

STEP 2

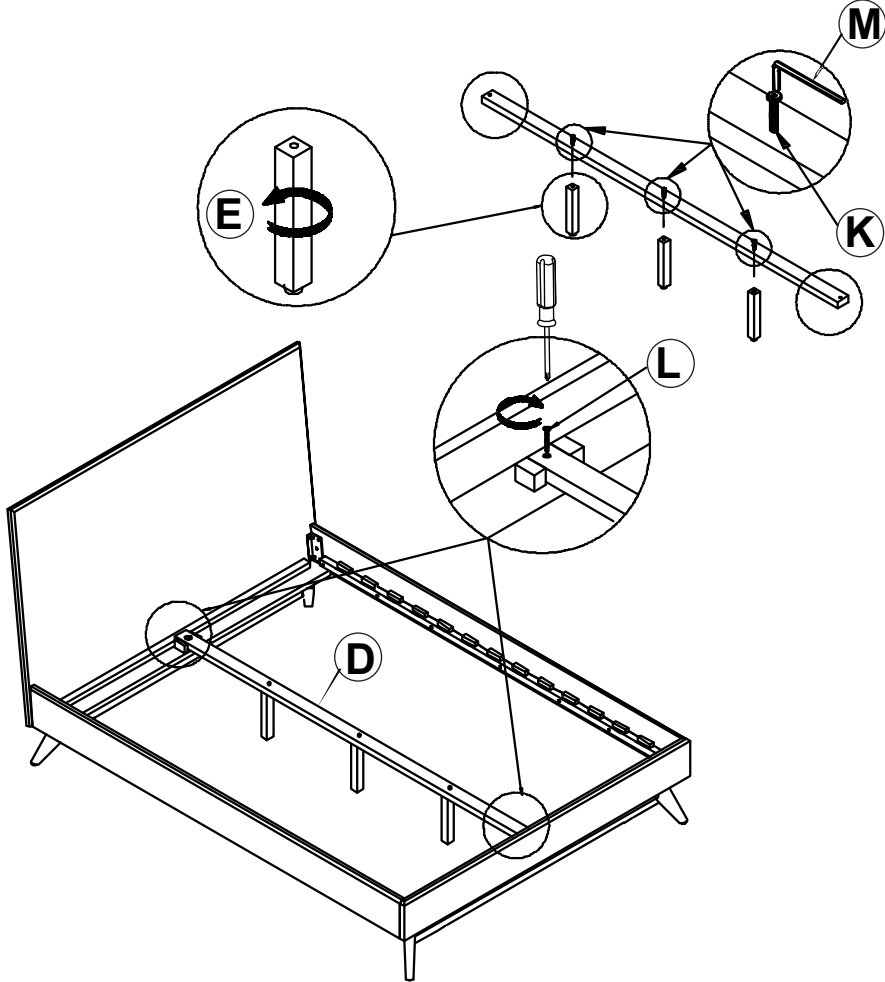

STEP 3

