
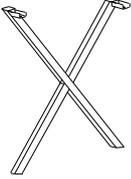
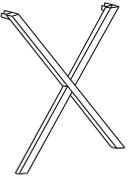




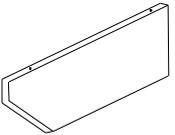
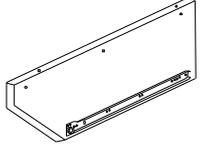
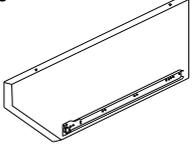
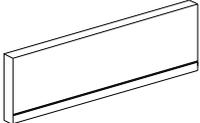
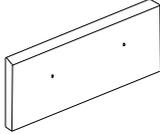
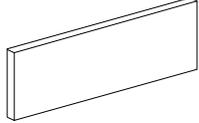
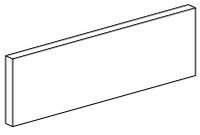
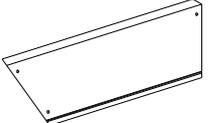

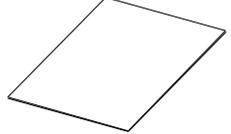





ITEM NO. 92340

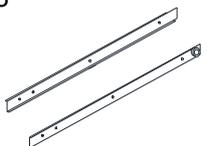

DESK


ASSEMBLY INSTRUCTIONS

1  LEFT SIDE PANEL 1PC	2  RIGHT SIDE PANEL 1PC	3  L METAL 3PCS	4  STRETCHER 2PCS	5  BACK STRETCHER 1PC
6  TOP BOARD 1PC	7  BACK BOARD 1PC	8  RIGHT BOARD 1PC	9  LEFT BOARD 1PC	10  MIDDLE BOARD 1PC
11  DRAWER BACK 2PCS	12  DRAWER FRONT BOARD 2PCS	13  DRAWER FRONT RIGHT 1PC	14  DRAWER FRONT LEFT 1PC	15  DRAWER BOARD LEFT 2PCS
16  DRAWER BOARD RIGHT 2PCS	17  DRAWER BOTTOM BOARD 2PCS	18  METAL GLIDE L 2PCS / R 2PCS		

A  LEVELER 4PCS	B  WOOD DOWEL 8PCS	C  BOLT 30mm 4PCS	D  BOLT 12mm 12PCS	E  BOLT M4X21mm 4PCS	F  SCREW 12mm 18PCS
G  SCREW 32mm 6PCS	H  SCREW 25mm 16PCS	I  SCREW 12PCS	J  GLUE 1PC	K  ALLEN KEY 1PC	

*** Do not tighten screws & bolts until the entire unit is completely assembled. ***

Drawer Assembly

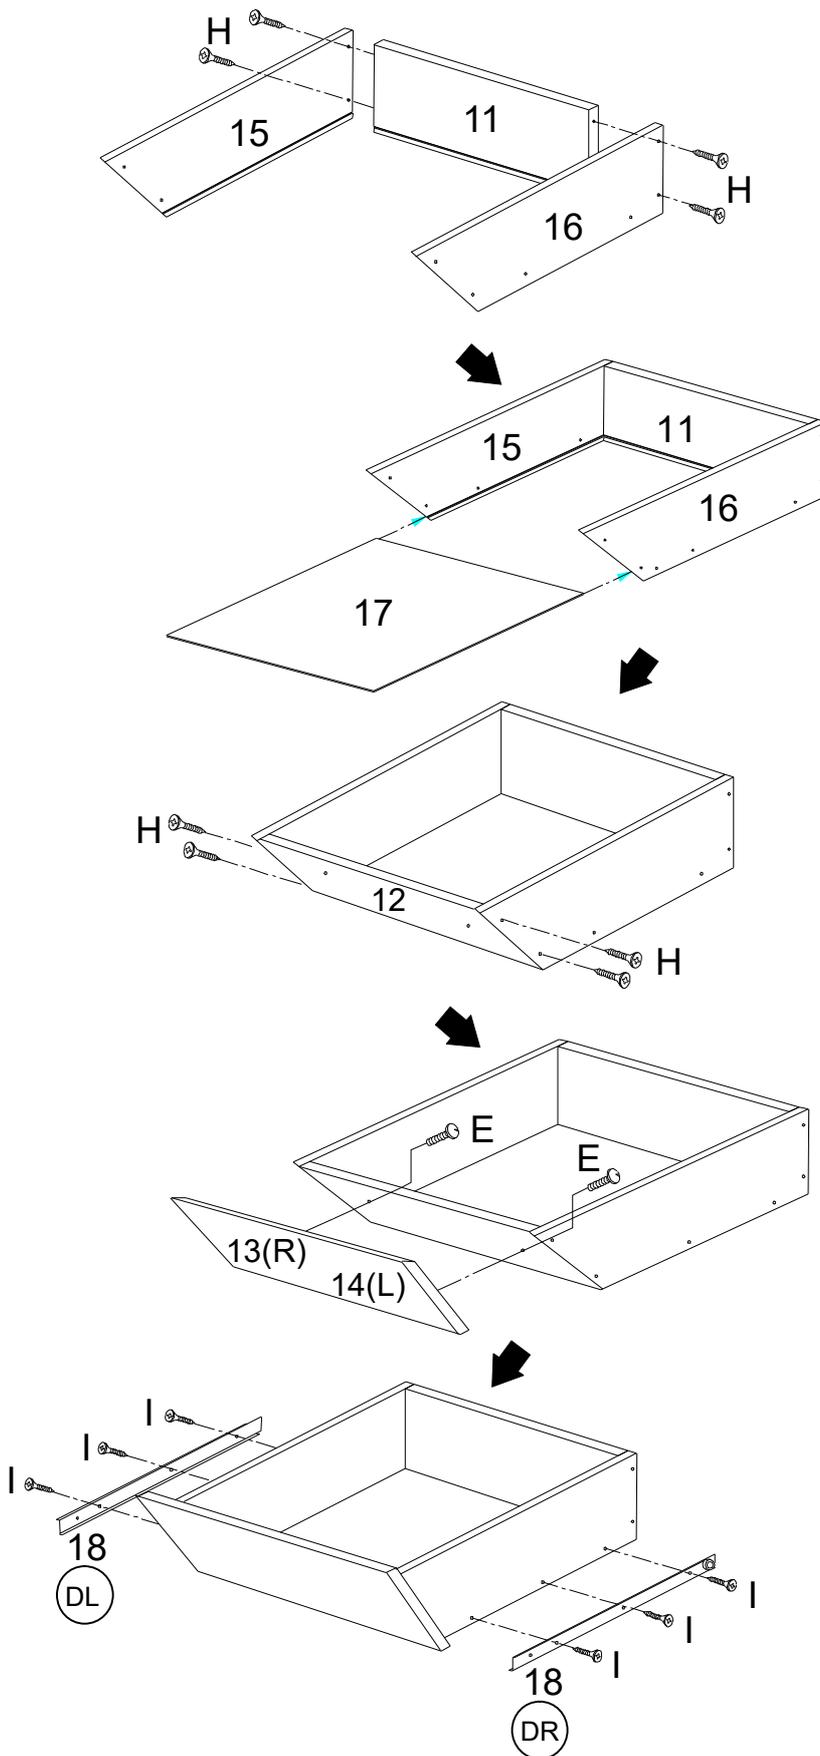

Adjusting the bolts to align drawer outer front panel to fit drawer frame perfectly.

STEP 1


Attach drawer side board (15) & (16) to drawer back board (11) by using screw (H).

Insert drawer bottom board (17) along the grooves of drawer side board (15) & (16).

Attach drawer front board (12) to drawer side board (15) & (16) by using screw (H).


Attach Right (13)/Left (14) drawer front panel to the assembled drawer box by using Philips head bolt (E).

Attach Left/Right metal glides (18) to each of the assembled drawer boxes using screws (I) as shown.

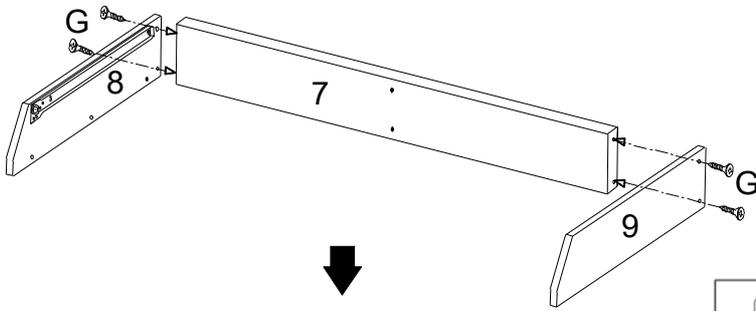


STEP 2

Attach right board (8) and left board (9) to back board (7) by using screw (G) as shown.

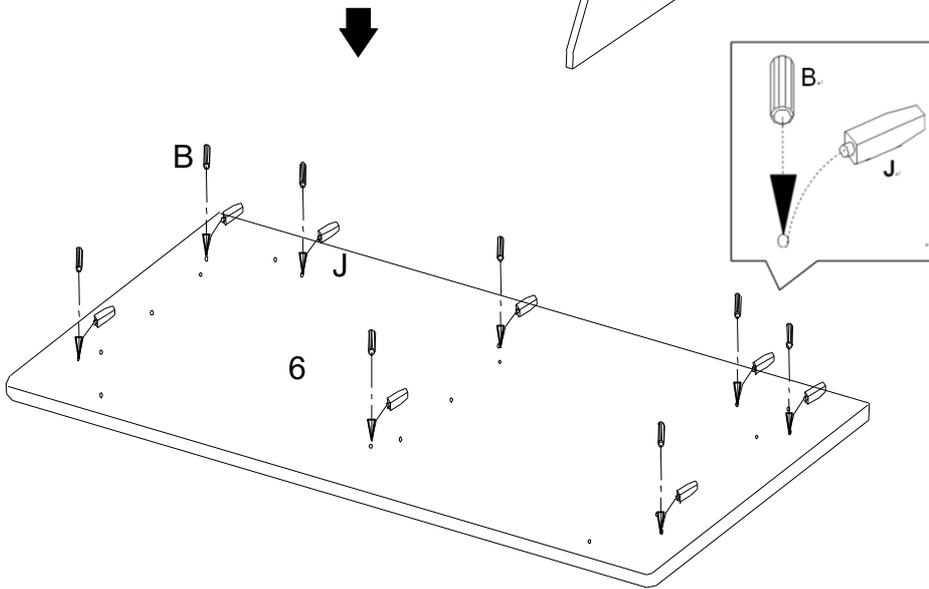


STEP 3

Attach wood dowel (B) with Glue (J) to top board (6) as shown.

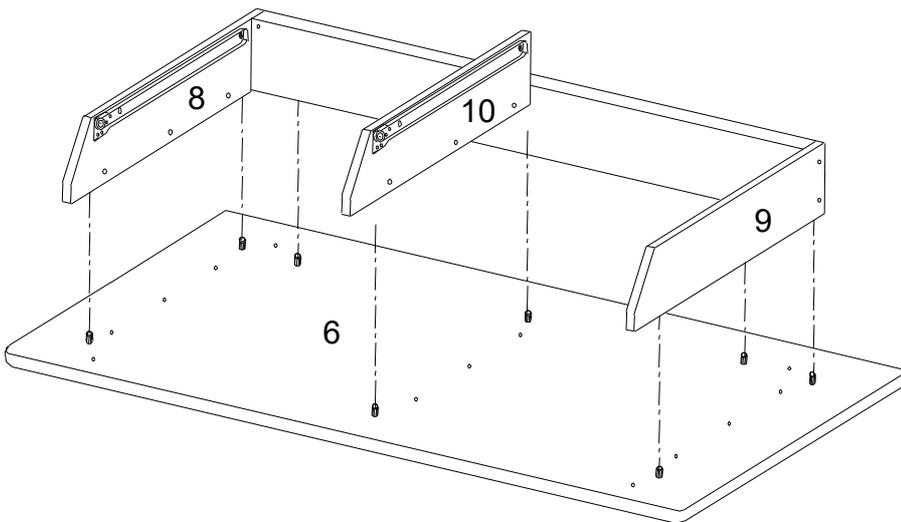





STEP 4

Attach back board (7), right board (8), left board (9) and middle board (10) to top board (6) and secure the panels by wood dowel (B) with glue (J).

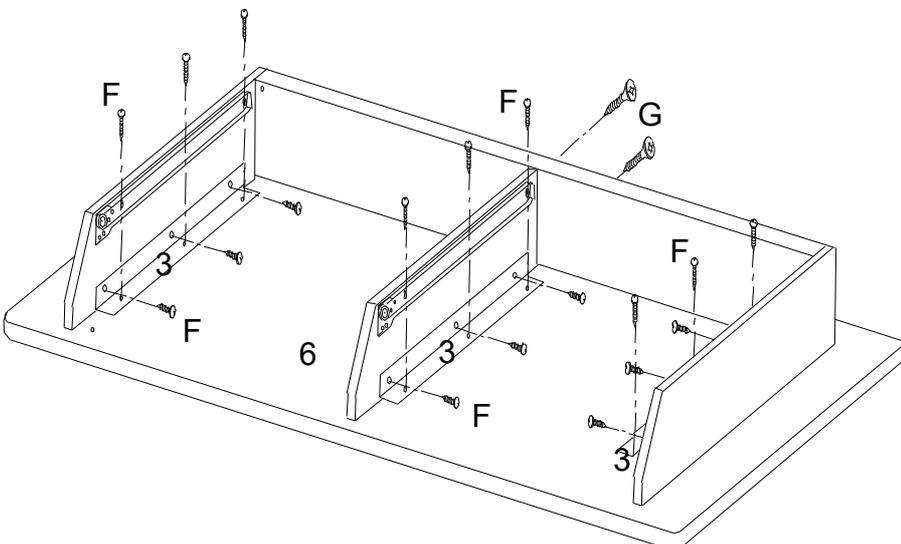

STEP 5

Attach L metal (3) to the assembled unit by using screw (F).

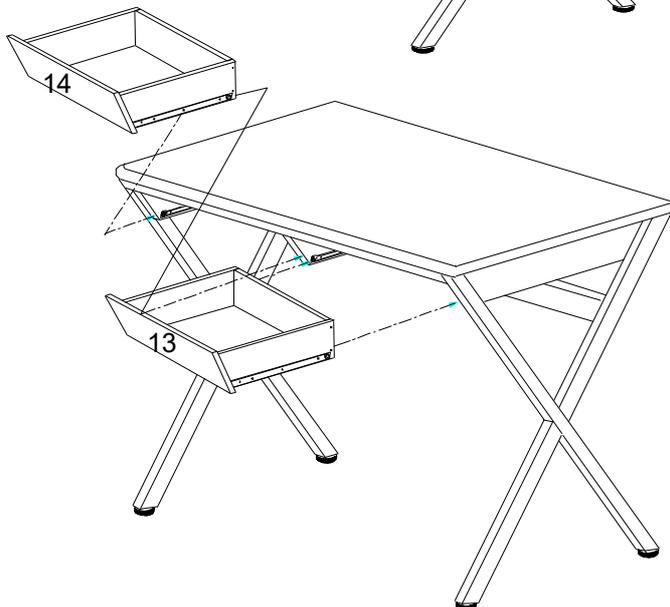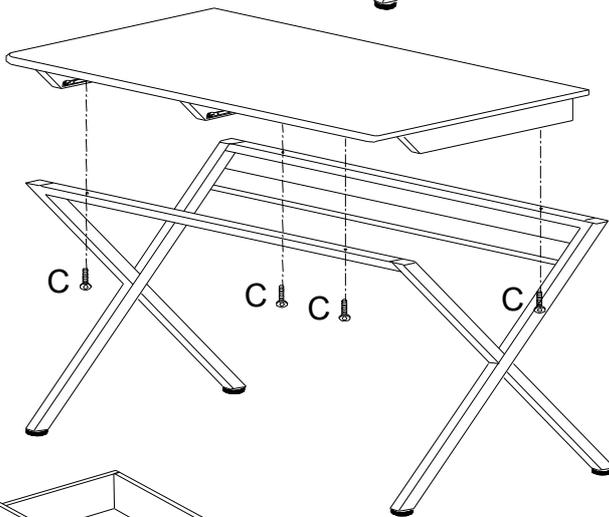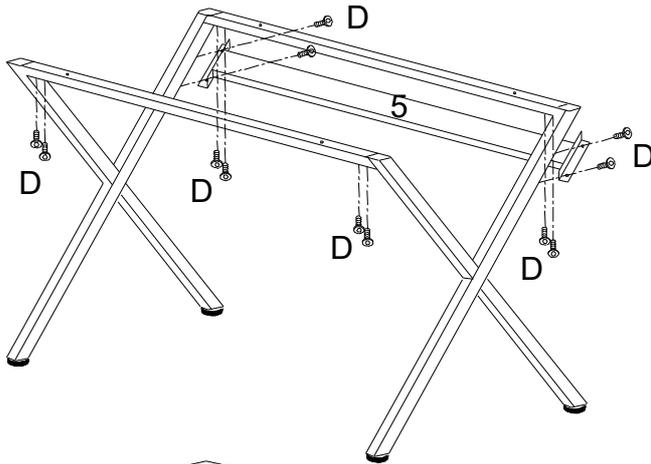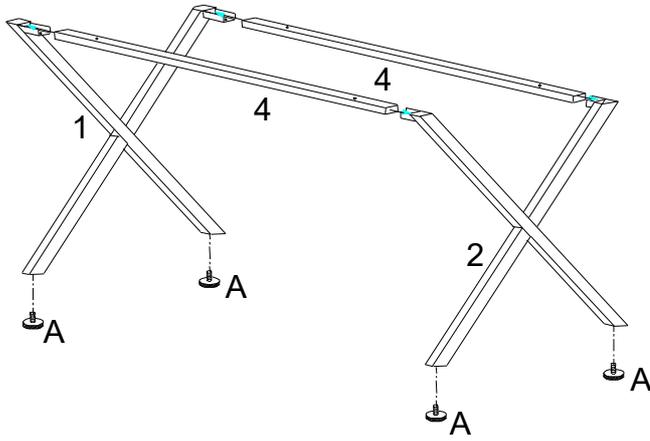

STEP 6

Screw leveler (A) to left side panel (1) and right side panel (2).

Attach left side panel (1) and right side panel (2) to stretcher (4) by using bolt (D), and then attach back stretcher (5) to side panels by using bolt (D) again as shown.

STEP 7

Attach the assembled table top to the metal base by using bolt (C).

STEP 8

Line up the metal glides and insert the assembled left drawer box and right drawer box to the desk drawer frames as shown.

Your desk is now complete.